




# SERVICE BULLETIN

QUALITY INFORMATION ANALYSIS  
OVERSEAS SERVICE DEPT. MITSUBISHI MOTORS CORPORATION

|                                                                        |                                         |                                                                                                                                                      |               |
|------------------------------------------------------------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| <b>SERVICE BULLETIN</b>                                                |                                         | No.: MSB-99E22-502                                                                                                                                   |               |
|                                                                        |                                         | Date: 1999-12-15                                                                                                                                     | <Model> <M/Y> |
| <b>Subject:</b> CORRECTION OF SPECIAL TOOL NOS. FOR F5MR3 TRANSMISSION |                                         | SPACE STAR (DG0A)                                                                                                                                    | 99-10         |
| <b>Group:</b> MANUAL TRANSAXLE                                         | <b>Draft No.:</b> 99MT520815            |                                                                                                                                                      |               |
| <b>CORRECTION</b>                                                      | INTERNATIONAL CAR ADMINISTRATION OFFICE | <br>T.NITTA - PROJECT LEADER<br>AFTER SALES SERVICE & CS PROMOTION |               |

## 1. Description:

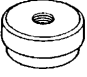
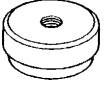
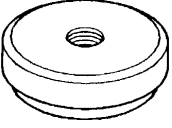

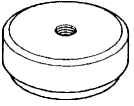

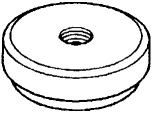

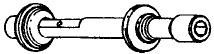

This Service Bulletin informs you of correction of the numbers of the special tools used for installation of the input and output shaft bearing cups.

## 2. Applicable Manuals:

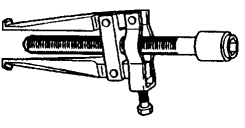
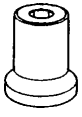
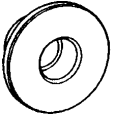
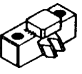
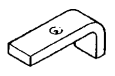
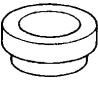
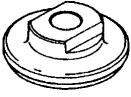
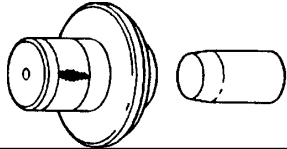
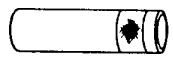
| Manual                                                 | Pub. No.   | Language  | Page(s)           |
|--------------------------------------------------------|------------|-----------|-------------------|
| Front Wheel Drive Manual Transmission (E-W) Supplement | PWEE9508-B | (English) | 22A-2-1, 22A-2-2, |
|                                                        | PWES9509-B | (Spanish) | 22A-2-3, 22A-2-4, |
|                                                        | PWEF9510-B | (French)  | 22A-4-5, 22A-6-6  |
|                                                        | PWEG9511-B | (German)  |                   |
|                                                        | PWED9512-B | (Dutch)   |                   |
|                                                        | PWEW9513-B | (Swedish) |                   |
|                                                        | PWEI9508   | (Italian) |                   |

## 3. Details:

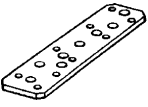
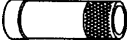

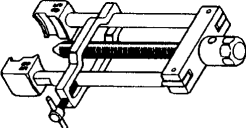
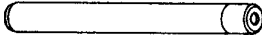
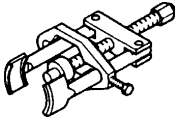

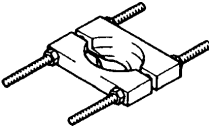
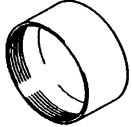
2.SPECIAL TOOLS

| Tool                                                                                | Number   | Name      | Use                                                      |
|-------------------------------------------------------------------------------------|----------|-----------|----------------------------------------------------------|
|    | MB990926 | Installer | Fitting shift rail assembly oil seal                     |
|    | MB990927 | Installer | Removing input shaft front bearing <F5MR1, F5MR2>        |
|    | MB990930 | Installer | Removing small differential bearing <F5MR1, F5MR2>       |
|    | MB990931 | Installer | Fitting output shaft bearing                             |
|    | MB990932 | Installer | Fitting input and output shaft rear bearings             |
|   | MB990933 | Installer | Fitting input and output shaft rear bearing cups <F5MR3> |
|  | MB990934 | Installer | Fitting small differential bearing <F5MR1, F5MR2>        |
|  | MB990938 | Handle    | Various installers                                       |
|  | MB996000 | Spindle   | Fitting large and small bearing cups <F5MR3>             |
|  | MB990929 | Installer | Fitting input shaft bearing cup <F5MR3>                  |



<Added>

| Tool                                                                                | Number   | Name               | Use                                               |
|-------------------------------------------------------------------------------------|----------|--------------------|---------------------------------------------------|
|    | MB996001 | Bearing puller     | Removing output shaft front bearing               |
|    | MB996003 | Socket wrench      | Removing and installing differential gear <F5MR3> |
|    | MB996004 | Bearing drift      | Fitting large and small bearing cups <5MR3>       |
|    | MB996005 | Counterhold        | Removing and installing differential gear <F5MR3> |
|   | MB996006 | Bracket            | Removing output shaft front bearing               |
|  | MB996007 | Bearing bush drift | Fitting selector shaft bushes                     |
|  | MB996008 | Bearing drift      | Fitting large and small bearing cups <F5MR3>      |
|  | MB996010 | Oil seal drift     | Fitting differential gear assembly oil seal       |
|  | MB996011 | Bearing drift      | Fitting input shaft bearing cup <F5MR3>           |

<Deleted>

| Tool                                                                                | Number   | Name                    | Use                                                                                                      |
|-------------------------------------------------------------------------------------|----------|-------------------------|----------------------------------------------------------------------------------------------------------|
|    | MB996012 | Mounting plate          | Calculate the pre-tention of input and output shafts with new bearings <F5MR3><br><b>&lt;Deleted&gt;</b> |
|    | MB996013 | Bearing drift           | Fitting ouput shaft bearing <F5MR3>                                                                      |
|    | MB998019 | Spring pin extractor    | Removing springs pins                                                                                    |
|    | MB998020 | Bearing puller          | Removing 5th gear synchronizer hub                                                                       |
|    | MB998245 | Spring pin installer    | Installation of spring pin and lock pin                                                                  |
|  | MB998348 | Bearing and gear puller | Removing 5th gear wheel                                                                                  |
|  | MB998717 | Installer               | Fitting input shaft front bearing <F5MR1, F5MR2>                                                         |
|  | MB998801 | Bearing remover         | Removing input and output shaft bearings <F5MR3>                                                         |
|  | MB998812 | Installer cap           | Fitting 4th gear wheel bearing bush <F5MR3><br>←—————↑—————→                                             |

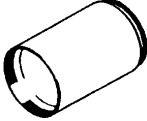
Fitting output shaft bearing <F5MR3>  
**<Added>**


| Tool                                                                              | Number   | Name                   | Use                                         |
|-----------------------------------------------------------------------------------|----------|------------------------|---------------------------------------------|
|  | MD998813 | Installer-100          | Fitting 4th gear wheel bearing bush <F5MR3> |
|  | MB998819 | Installer adapter (40) | Fitting 4th gear wheel bearing bush <F5MR3> |

**Fitting output shaft bearing <F5MR3>**
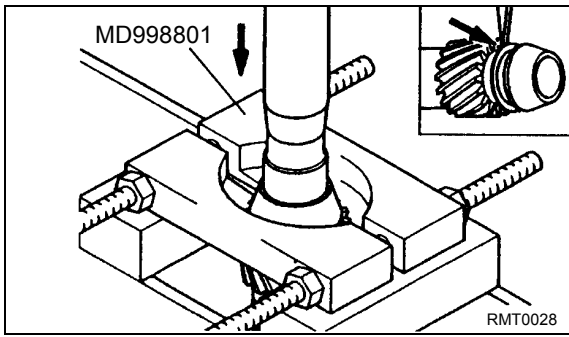
<Added>


<Added>

|                                                                                     |          |                        |                                     |
|-------------------------------------------------------------------------------------|----------|------------------------|-------------------------------------|
|  | MB998816 | Installer adapter (30) | Fitting input shaft bearing <F5MR3> |
|-------------------------------------------------------------------------------------|----------|------------------------|-------------------------------------|



**◀J▶ BEARING CUP/OUTPUT SHAFT REMOVAL**

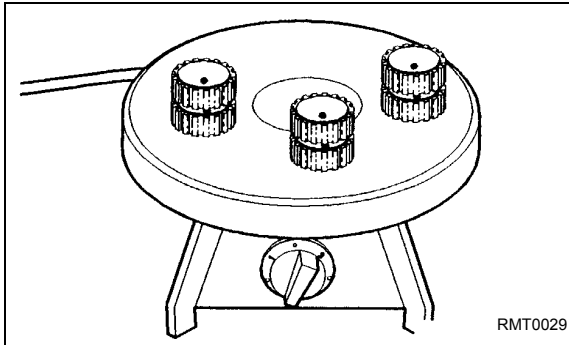- (1) Place the output shaft on a soft surface.
- (2) Tap the bearing cup partway off the output shaft with a chisel.
- (3) Locate the bearing remover MD998801 behind the bearing cup.
- (4) Press the output shaft out of the bearing cup.




**PREPARATION BEFORE REASSEMBLY**

**<F5MR3>**

**BEARING BUSHES INSTALLATION**

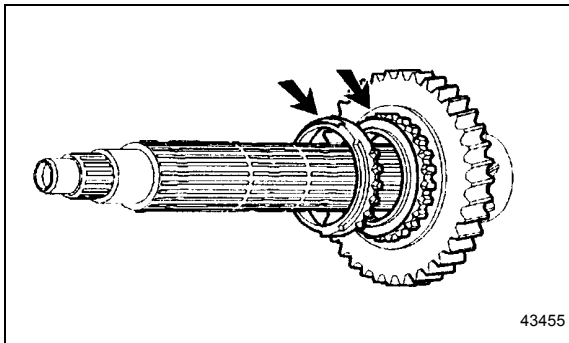
- (1) Place the three bearing bushes on a hot plate.
- (2) Heat the bearing bushes to 150°C maximum.



**REASSEMBLY SERVICE POINTS**

**▶A◀ 1ST GEAR WHEEL INSTALLATION**

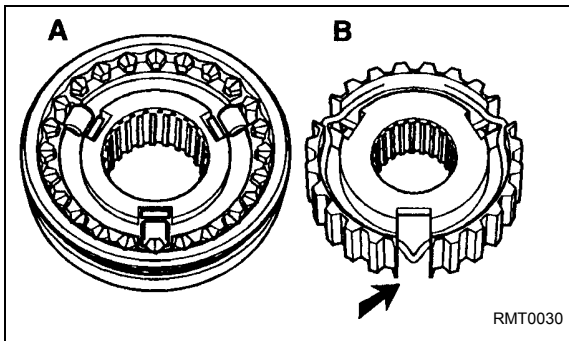Locate the gear wheel together with the synchronizer ring on the shaft.




**▶B◀ SYNCHRONIZER SPRINGS INSTALLATION**

- (1) Place the hub on a workbench.
- (2) Position the two synchronizer springs so that the wider sections engage the recesses in the hub.
- (3) Locate the synchronizer sleeve on the hub.


**NOTE**

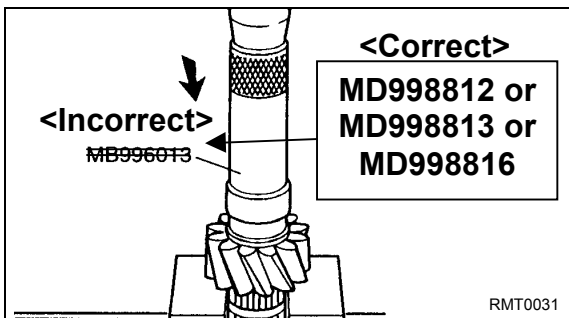
Take special note of the engaging sleeve lugs.



**▶C◀ OUTPUT SHAFT BEARING CUP INSTALLATION**

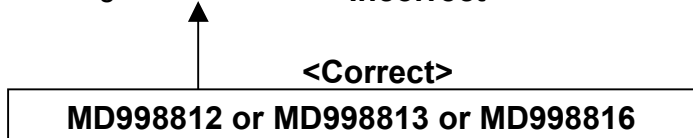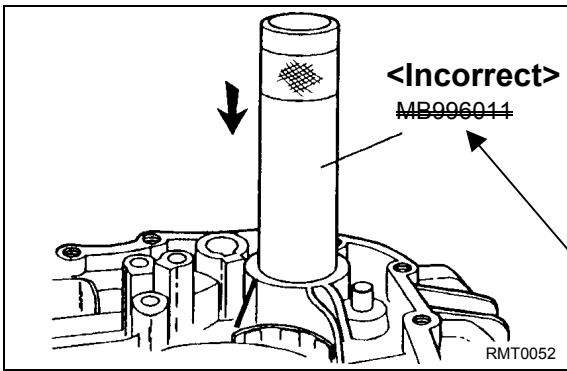- (1) Place the output shaft under a press and support the 1st gear wheel.
- (2) Press the bearing cup on to the output shaft with bearing drift MD996013. **<Incorrect>**





▶◀ INPUT SHAFT BEARING CUP INSTALLATION

- (1) Coat the mating face with the specified sealant.
- (2) Press the bearing cup against the stop with installer MB990614.

<Incorrect>

<Correct>

MB990929 or MB990938

<Correct>  
MB990929 or  
MB990938