





Workshop Manual

electrical wiring

SUPPLEMENT

L200 '98

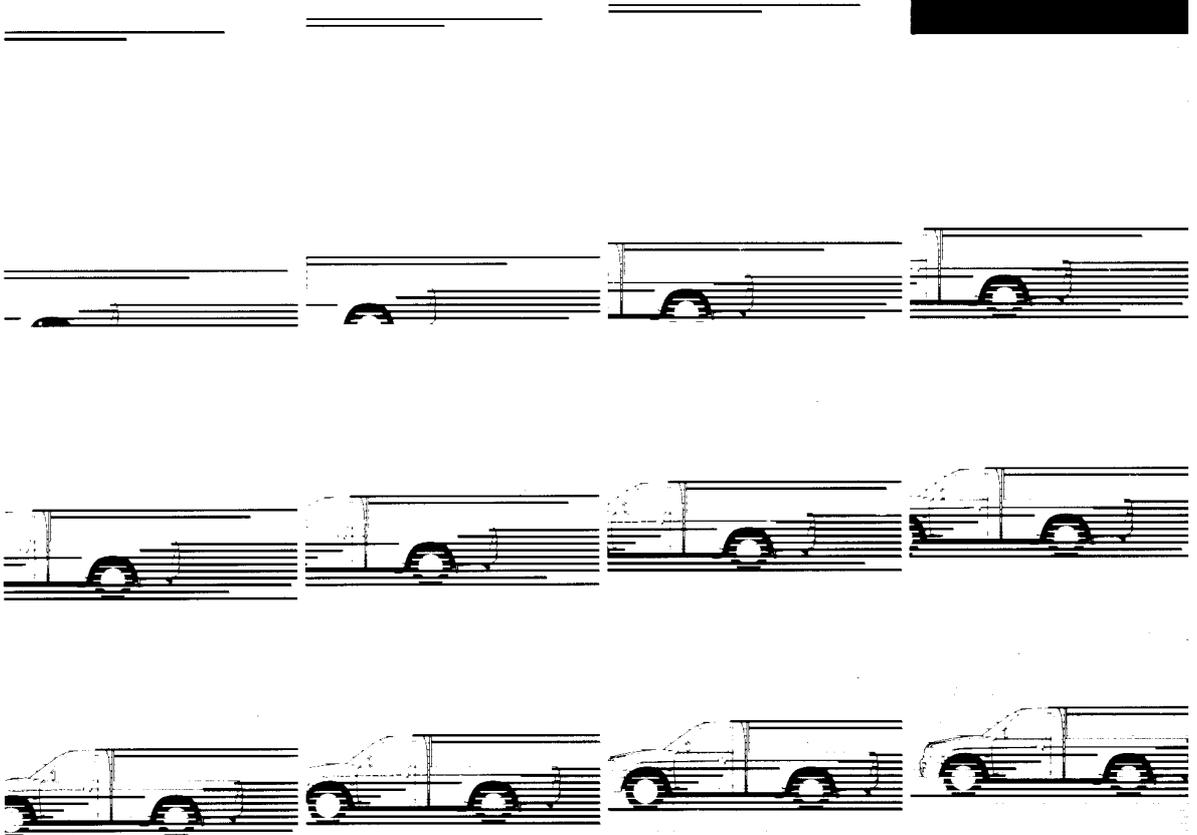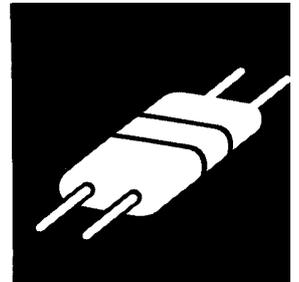

L200

ELECTRICAL WIRING

FOREWORD

This Electrical Wiring Manual contains information necessary for inspection and servicing of electrical wiring of Mitsubishi L200 edited in the form of wiring harness configuration diagrams and function-separated circuit diagrams.

It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL
PYTE9601

WORKSHOP MANUAL
CHASSIS GROUP PWTE9601 (Basic)
PWTE9601-A
(Supplement)

BODY REPAIR MANUAL
PBTE9601 (Basic)

ENGINE GROUP PWEE□□□□
(Looseleaf edition)

PARTS CATALOGUE T603B006D□

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



GROUP INDEX

00109001158

HOW TO READ THE WIRING DIAGRAMS	1
WIRING HARNESS CONFIGURATION DIAGRAMS	2
SINGLE PART INSTALLATION POSITION	3
CIRCUIT DIAGRAM	4
INDEX	

HOW TO USE THIS MANUAL

00100010241

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.

OPERATION AND TROUBLESHOOTING HINTS

In the GROUP 4 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.

HOW TO READ THE WIRING DIAGRAMS

CONTENTS

00109000508

MODELS	1-3	MARKINGS FOR CONNECTOR EARTHING	1-8
COMPOSITION AND CONTENTS OF WIRING DIAGRAMS	1-4	WIRE COLOUR CODES	1-11
HOW TO READ CONFIGURATION DIAGRAMS	1-5	ABBREVIATION SYMBOLS	1-12
HOW TO READ CIRCUIT DIAGRAMS	1-6		

1-2

NOTES

MODELS

00100030155

Model Code		Engine model	Transmission model	Fuel supply system
K62T	JERDEL6	4G63-SOHC (1,997 ml)	R4AW2 (2WD-4A/T)	MPI
	ENDEL6		R5M21 (2WD-5M/T)	
K64T	YNDL6	4D56 (2,477 ml)	R5M21 (2WD-5M/T)	Diesel fuel injection
	ZNDL6			
	ENDL6			
	ENDR6			
	CENDL6			
	JENDL6			
K75T	CENDEL6	4G64-SOHC (2,351 ml)	V5M21 (4WD-5M/T)	MPI
K74T	YNDFL6	4D56 Turbocharger with Intercooler (2,477 ml)	V5MT1 (4WD-5M/T)	Diesel fuel injection
	ZNDFL6			
	ENDFR6			
	JERDFL6		V4AW2 (4WD-4A/T)	
	GJENXFL6		V5MT1 (4WD-5M/T)	
	CENDFL6			
	JENDFL6			
	JENHFL6			

COMPOSITION AND CONTENTS OF WIRING DIAGRAMS

00100010258

- (1) This manual consists of wiring harness diagrams, installation locations of individual parts, circuits diagrams and index.
- (2) In each section, all specifications are listed, including optional specifications. Accordingly, some specifications may not be applicable for individual vehicles.

Section	Basic contents
Wiring harness configuration diagrams	Connector locations and harness wiring configurations on actual vehicles are illustrated.
Single part installation position	Locations are shown for each point of relays, electronic control units, sensors, solenoids, solenoid valves, diodes, inspection connectors, spare connectors, fusible links, fuses, etc. In the part's lists, parts are listed in alphabetical order.
Circuit diagrams	<p>Circuits from power supply to earth are shown completely, classified according to system. There is a main division into power circuits, and circuits classified by system. The circuits classified by system also include operation and troubleshooting hints.</p> <ul style="list-style-type: none"> ● Junction block The entire circuit for the junction block is described, because only the part of the junction block needed is normally shown in each circuit diagram. ● Joint connectors The internal circuits for all joint connectors are described, because only the part needed is shown in each circuit diagram. ● Power supply circuits Circuits from the battery to fusible link, dedicated fuses, ignition switch, general purpose fuses, etc. ● Circuits classified by system For each system, the circuits are shown from fuse to earth, excluding the power supply sections. ● Operation The standard operation of each system is briefly described, following the route of current flow. ● Troubleshooting hints This is a brief explanation of the inspection points that serve as hints when troubleshooting. Explanations of the circuits controlled by the electronic control unit are omitted. Refer to the related publications as required.
Index	All components used are listed by connector number and component name.

00100640037

HOW TO READ CONFIGURATION DIAGRAMS

The wiring harness diagrams clearly show the connector locations and harness routings at each site on actual vehicles.


Denotes connector No.
 The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.
 The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number. Numbers are assigned to parts in clockwise order on the diagram.
 Example: A-12
 — Number specific to connector (serial number)
 — Connector location site symbol
 A: Engine compartment
 B: Transmission
 C: Dash panel
 D: Cabin
 E: Door
 F: Frame

Denotes earth point.
 Same earth number is used throughout circuit diagrams to facilitate search of earth point. Refer to GROUP 3 SINGLE PART INSTALLATION POSITION – EARTH MOUNTING LOCATIONS for details of earth points.

Denotes a section covered by a corrugated tube.

The mark ★ shows the standard mounting position of wiring harness.

Indicates the device to which the connector is to be connected.

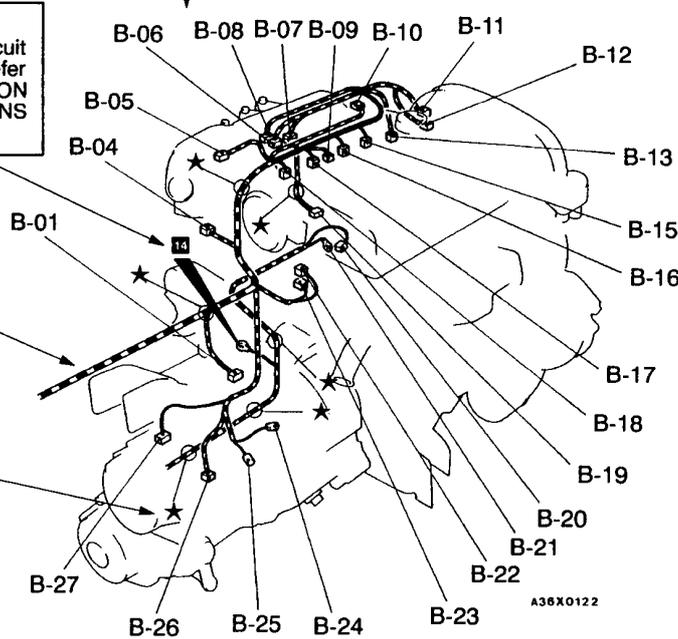

- | | | | |
|------------|--------------------------|-------------|-----------------------|
| B-01 (3-B) | Vehicle speed sensor | B-16 (2-GR) | Injector No. 2 |
| B-02 (6) | Distributor assembly | B-17 (2-GR) | Injector No. 3 |
| B-03 (2) | Distributor assembly | B-18 (2-GR) | Injector No. 4 |
| B-04 (6-B) | Idle speed control servo | B-19 (4) | Oxygen sensor (front) |
| B-05 (4-B) | Throttle position sensor | B-20 (1-BR) | Starter motor |


The number of connector pins and the connector colour (except milk white) are shown for ease of retrieval.
 *: Typical connector colours
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray

Example: (2-B)
 — Connector colour (milk white if no colour is indicated)
 — Number of connector pins

HOW TO READ CIRCUIT DIAGRAMS

00100650108

The circuit of each system from fuse (or fusible link) to earth is shown. The power supply is shown at the top and the earth at the bottom to facilitate understanding of the current flow.

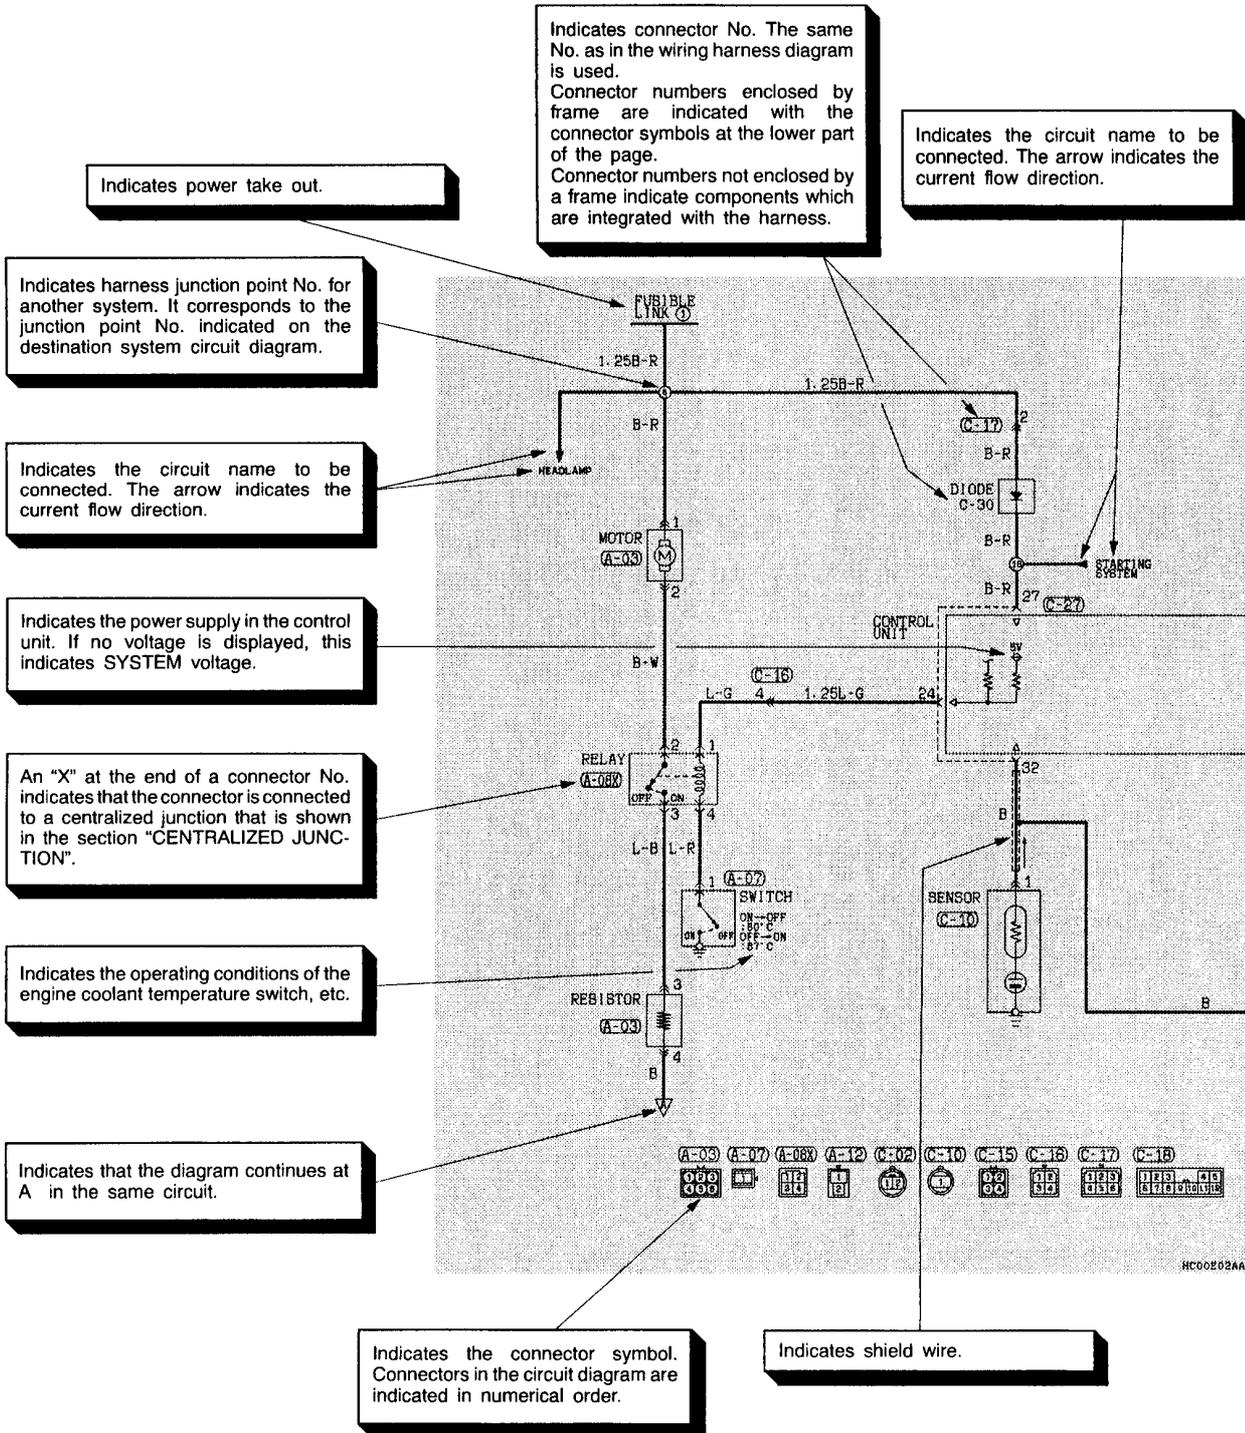

Indicates power take out.

Indicates connector No. The same No. as in the wiring harness diagram is used. Connector numbers enclosed by frame are indicated with the connector symbols at the lower part of the page. Connector numbers not enclosed by a frame indicate components which are integrated with the harness.

Indicates the circuit name to be connected. The arrow indicates the current flow direction.

Indicates harness junction point No. for another system. It corresponds to the junction point No. indicated on the destination system circuit diagram.

Indicates the circuit name to be connected. The arrow indicates the current flow direction.

Indicates the power supply in the control unit. If no voltage is displayed, this indicates SYSTEM voltage.

An "X" at the end of a connector No. indicates that the connector is connected to a centralized junction that is shown in the section "CENTRALIZED JUNCTION".


Indicates the operating conditions of the engine coolant temperature switch, etc.

Indicates that the diagram continues at A in the same circuit.


Indicates the connector symbol. Connectors in the circuit diagram are indicated in numerical order.

Indicates shield wire.

HC00202AA

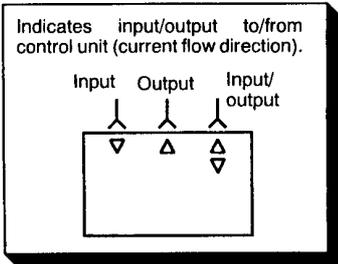

A broken line indicates that these connectors are the same intermediate connectors.

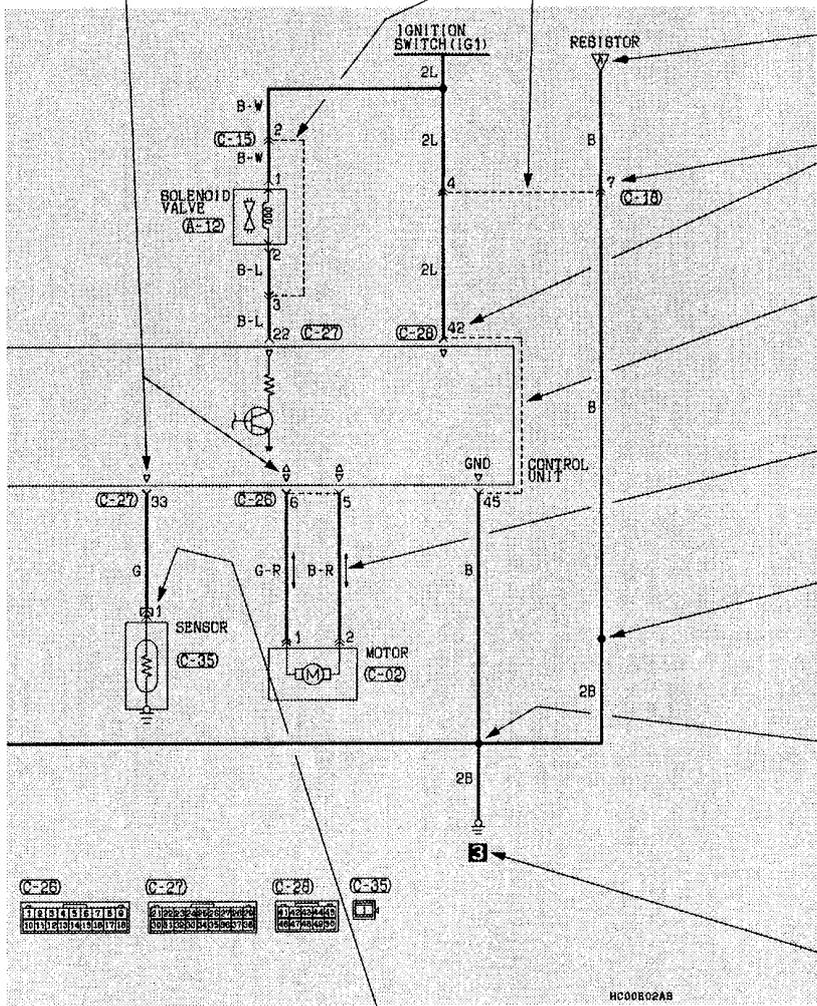


Indicates that the diagram comes from A in the same circuit.

Indicates terminal No.

In case two or more connectors are connected to the same device, markings indicating the same connectors are connected by a broken line.


Indicates current flow downward or upward as controlled by the control unit.

Indicates harness junction where wire diameter or colour changes.

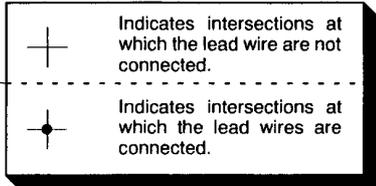



Indicates vehicle body earth point. (Same No. as that of earth point in wiring harness diagram and installation locations of individual parts.)






Indicates that the terminal is a spare one if the device (sensors in this case) is not provided.

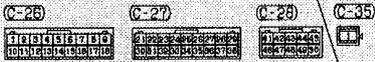

HC00802AB

MARKINGS FOR CONNECTOR EARTHING




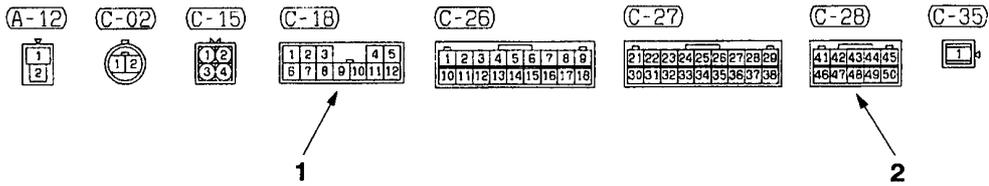
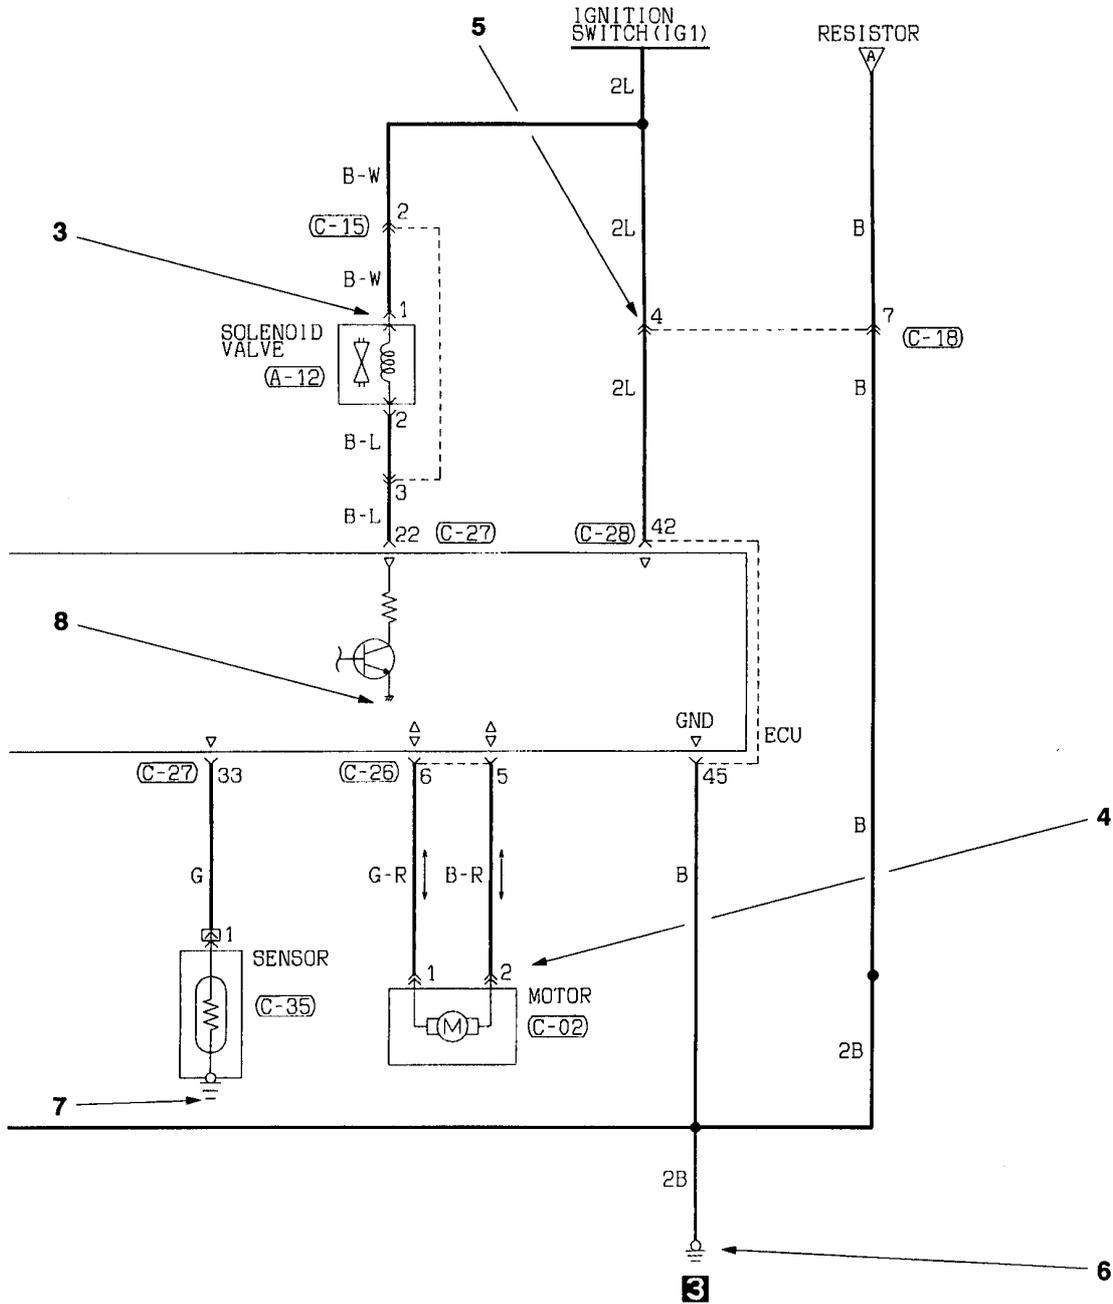


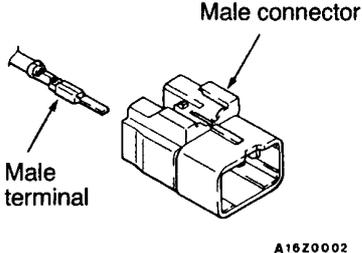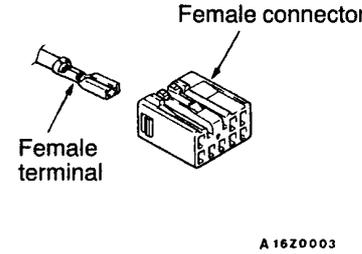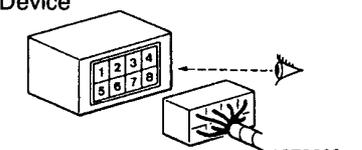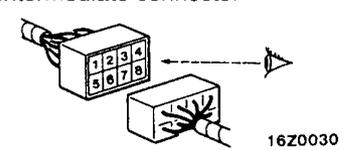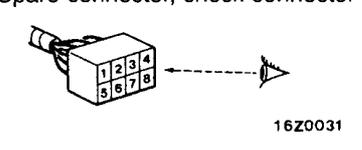Item	No.	Connector/Earthing	Symbol	Contents
Connector and terminal marking	1		<p>Male terminal</p>  16Z0021 <p>Male connector</p>  16Z0016	<p>The male and female terminals are indicated as shown. The connector with male terminal(s) is called as male connector and indicated by double connector contour lines, while the connector with female terminal(s) is called as female connector and indicated by single connector contour line.</p>
	-		<p>Female terminal</p>  16Z0022 <p>Female connector</p>  16Z0017	
	2	<p>Device</p> 	 16Z0016	
	<p>Intermediate connector</p> 			
	<p>Spare connector, check connector</p> 	 16Z0017		

1-10

HOW TO READ THE WIRING DIAGRAMS -


Markings for Connector Earthing

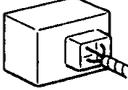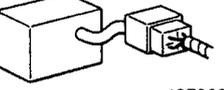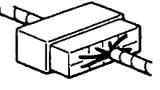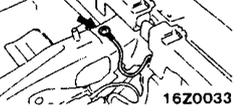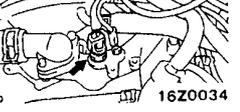Item	No.	Connector/Earthing	Symbol	Contents
Connector connection marking	3	Direct connection type  16Z0026	 16Z0023	A connection between a device and connector on the harness side is either by direct insertion in the device (direct connection type) or by connection with a harness connector on the device side furnished (harness connection type). The two types are indicated as illustrated.
	4	Harness connection type  16Z0027	 16Z0024	
	5	Intermediate connector  16Z0028	 16Z0025	
Earth markings	6	Body earth  16Z0033	 16Z0018	Earth is either by body earth, device earth or control unit interior earth. These are indicated as illustrated.
	7	Device earth  16Z0034	 16Z0019	
	8	Earth in control unit  16Z0032	 16Z0020	

WIRE COLOUR CODES

Wire colours are identified by the follow colour codes.

Code	Wire colour	Code	Wire colour
B	Black	P	Pink
BR	Brown	R	Red
G	Green	SB	Sky blue
GR	Gray	SI	Silver
L	Blue	V	Violet
LG	Light green	W	White
O	Orange	Y	Yellow

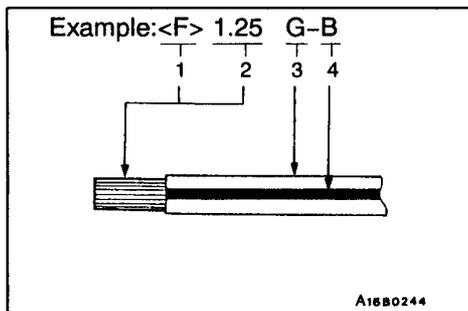

If a cable has two colours, the first of the two colour code characters indicates the basic colour (colour of the cable coating) and the second indicates the marking colour

No.	Meaning
1	<F>:Flexible wire
	<T>:Twisted wire
2	Wire size(mm ²)*
3	Basic colour (colour of the cable coating)
4	Marking colour

NOTE

*: No code indicates 0.5 mm².
 Cable colour code in parentheses indicates 0.3 mm².

1-12 HOW TO READ THE WIRING DIAGRAMS - Abbreviation Symbols

ABBREVIATION SYMBOLS

The abbreviation symbols used in wiring diagrams are defined below.

1. Abbreviation symbols used for system name

Abbreviation symbol	Meaning	Abbreviation symbol	Meaning
ABS	Anti-lock braking system	ETACS	Electronic time and alarm control system
A/C	Air conditioner	MPI	Multi-point injection
A/T	Automatic transmission	M/T	Manual transmission
DRL	Daytime running lamp	SRS	Supplemental restraint system
EGR	Exhaust gas recirculation		

2. Abbreviation symbols used for combination meters

Abbreviation symbol	Meaning	Abbreviation symbol	Meaning
4WD	4WD indicator lamp	R/FOG	Rear fog lamp indicator lamp
ABS	Anti-lock braking system warning lamp	SPEED	Speedometer
A/T	Automatic transmission fluid temperature warning lamp	SRS	Supplemental restraint system warning lamp
BEAM	High beam indicator lamp		
BRAKE	Brake warning lamp	TACHO	Tachometer
CHECK ENGINE	Check engine warning lamp	T/GA	Engine coolant temperature gauge
CHG	Charging warning lamp	TURN (LH)	Turn signal indicator lamp (L.H.)
DOOR	Door-ajar warning lamp	TURN (RH)	Turn signal indicator lamp (R.H.)
F/GA	Fuel gauge	VOLT	Voltage meter
FUEL	Low fuel warning lamp	WATER SEPARATOR	Fuel filter warning lamp
GLOW	Diesel preheat indicator lamp		
OD OFF	Overdrive off indicator lamp		
OIL	Oil pressure warning lamp	WHEEL LOCK	Free wheel differential lock indicator lamp
REED	Reed switch		

3. Abbreviation symbols used for switches and relays

Name of switches and relays	Abbreviation symbols	Operation	Name of switches and relays	Abbreviation symbols	Operation
Ignition switch	ACC	When turned to the ACC (ACCESSORY) or ON position, the power circuit will start	Blower switch	LO	Blower operates at low speed
	IG1	Even when at the ST (START) position, the power circuit will start		ML	Blower operates at medium low speed
	IG2	When at the ST (START) position, the power circuit will not start functioning		MH	Blower operates at medium high speed
Dimmer passing switch	LO	Low beams ON	Rear heater switch	HI	Blower operates at high speed
	HI	High beams ON		LO	Blower operates at low speed
Lighting switch	TAIL	Position, tail, licence plate and instrument panel lamps ON	Wind-shield wiper switch	HI	Blower operates at high speed
	HEAD	Headlamps ON		LO	Wipers operate at low speed
Room lamp switch	DOOR	Room lamp ON when a door is open	Variable intermittent wiper control switch	HI	Wipers operate at high speed
				INT	Wipers operate intermittently
Turn signal switch	LH	L.H. turn signal lamps ON	SLOW	Pause time for intermittent operation lengthen	
	RH	R.H. turn signal lamps ON		FAST	Pause time for intermittent operation shorten
Power window switch	UP	Window closes	Remote control mirror switch	LH	L.H. mirror operates
	DOWN	Window opens		RH	R.H. mirror operates
	AUTO	Window opens fully			
Door lock actuator	LOCK	Door lock	Heated seat switch	LO	Normal heating
	UN-LOCK	Door unlock		HI	Rapid heating
Door lock key cylinder switch	LOCK	Door lock	Others	ON	Switched on
	UN-LOCK	Door unlock		OFF	Switched off

1-14 HOW TO READ THE WIRING DIAGRAMS – Abbreviation Symbols

4. Other abbreviation symbols

Abbreviation symbol	Meaning	Abbreviation symbol	Meaning
2WD	Rear wheel-drive vehicles	J/C	Joint connector
4WD	4 wheel-drive vehicles	LH	Left hand
DIESEL	Diesel-powered vehicles	LHD	L.H. drive vehicles
ECU	Electronic control unit	PETROL	Petrol-powered vehicles
GND	Earth	RH	Right hand
ILL	Illumination lamp	RHD	R.H. drive vehicles
IND	Indicator lamp	TDC	Top dead centre
J/B	Junction block		

WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS

80109000135

OVERALL WIRING DIAGRAM

Single cab	2-2
Club cab	2-3
Double cab	2-3

ENGINE COMPARTMENT

4G6	2-4
4D56 <L.H. drive vehicles>	2-8
4D56 <R.H. drive vehicles>	2-12

TRANSMISSION

2-16

DASH PANEL

L.H. drive vehicles	2-18
R.H. drive vehicles	2-24

CABIN

Single cab <L.H. drive vehicles>	2-30
Single cab <R.H. drive vehicles>	2-31
Club cab	2-32
Double cab	2-33

DOOR

Single cab and club cab	2-34
Double cab	2-35

FRAME


2-36

OVERALL WIRING DIAGRAM


80100010144

Single cab

<L.H. drive vehicles>

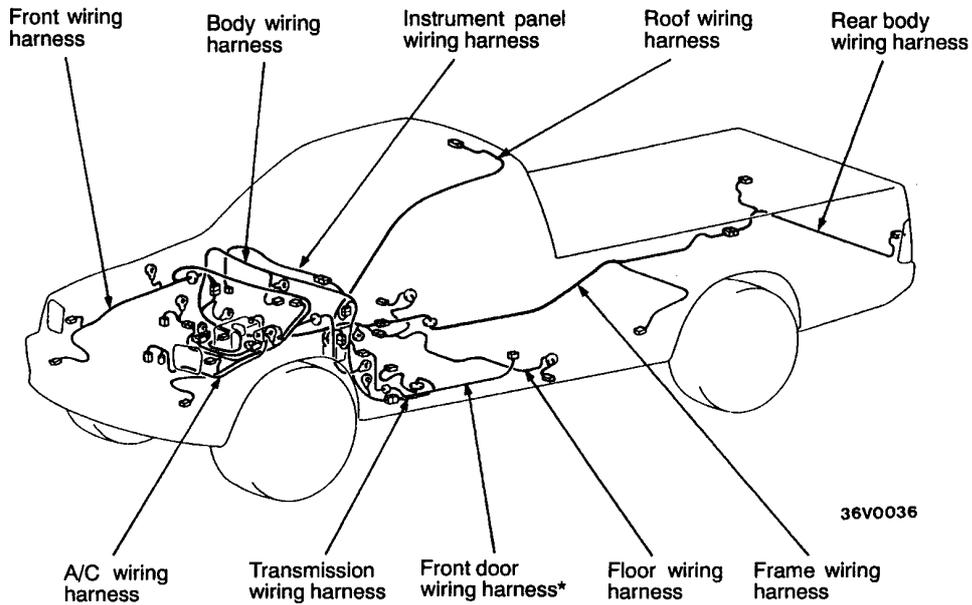


<R.H. drive vehicles>

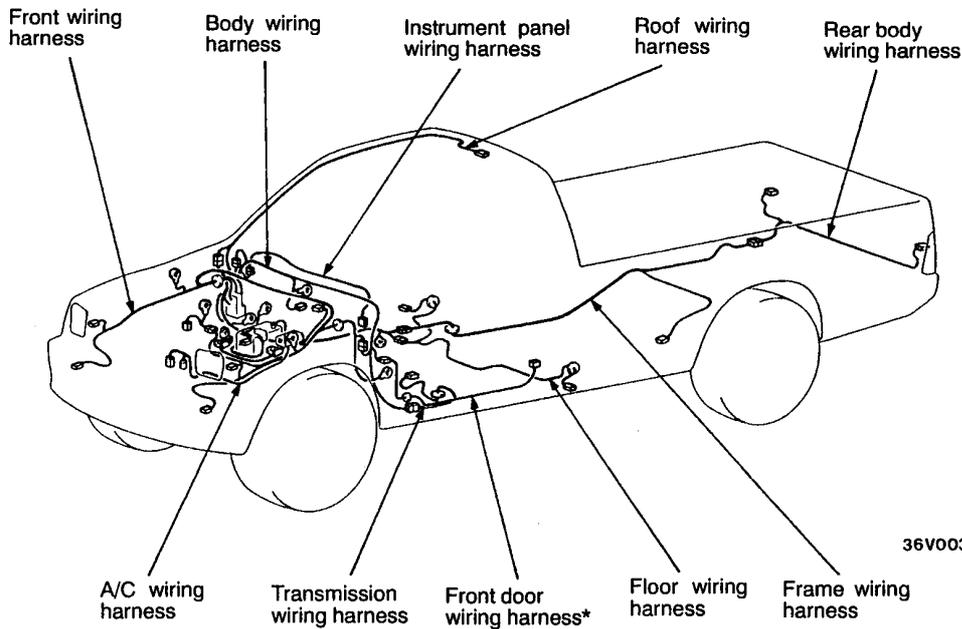


NOTE

- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

Club cab

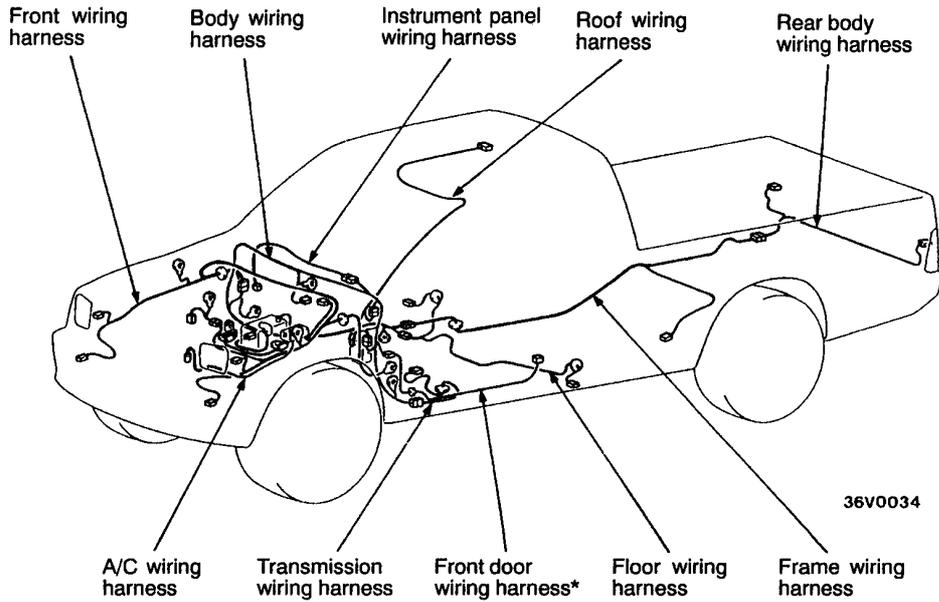

Double cab

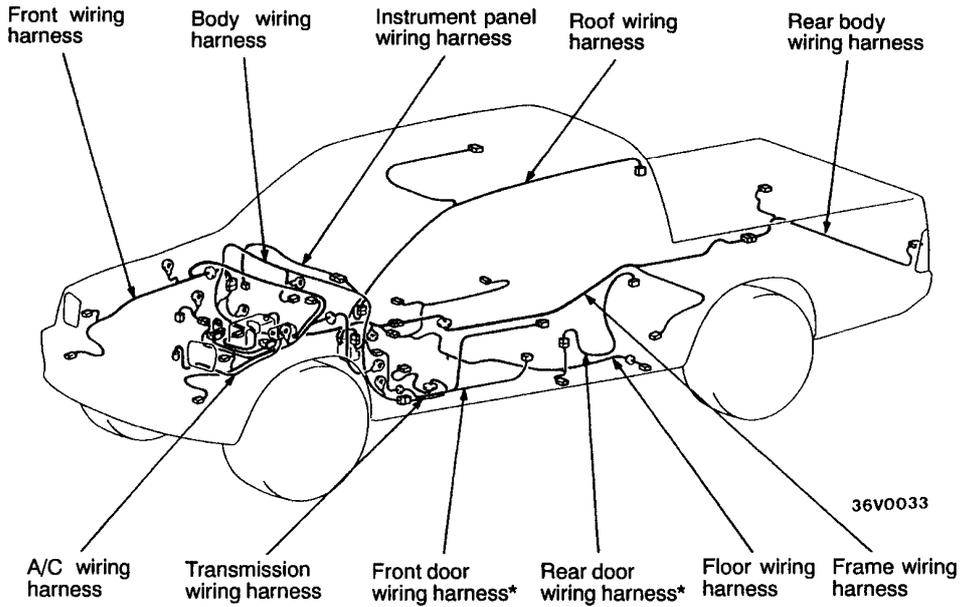

NOTE



- (1) These illustrations show only major wiring harnesses.
- (2) *: also equipped at the right side.

00005007


ENGINE COMPARTMENT

80100030607

4G6

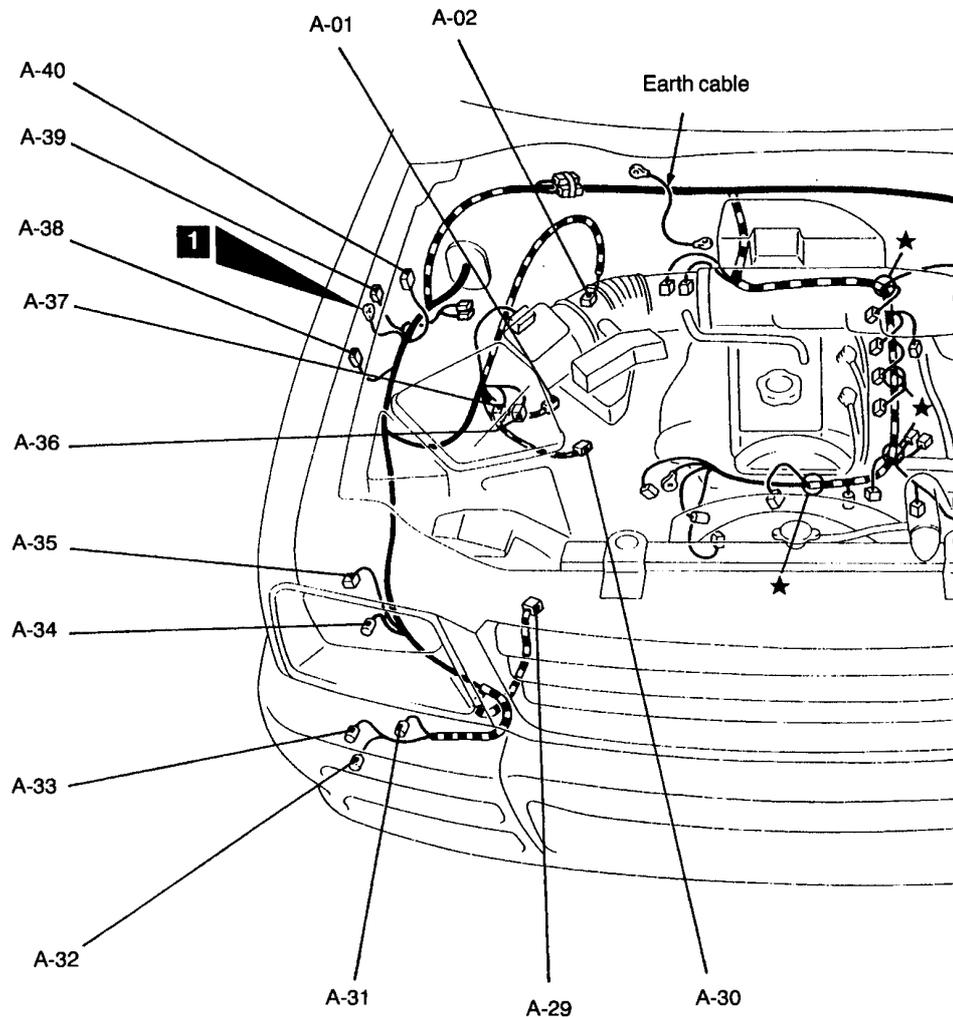
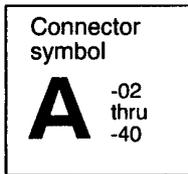


A-01 (2-B)	Wheel speed sensor (front: RH) <2WD-ABS>	A-11 (4-B)	DRL relay 2
A-02 (2-GR)	Free-wheeling hub engage switch <4WD>	A-12 (4-B)	DRL relay 1
A-03 (1)	Starter	A-13 (4-B)	Rear fog lamp relay
A-04 (1-B)	Starter	A-14 (6-L)	A/C wiring harness and front wiring harness combination <A/C>
A-05 (4-B)	Windshield wiper motor	A-15 (6-B)	Headlamp washer relay
A-06 (2-B)	Brake fluid level sensor	A-16 (10-B)	DRL wiring harness or front wiring harness and front wiring harness combi- nation
A-07 (2-B)	Wheel speed sensor (front: LH) <2WD-ABS>	A-17 (1-B)	Battery cable wiring harness and front wiring harness combination
A-08 (2-B)	ABS hydraulic unit	A-18 (3)	Headlamp leveling unit (LH)
A-09 (10-B)	ABS hydraulic unit		
A-10 (12-B)	DRL-ECU		

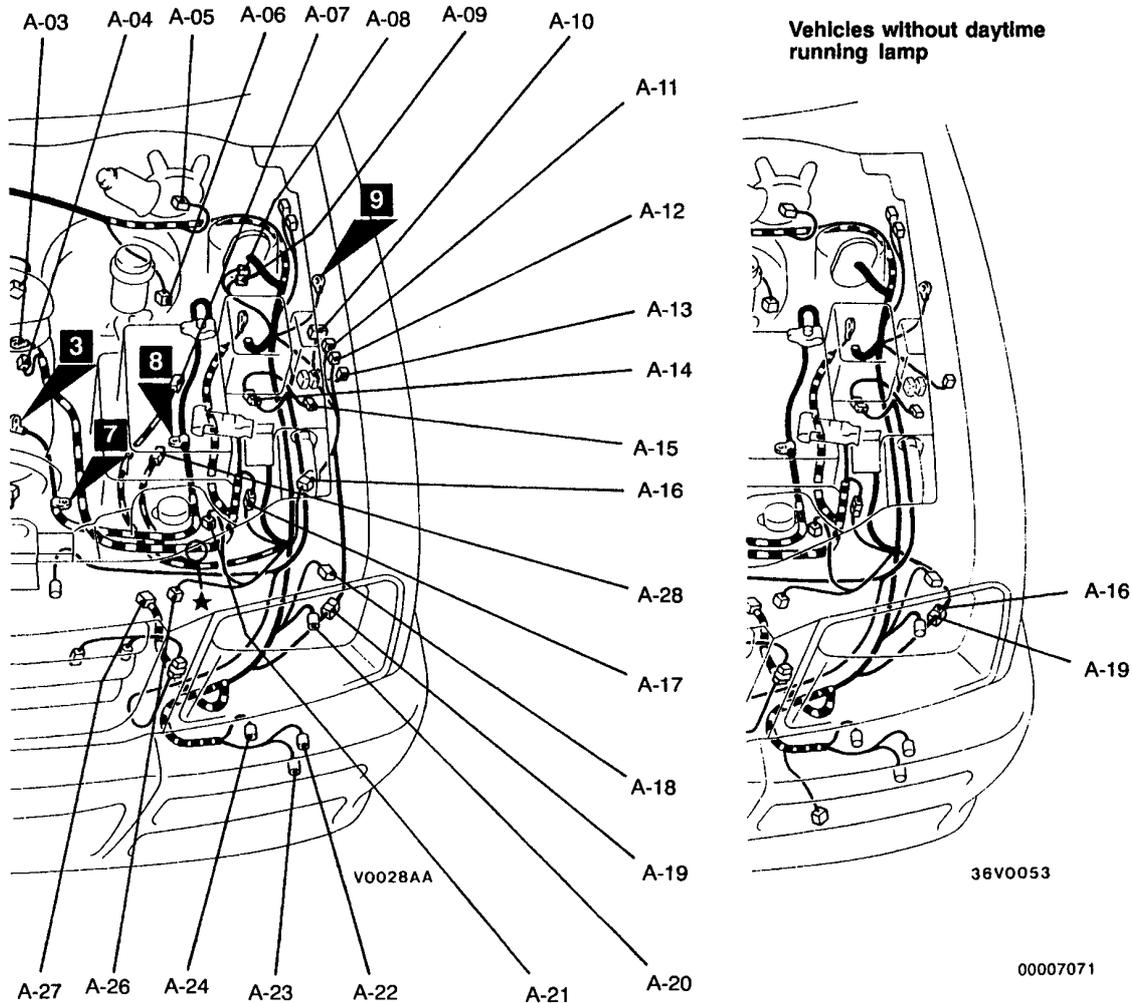


- | | | | |
|-------------|---|------------|--|
| A-19 (10-B) | DRL wiring harness or front wiring harness and front wiring harness combination | A-30 (2-B) | Wheel speed sensor (front: RH) <4WD-ABS> |
| A-20 (3-B) | Headlamp (LH) | A-31 (3-B) | Front combination lamp (RH) |
| A-21 (2-B) | Headlamp washer motor | A-32 (1) | Horn (HI) |
| A-22 (1) | Horn (LO) | A-33 (1) | Horn (HI) |
| A-23 (1) | Horn (LO) | A-34 (3-B) | Headlamp (RH) |
| A-24 (3-B) | Front combination lamp (LH) | A-35 (3) | Headlamp leveling unit (RH) |
| A-26 (2-B) | Windshield washer motor | A-36 (2-B) | Solenoid valve 1 <4WD> |
| A-27 (2-R) | Front impact sensor (LH) <SRS> | A-37 (2-B) | Solenoid valve 2 <4WD> |
| A-28 (2-B) | Wheel speed sensor (front: LH) <4WD-ABS> | A-38 (5-B) | ABS motor relay |
| A-29 (2-R) | Front impact sensor (RH) <SRS> | A-39 (6-B) | ABS valve relay |
| | | A-40 (4-B) | Horn relay <SRS> |

4G6

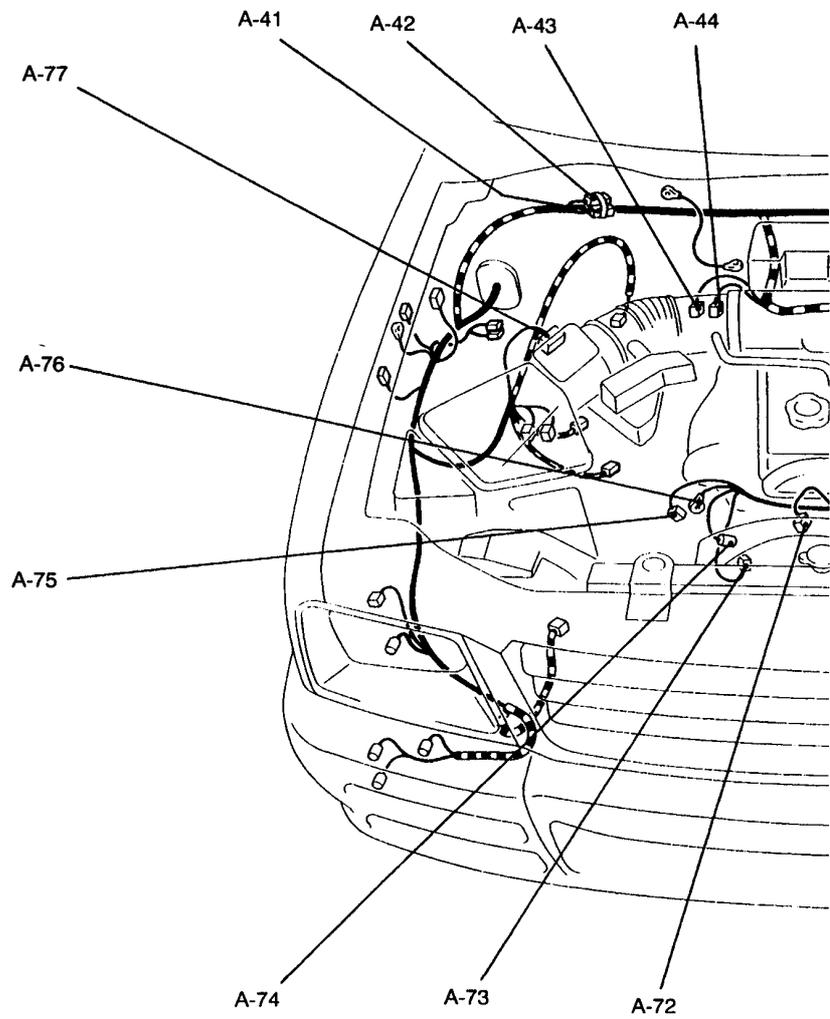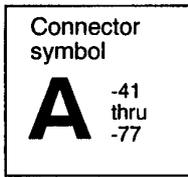

- | | | | |
|-------------|---|-------------|--------------------------|
| A-41 (1-B) | Fuel pump check connector | A-50 (6-B) | Idle speed control servo |
| A-42 (1-BR) | Ignition timing adjustment connector | A-51X (4) | Alternator relay |
| A-43 (1) | Engine coolant temperature switch <A/T> | A-52X (5) | Starter relay <A/T> |
| A-44 (1-B) | Engine coolant temperature gauge unit | A-54X (5) | Headlamp relay |
| A-45 (2-GR) | Injector 4 | A-55X (5) | Tail lamp relay |
| A-46 (2-GR) | Injector 3 | A-56X (2) | Storage connector |
| A-47 (4-B) | Throttle position sensor | A-57 (2-GR) | Injector 2 |
| A-48 (2-B) | Purge control solenoid valve | A-58X (4) | A/C compressor relay |
| A-49 (2-B) | EGR solenoid valve | A-59X (4) | Condenser fan relay |


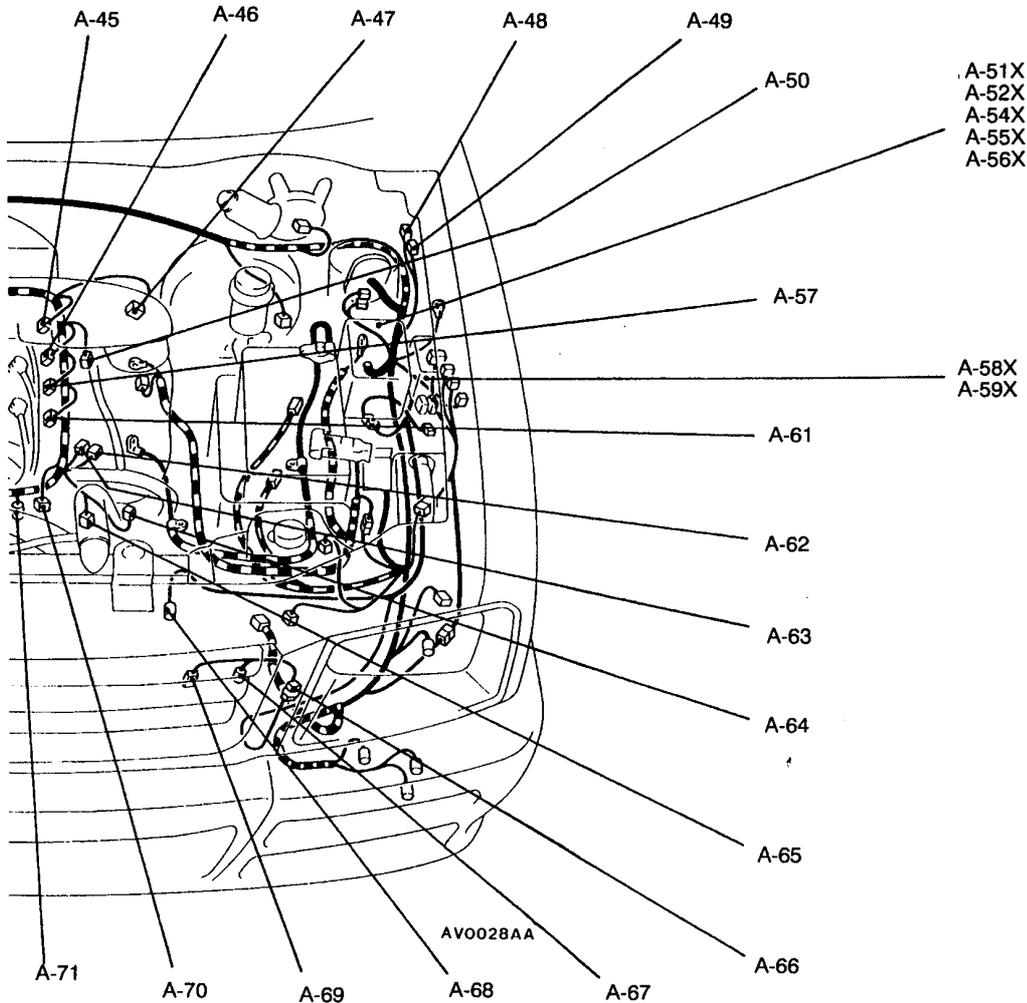


- | | | | |
|-------------|-----------------------------------|------------|------------------------------------|
| A-61 (2-GR) | Injector 1 | A-70 (3-B) | Power transistor |
| A-62 (1-B) | Noise filter | A-71 (1-B) | Capacitor |
| A-63 (1-BR) | Noise filter | A-72 (4-L) | Distributor assembly |
| A-64 (2-B) | Engine coolant temperature sensor | A-73 (1-B) | Oil pressure switch |
| A-65 (2-B) | Ignition coil | A-74 (1) | Power steering oil pressure switch |
| A-66 (2) | Capacitor <A/C> | A-75 (2-B) | Alternator |
| A-67 (2) | Dual pressure switch <A/C> | A-76 (1) | Alternator |
| A-68 (1) | Magnetic clutch <A/C> | A-77 (8-B) | Air flow sensor |
| A-69 (2) | Condenser fan motor <A/C> | | |


ENGINE COMPARTMENT

80100030614


4D56 <L.H. drive vehicles>

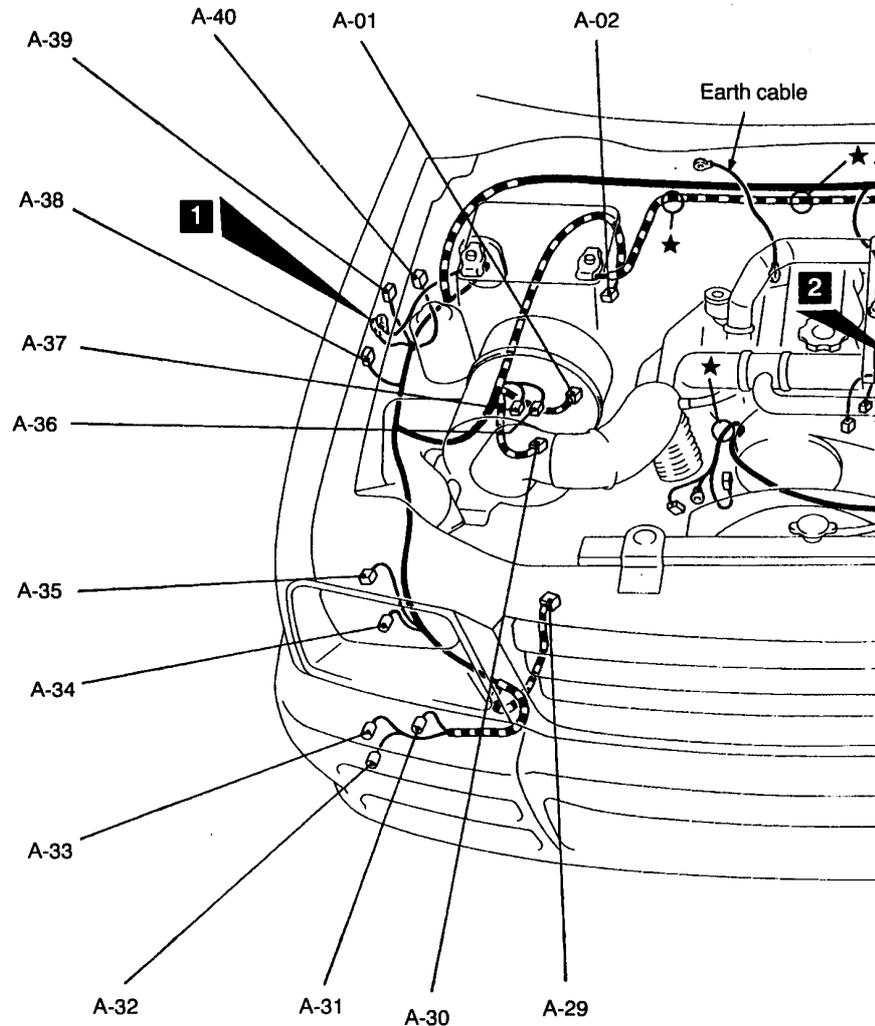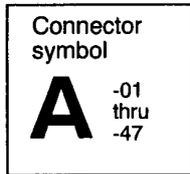

A-01 (2-B)	Wheel speed sensor (front: RH) <2WD-ABS>	A-13 (4-B)	Rear fog lamp relay
A-02 (2-GR)	Free-wheeling hub engage switch <4WD>	A-14 (6-L)	A/C wiring harness and front wiring harness combination <A/C>
A-03 (1)	Starter	A-15 (6-B)	Headlamp washer relay
A-04 (1-B)	Starter	A-16 (10-B)	DRL wiring harness or front wiring harness and front wiring harness combination
A-05 (4-B)	Windshield wiper motor	A-17 (4-B)	Battery cable wiring harness and front wiring harness combination
A-06 (2-B)	Brake fluid level sensor	A-18 (3)	Headlamp leveling unit (LH)
A-07 (2-B)	Wheel speed sensor (front: LH) <2WD-ABS>	A-19 (10-B)	DRL wiring harness or front wiring harness and front wiring harness combination
A-08 (2-B)	ABS hydraulic unit	A-20 (3-B)	Headlamp (LH)
A-09 (10-B)	ABS hydraulic unit		
A-10 (12-B)	DRL-ECU		
A-11 (4-B)	DRL relay 2		
A-12 (4-B)	DRL relay 1		

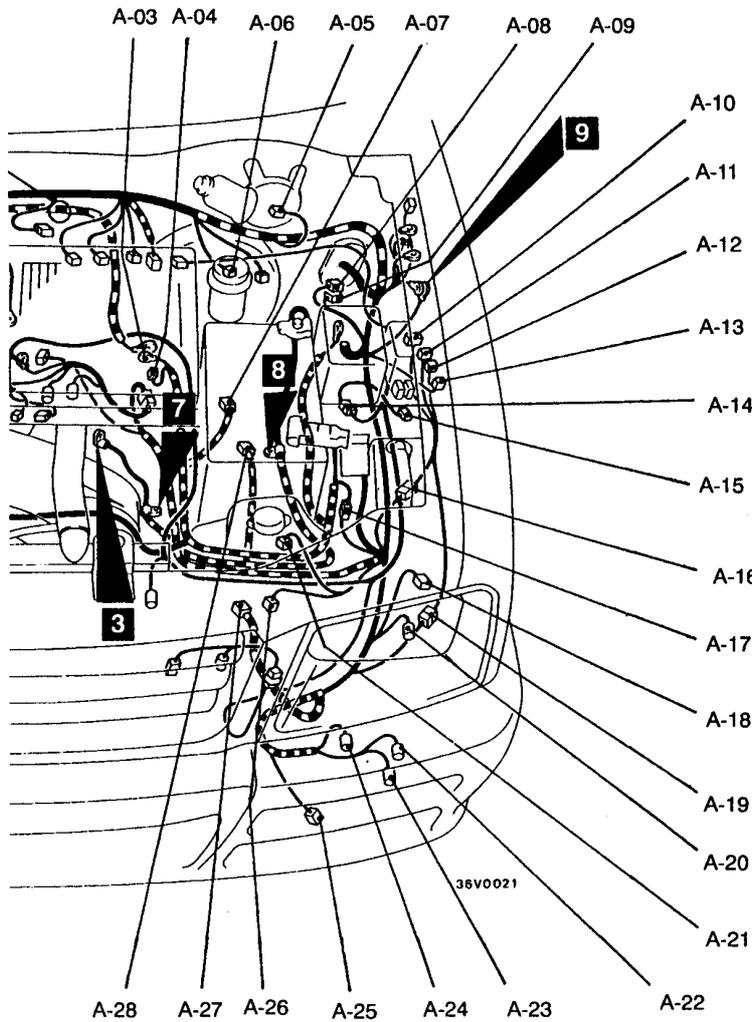



Vehicles without daytime running lamp

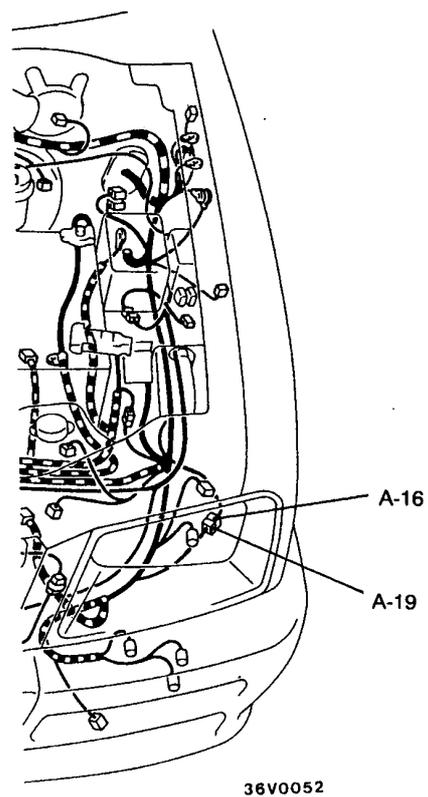


00005189

- | | | | |
|------------|---|------------|-----------------------------|
| A-21 (2-B) | Headlamp washer motor | A-31 (3-B) | Front combination lamp (RH) |
| A-22 (1) | Horn (LO) | A-32 (1) | Horn (HI) |
| A-23 (1) | Horn (LO) | A-33 (1) | Horn (HI) |
| A-24 (3-B) | Front combination lamp (LH) | A-34 (3-B) | Headlamp (RH) |
| A-25 (2-B) | Outside thermo sensor or no connection | A-35 (3) | Headlamp leveling unit (RH) |
| A-26 (2-B) | Windshield washer motor | A-36 (2-B) | Solenoid valve 1 <4WD> |
| A-27 (2-R) | Front impact sensor (LH) <SRS> | A-37 (2-B) | Solenoid valve 2 <4WD> |
| A-28 (2-B) | Wheel speed sensor (front: LH)
<4WD-ABS> | A-38 (5-B) | ABS motor relay |
| A-29 (2-R) | Front impact sensor (RH) <SRS> | A-39 (6-B) | ABS valve relay |
| A-30 (2-B) | Wheel speed sensor (front: RH)
<4WD-ABS> | A-40 (4-B) | Horn relay <SRS> |

4D56 <L.H. drive vehicles>

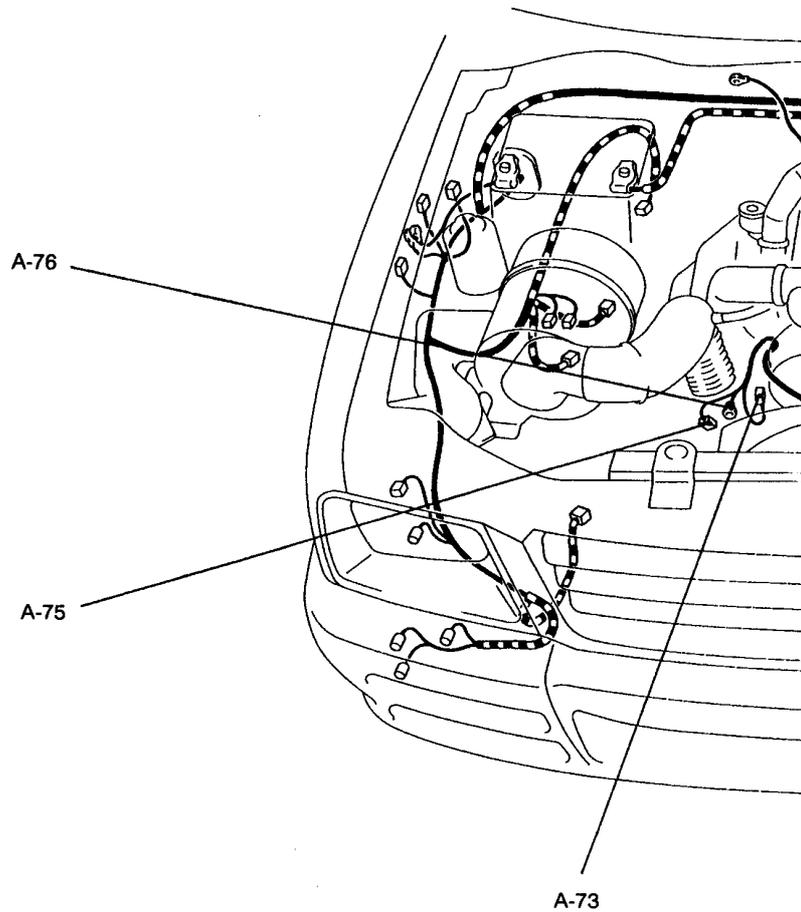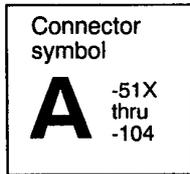

- | | | | |
|-----------|-----------------------------|------------|----------------------------------|
| A-51X (4) | Alternator relay | A-66 (2) | Capacitor <A/C> |
| A-52X (5) | Starter relay | A-67 (2) | Dual pressure switch <A/C> |
| A-53X (5) | Intercooler fan relay | A-68 (1) | Magnetic clutch <A/C> |
| A-54X (5) | Headlamp relay | A-69 (2) | Condenser fan motor <A/C> |
| A-55X (5) | Tail lamp relay | A-73 (1-B) | Oil pressure switch |
| A-56X (2) | Storage connector | A-75 (2-B) | Alternator |
| A-58X (4) | A/C compressor relay | A-76 (1) | Alternator |
| A-59X (4) | Condenser fan relay | A-78 (1) | Glow plug |
| A-60X (4) | Condenser fan control relay | A-79 (2-B) | Idle-up solenoid valve <ABS-M/T> |


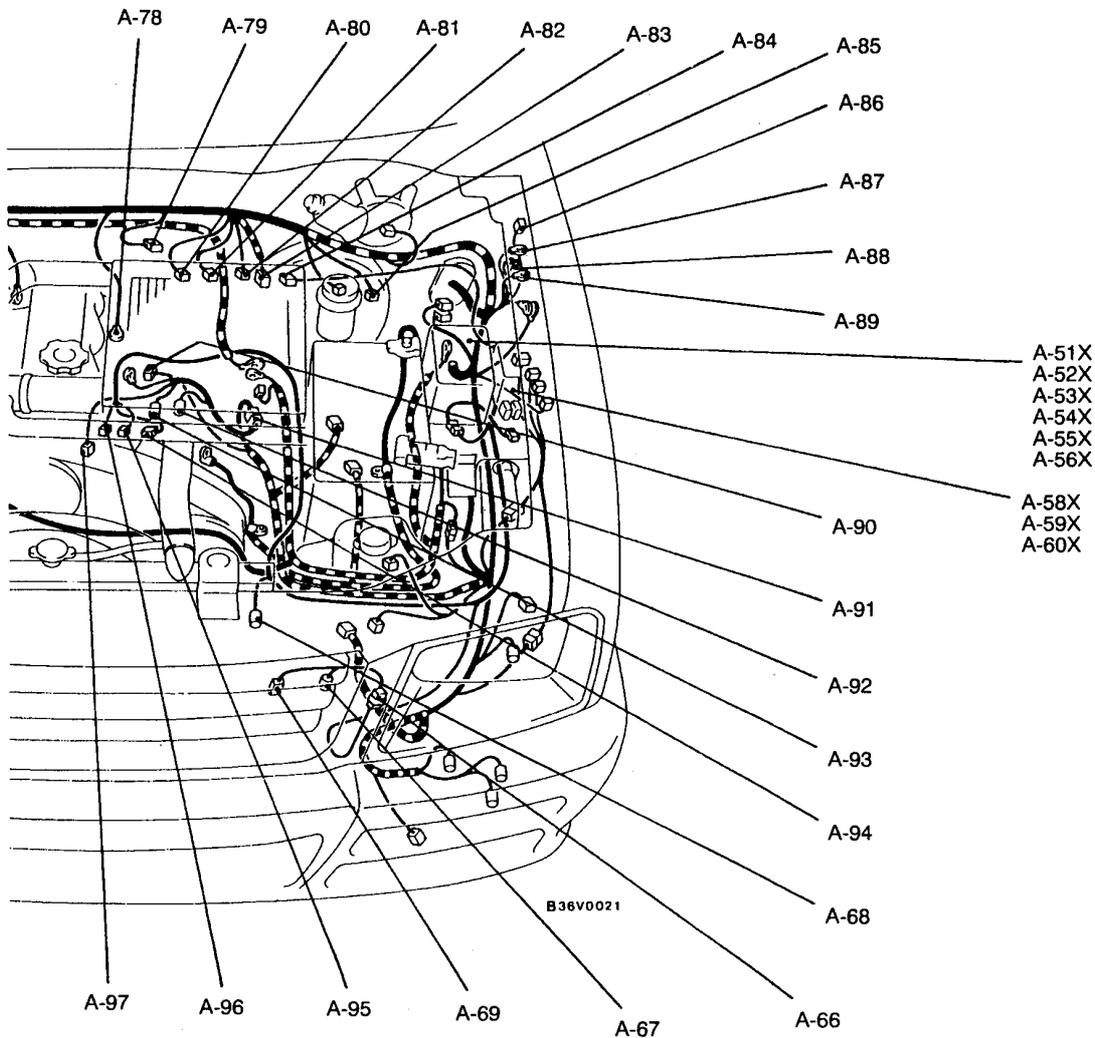


- | | | | |
|-------------|--|----------|---|
| A-80 (2-BR) | Intake air temperature switch | A-92 (1) | Fuel cut solenoid valve |
| A-81 (2-B) | Intercooler fan motor | A-93 (2) | Revolution pick-up sensor |
| A-82 (2-GR) | Fuel line heater | A-94 (1) | Lever (throttle) position switch
<A/C-A/T> |
| A-83 (2-B) | Water level switch | A-95 (2) | Engine coolant temperature switch
(for A/C compressor control) |
| A-84 (2) | Idle-up solenoid valve <A/C> | A-96 (1) | Engine coolant temperature switch
(for condenser fan control) |
| A-85 (2-B) | Vacuum switch | A-97 (2) | Engine coolant temperature sensor and
gauge unit |
| A-86 (4-B) | Fuel line heater relay | | |
| A-87 (1) | Glow plug relay | | |
| A-88 (1-B) | Glow plug relay | | |
| A-89 (1) | Glow plug relay | | |
| A-90 (3-B) | Fuel cut valve ECU | | |
| A-91 (6-B) | Fuel injection pump wiring harness and
front wiring harness combination | | |

ENGINE COMPARTMENT


80100030621

4D56 <R.H. drive vehicles>

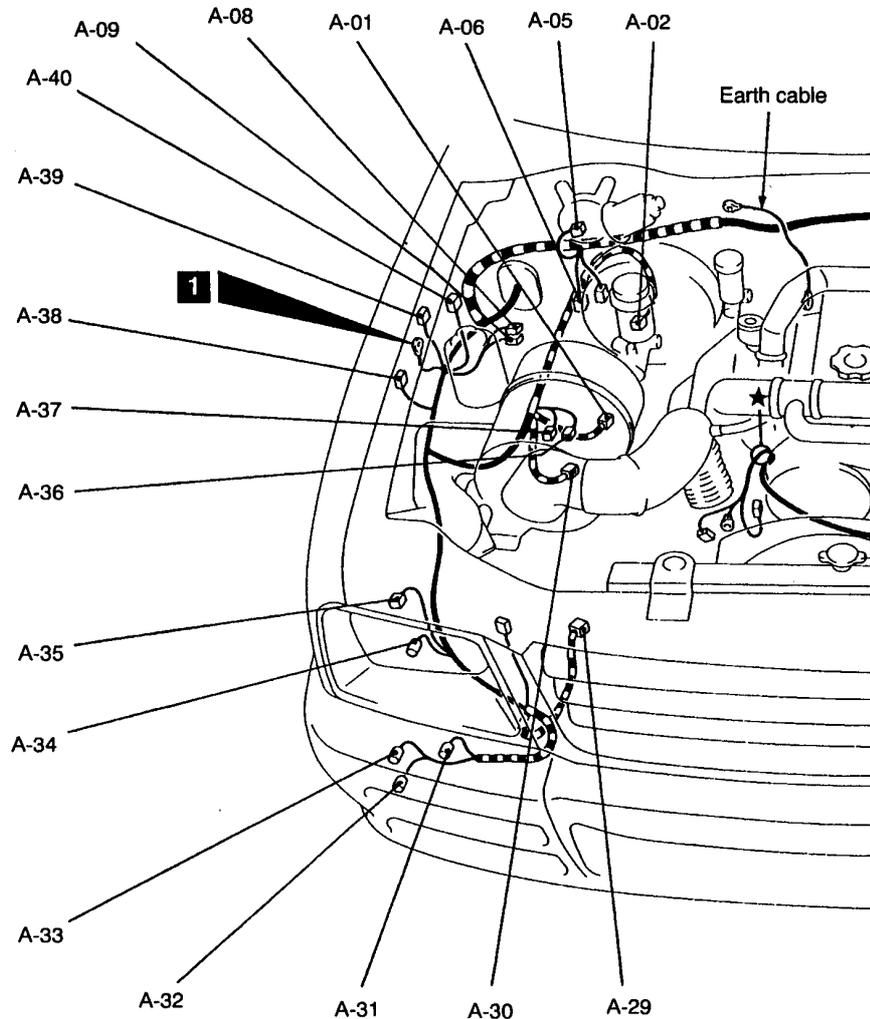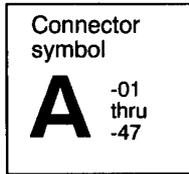



- A-01 (2-B) Wheel speed sensor (front: RH) <2WD-ABS>
- A-02 (2-GR) Free-wheeling hub engage switch <4WD>
- A-03 (1) Starter
- A-04 (1-B) Starter
- A-05 (4-B) Windshield wiper motor
- A-06 (2-B) Brake fluid level sensor
- A-07 (2-B) Wheel speed sensor (front: LH) <2WD-ABS>

- A-08 (2-B) ABS hydraulic unit
- A-09 (10-B) ABS hydraulic unit
- A-13 (4-B) Rear fog lamp relay
- A-14 (6-L) A/C wiring harness and front wiring harness combination <A/C>
- A-15 (6-B) Headlamp washer relay
- A-17 (4-B) Battery cable wiring harness and front wiring harness combination
- A-18 (3) Headlamp leveling unit (LH)
- A-20 (3-B) Headlamp (LH)

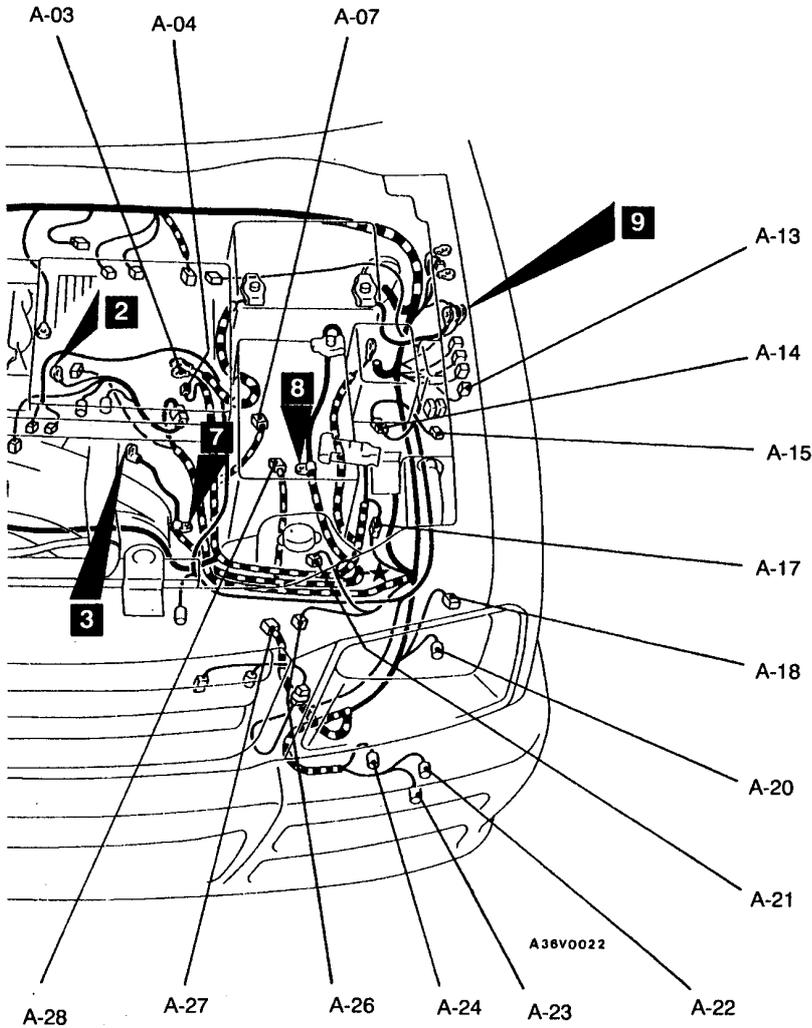


- | | | | |
|------------|---|------------|-----------------------------|
| A-21 (2-B) | Headlamp washer motor | A-31 (3-B) | Front combination lamp (RH) |
| A-22 (1) | Horn (LO) | A-32 (1) | Horn (HI) |
| A-23 (1) | Horn (LO) | A-33 (1) | Horn (HI) |
| A-24 (3-B) | Front combination lamp (LH) | A-34 (3-B) | Headlamp (RH) |
| A-26 (2-B) | Windshield washer motor | A-35 (3) | Headlamp leveling unit (RH) |
| A-27 (2-R) | Front impact sensor (LH) <SRS> | A-36 (2-B) | Solenoid valve 1 <4WD> |
| A-28 (2-B) | Wheel speed sensor (front: LH)
<4WD-ABS> | A-37 (2-B) | Solenoid valve 2 <4WD> |
| A-29 (2-R) | Front impact sensor (RH) <SRS> | A-38 (5-B) | ABS motor relay |
| A-30 (2-B) | Wheel speed sensor (front: RH)
<4WD-ABS> | A-39 (6-B) | ABS valve relay |
| | | A-40 (4-B) | Horn relay <SRS> |

4D56 <R.H. drive vehicles>

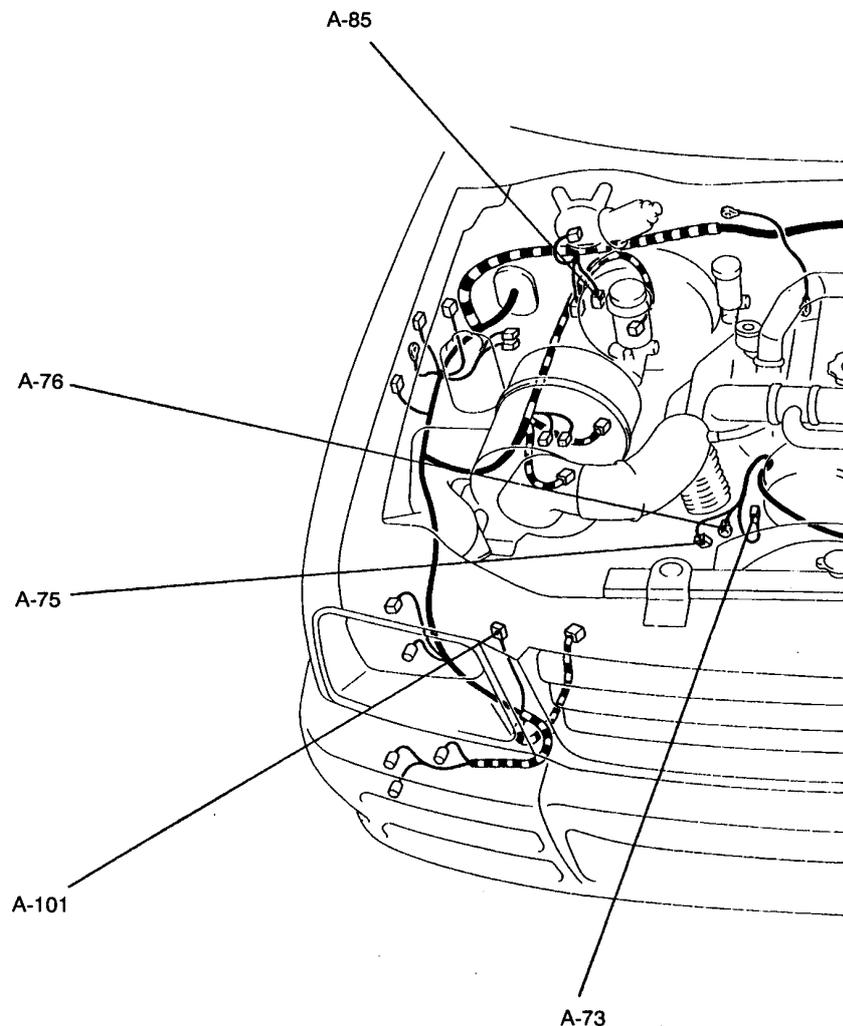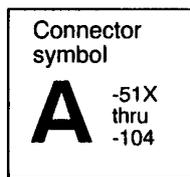


A-51X (4)	Alternator relay	A-68 (1)	Magnetic clutch <A/C>
A-52X (5)	Starter relay	A-69 (2)	Condenser fan motor <A/C>
A-53X (5)	Intercooler fan relay	A-73 (1-B)	Oil pressure switch
A-54X (5)	Headlamp relay	A-75 (2-B)	Alternator
A-55X (5)	Tail lamp relay	A-76 (1)	Alternator
A-56X (2)	Storage connector	A-78 (1)	Glow plug
A-58X (4)	A/C compressor relay	A-79 (2-B)	Idle-up solenoid valve <ABS-M/T>
A-59X (4)	Condenser fan relay	A-80 (2-BR)	Intake air temperature switch
A-60X (4)	Condenser fan control relay	A-81 (2-B)	Intercooler fan motor
A-66 (2)	Capacitor <A/C>	A-83 (2-B)	Water level switch
A-67 (2)	Dual pressure switch <A/C>		

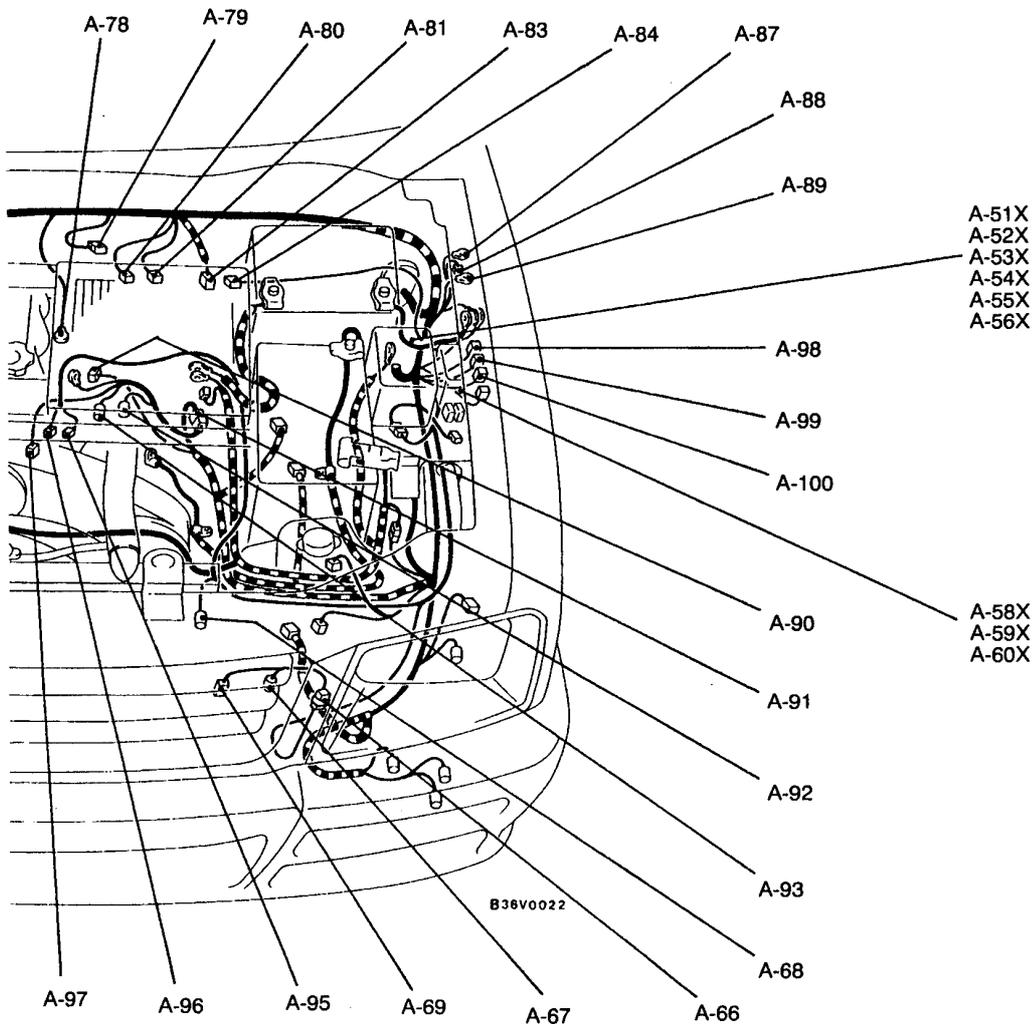


- | | | | |
|------------|---|-------------|--|
| A-84 (2) | Idle-up solenoid valve <A/C> | A-95 (2) | Engine coolant temperature switch (for A/C compressor control) |
| A-85 (2-B) | Vacuum switch | A-96 (1) | Engine coolant temperature switch (for condenser fan control) |
| A-87 (1) | Glow plug relay | A-97 (2) | Engine coolant temperature sensor and gauge unit |
| A-88 (1-B) | Glow plug relay | A-98 (4-G) | Dim-dip lamp relay 3 |
| A-89 (1) | Glow plug relay | A-99 (4-BR) | Dim-dip lamp relay 2 |
| A-90 (3-B) | Fuel cut valve ECU | A-100 (4-B) | Dim-dip lamp relay 1 |
| A-91 (6-B) | Fuel injection pump wiring harness and front wiring harness combination | A-101 (2-B) | Dim-dip lamp resistor |
| A-92 (1) | Fuel cut solenoid valve | | |
| A-93 (2) | Revolution pick-up sensor | | |

TRANSMISSION


80100050030

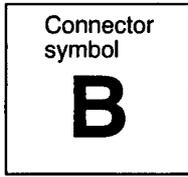

<2WD>

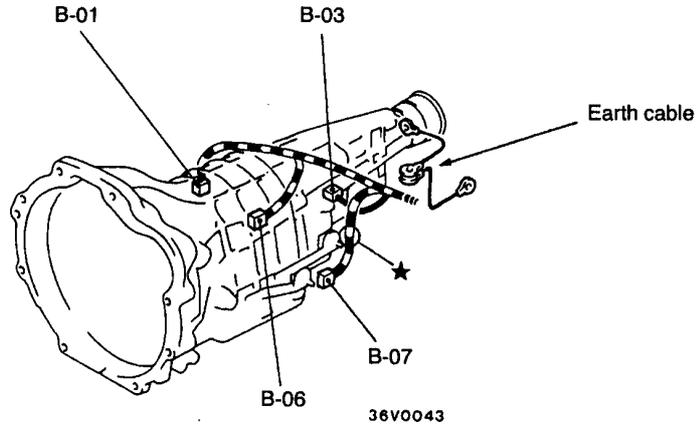

<4WD>

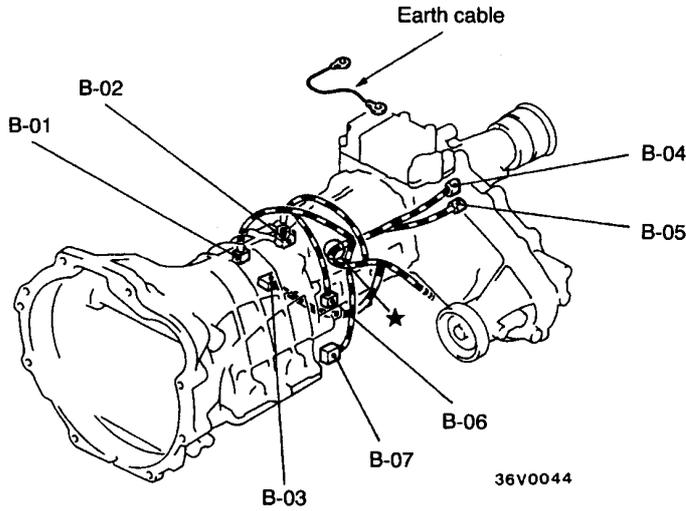



00005008

- | | | | |
|--------------|----------------------------------|-------------|---------------------------------------|
| B-01 (10-GR) | Inhibitor switch <A/T> | B-05 (2-GR) | High range/Low range detection switch |
| B-02 (2-B) | Back-up lamp switch <Diesel 4WD> | B-06 (4-B) | Overdrive solenoid valve <A/T> |
| B-03 (4-B) | Oxygen sensor <MPI> | B-07 (2-B) | Back-up lamp switch |
| B-04 (2-B) | 4WD detection switch | | <Except diesel 4WD> |


NOTES

DASH PANEL

L.H. drive vehicles

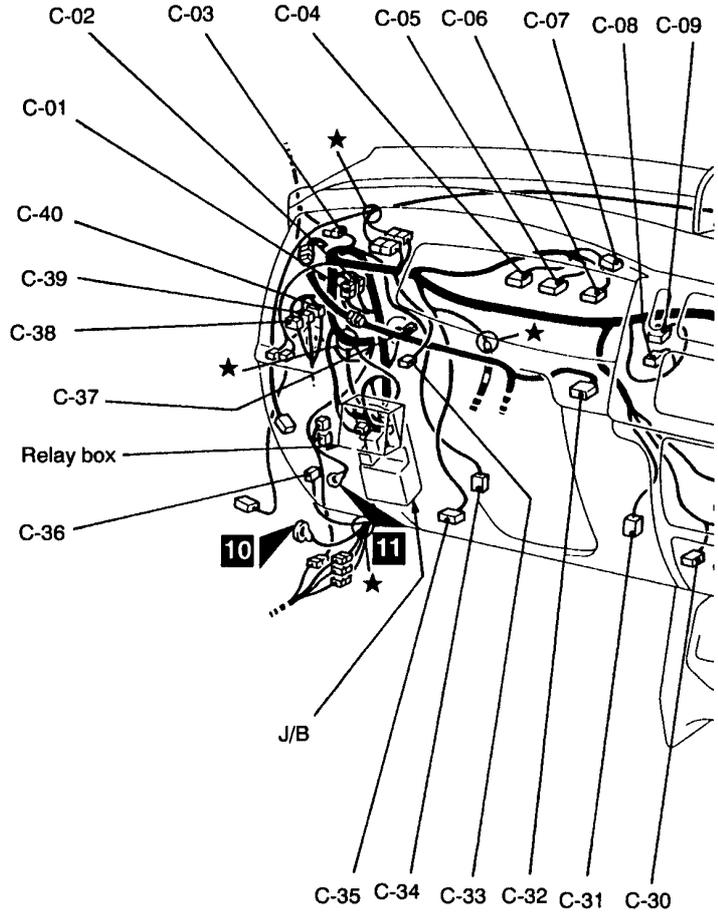
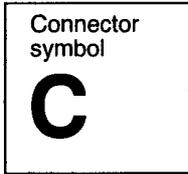


C-01 (22)	Body wiring harness and front wiring harness combination	C-12 (10)	Blower switch
C-02 (17)	Body wiring harness and front wiring harness combination	C-13 (14)	Radio and tape player
C-03 (1)	Body wiring harness and roof wiring harness combination or no connection	C-14 (2)	Cigarette lighter
C-04 (14)	Combination meter	C-15 (1)	No connection (reed switch)
C-05 (10)	Combination meter	C-16 (5)	Body wiring harness and front door wiring harness (passenger's side) combination
C-06 (14-B)	Combination meter	C-17 (6)	Body wiring harness and front door wiring harness (passenger's side) combination
C-07 (1-B)	Combination meter	C-18 (7)	Body wiring harness and front door wiring harness (passenger's side) combination
C-08 (6)	Defogger switch or no connection	C-19 (18)	Body wiring harness and front wiring harness combination <Petrol>
C-09 (10)	Hazard switch	C-19 (14)	Body wiring harness and front wiring harness combination <Diesel>
C-10 (6)	A/C switch		
C-11 (4)	Clock		

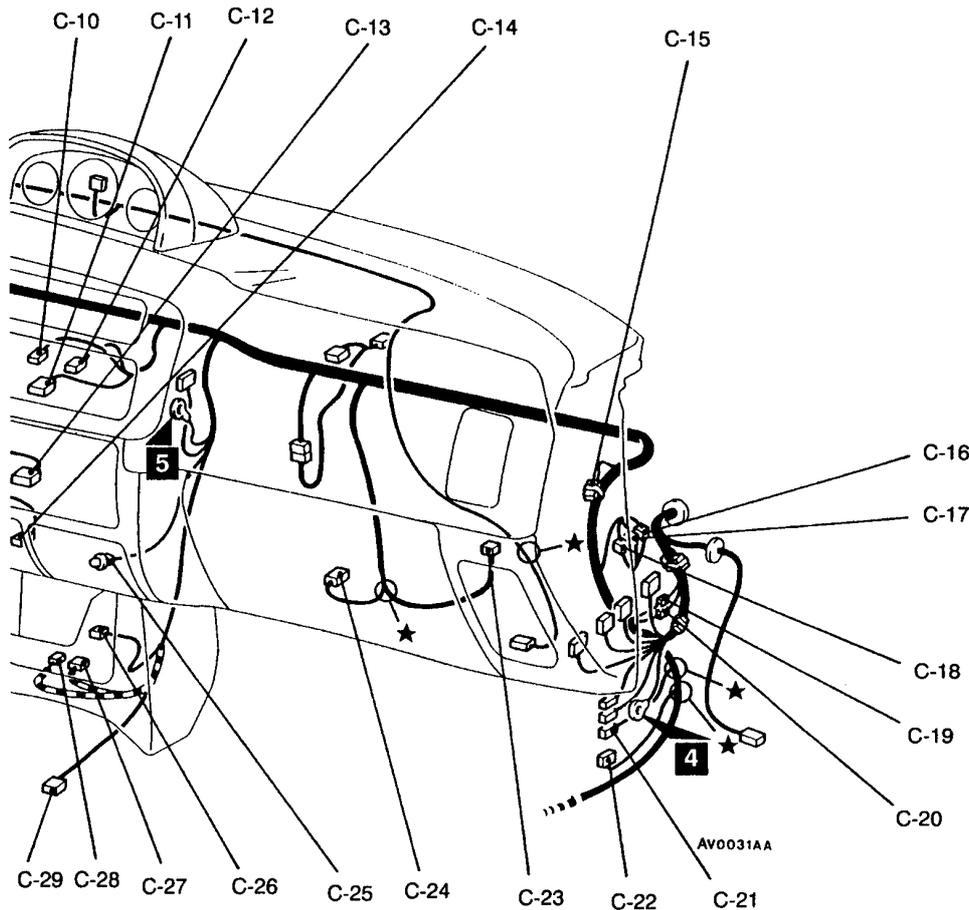


- | | | | |
|-------------|--|-------------|---|
| C-20 (7) | Body wiring harness and front wiring harness combination | C-32 (4) | Headlamp leveling switch |
| C-21 (10-B) | Rear differential lock-ECU | C-33 (8) | Rear differential lock switch |
| C-22 (10) | 4WD indicator-ECU | C-34 (2) | Stop lamp switch |
| C-23 (2-L) | Blower motor | C-35 (16-B) | Diagnosis connector |
| C-24 (4-L) | Blower resistor | C-36 (16-B) | Immobilizer-ECU |
| C-25 (2) | Ashtray illumination lamp | C-37 (8) | Overdrive control relay |
| C-26 (3-B) | G sensor <ABS> | C-38 (7) | Body wiring harness and front door wiring harness (driver's side) combination |
| C-27 (14-R) | SRS diagnosis unit | C-39 (10) | Body wiring harness and front door wiring harness (driver's side) combination |
| C-28 (2-R) | SRS diagnosis unit | C-40 (7-B) | Body wiring harness and front door wiring harness (driver's side) combination |
| C-29 (6) | Overdrive switch | | |
| C-30 (1) | Cigarette lighter | | |
| C-31 (1-B) | Parking brake switch | | |

L.H. drive vehicles

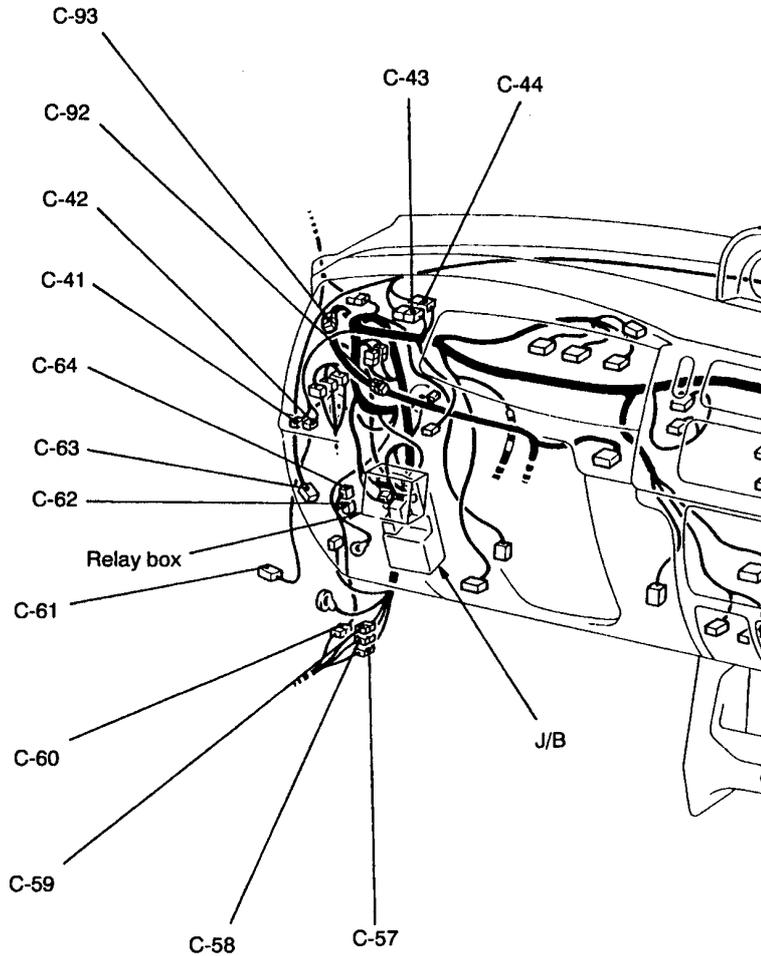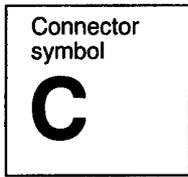



- | | | | |
|------------|---|---------------|-------------------------------|
| C-41 (6-B) | Rear fog lamp switch | C-49 (26-Y) | Engine-ECU <Petrol> |
| C-42 (4) | Rheostat or joint connector | C-49 (13) | Glow-ECU <Diesel> |
| C-43 (5) | Body wiring harness and instrument panel wiring harness combination | C-50 (16-Y) | Engine-ECU <Petrol> |
| C-44 (11) | Body wiring harness and instrument panel wiring harness combination | C-51*1 (22-Y) | Engine-ECU <Petrol> |
| C-45 (14) | Multi-meter | C-51*2 (12-Y) | Engine-ECU <Petrol> |
| C-46 (3) | Thermostat | C-52 (2-BR) | Side turn signal lamp (RH) |
| C-47 (8) | Compressor-ECU | C-53 (4) | Engine control relay <Petrol> |
| C-48 (2-B) | Diode (for ABS circuit) | C-53 (4-BR) | Intercooler fan-ECU <Diesel> |
| | | C-54 (4) | Fuel pump relay <Petrol> |

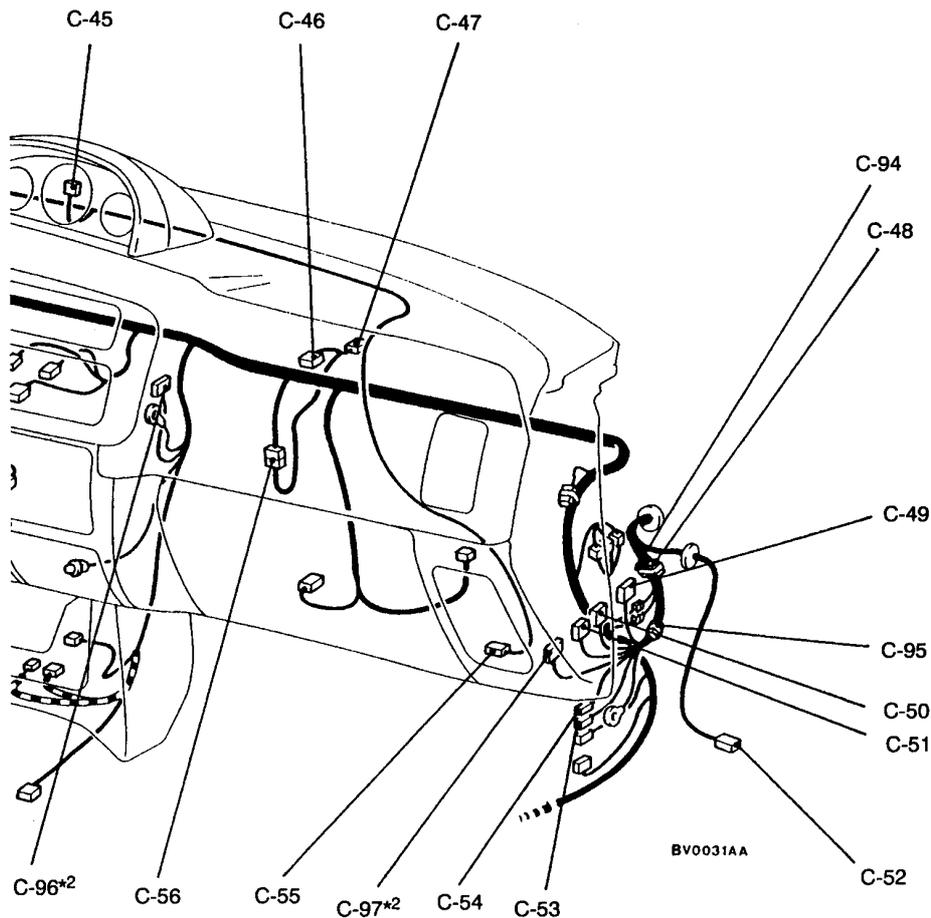


C-55 (2-B)	Front speaker (RH)	C-63 (2-B)	Front speaker (LH)
C-56 (12)	Thermostat wiring harness and body wiring harness combination	C-64 (22-Y)	ABS-ECU
C-57 (20)	Body wiring harness and transmission wiring harness combination	C-92 (19-GR)	J/C (1)
C-58 (3)	Body wiring harness and transmission wiring harness combination	C-93 (19-GR)	J/C (2)
C-59 (2)	Body wiring harness and transmission wiring harness combination	C-94 (19-GR)	J/C (3)
C-60 (6)	Front wiring harness and transmission wiring harness combination	C-95 (19-GR)	J/C (4)
C-61 (2-BR)	Side turn signal lamp (LH)	C-96*2 (4)	Defogger relay <Vehicles with defogger timer>
C-62 (26-Y)	ABS-ECU	A-97*2(22-Y)	Engine-ECU <Petrol>
		Remarks	
		(1) *1: 1997Models	
		(2) *2: 1998Models	

DASH PANEL

L.H. drive vehicles

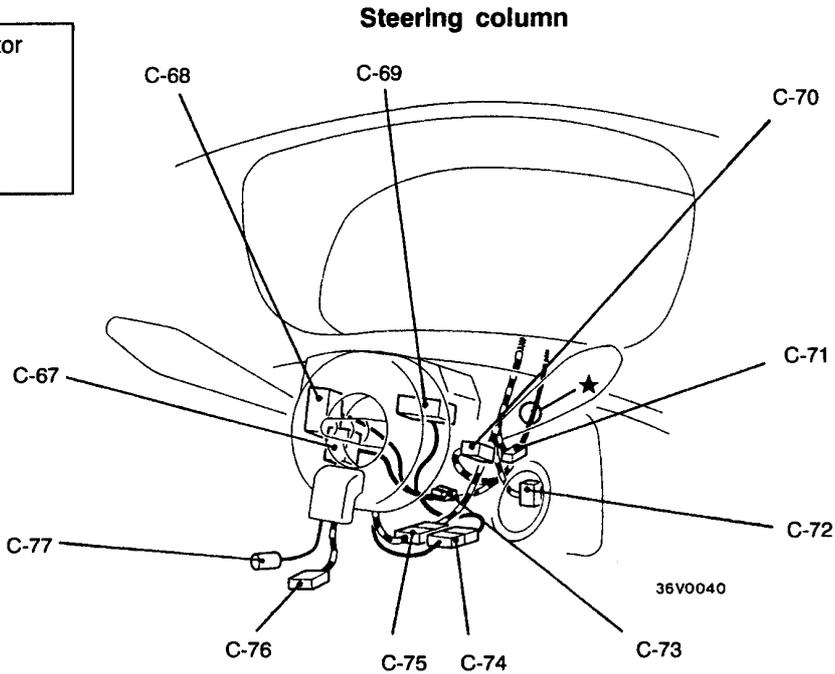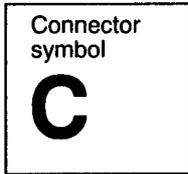

Relay box in passenger compartment

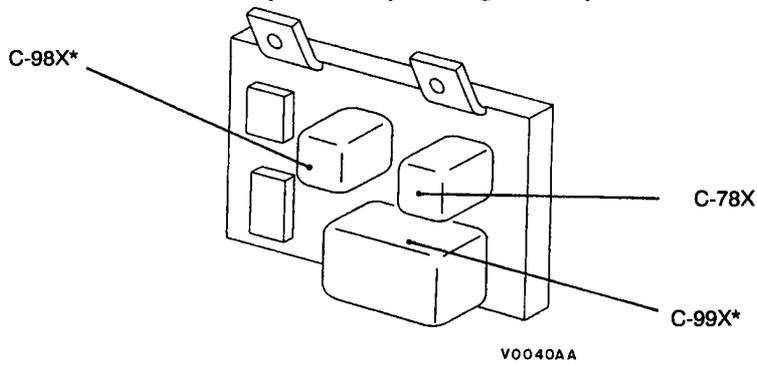


00006902

- | | | | |
|------------|--|------------|------------------------|
| C-67 (6) | Column switch | C-74 (3) | Clock spring <SRS> |
| C-68 (12) | Column switch | C-75 (2-R) | Clock spring <SRS> |
| C-69 (10) | Column switch | C-76 (2) | Air bag module (squib) |
| C-70 (6-B) | Ignition switch | C-77 (1) | Horn switch |
| C-71 (2) | Ignition key ring antenna | C-78X (4) | Power window relay |
| C-72 (7) | Key reminder switch | | |
| C-73 (2-B) | Diode (for headlamp and rear fog lamp circuit) | | |


Junction block

<Front side view>

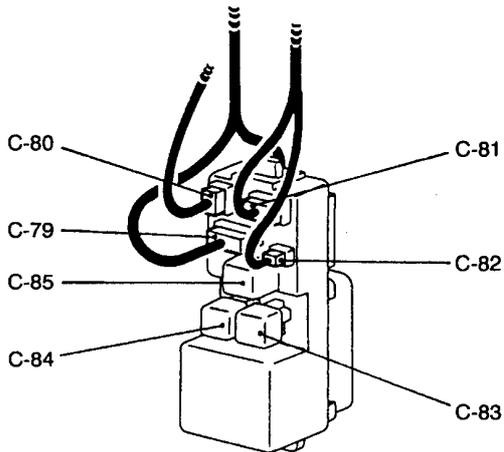

36V0039

<Rear side view>

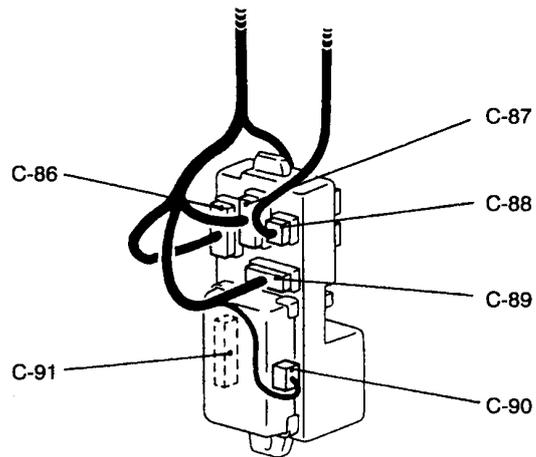

36V0038

00005010



- C-79 (16) Body wiring harness and J/B combination
- C-80 (2) Roof wiring harness and J/B combination
- C-81 (12) Front wiring harness and J/B combination
- C-82 (1) Front wiring harness and J/B combination
- C-83 (5) Blower relay
- C-84 (5) Defogger relay
- C-85 (3) Turn signal and hazard warning flasher unit
- C-86 (20) Body wiring harness and J/B combination

- C-87 (16-B) Body wiring harness and J/B combination
- C-88 (4) Front wiring harness and J/B combination
- C-89 (8) Body wiring harness and J/B combination
- C-90 (8) ETACS-ECU
- C-91 (12) ETACS-ECU or buzzer-ECU
- C-98X* (4) Rear heater relay
- C-99X* (6) Defogger timer
- Remark
- *: 1998Models


DASH PANEL

80100060644

R.H. drive vehicles

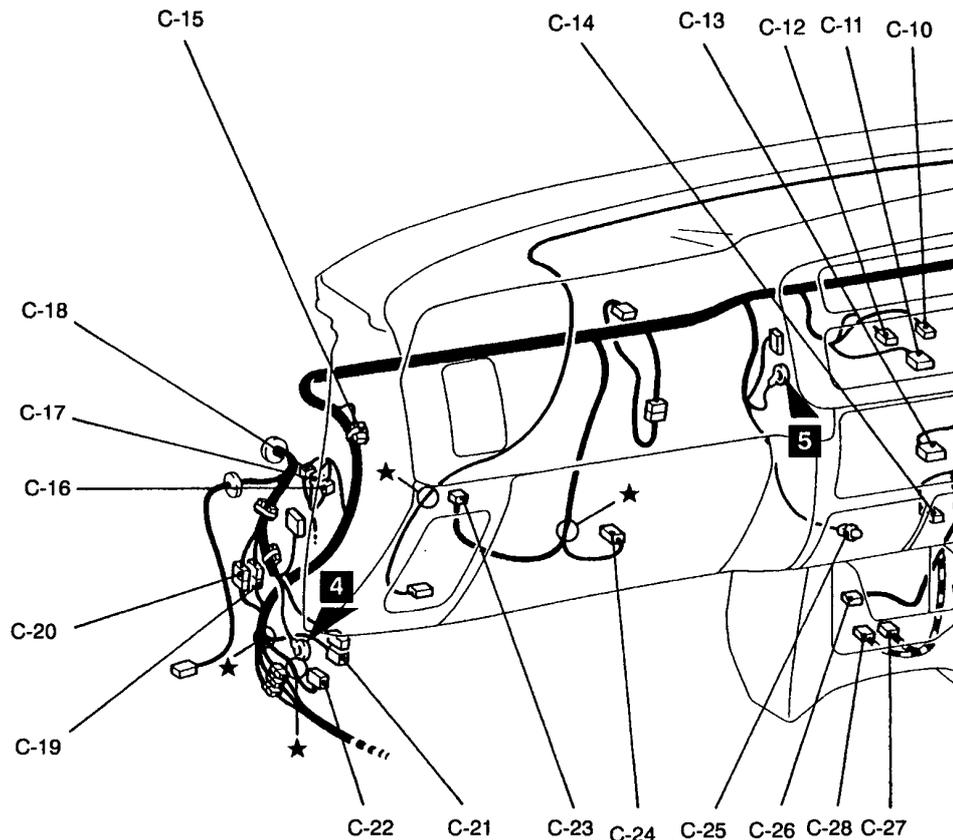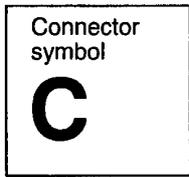

C-01 (22)	Body wiring harness and front wiring harness combination	C-11 (4)	Clock
C-02 (17)	Body wiring harness and front wiring harness combination	C-12 (10)	Blower switch
C-03* (1)	Body wiring harness and roof wiring harness combination or no connection	C-13 (14)	Radio and tape player
C-04 (14)	Combination meter	C-14 (2)	Cigarette lighter
C-05 (10)	Combination meter	C-15 (1)	No connection (reed switch)
C-06 (14-B)	Combination meter	C-16 (5)	Body wiring harness and front door wiring harness (passenger's side) combination
C-07 (1-B)	Combination meter	C-17 (6)	Body wiring harness and front door wiring harness (passenger's side) combination
C-08* (6)	Defogger switch or no connection	C-18 (7)	Body wiring harness and front door wiring harness (passenger's side) combination
C-09 (10)	Hazard switch	C-19 (14)	Body wiring harness and front wiring harness combination
C-10 (6)	A/C switch		


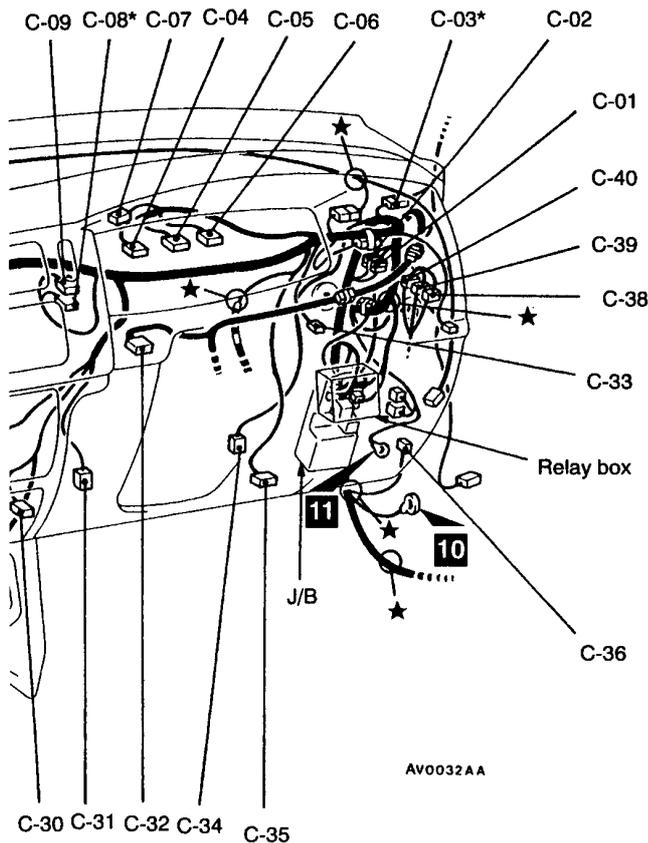


- C-20 (7) Body wiring harness and front wiring harness combination
- C-21 (10-B) Rear differential lock-ECU
- C-22 (10) 4WD indicator-ECU
- C-23 (2) Blower motor
- C-24 (4-L) Blower resistor
- C-25 (2) Ashtray illumination lamp
- C-26 (3-B) G sensor <ABS>
- C-27 (14-R) SRS diagnosis unit
- C-28 (2-R) SRS diagnosis unit
- C-30 (1) Cigarette lighter
- C-31 (1-B) Parking brake switch
- C-32 (4) Headlamp leveling switch

- C-33 (8) Rear differential lock switch
- C-34 (2) Stop lamp switch
- C-35 (16-B) Diagnosis connector
- C-36 (16-B) Immobilizer-ECU
- C-38 (7) Body wiring harness and front door wiring harness (driver's side) combination
- C-39 (10) Body wiring harness and front door wiring harness (driver's side) combination
- C-40 (7-B) Body wiring harness and front door wiring harness (driver's side) combination


Remark
*: 1998Models

R.H. drive vehicles

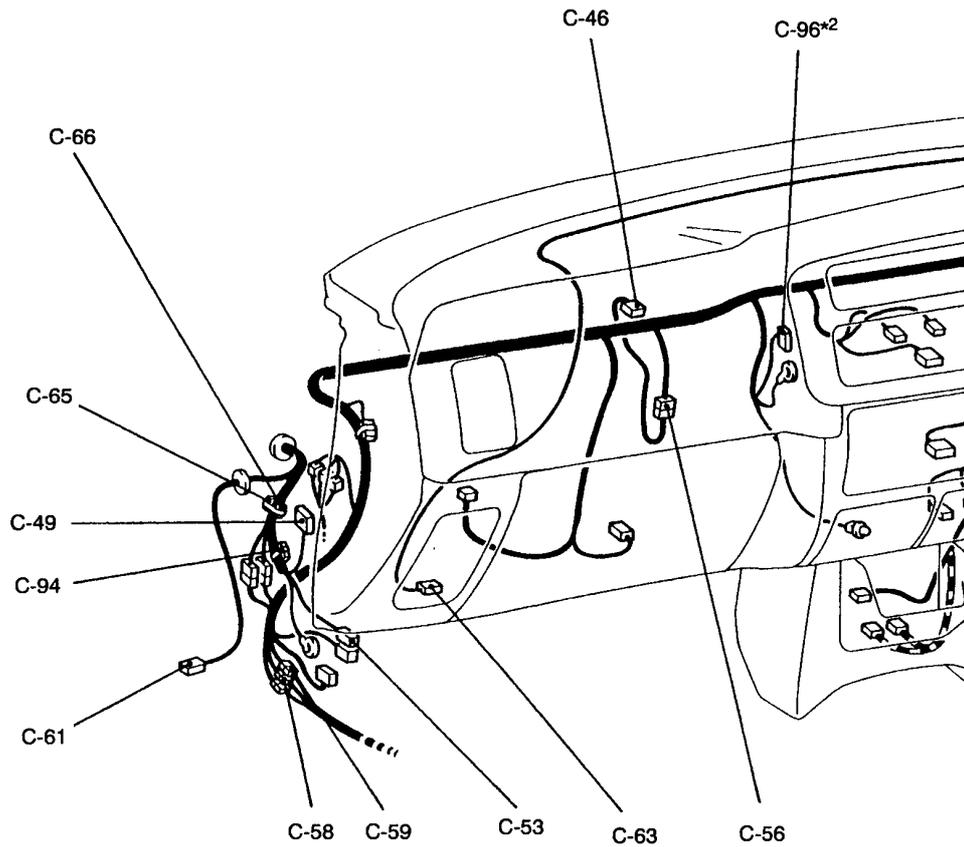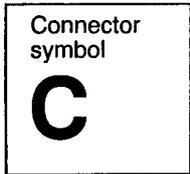

- C-41 (6-B) Rear fog lamp switch
- C-42 (4) Joint connector
- C-43 (5) Body wiring harness and instrument panel wiring harness combination
- C-46 (3) Thermostat
- C-48 (2-B) Diode (for ABS circuit)

- C-49 (13) Grow-ECU
- C-52 (2-BR) Side turn signal lamp (RH)
- C-53 (4-BR) Intercooler fan-ECU
- C-55 (2-B) Front speaker (RH)
- C-56 (12) Thermostat wiring harness and body wiring harness combination


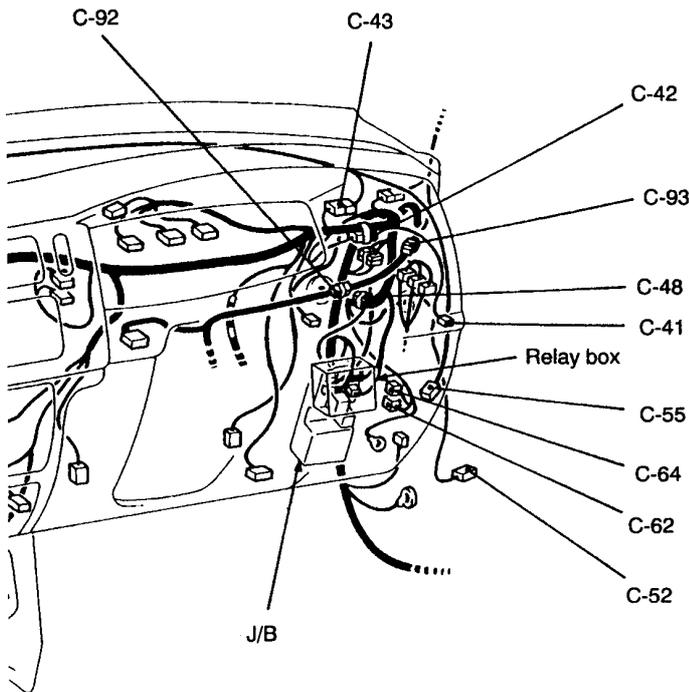


BV0032AA


C-58 (3)	Body wiring harness and transmission wiring harness combination	C-66 (2-B)	Diode (for dim-dip lamp circuit)
C-59 (2)	Body wiring harness and transmission wiring harness combination	C-92 (19-GR)	J/C (1)
C-61 (2-BR)	Side turn signal lamp (LH)	C-93 (19-GR)	J/C (2)
C-62 (26-Y)	ABS-ECU	C-94 (19-GR)	J/C (3)
C-63 (2-B)	Front speaker (LH)	C-96*2 (4)	Defogger relay
C-64 (22-Y)	ABS-ECU		<Vehicles with defogger timer>
C-65 (3)	Diode (for dim-dip lamp circuit)		
		Remarks	
		(1) *1: 1997Models	
		(2) *2: 1998Models	

DASH PANEL

R.H. drive vehicles

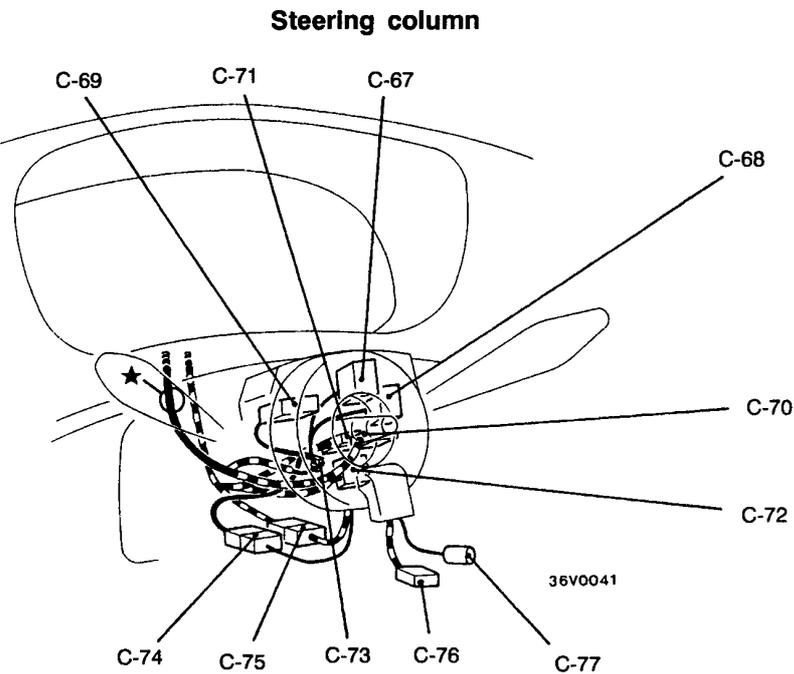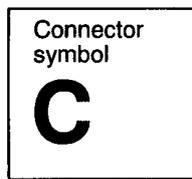


Relay box in passenger compartment

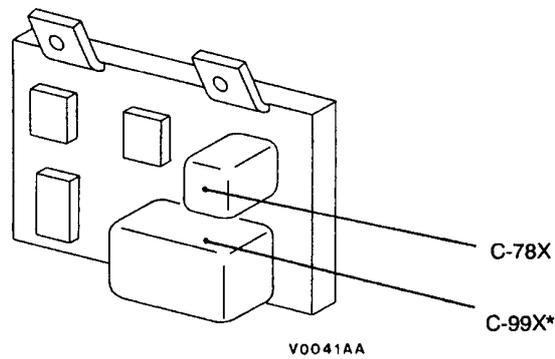

00006903

- | | | | |
|------------|--|------------|------------------------|
| C-67 (6) | Column switch | C-74 (3) | Clock spring <SRS> |
| C-68 (12) | Column switch | C-75 (2-R) | Clock spring <SRS> |
| C-69 (10) | Column switch | C-76 (2) | Air bag module (squib) |
| C-70 (6-B) | Ignition switch | C-77 (1) | Horn switch |
| C-71 (2) | Ignition key ring antenna | C-78X (4) | Power window relay |
| C-72 (7) | Key reminder switch | | |
| C-73 (2-B) | Diode (for headlamp and rear fog lamp circuit) | | |

Junction block

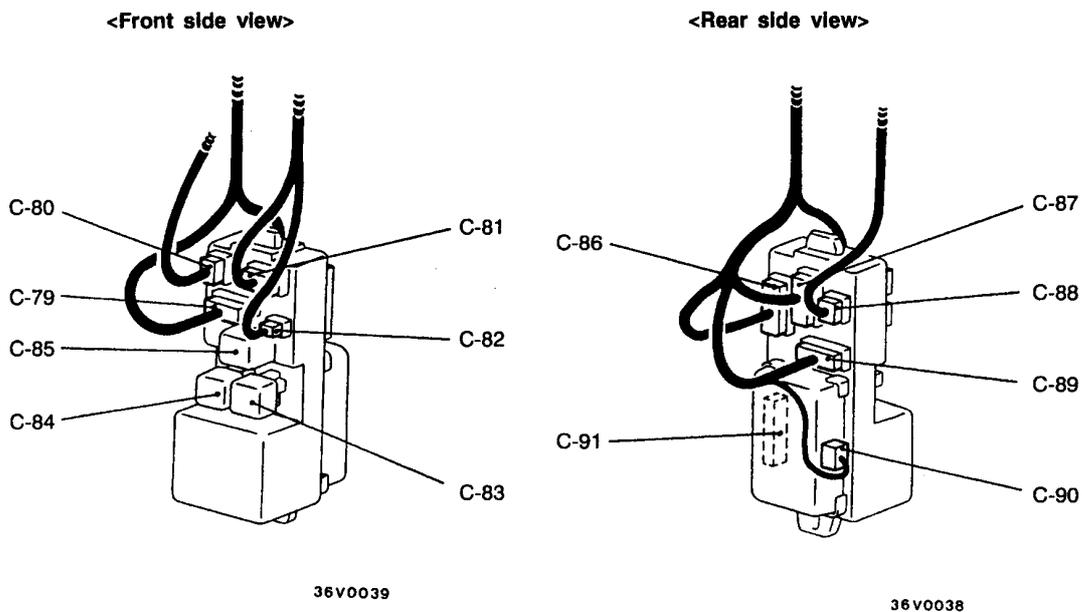

00005012


- C-79 (16) Body wiring harness and J/B combination
- C-80 (2) Roof wiring harness and J/B combination
- C-81 (12) Front wiring harness and J/B combination
- C-82 (1) Front wiring harness and J/B combination
- C-83 (5) Blower relay
- C-84 (5) Defogger relay
- C-85 (3) Turn signal and hazard warning flasher unit

- C-86 (20) Body wiring harness and J/B combination
 - C-87 (16-B) Body wiring harness and J/B combination
 - C-88 (4) Front wiring harness and J/B combination
 - C-89 (8) Body wiring harness and J/B combination
 - C-90 (8) ETACS-ECU
 - C-91 (12) ETACS-ECU or buzzer-ECU
 - C-99X* (6) Defogger timer
- Remark
*: 1998Models

CABIN

80100220134

Single cab <L.H. drive vehicles>


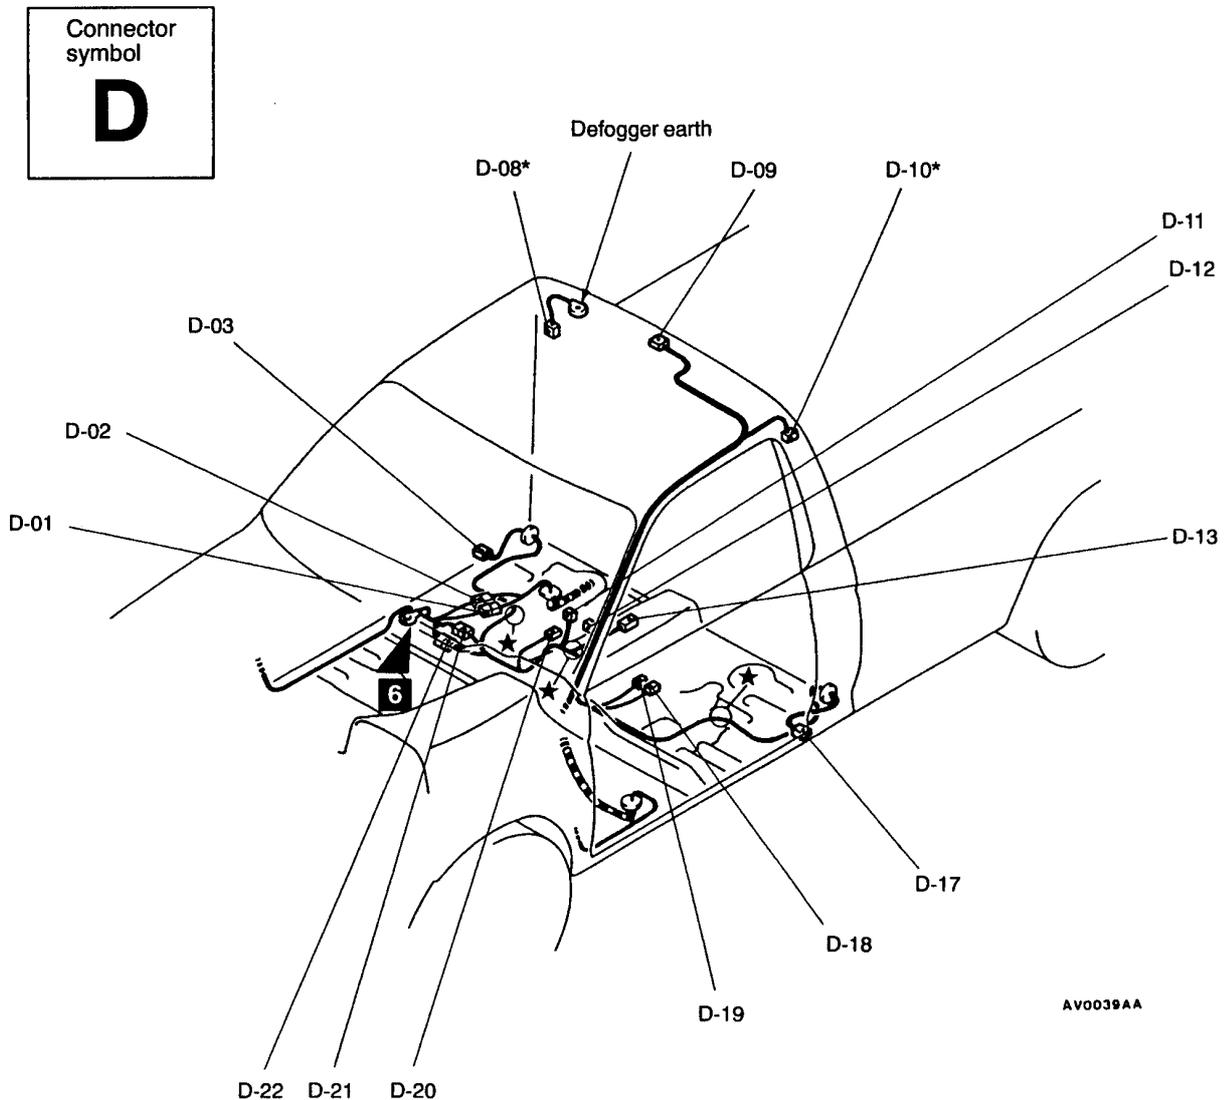


D-01 (6)	Body wiring harness and frame wiring harness combination	D-17 (2)	Front door switch (driver's side)
D-02 (14)	Body wiring harness and frame wiring harness combination	D-18 (2)	No connection
D-03 (1-B)	Front door switch (passenger's side)	D-19 (3-B)	Front seat assembly (LH)
D-08* (1)	Defogger (-)	D-20 (3-B)	Front seat assembly (RH)
D-09 (2)	Room lamp	D-21 (9)	Body wiring harness and floor wiring harness combination
D-10* (1-B)	Defogger (+)	D-22 (16)	Body wiring harness and floor wiring harness combination
D-11 (6)	Heated seat switch (RH)		
D-12 (6)	Heated seat switch (LH)	Remark	
D-13 (1-B)	Parking brake switch	*: 1998Models	

CABIN

80100220141

Single cab <R.H. drive vehicles>

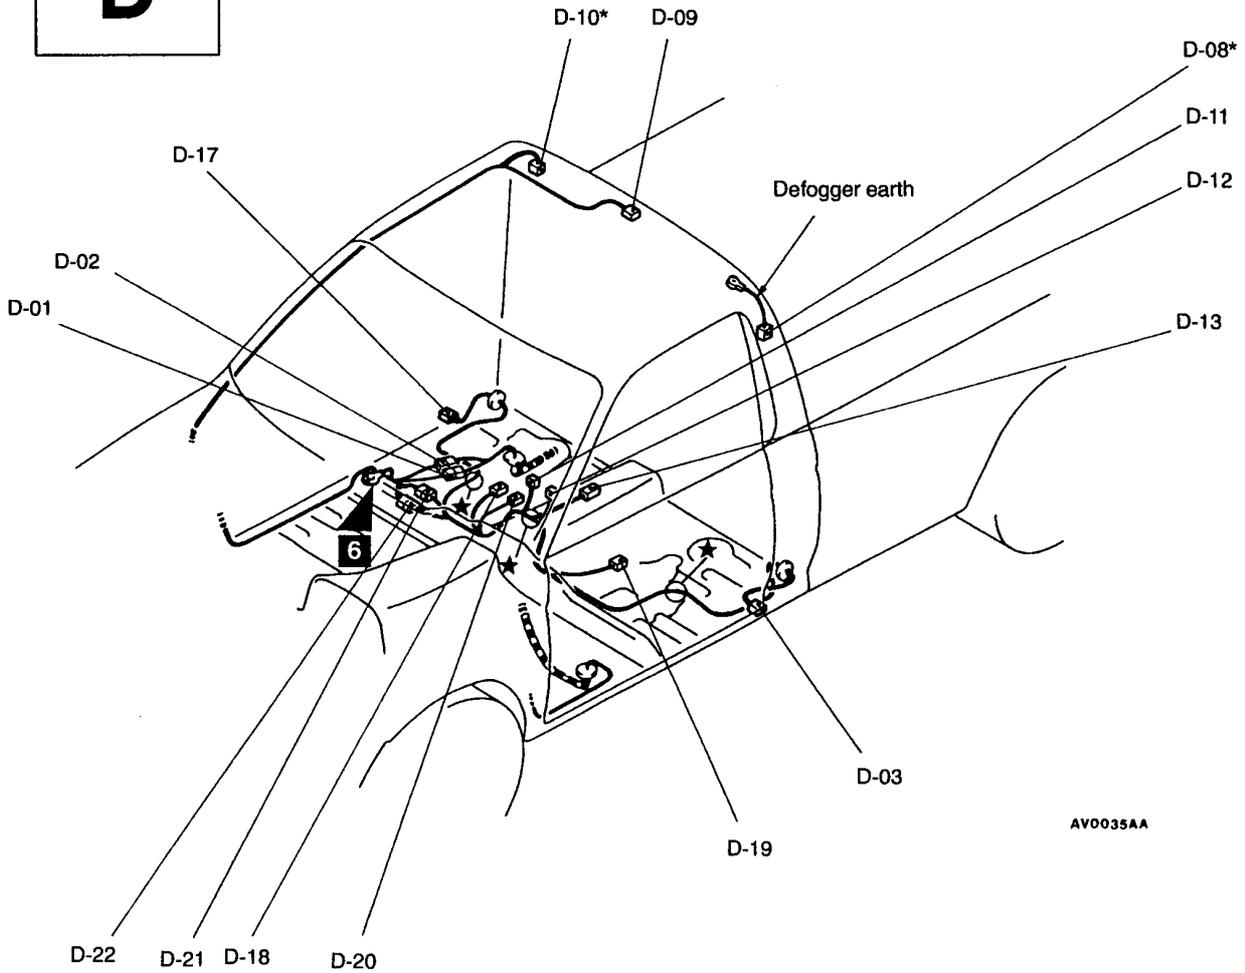
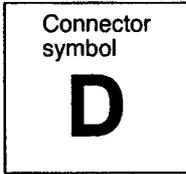


- | | | | |
|-------------|--|------------|--|
| D-01 (6) | Body wiring harness and frame wiring harness combination | D-17 (2) | Front door switch (driver's side) |
| D-02 (14) | Body wiring harness and frame wiring harness combination | D-18 (2) | No connection |
| D-03 (1-B) | Front door switch (passenger's side) | D-19 (3-B) | Front seat assembly (LH) |
| D-08* (1) | Defogger (-) | D-20 (3-B) | Front seat assembly (RH) |
| D-09 (2) | Room lamp | D-21 (9) | Body wiring harness and floor wiring harness combination |
| D-10* (1-B) | Defogger (+) | D-22 (16) | Body wiring harness and floor wiring harness combination |
| D-11 (6) | Heated seat switch (RH) | | |
| D-12 (6) | Heated seat switch (LH) | | |
| D-13 (1-B) | Parking brake switch | | |
- Remark
*: 1998Models

CABIN

80100220158

Club cab

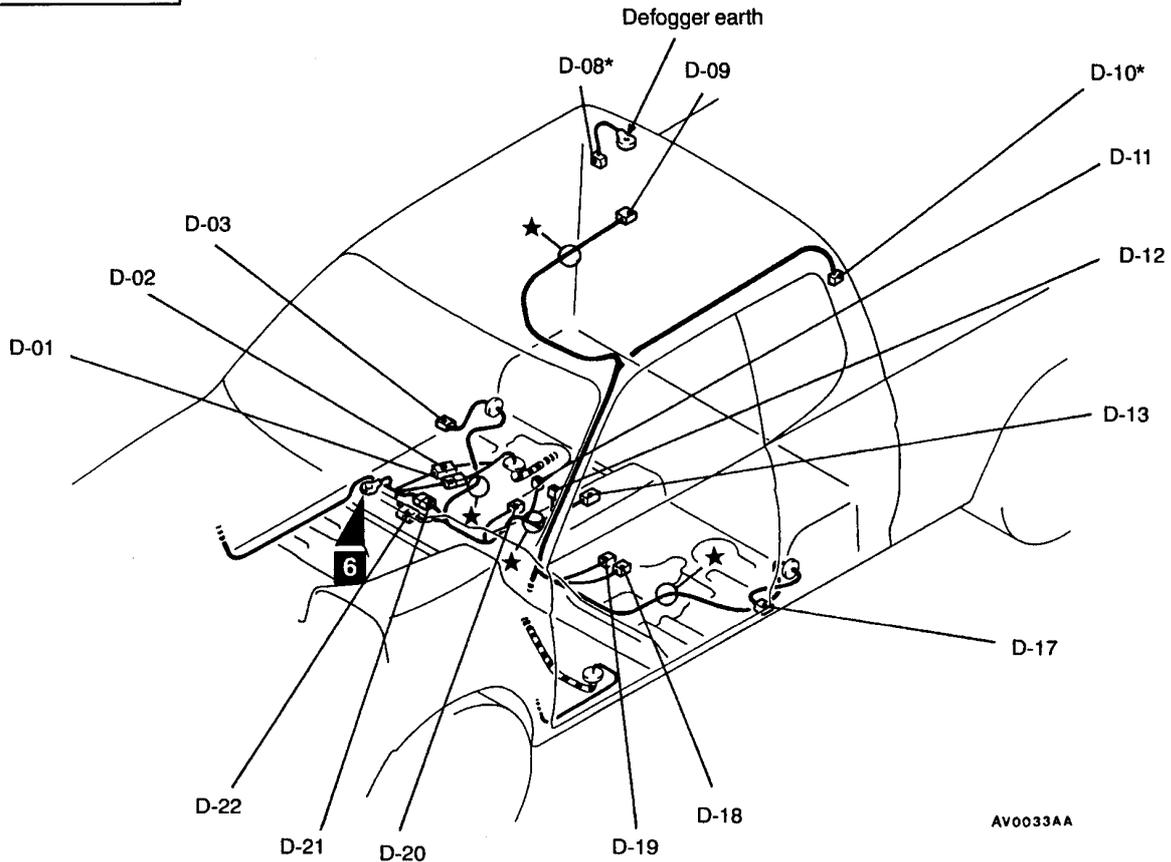
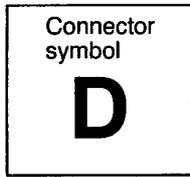


AV0033AA

D-01 (6)	Body wiring harness and frame wiring harness combination	D-17 (2)	Front door switch (driver's side)
D-02 (14)	Body wiring harness and frame wiring harness combination	D-18 (2)	No connection
D-03 (1-B)	Front door switch (passenger's side)	D-19 (3-B)	Front seat assembly (LH)
D-08* (1)	Defogger (-)	D-20 (3-B)	Front seat assembly (RH)
D-09 (2)	Room lamp	D-21 (9)	Body wiring harness and floor wiring harness combination
D-10* (1-B)	Defogger (+)	D-22 (16)	Body wiring harness and floor wiring harness combination
D-11 (6)	Heated seat switch (RH)		
D-12 (6)	Heated seat switch (LH)	Remark	
D-13 (1-B)	Parking brake switch	*: 1998Models	

CABIN


Double cab

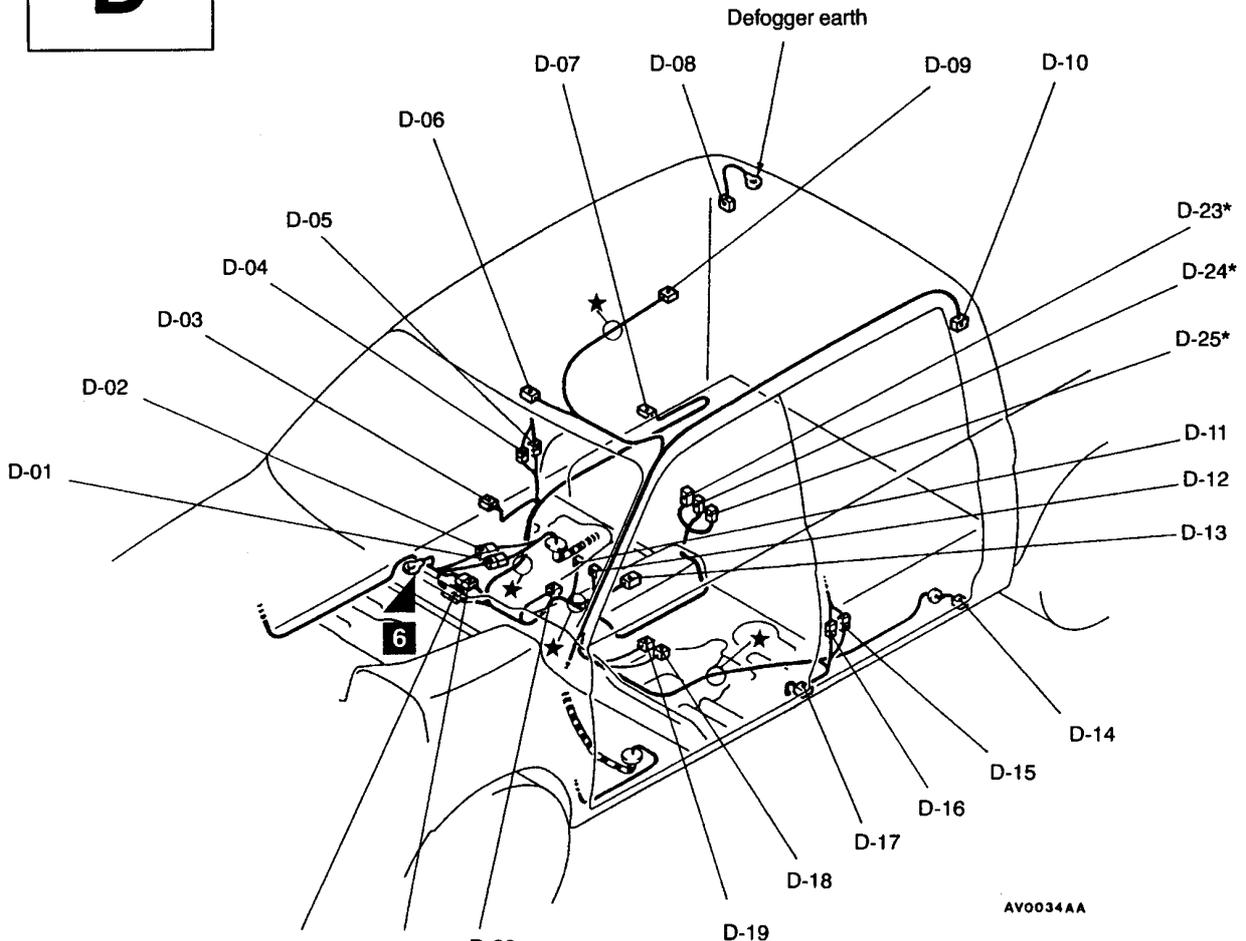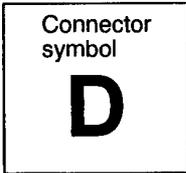

- | | | | |
|------------|--|---------------|--|
| D-01 (6) | Body wiring harness and frame wiring harness combination | D-15 (5) | Floor wiring harness and rear door wiring harness (LH) combination |
| D-02 (14) | Body wiring harness and frame wiring harness combination | D-16 (6) | Floor wiring harness and rear door wiring harness (LH) combination |
| D-03 (1-B) | Front door switch (passenger's side) | D-17 (2) | Front door switch (driver's side) |
| D-04 (6) | Floor wiring harness and rear door wiring harness (RH) combination | D-18 (2) | No connection |
| D-05 (5) | Front wiring harness and rear door wiring harness (RH) combination | D-19 (3-B) | Front seat assembly (LH) |
| D-06 (1) | Map lamp | D-20 (3-B) | Front seat assembly (RH) |
| D-07 (1-B) | Rear door switch (RH) | D-21 (9) | Body wiring harness and floor wiring harness combination |
| D-08 (1) | Defogger (-) | D-22 (16) | Body wiring harness and floor wiring harness combination |
| D-09 (2) | Room lamp | D-23* (2) | Rear heater illumination lamp |
| D-10 (1-B) | Defogger (+) | D-24* (6) | Rear heater switch |
| D-11 (6) | Heated seat switch (RH) | D-25* (4) | Rear blower motor |
| D-12 (6) | Heated seat switch (LH) | Remark | |
| D-13 (1-B) | Parking brake switch | *: 1998Models | |
| D-14 (1-B) | Rear door switch (LH) | | |

DOOR

Single cab and club cab

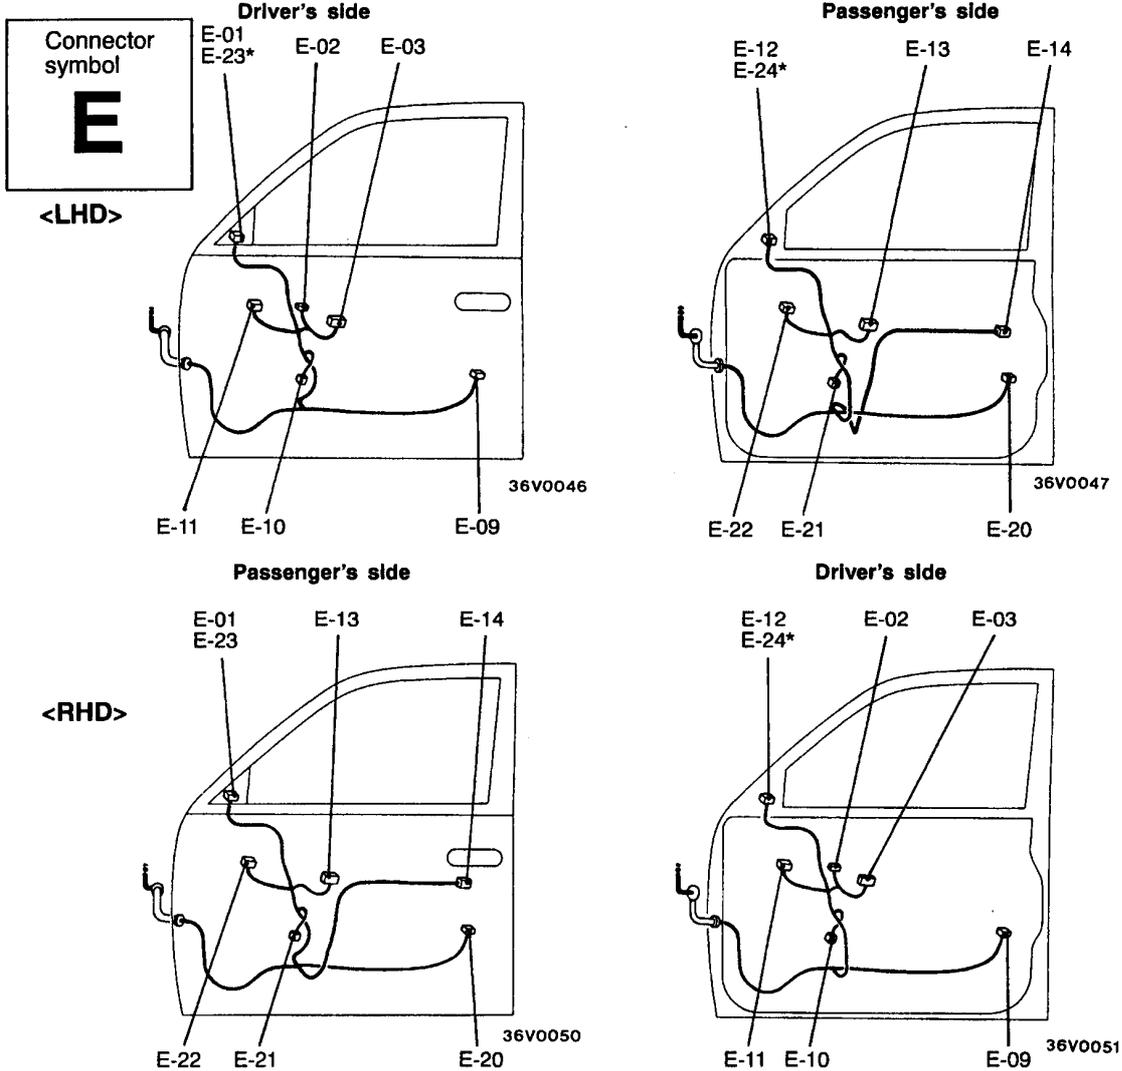






00005013

- | | | | |
|-----------|---|---------------|--|
| E-01 (3) | Remote controlled mirror (LH)
(without door mirror heater) | E-20 (4) | Door lock actuator
(front passenger's side) |
| E-02 (9) | Remote controlled mirror switch | E-21 (2) | Power window limit switch
(front passenger's side) |
| E-03 (10) | Power window main switch | E-22 (2) | Power window motor
(front passenger's side) |
| E-09 (4) | Door lock actuator (driver's side) | E-23* (7) | Remote controlled mirror (LH)
(with door mirror heater) |
| E-10 (2) | Power window limit switch (driver's side) | E-24* (7) | Remote controlled mirror (RH)
(with door mirror heater) |
| E-11 (2) | Power window motor (driver's side) | | |
| E-12 (3) | Remote controlled mirror (RH)
(without door mirror heater) | Remark | |
| E-13 (8) | Power window sub switch
(front passenger's side) | *: 1998Models | |
| E-14 (3) | Door lock key cylinder switch | | |

DOOR

80100140454

Double cab

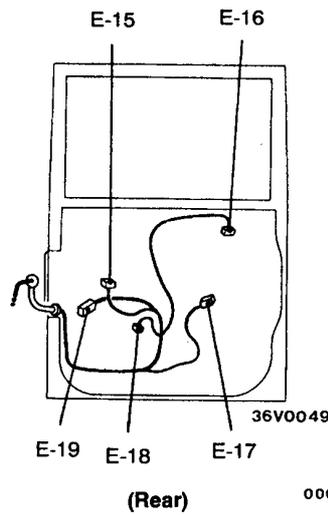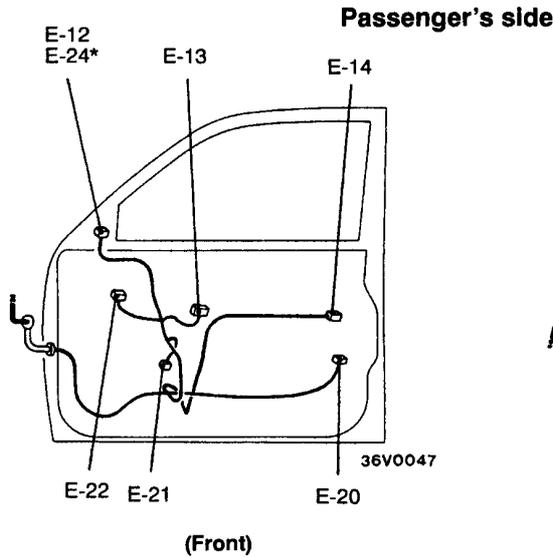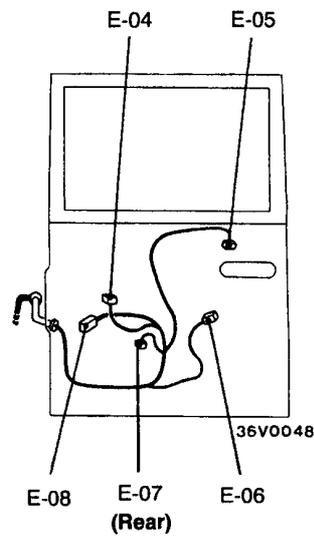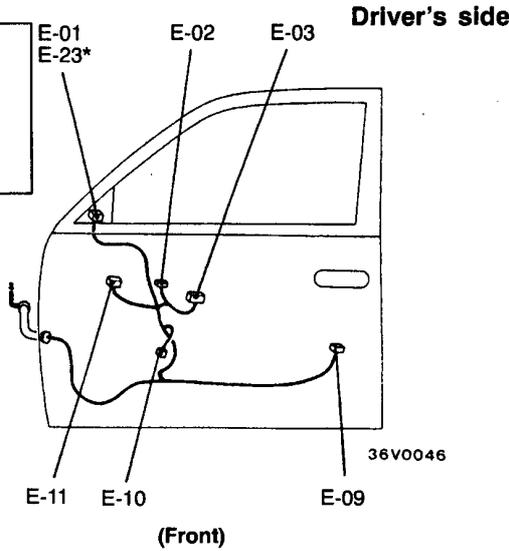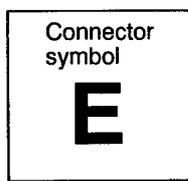

00005014



- E-01 (3) Remote controlled mirror (LH)
(without door mirror heater)
- E-02 (9) Remote controlled mirror switch
- E-03 (10) Power window main switch
- E-04 (8) Power window sub switch (rear: LH)
- E-05 (5) Door lock actuator (rear: LH)
- E-06 (2-B) Rear door speaker (LH)
- E-07 (2) Power window motor (rear: LH)
- E-08 (2) Power window limit switch (rear: LH)
- E-09 (4) Door lock actuator (driver's side)
- E-10 (2) Power window limit switch (driver's side)
- E-11 (2) Power window motor (driver's side)
- E-12 (3) Remote controlled mirror (RH)
(without door mirror heater)
- E-13 (8) Power window sub switch
(front passenger's side)
- E-14 (3) Door lock key cylinder switch

- E-15 (8) Power window sub switch (rear: RH)
- E-16 (5) Door lock actuator (rear: RH)
- E-17 (2-B) Rear door speaker (RH)
- E-18 (2) Power window motor (rear: RH)
- E-19 (2) Power window limit switch (rear: RH)
- E-20 (4) Door lock actuator
(front passenger's side)
- E-21 (2) Power window limit switch
(front passenger's side)
- E-22 (2) Power window motor
(front passenger's side)
- E-23* (7) Remote controlled mirror (LH)
(with door mirror heater)
- E-24* (7) Remote controlled mirror (RH)
(with door mirror heater)

Remark
*: 1998Models

FRAME

80100230014

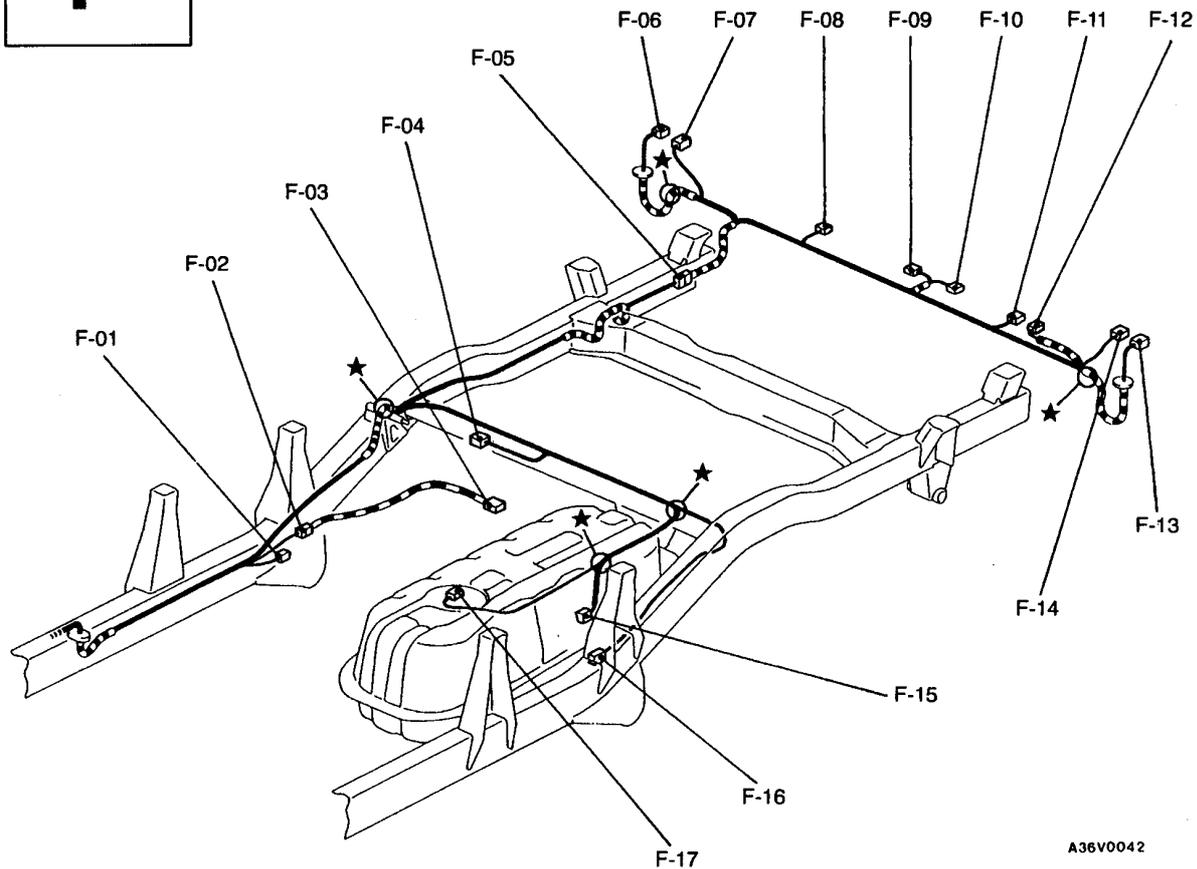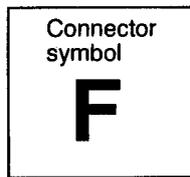

F-01 (2-B)	Wheel speed sensor (rear: RH) <ABS>	F-09 (2-B)	Licence plate lamp (RH)
F-02 (2-B)	Frame wiring harness and position wiring harness combination	F-10 (2-B)	Licence plate lamp (LH)
F-03 (2)	Rear differential lock detection switch	F-11 (2-B)	Rear fog lamp <LHD> <with cargo bed>
F-04 (2-B)	Rear differential lock air pump	F-12 (2-B)	Rear fog lamp <without cargo bed>
F-05 (8-B)	Frame wiring harness and rear body wiring harness combination	F-13 (6-B)	Rear combination lamp (LH) <with cargo bed>
F-06 (6-B)	Rear combination lamp (RH) <with cargo bed>	F-14 (6)	Rear combination lamp (LH) <without cargo bed>
F-07 (6)	Rear combination lamp (RH) <without cargo bed>	F-15 (3)	Fuel gauge unit
F-08 (2-B)	Rear fog lamp <RHD>	F-16 (2-B)	Wheel speed sensor (rear: LH) <ABS>
		F-17 (2)	Fuel pump

SINGLE PART INSTALLATION POSITION

CONTENTS

70109000150



RELAY	3-2	INSPECTION CONNECTOR	3-12
ECU	3-4	FUSIBLE LINK AND FUSE	3-13
SENSOR	3-6	EARTH CABLE	3-14
SOLENOID AND SOLENOID VALVE	3-9	EARTH	3-15
DIODE	3-11		





RELAY











70100040366





Name	Symbol	Name	Symbol
ABS motor relay	A	Fuel pump relay	K
ABS valve relay	A	Glow plug relay <Diesel>	C
A/C compressor relay	D	Headlamp relay	D
Alternator relay	D	Headlamp washer relay	E
Blower relay	I	Horn relay <SRS>	B
Condenser fan control relay <Diesel-A/T>	D	Intercooler fan relay	D
Condenser fan relay <A/C>	D	Overdrive control relay	F
Defogger relay <Vehicles without Defogger timer>	I	Power window relay	G
Defogger relay <Vehicles with Defogger timer>	H	Rear fog lamp relay	D
Defogger timer	G	Rear heater relay	G
Dim-dip lamp relay 1.2.3. <RHD>	D	Starter relay <Petrol-A/T and diesel>	D
DRL relay 1.2. <LHD>	D	Tail lamp relay	D
Engine control relay <Petrol>	K	Turn signal and hazard warning flasher unit	I
Fuel line heater relay	C	Windshield intermittent wiper relay (built in column switch)	J

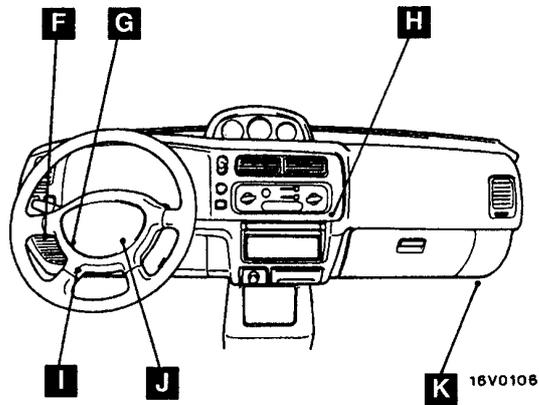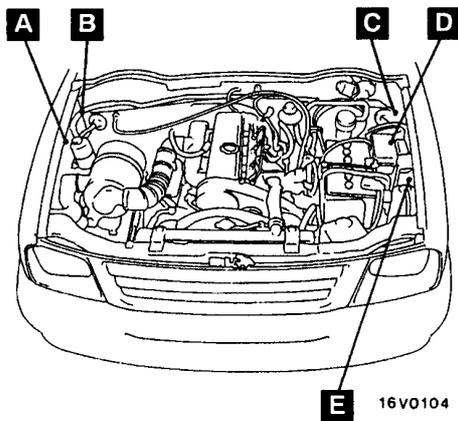

00007030

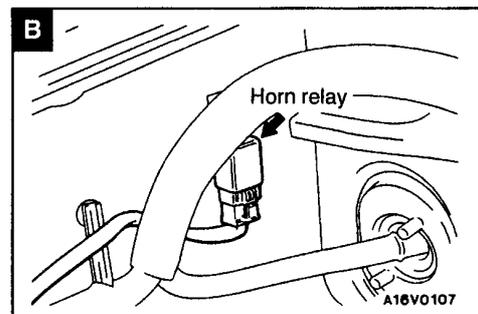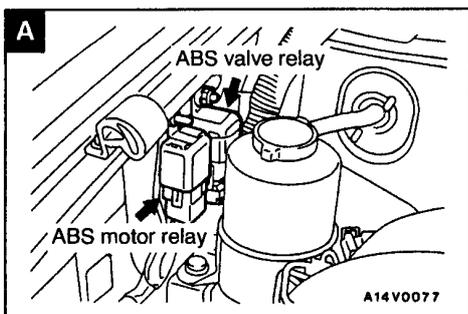

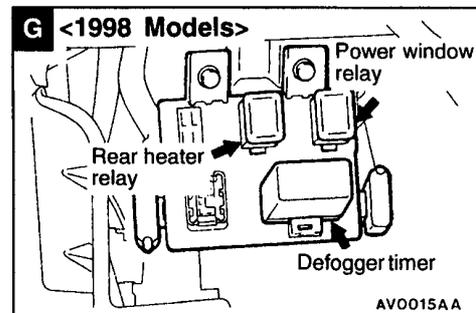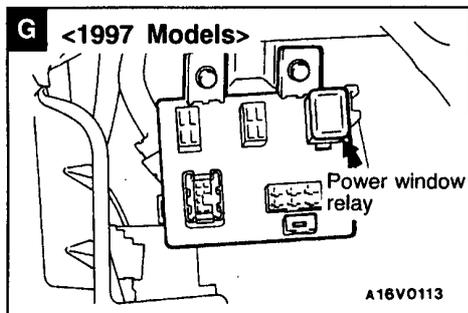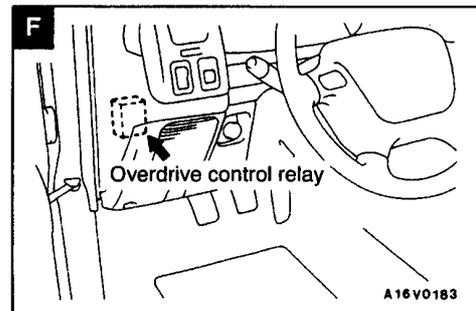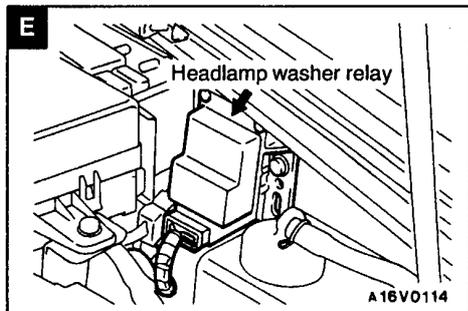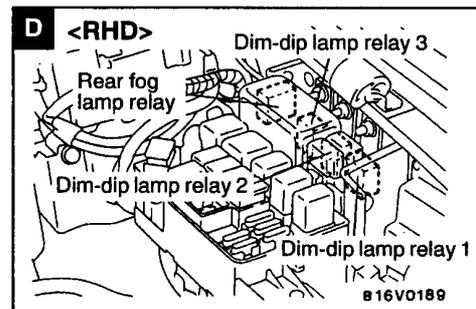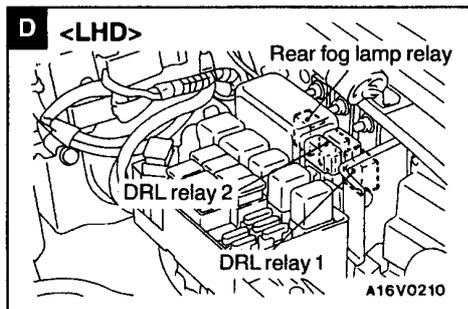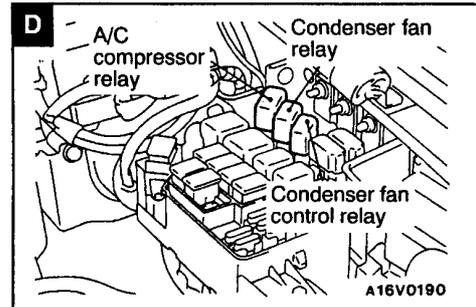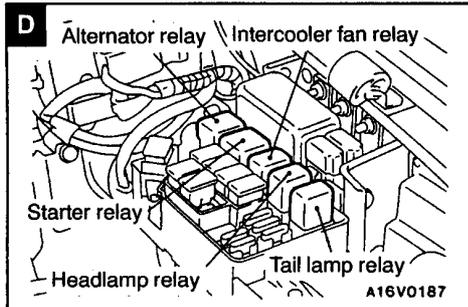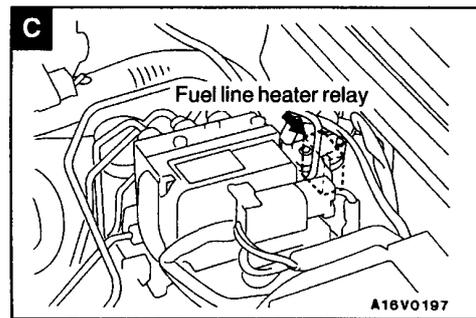
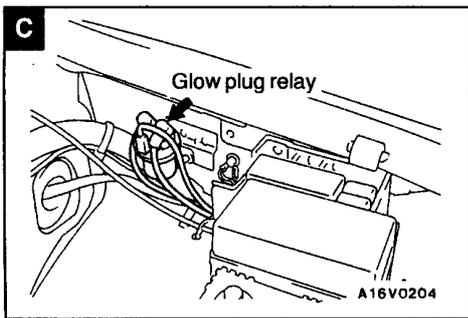


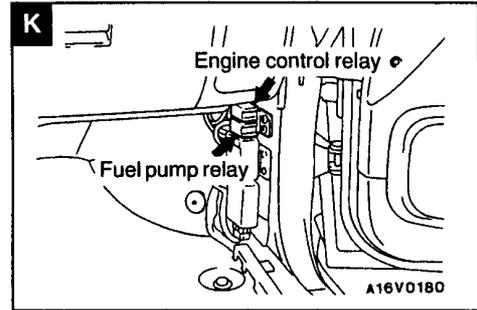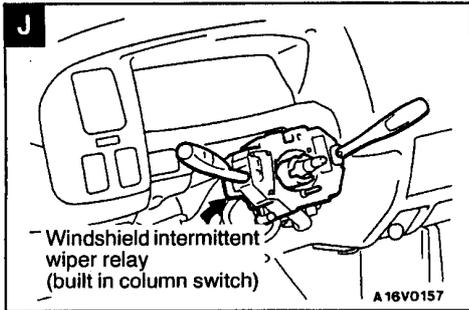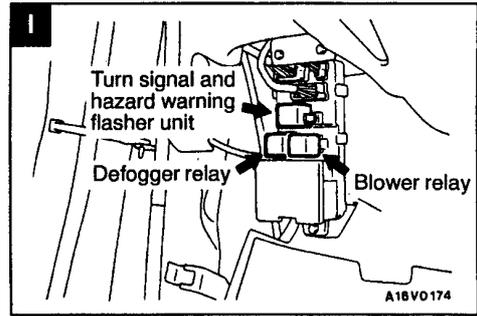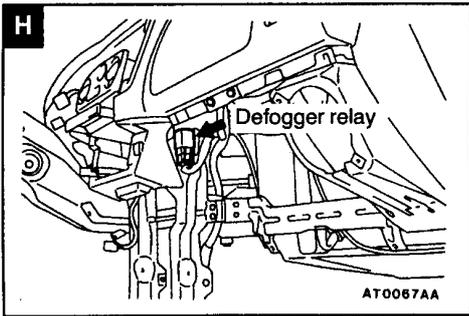










ECU

70100050086

Name	Symbol	Name	Symbol
ABS-ECU	C	Fuel-cut valve-ECU <Diesel>	A
Buzzer-ECU	G	Glow-ECU <Diesel>	E
Compressor-ECU <Diesel-A/T>	D	Immobilizer-ECU	F
DRL-ECU	B	Intercooler fan-ECU <Diesel>	I
Engine-ECU <Petrol>	E	Rear differential lock-ECU	I
ETACS-ECU	G	SRS diagnosis unit	H
4WD indicator-ECU	I		

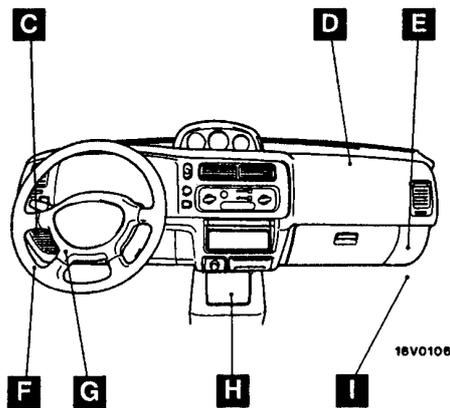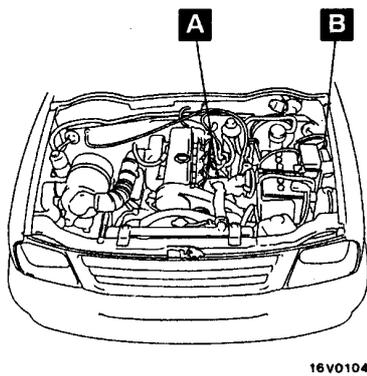





00005170


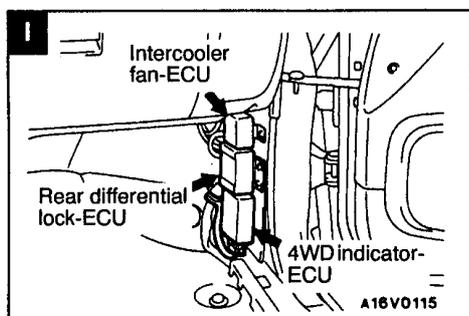
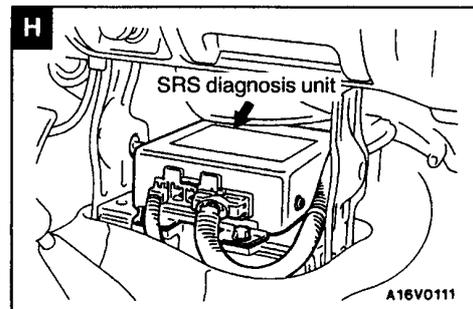
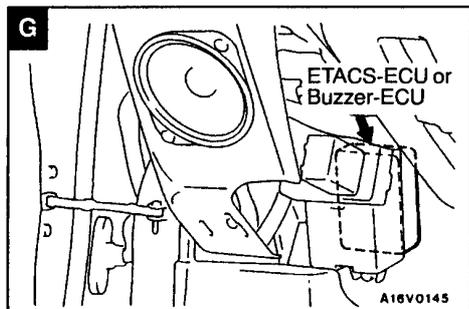
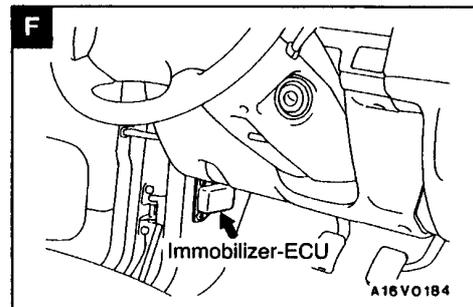
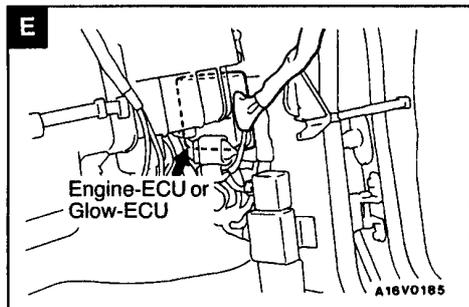
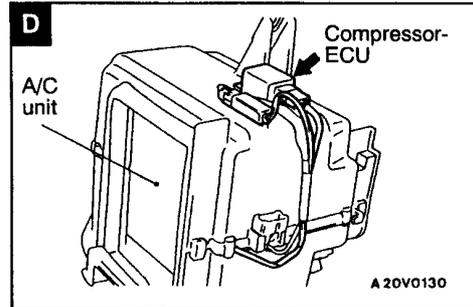
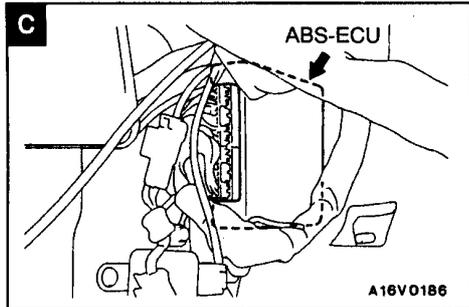
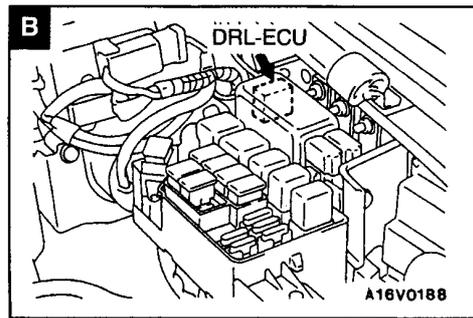
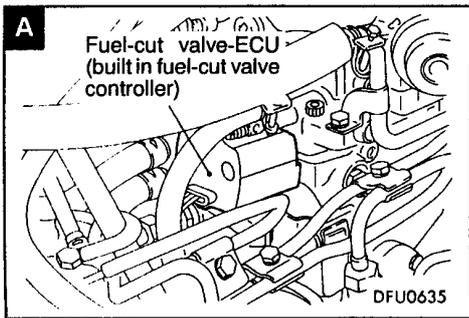







SENSOR

70100060171

Name	Symbol	Name	Symbol
Air flow sensor <Petrol>	A	Front impact sensor <SRS>	L
Crank angle sensor and top dead centre sensor (built in distributor) <Petrol>	F	G sensor <ABS>	K
		Outside thermo sensor <Multi-meter>	I
Engine coolant temperature sensor and gauge unit <Diesel>	H	Oxygen sensor <Petrol>	N
		Revolution pick up sensor <Diesel>	E
Engine coolant temperature sensor <Petrol>	G	Thermostat <A/C>	J
Engine coolant temperature switch <A/C> (for A/C compressor control)	C	Throttle position sensor <Petrol>	B
		Wheel speed sensor (Front) <ABS>	M
Engine coolant temperature switch <A/C> (for condenser fan control)	H	Wheel speed sensor (Rear) <ABS>	O

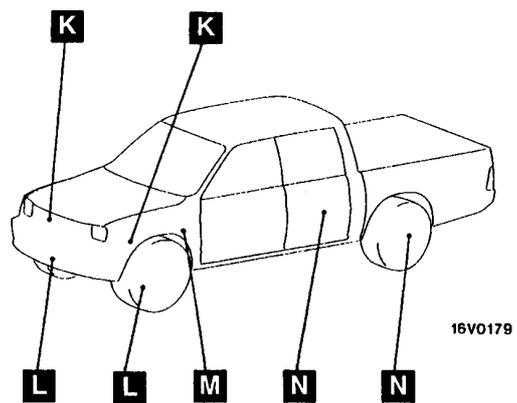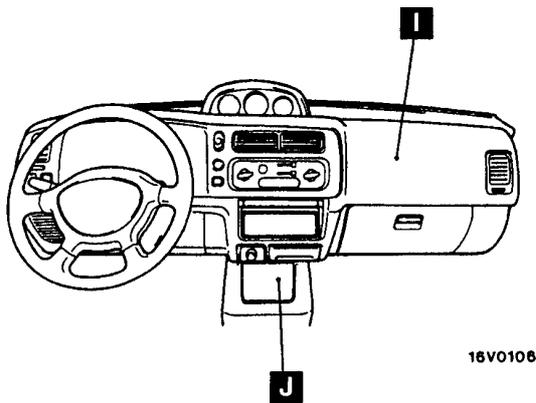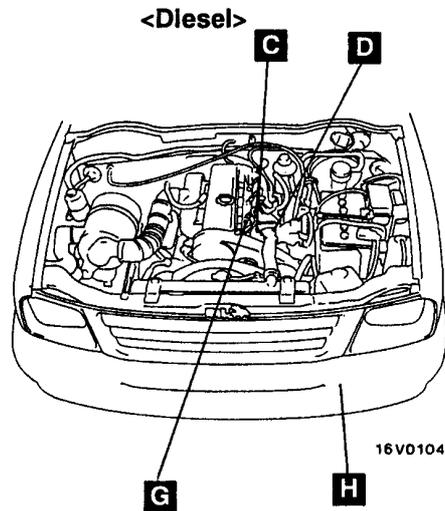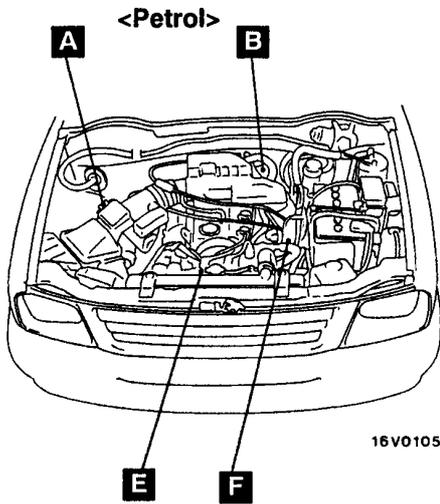

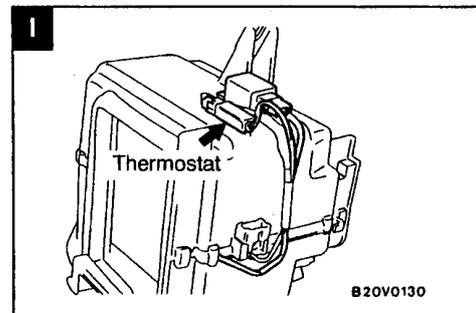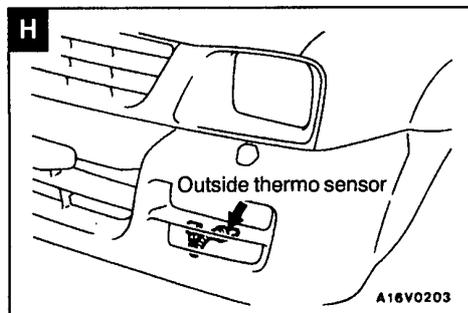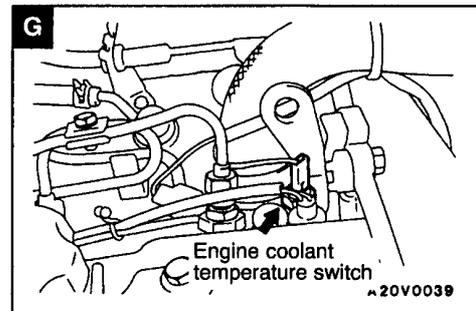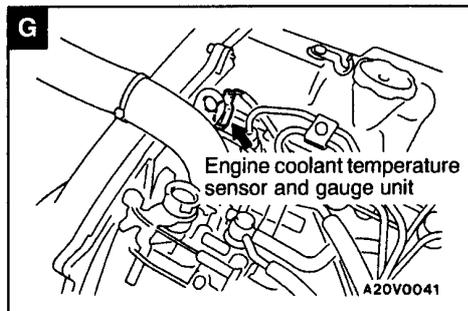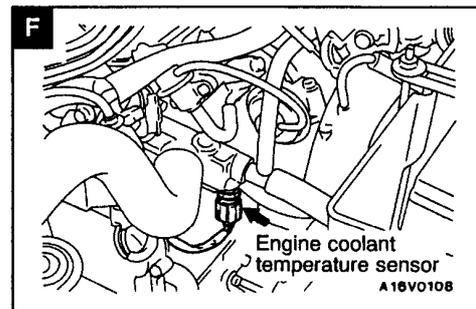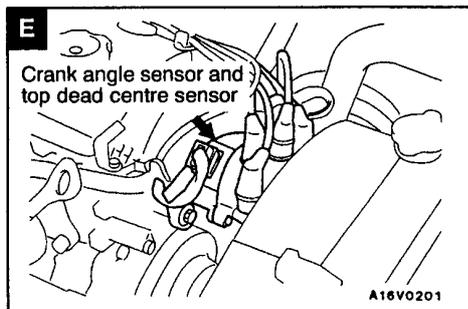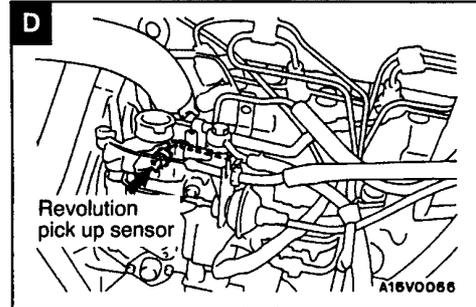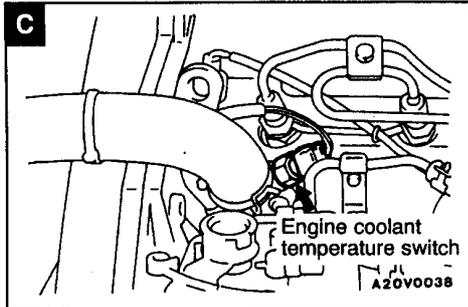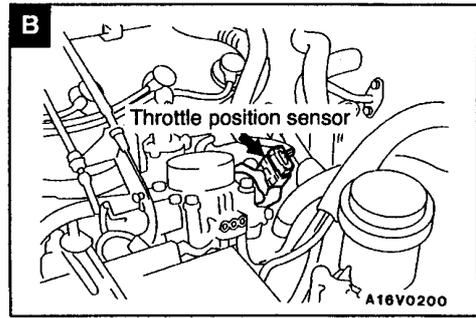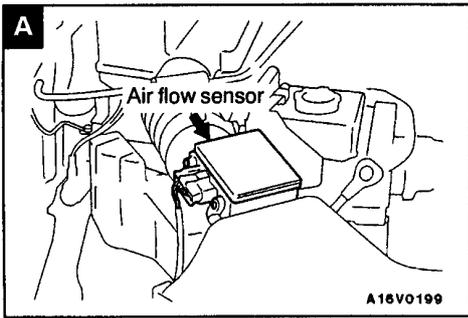


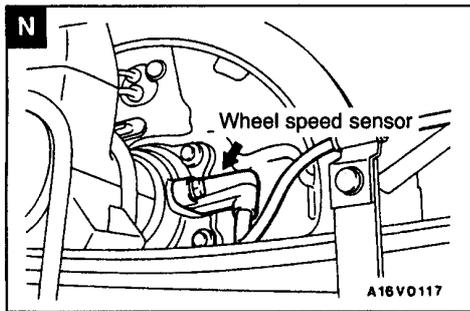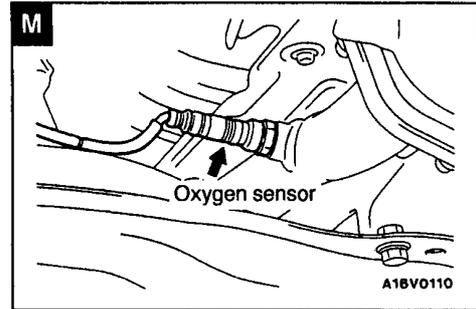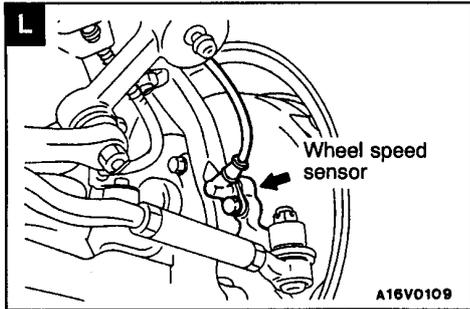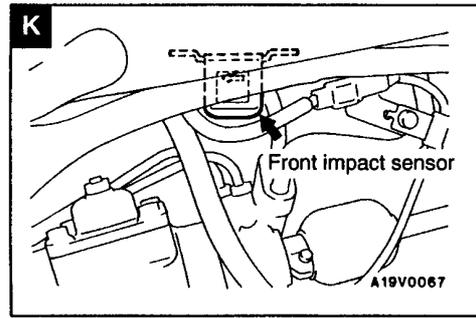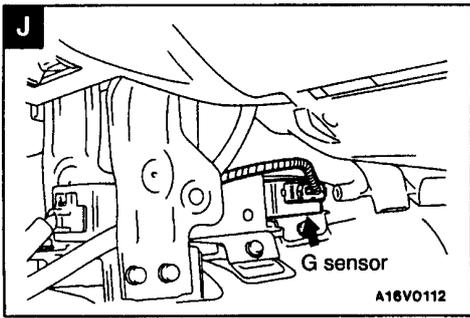


SOLENOID AND SOLENOID VALVE

70100080146


Name	Symbol	Name	Symbol
EGR solenoid valve <Petrol>	B	Overdrive solenoid valve	F
Fuel cut solenoid valve <Diesel>	C	Purge control solenoid valve <Petrol>	B
Idle-up solenoid valve <ABS>	D	Solenoid valve 1.2. <4WD>	A
Idle-up solenoid valve (A/C) <Diesel>	E		

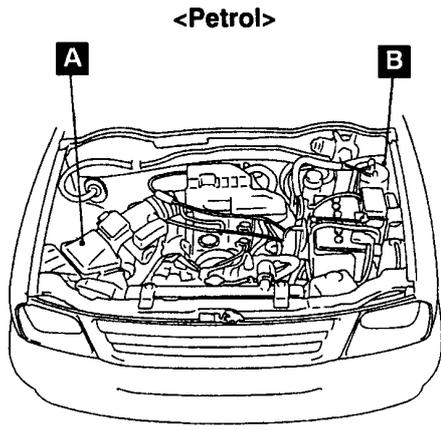

16V0105


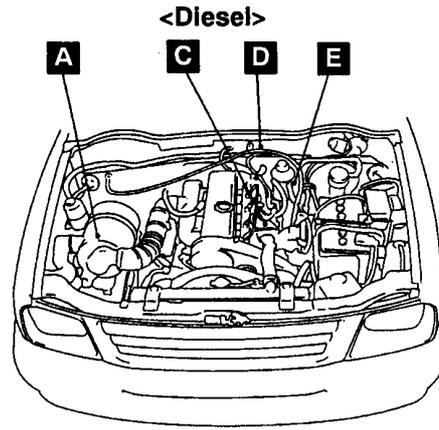






16V0104

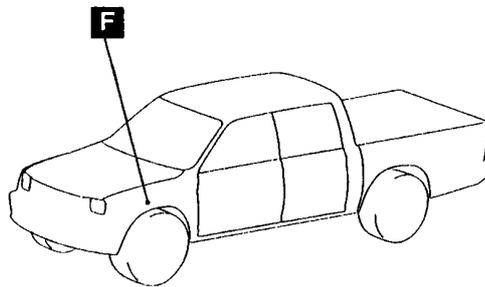

16V0179

00005286






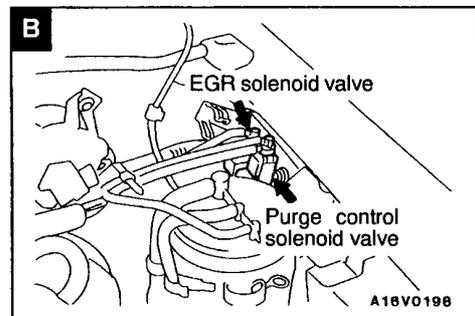
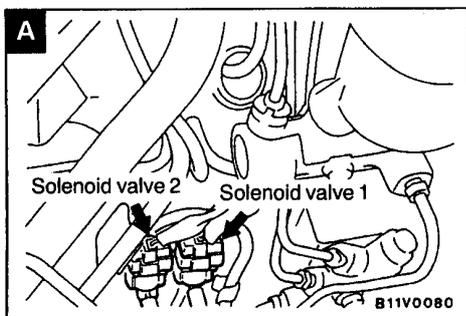


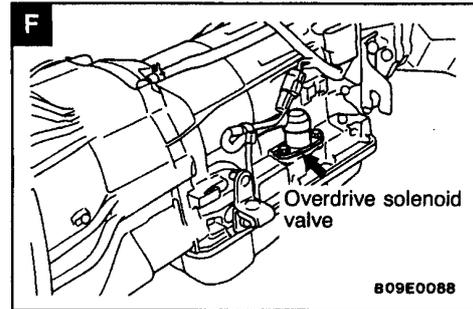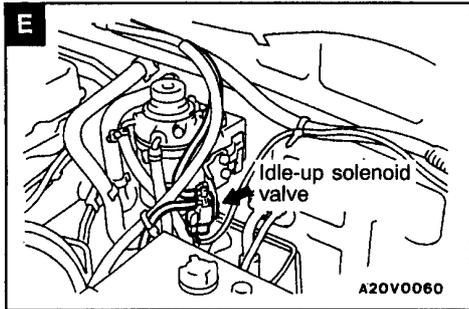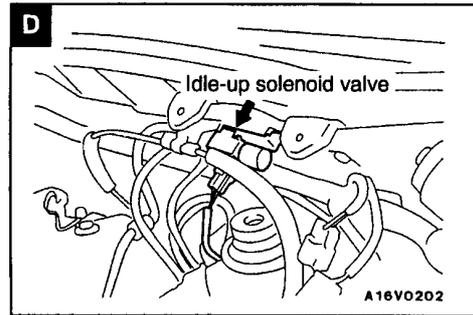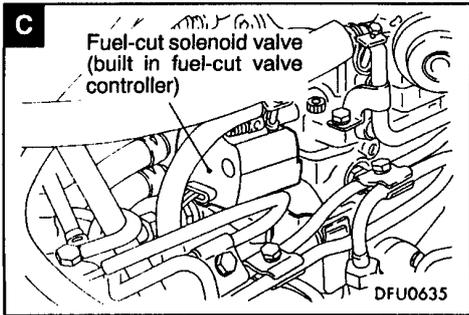

DIODE

70100090163

Name		Symbol	Name		Symbol
Diode (ABS circuit)	<LHD>	B	Diode (for headlamp and rear fog lamp circuit)	<LHD>	A
	<RHD>	E		<RHD>	D
Diode (for dim-dip lamp circuit)		C			

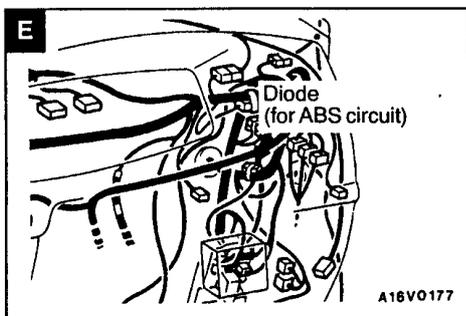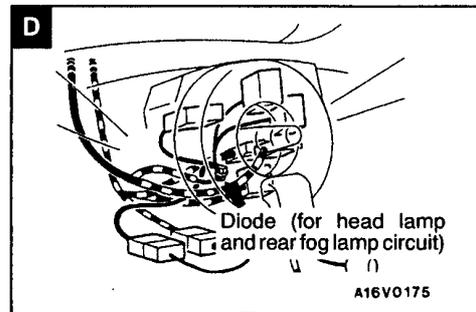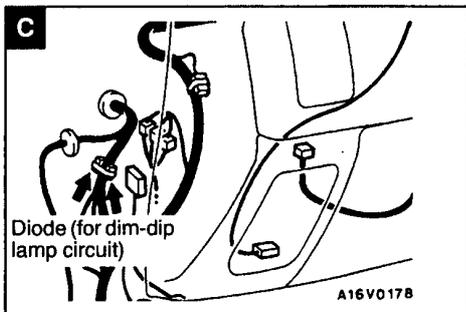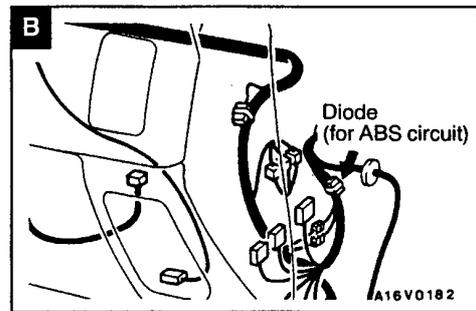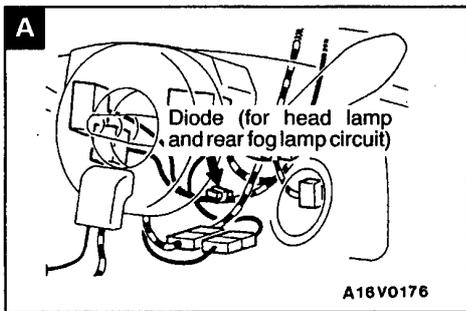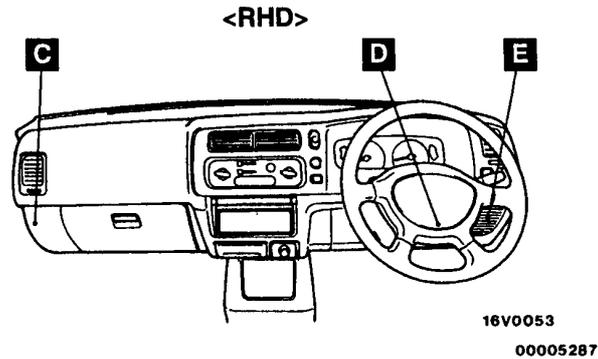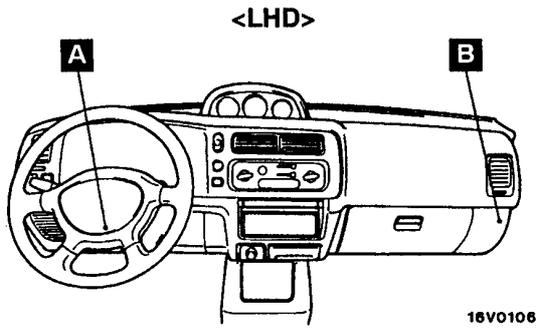


3-12 SINGLE PART INSTALLATION POSITION - Inspection Connector


INSPECTION CONNECTOR

70100020148

Name	Symbol	Name	Symbol
Diagnosis connector	B	Ignition timing adjustment connector <MPI>	A
Fuel pump check connector <MPI>	A		


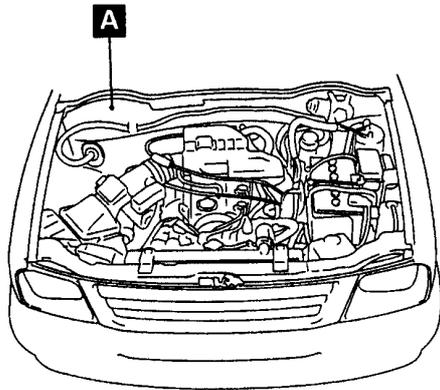


16V0105

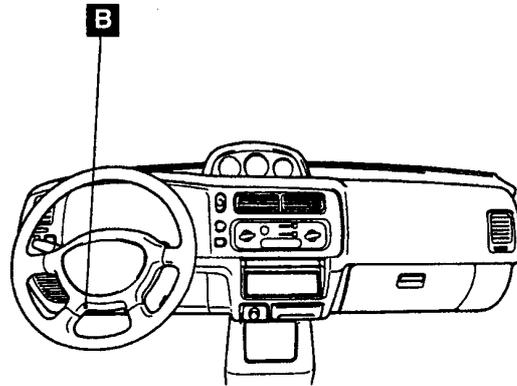

16V0106


00005174

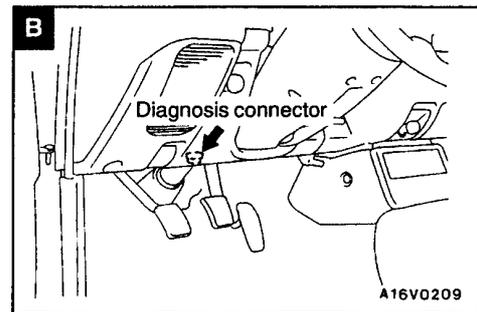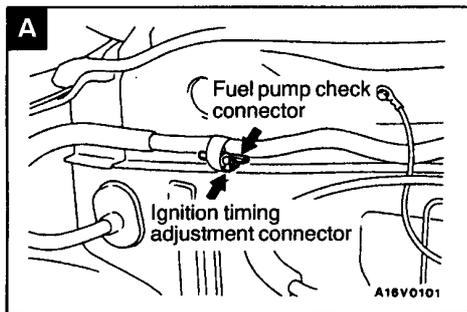


FUSIBLE LINK AND FUSE

70100010350

Name	Symbol	Name	Symbol
Dedicated fuses (No. 1 - 7)	A	Fusible links (No. 1 - 8)	A
Dedicated fuses (No. 8 - 13)	D	Fusible links (No. 9 - 11)	B
Dedicated fuses (No. 14, 15)	C	Multi-purpose fuses	D




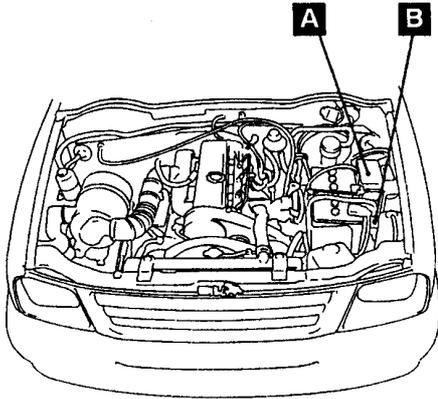




16V0104

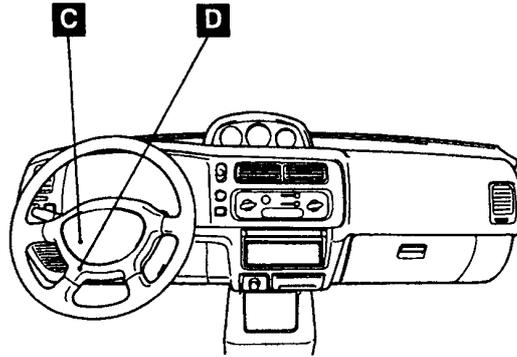

16V0108


00007033

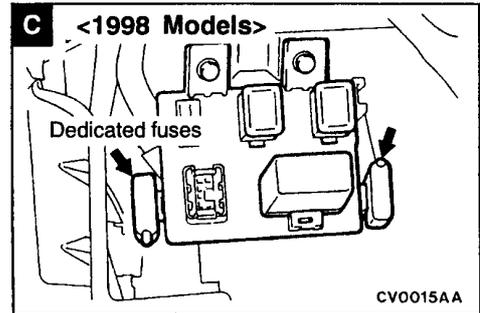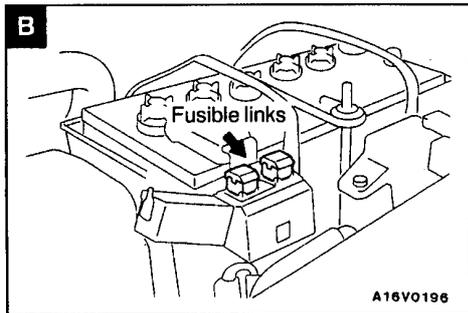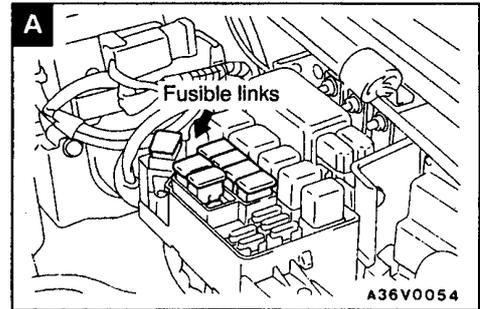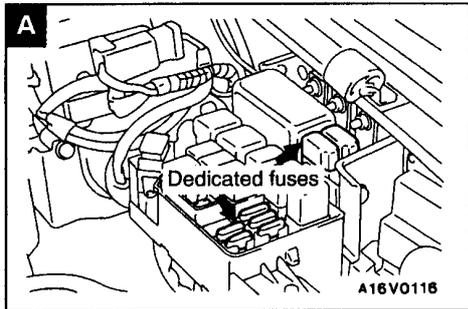

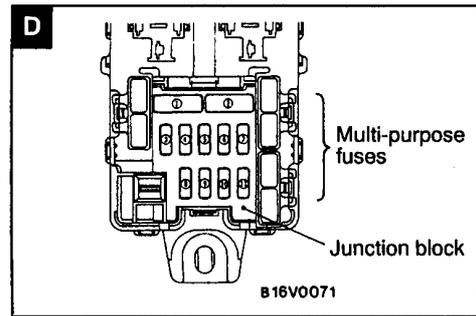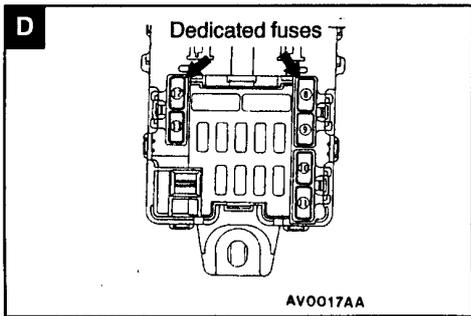


EARTH CABLE

70100100118




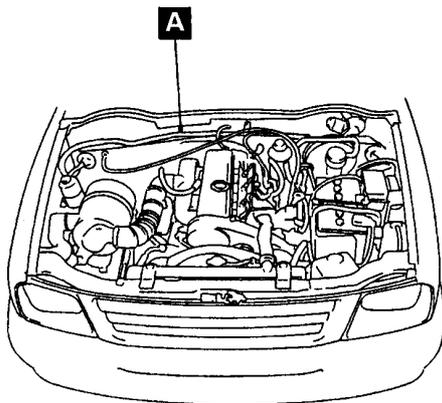


16V0104

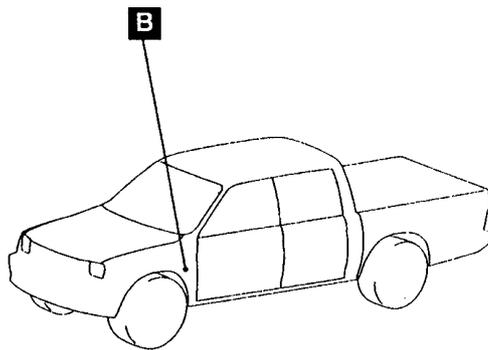

16V0179

00005176

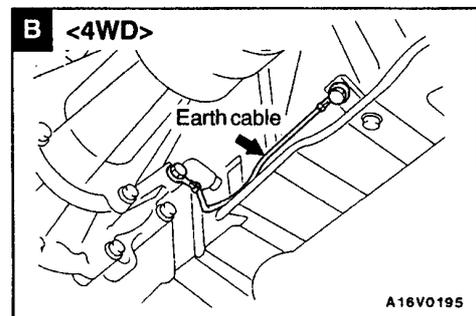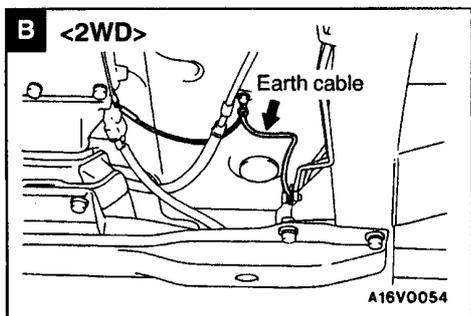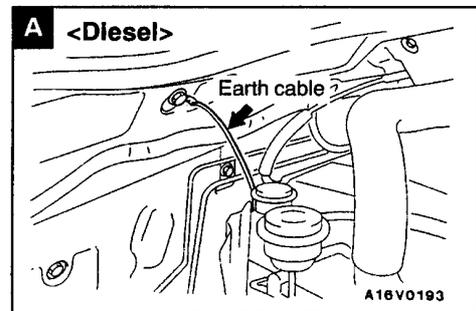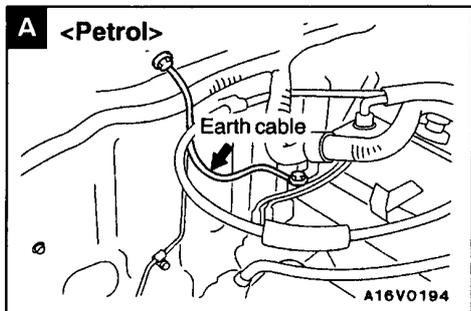


EARTH

70100030172


Single cab

<L.H. drive vehicles>

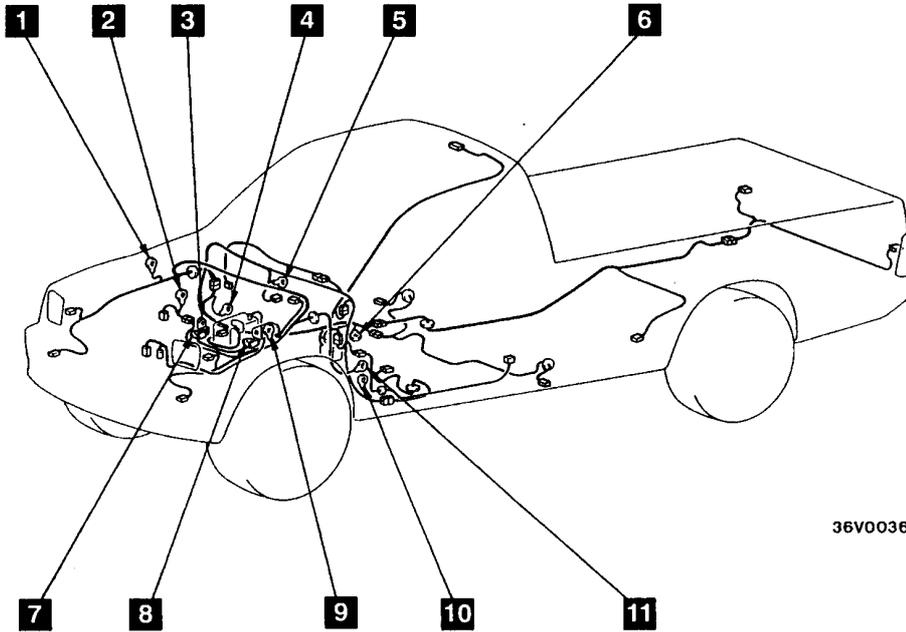

36V0036

<R.H. drive vehicles>

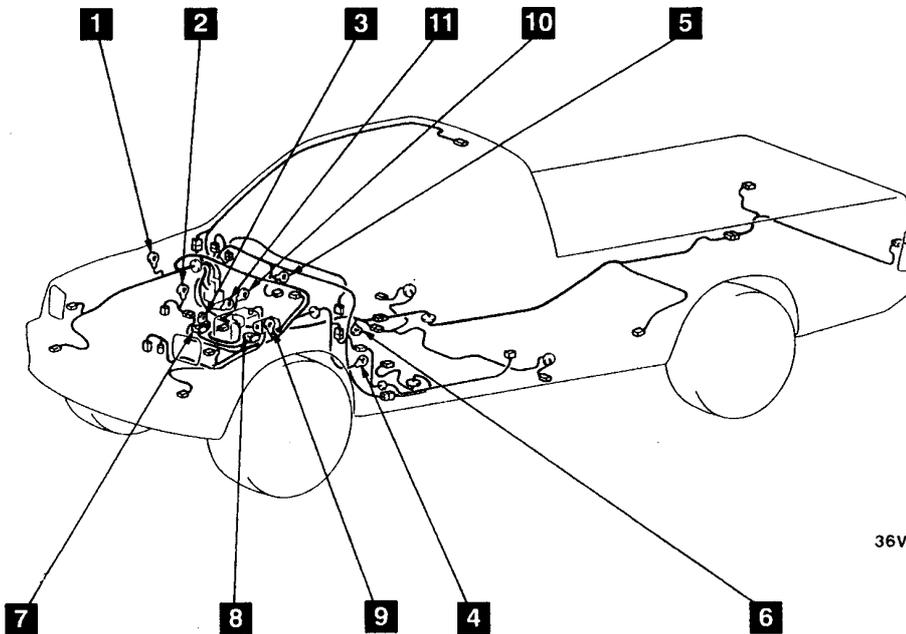


36V0035

NOTE
Same earth numbers are used in the circuit diagram.


00005190

Club cab

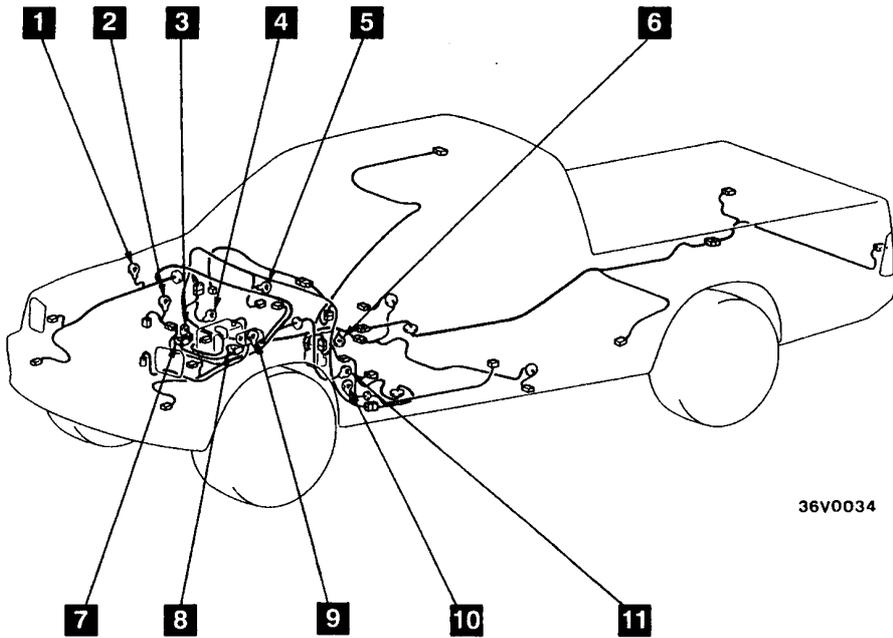











36V0034


Double cab

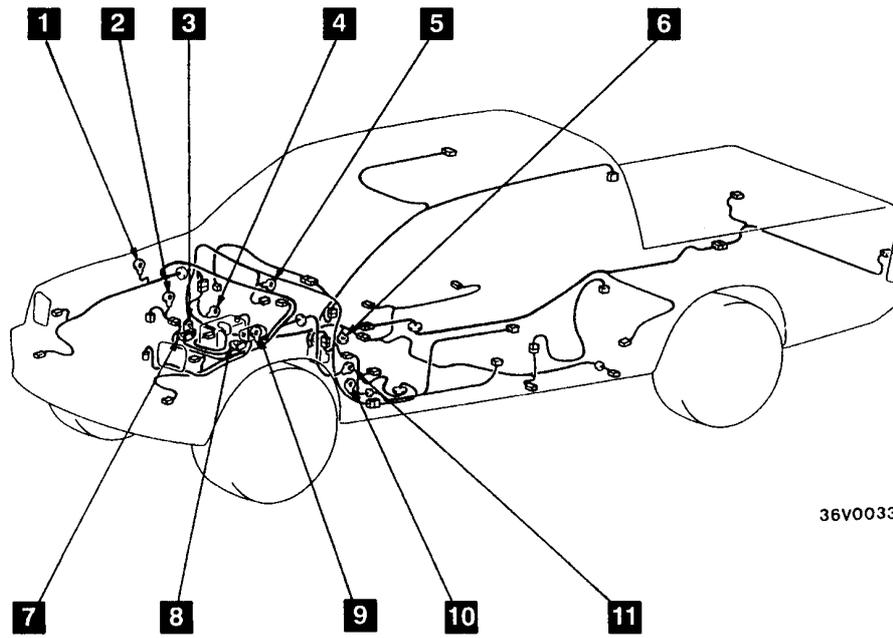

36V0033

00005191

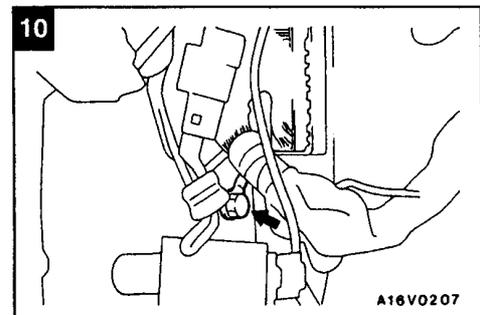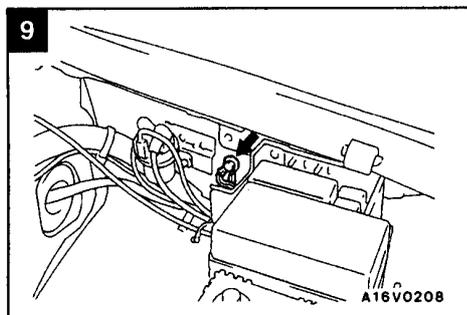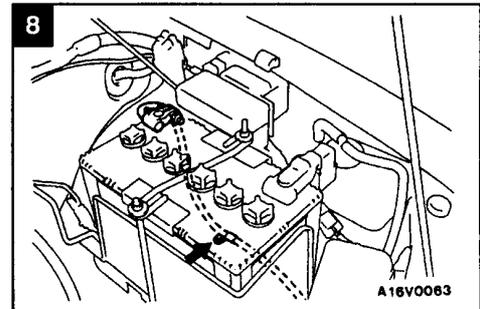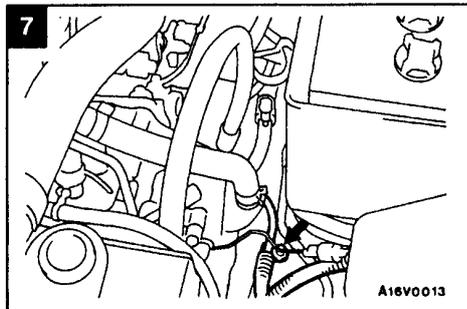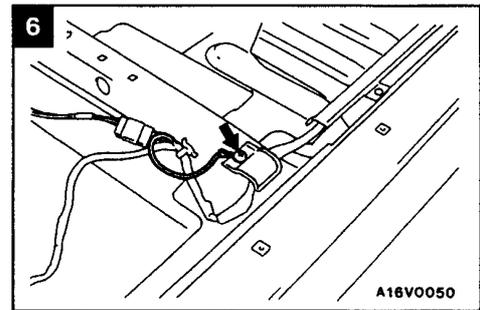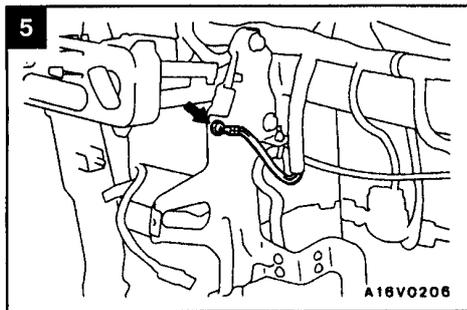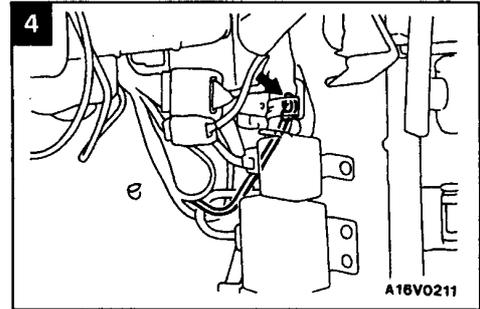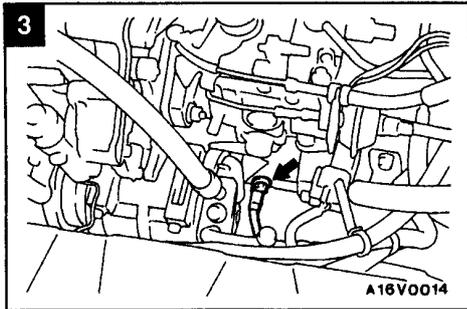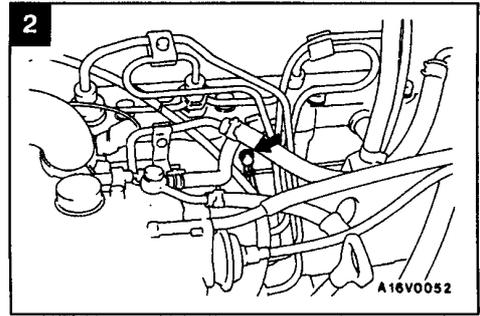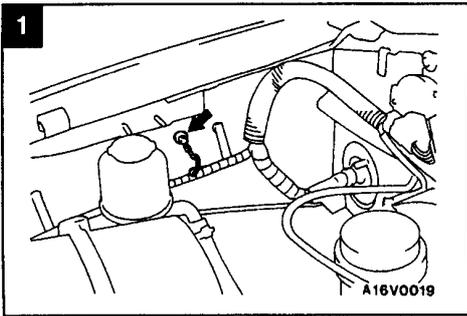

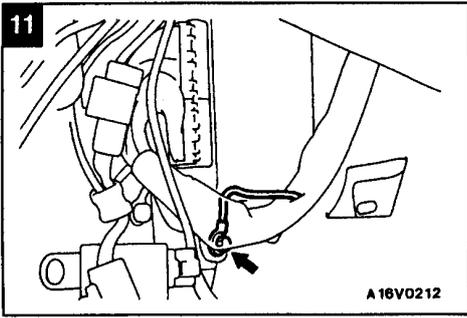

CIRCUIT DIAGRAM

CONTENTS

90109000394

JUNCTION BLOCK (J/B)	4-4	4G56 <1997 Models>	4-74
JOINT CONNECTOR (J/C)	4-6	4D56 <1998 Models>	4-78
CENTRALIZED JUNCTION	4-9		
POWER DISTRIBUTION SYSTEM		HEADLAMP	
L.H. drive vehicles <1997 Models>	4-16	L.H. drive vehicles	
L.H. drive vehicles <1998 Models>	4-22	with daytime running lamp <1997 Models> ...	4-82
R.H. drive vehicles <1997 Models>	4-28	L.H. drive vehicles	
R.H. drive vehicles <1998 Models>	4-34	with daytime running lamp <1998 Models> ...	4-86
STARTING SYSTEM		L.H. drive vehicles without daytime running lamp	
Petrol-powered vehicles	4-40	<1997 Models>	4-90
Diesel-powered vehicles	4-41	L.H. drive vehicles without daytime running lamp	
IGNITION SYSTEM		<1998 Models>	4-92
1997 Models	4-43	R.H. drive vehicles <1997 Models>	4-96
1998 Models	4-44	R.H. drive vehicles <1998 Models>	4-98
CHARGING SYSTEM		TAIL LAMP, POSITION LAMP AND	
Petrol-powered vehicles	4-46	LICENCE PLATE LAMP	
Diesel-powered vehicles	4-47	L.H. drive vehicles <1997 Models>	4-100
GLOW SYSTEM	4-48	L.H. drive vehicles <1998 Models>	4-102
MPI SYSTEM		R.H. drive vehicles <1997 Models>	4-104
1997 Models	4-50	R.H. drive vehicles <1998 Models>	4-106
1998 Models	4-58	REAR FOG LAMP	
OVERDRIVE CONTROL SYSTEM		L.H. drive vehicles <1997 Models>	4-110
4G63 <1997 Models>	4-66	L.H. drive vehicles <1998 Models>	4-114
4G63 <1998 Models>	4-70	R.H. drive vehicles <1997 Models>	4-118
		R.H. drive vehicles <1998 Models>	4-122
		HEADLAMP LEVELING SYSTEM	
		1997 Models	4-126
		1998 Models	4-128

ROOM LAMP	
Except double cab	4-130
Double cab	4-131
IGNITION KEY CYLINDER ILLUMINATION LAMP	4-133
TURN-SIGNAL LAMP AND HAZARD WARNING LAMP	
1997 Models	4-134
1998 Models	4-136
STOP LAMP	4-139
BACK-UP LAMP	4-140
HORN	
Vehicles with SRS	4-142
Vehicles without SRS	4-143
METER AND GAUGE	4-144
BRAKE WARNING LAMP	4-148
FUEL WARNING LAMP	
Vehicles without SRS	4-148
OIL PRESSURE WARNING LAMP	4-149
FUEL FILTER WARNING LAMP	
Diesel-powered vehicles	4-149
MULTI-METER	4-151
CENTRAL DOOR LOCKING SYSTEM	
Except double cab	4-152
Double cab	4-156
POWER WINDOWS	
Except double cab	4-160
Double cab <1997 Models>	4-162
Double cab <1998 Models>	4-166
HEATER	4-169
AIR CONDITIONER	
Petrol-powered vehicles	4-170
Diesel-powered vehicles with M/T	4-174
Diesel-powered vehicles with A/T	4-178
REAR HEATER <1998 Models>	4-182
WINDSHIELD WIPER AND WASHER	
L.H. drive vehicles	4-186
R.H. drive vehicles	4-187
HEADLAMP WASHER	4-189
DEFOGGER <1997 Models>	4-190
DEFOGGER AND DOOR MIRROR HEATER	
Vehicles with defogger timer <1998 Models>	4-192
Vehicles without defogger timer <1998 Models>	4-194
REMOTE CONTROLLED MIRROR	
L.H. drive vehicles <1997 Models>	4-196
L.H. drive vehicles <1998 Models>	4-197
R.H. drive vehicles <1997 Models>	4-198
R.H. drive vehicles <1998 Models>	4-199
RADIO AND TAPE PLAYER	
L.H. drive vehicles with single cab and club cab <1997 Models>	4-202
L.H. drive vehicles with single cab and club cab <1998 Models>	4-203
L.H. drive vehicles with double cab <1997 Models>	4-204
L.H. drive vehicles with double cab <1998 Models>	4-206
R.H. drive vehicles	4-208
CLOCK	
L.H. drive vehicles	4-209
R.H. drive vehicles	4-210
CIGARETTE LIGHTER	4-211
ANTI-LOCK BRAKING SYSTEM (ABS)	
2WD	4-212
4WD	4-215

REAR DIFFERENTIAL LOCK SYSTEM

- L.H. drive vehicles 4-220
- R.H. drive vehicles 4-222

PART TIME 4WD

- 1997 Models 4-224
- 1998 Models 4-226

RHEOSTAT

- 1997 Models 4-228
- 1998 Models 4-229

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

- Petrol-powered vehicles 4-230
- Diesel-powered vehicles 4-232

IMMOBILIZER SYSTEM

- Petrol-powered vehicles <1997 Models> ... 4-234

Petrol-powered vehicles <1998 Models> ... 4-236

Diesel-powered vehicles <1997 Models> ... 4-238

Diesel-powered vehicles <1998 Models> ... 4-240

LIGHTING MONITOR BUZZER

L.H. drive vehicles <1997 Models> 4-242

L.H. drive vehicles <1998 Models> 4-244

R.H. drive vehicles <1997 Models> 4-246

R.H. drive vehicles <1998 Models> 4-248

HEATED SEAT

1997 Models 4-250

1998 Models 4-252


INTERCOOLER FAN 4-254

FUEL LINE HEATER 4-255




JUNCTION BLOCK (J/B)

90100020184

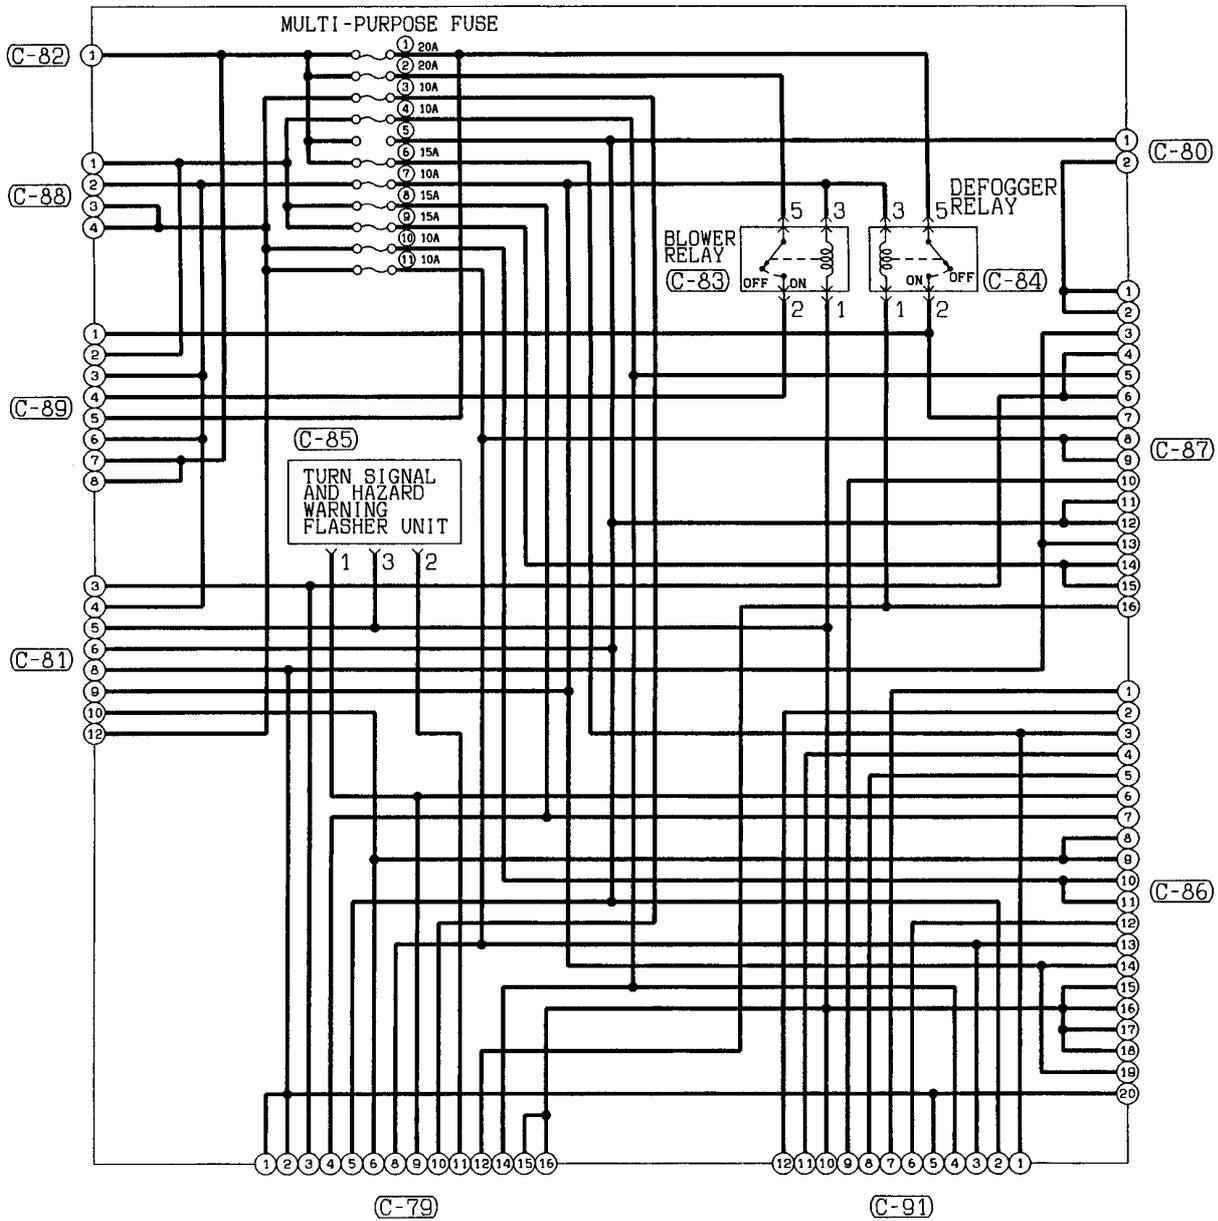


Remark
Connector numbers are keyed to the configuration diagram and each circuit diagram.

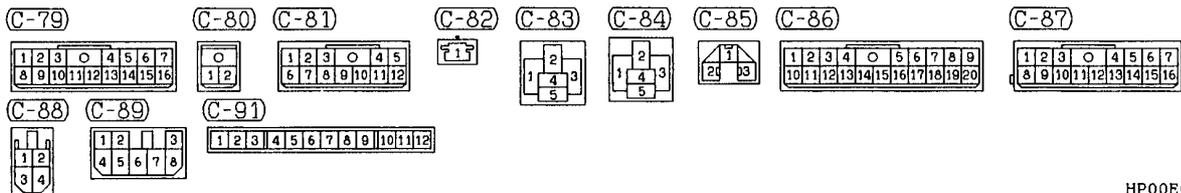


Front side

Rear side

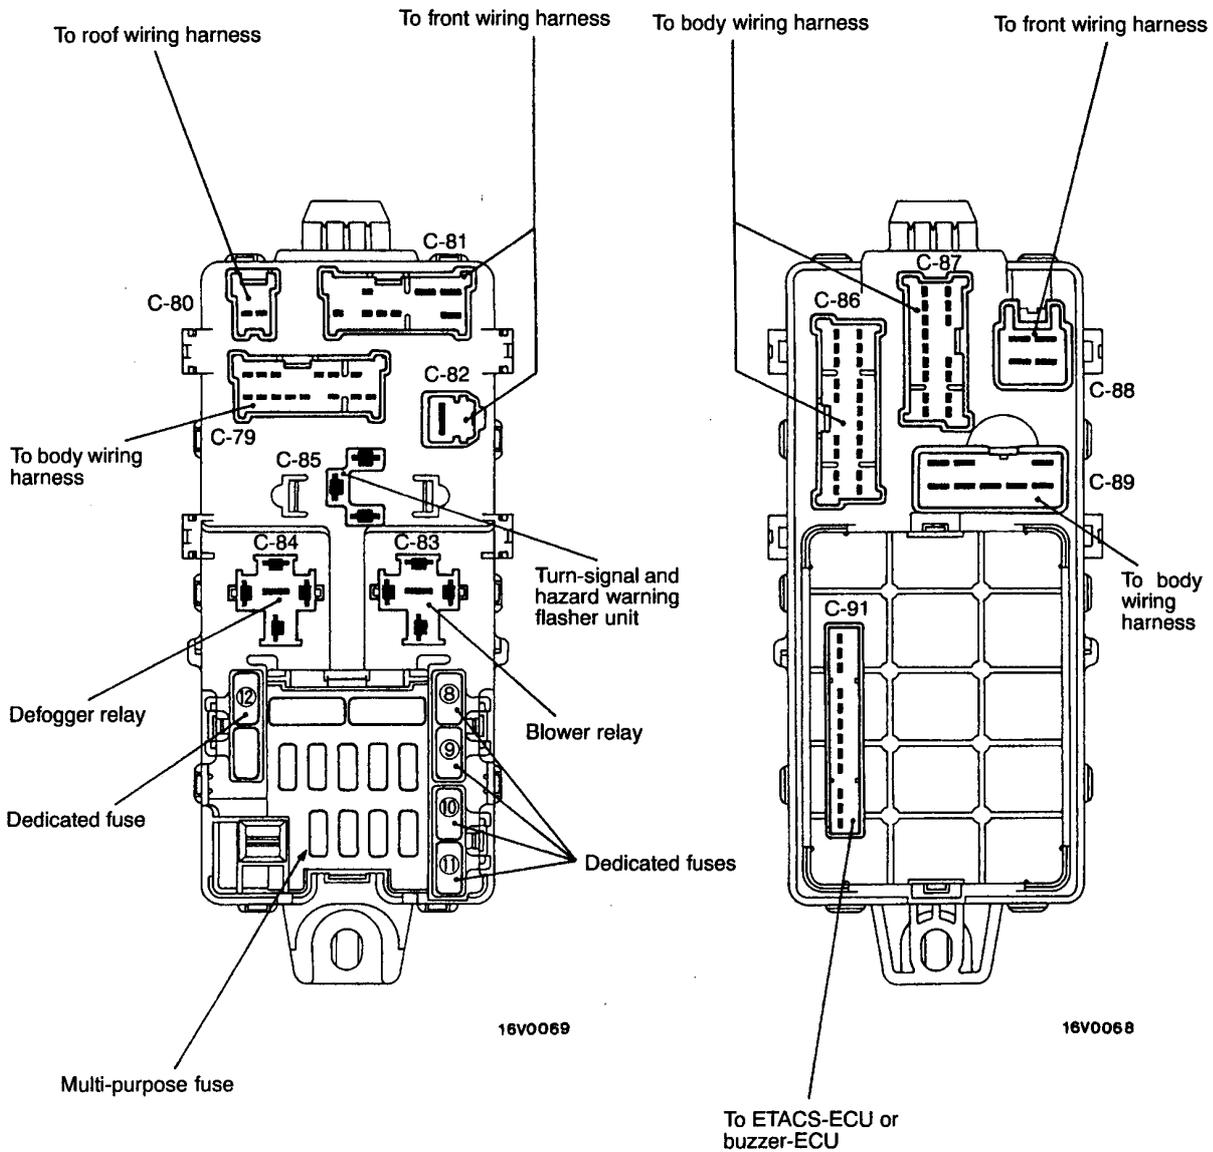


JOINT CONNECTOR (J/C)


90101420174

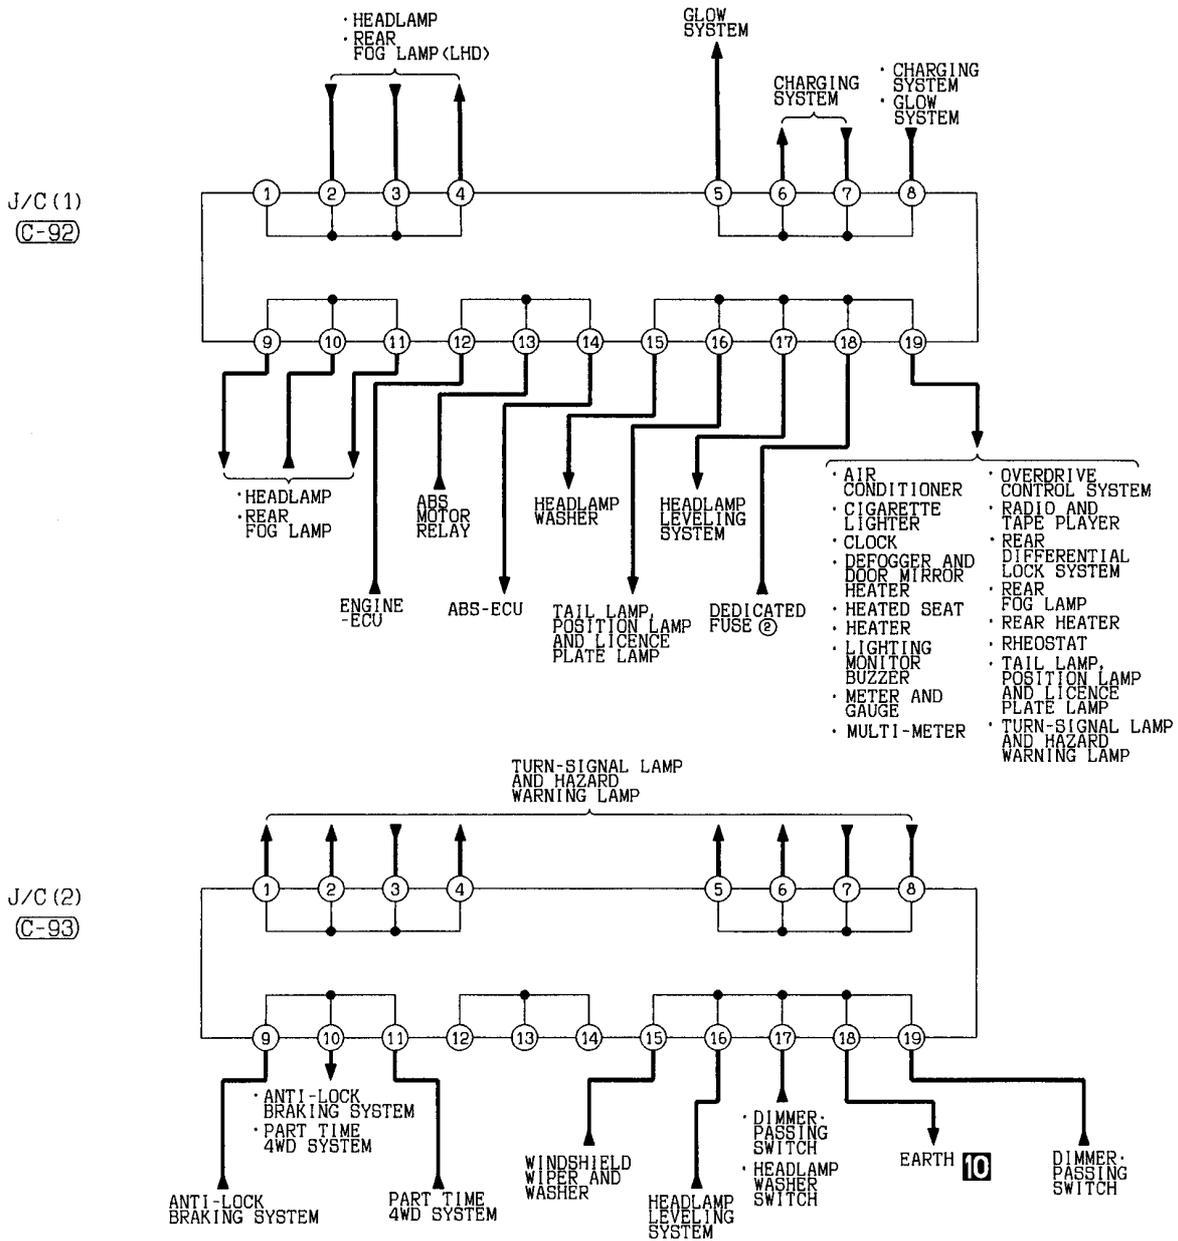


(C-92)


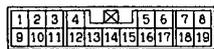


(C-93)

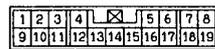


(C-94)

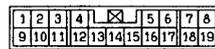

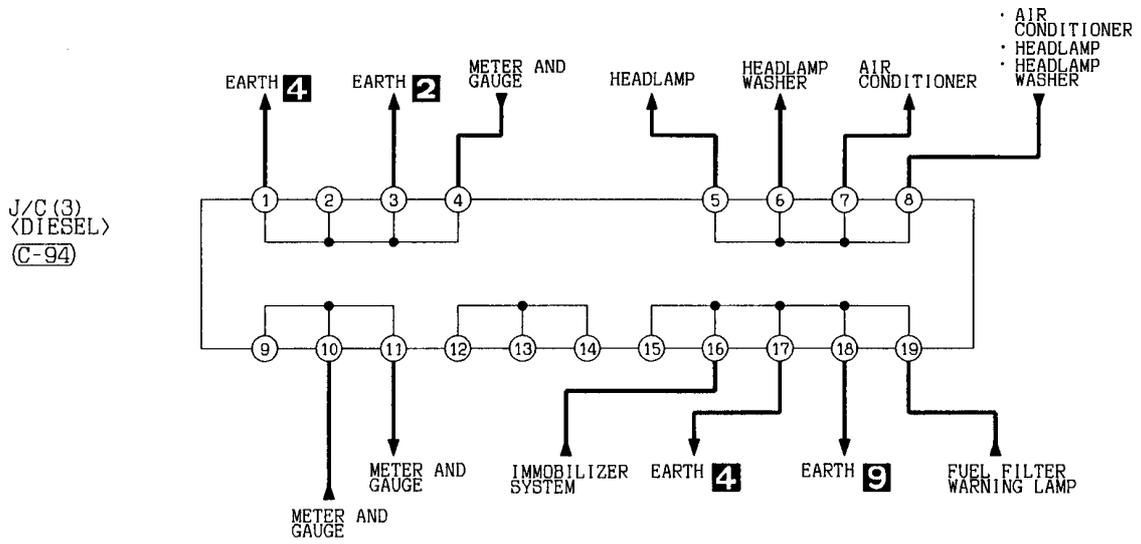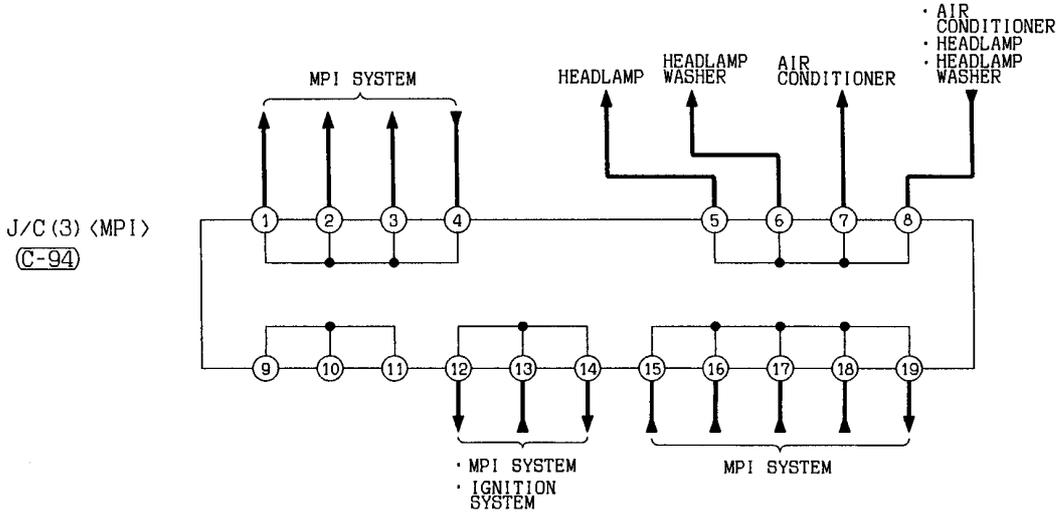

JOINT CONNECTOR (CONTINUED)

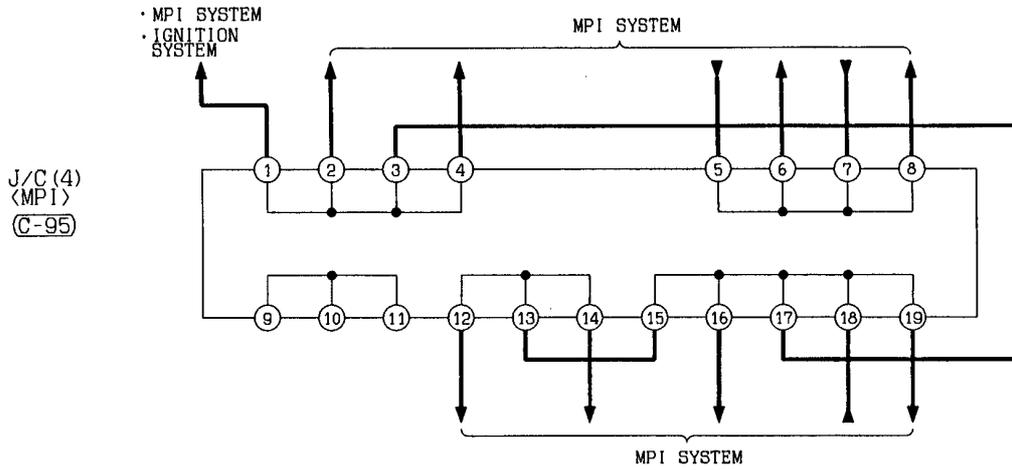


(C-95)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

**CENTRALIZED JUNCTION
FUSIBLE LINK**

No.	Circuit	Housing colour	Rated capacity (A)
1	Fusible link No. (6), (7), <when the engine is stopped> and fusible link No. (2), (3), (4), (5), dedicated fuse No. (1) <after start of the engine>	Black	80
2	Intercooler fan and MPI circuit	Light blue	20
3	Headlamp, tail lamp, rear fog lamp, alternator and dedicated fuse No. (2), (3), (4) circuit	Pink	30
4	Power window circuit	Pink	30
5	Ignition switch, starting circuit	Green	40
6	Dedicated fuse No. (5), (8), (12), (13), (14), (15) and multi-purpose fuse No. (1), (2), (6) circuit	Green	40
7	Dedicated fuse No. (6), (7) circuit	Pink	30
8	-	-	-
9	Glow circuit	Black	80
10	-	-	-
11	ABS circuit	Yellow	60


(Relay box in engine compartment)

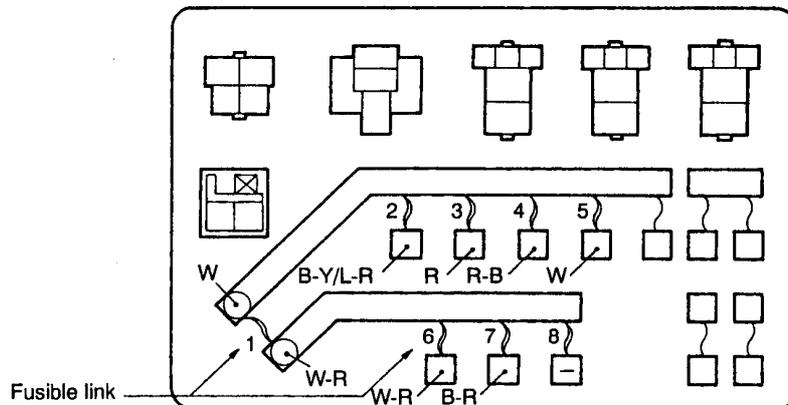

B16S0162


(Connected directly to battery positive terminal)

<Diesel-powered vehicles with ABS>

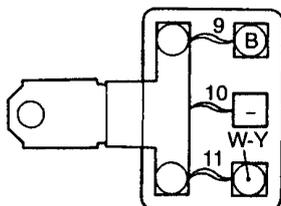

A16W0140

<Petrol-powered vehicles with ABS and diesel-powered vehicles without ABS>

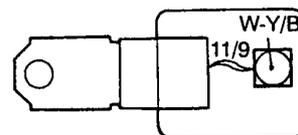


A16V0181


DEDICATED FUSE (Relay box In engine compartment)

Power supply circuit	No.	Rated capacity (A)	Housing colour	Circuit
Battery/Alternator (Fusible link No. 1)	1	10	Red	Hazard warning lamp
Tail lamp relay (Fusible link No. 3)	2	10	Red	Tail lamp and illumination
	3	10	Red	Tail lamp
Headlamp relay (Fusible link No. 3)	4	10	Red	Rear fog lamp and high beam indicator
Battery/Alternator (Fusible link No. 6)	5	10	Red	Clock, radio, room lamp, ignition key hole illumination lamp <LHD> ECU-Power supply and MUT-II power supply
Battery/Alternator (Fusible link No. 7)	6	20	Yellow	Condenser fan motor
	7	10	Red	A/C compressor
Battery/Alternator (Fusible link No. 6)	8	10	Red	Stop lamp
Ignition switch (ACC)	9	10	Red	Daytime running lamp <LHD> and horn
Ignition switch (IG2)	10	10	Red	Heated seat and power window
	11	10	Red	Overdrive control relay <LHD>
Battery/Alternator (Fusible link No. 6)	12	15	Blue	Fuel line heater <LHD>
Battery/Alternator (Fusible link No. 6)	13	10	Red	Rear fan motor
Defogger relay (Fusible link No. 6)	14	10	Red	Door mirror heater
Battery/Alternator (Fusible link No. 6)	15	20	Yellow	Defogger (Vehicles with Defogger timer)


(Relay box in engine compartment)

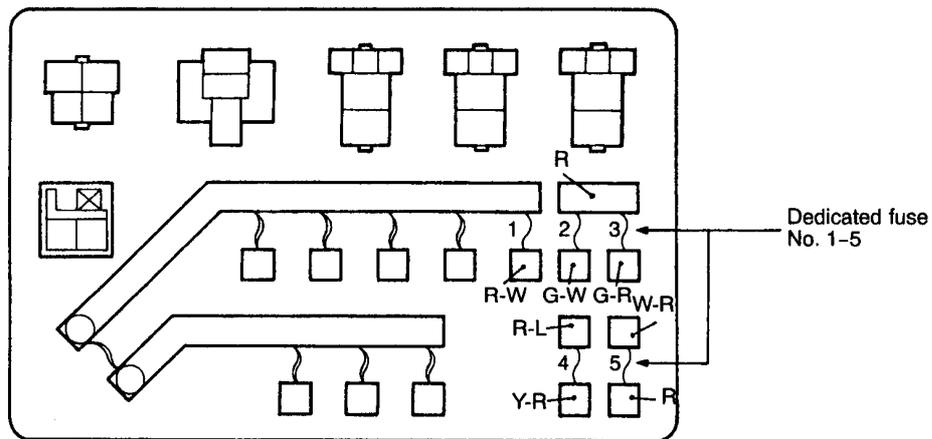


(A/C relay bracket in engine compartment)

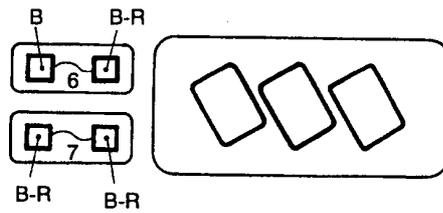

(In junction block)

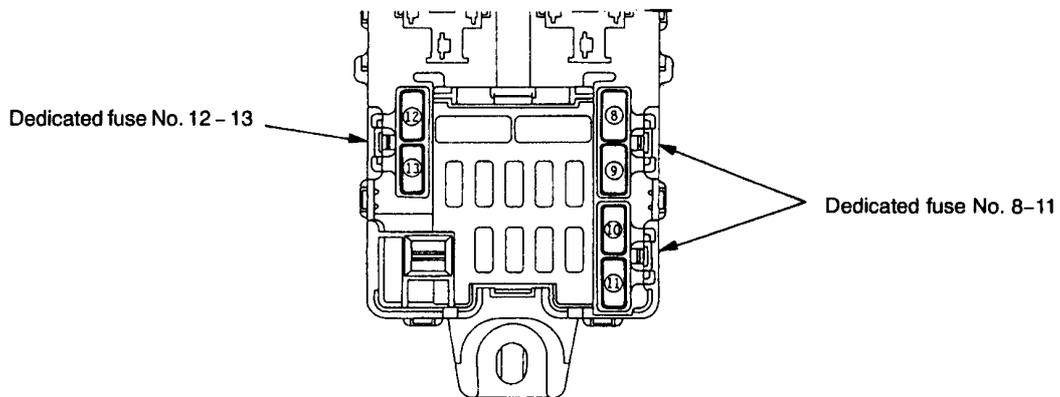


(Relay box in passenger compartment)

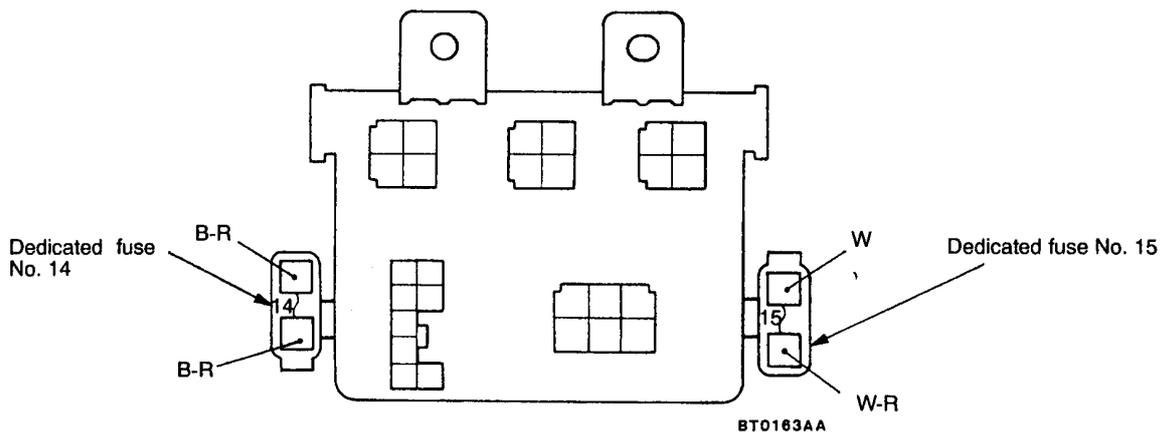

MULTI-PURPOSE FUSE (In junction block)

Power supply circuit		No.	Rated capacity (A)	Housing colour	Load circuit
Battery		1	20	Yellow	Defogger and door mirror heater
		2	20	Yellow	Blower motor
Ignition switch	IG1	3	10	Red	Turn signal and hazard warning flasher unit
	ACC	4	10	Red	ETACS-ECU, clock and radio
Battery		5	-	-	-
		6	15	Blue	ETACS-ECU
Ignition switch	IG2	7	10	Red	ABS-ECU, defogger relay, DRL relay, dim-dip lamp relay, headlamp washer relay, blower relay, A/C switch, condenser fan control relay, defogger timer, defogger switch and rear heater relay
	ACC	8	15	Blue	Cigarette lighter and remote controlled mirror
	ACC	9	15	Blue	Intermittent wiper relay, washer motor and wiper motor
	IG1	10	10	Red	Combination meter, back-up lamp, rear differential lock-ECU and SRS diagnosis unit
	IG1	11	10	Red	ABS-ECU, combination meter, ETACS-ECU, immobilizer-ECU, multi-meter, 4WD indicator-ECU, rear differential lock-ECU, SRS diagnosis unit and engine-ECU

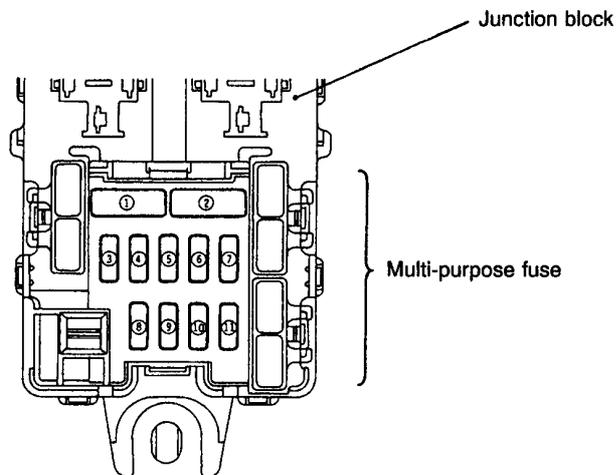


A16V0071

CENTRALIZED RELAY

(Relay box in engine compartment)


Connector No.	Name	Connector No.	Name
A-51X	Alternator relay	A-54X	Headlamp relay
A-52X	Starter relay	A-55X	Tail lamp relay
A-53X	Intercooler fan relay	A-56X	Storage connector

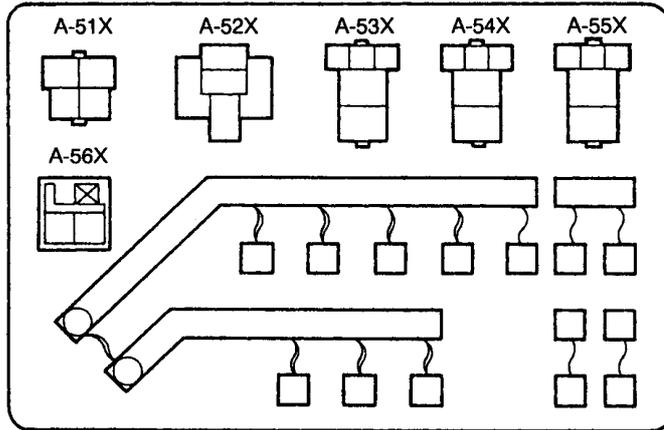

16S0162

(A/C relay bracket in engine compartment)


Connector No.	Name	Connector No.	Name
A-58X	A/C compressor relay	A-60X	Condenser fan control relay
A-59X	Condenser fan relay		

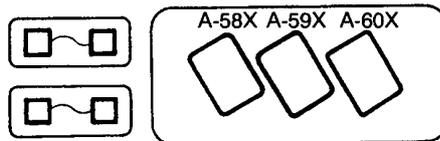

16V0067

(Relay box in passenger compartment)

Connector No.	Name	Connector No.	Name
C-78X	Power window relay	C-97X	Defogger Timer
C-96X	Rear heater relay		

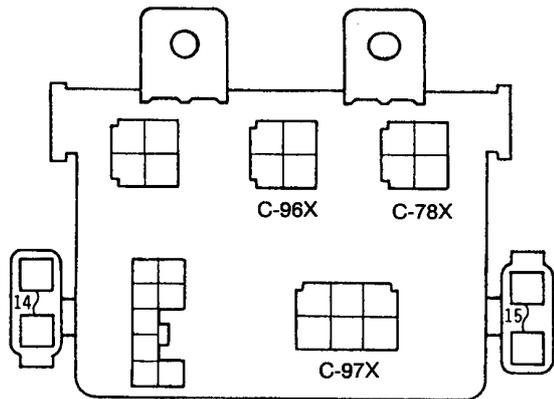


AT0163AA

NOTES

POWER DISTRIBUTION SYSTEM

90100040210


L.H. drive vehicles <1997 Models>

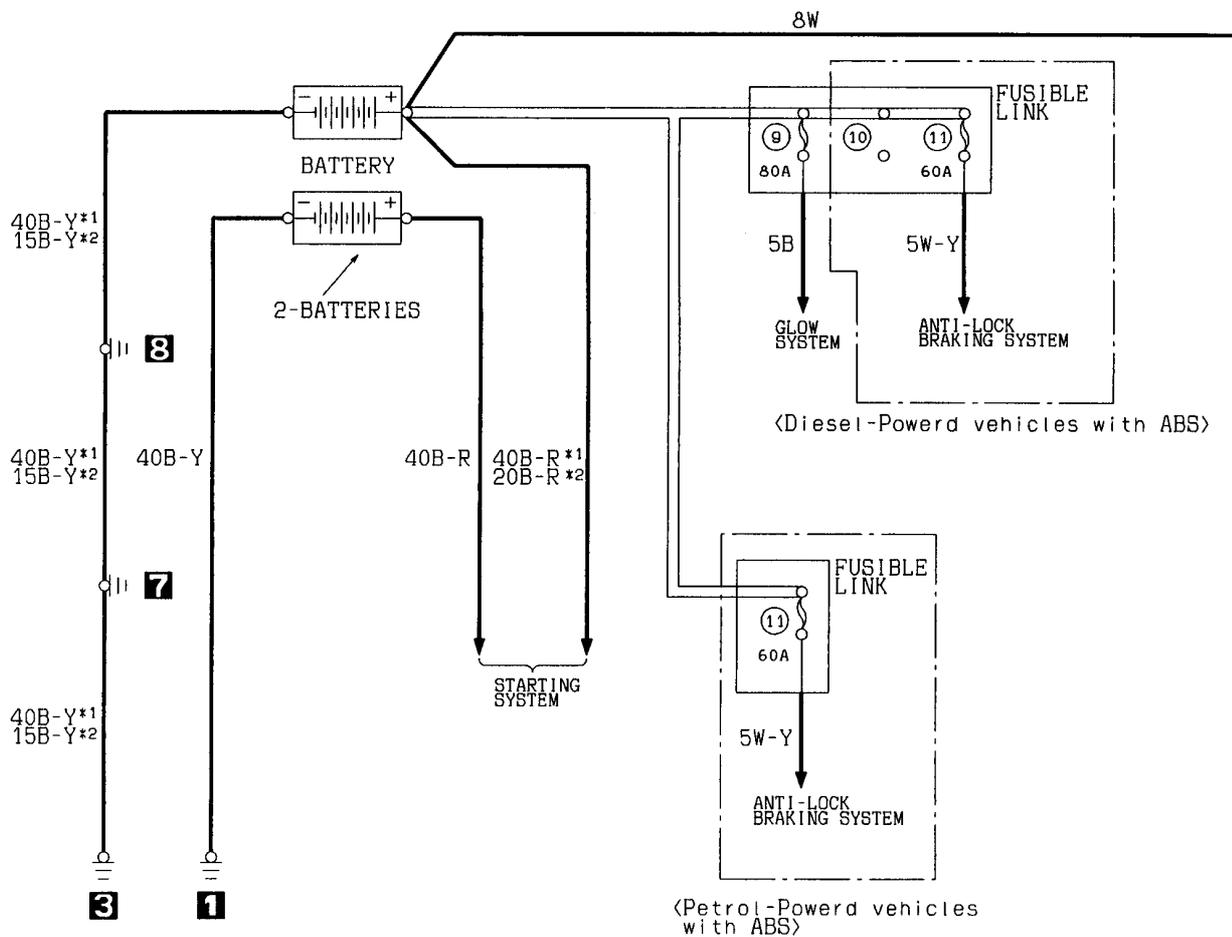



Remarks
 *1: Diesel
 *2: Petrol


(A-56X)




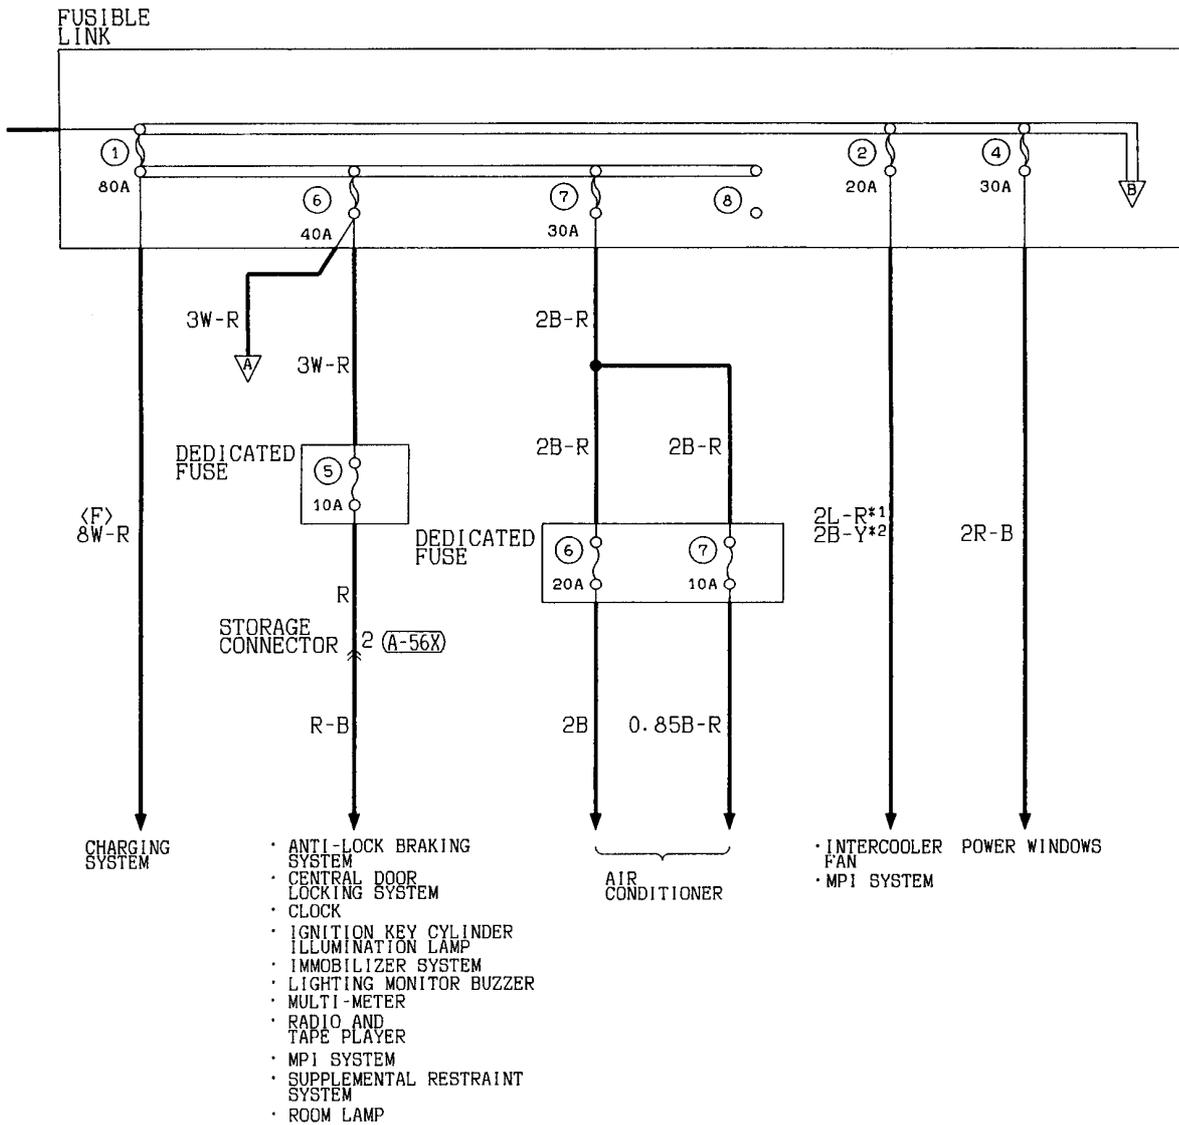



**POWER DISTRIBUTION SYSTEM <L.H. drive vehicles (1997 Models)>
(CONTINUED)**

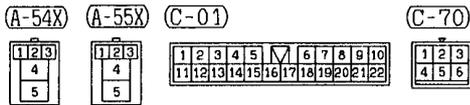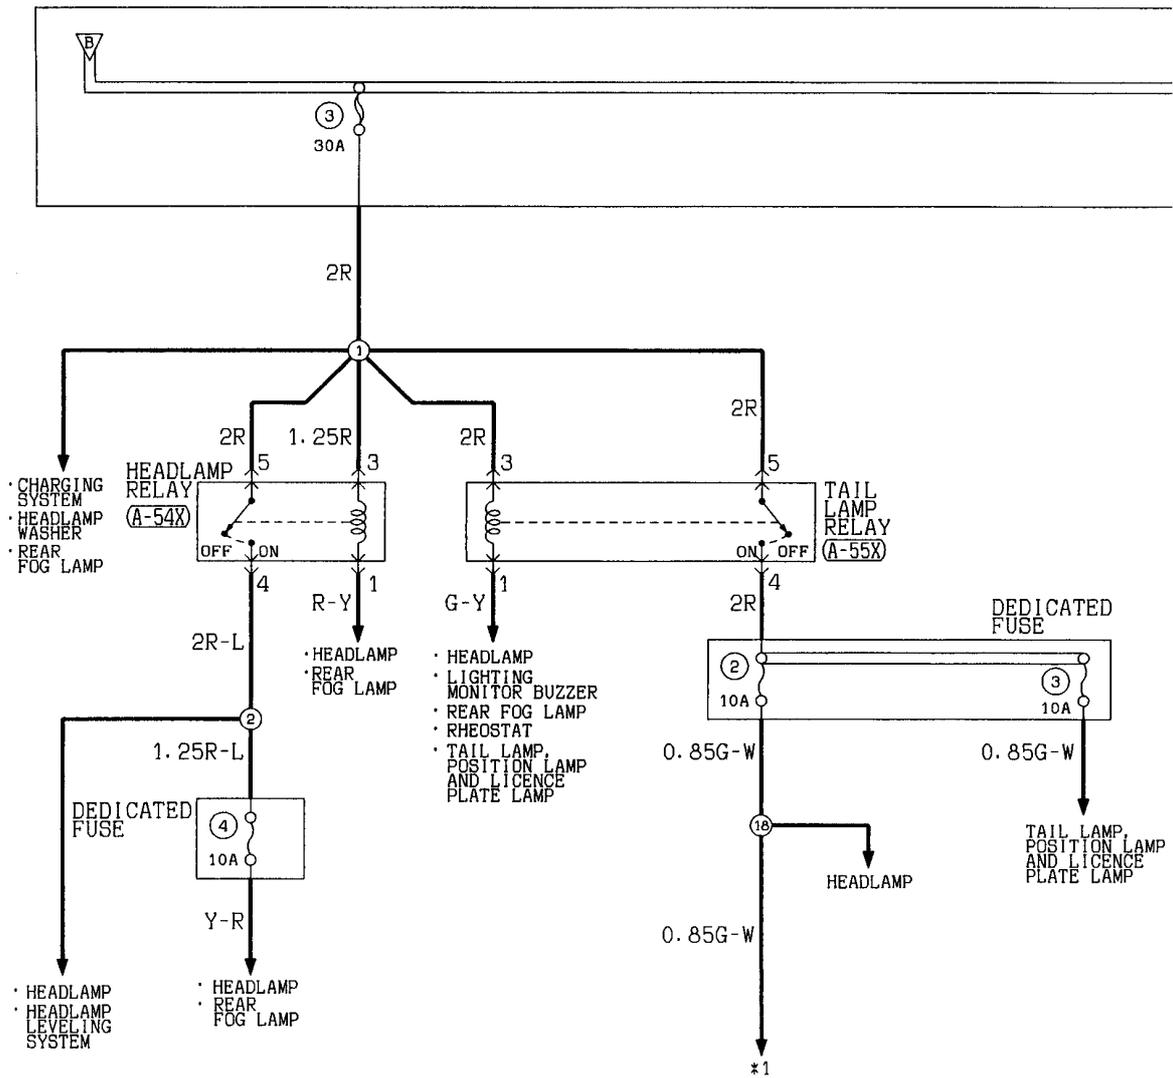

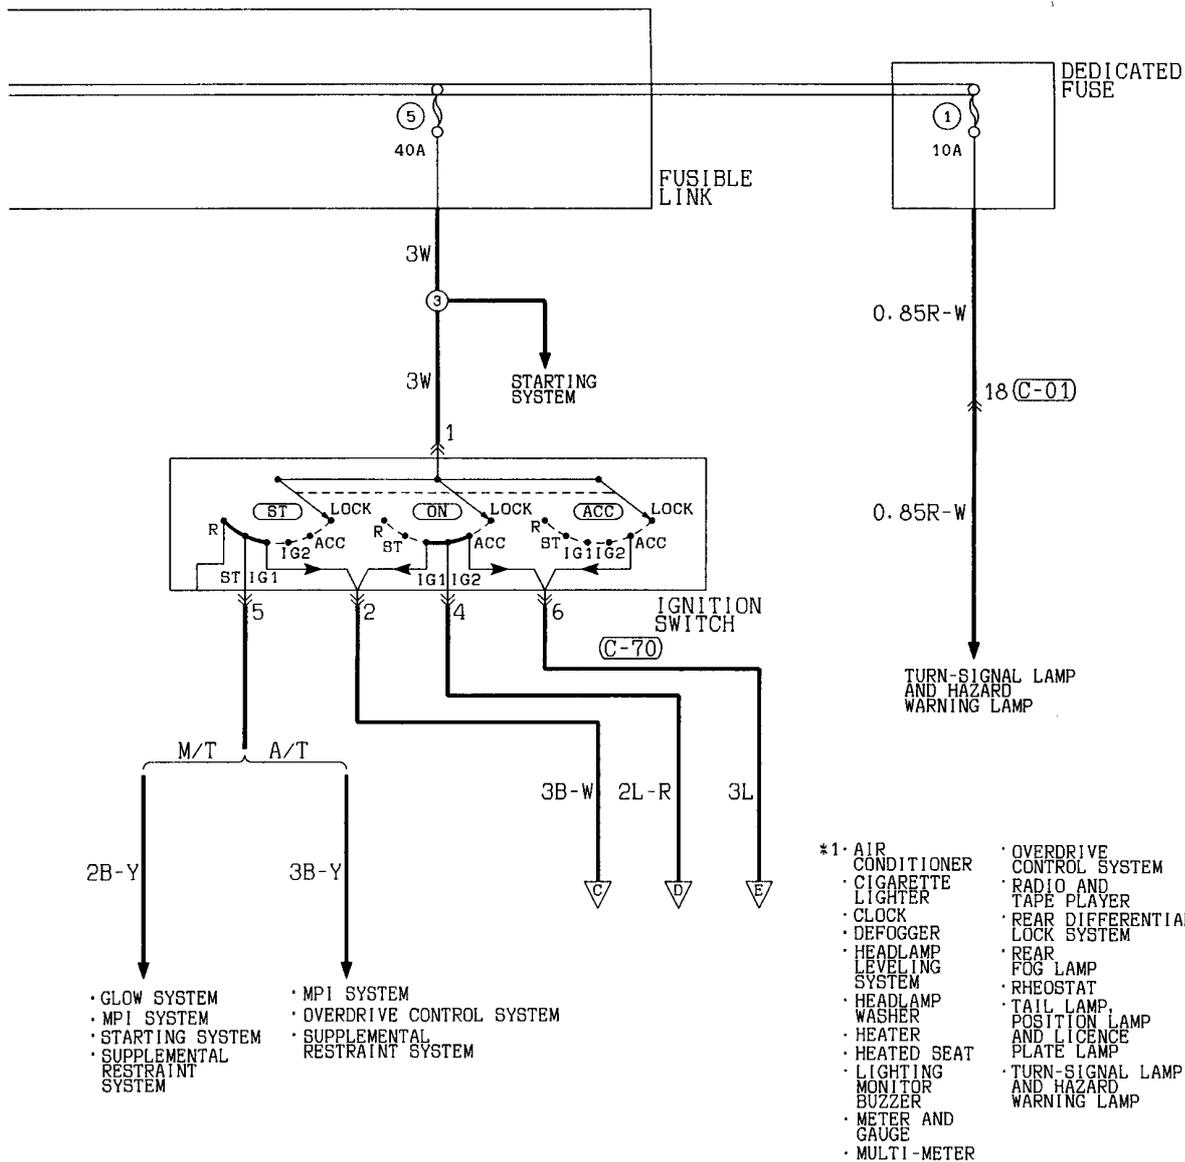

**POWER DISTRIBUTION SYSTEM <L.H. drive vehicles (1997 Models)>
(CONTINUED)**

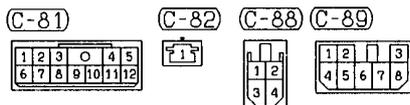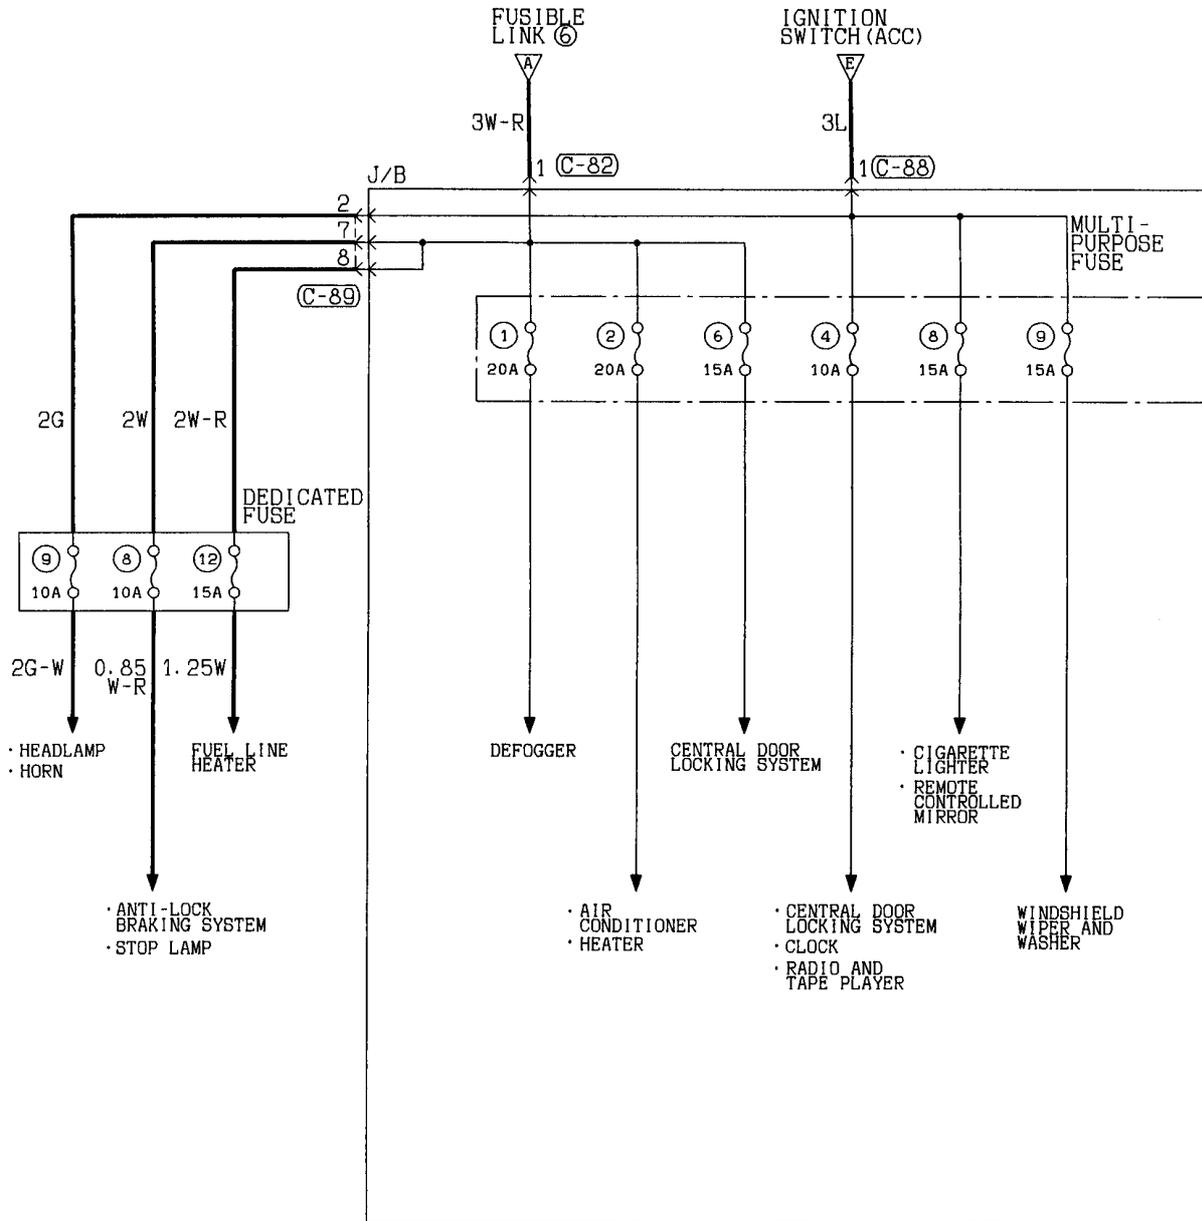


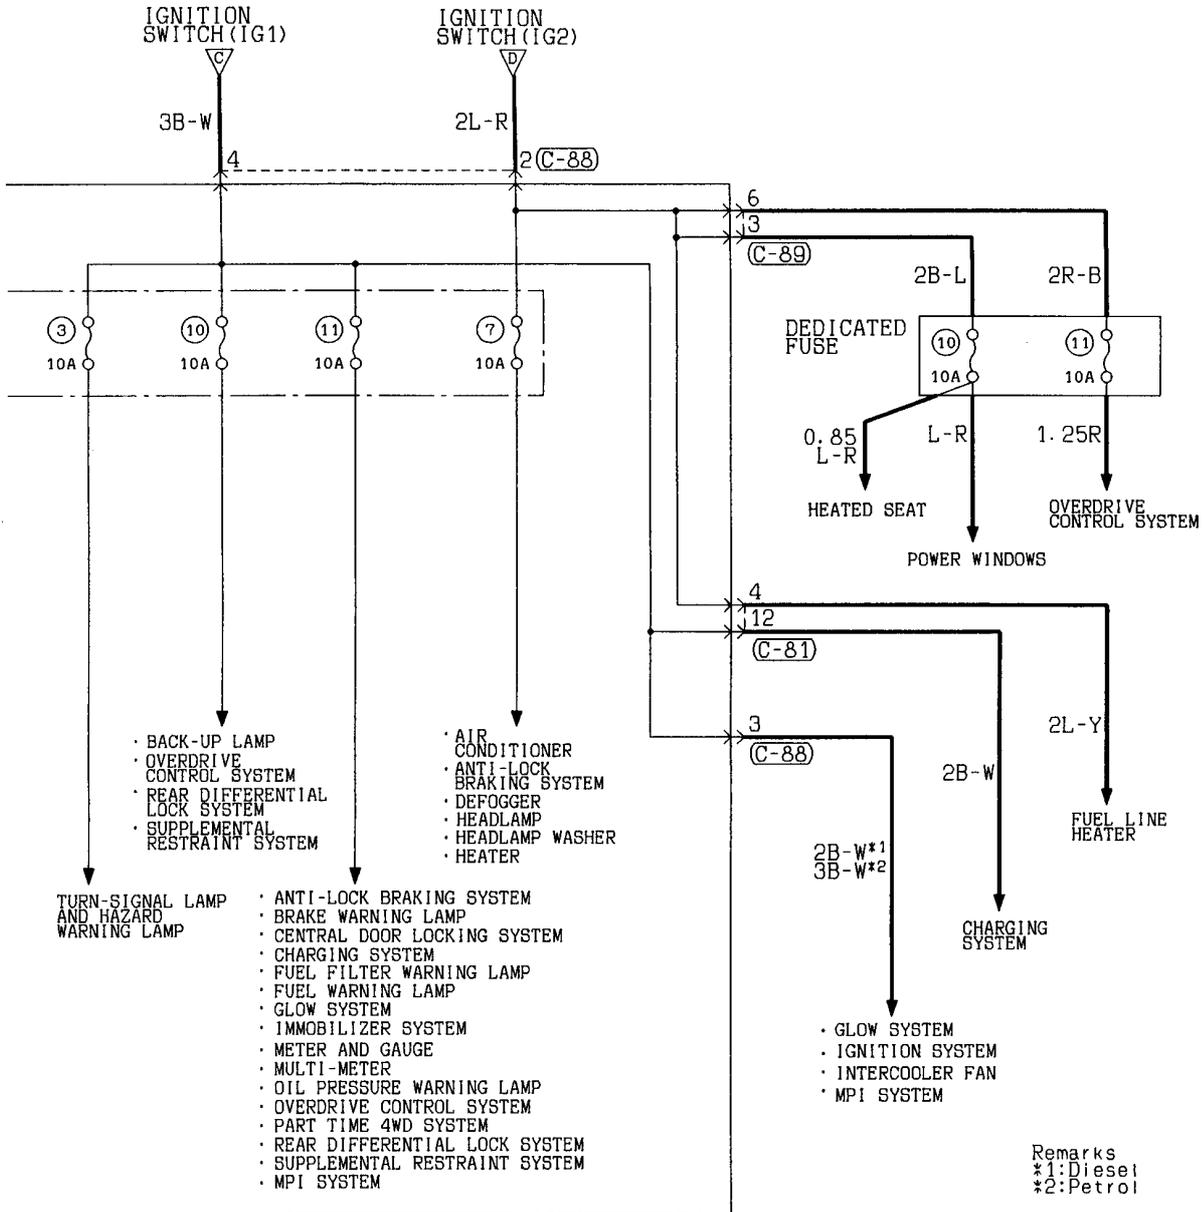

POWER DISTRIBUTION SYSTEM

90100040630


L.H. drive vehicles <1998 Models>

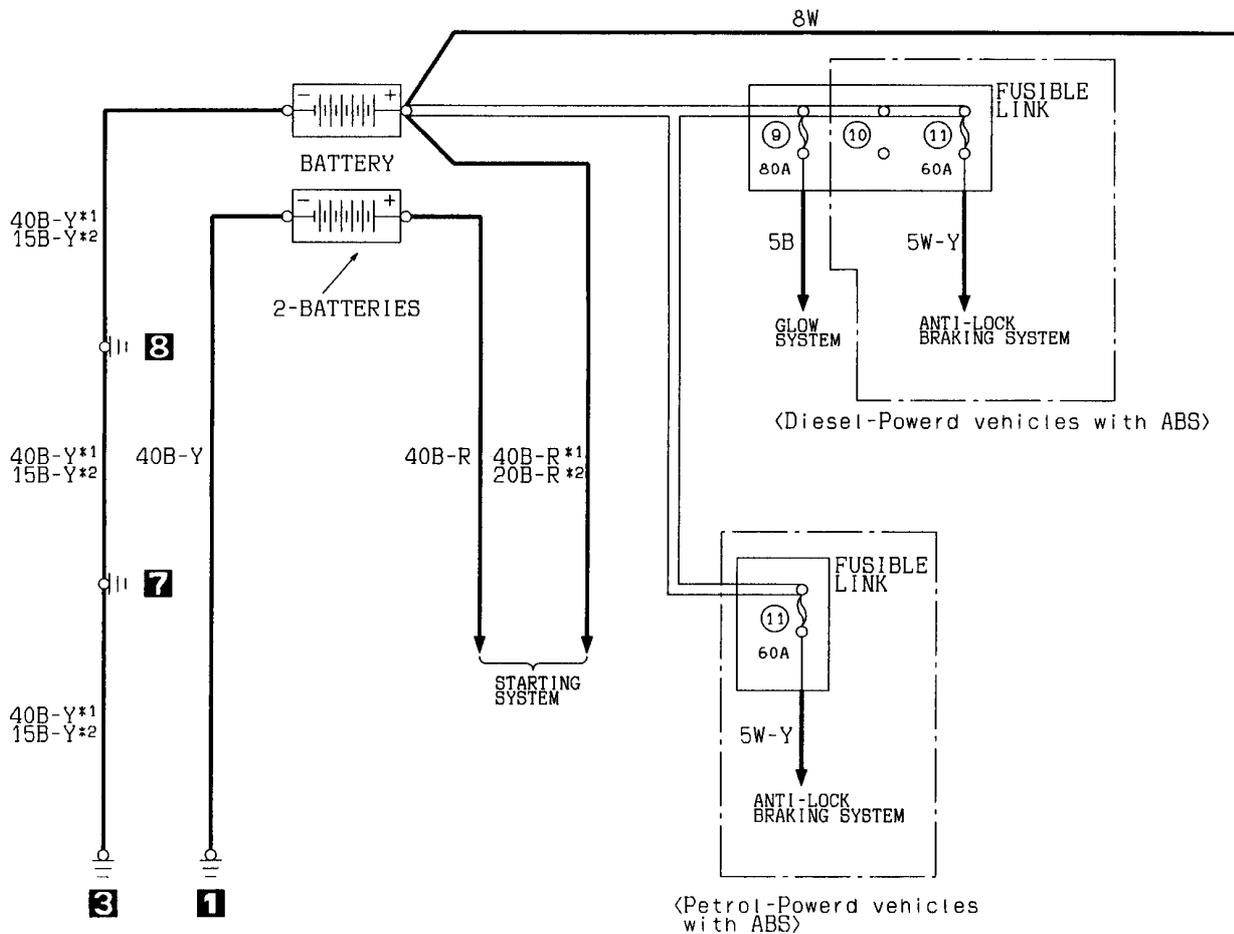



Remarks
 **1: Diesel
 **2: Petrol


(A-56X)




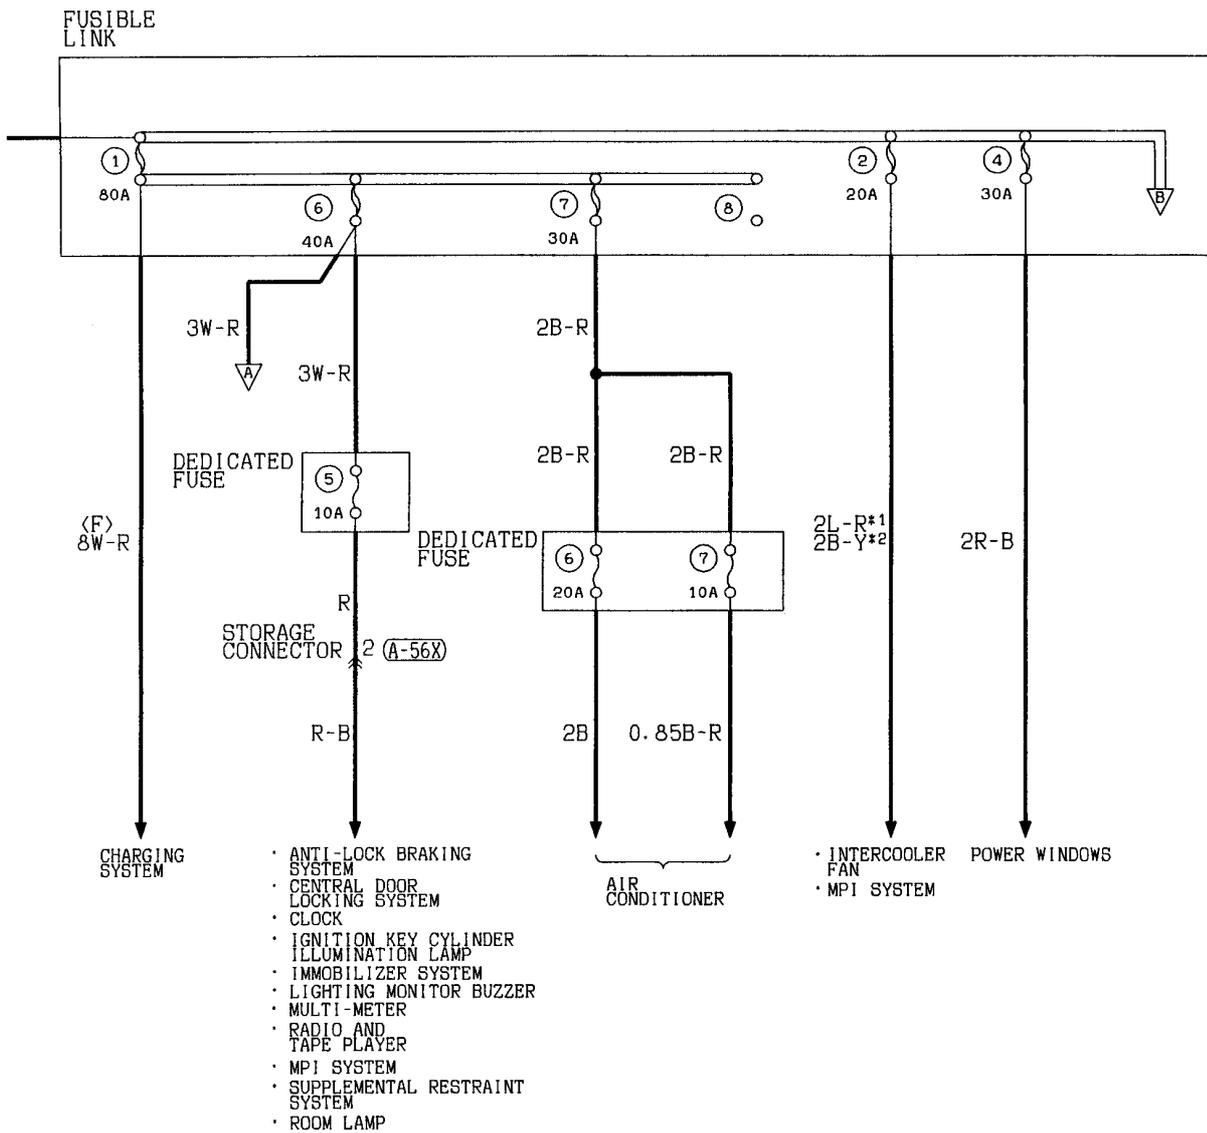



**POWER DISTRIBUTION SYSTEM <L.H. drive vehicles (1998 Models)>
(CONTINUED)**

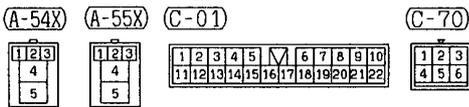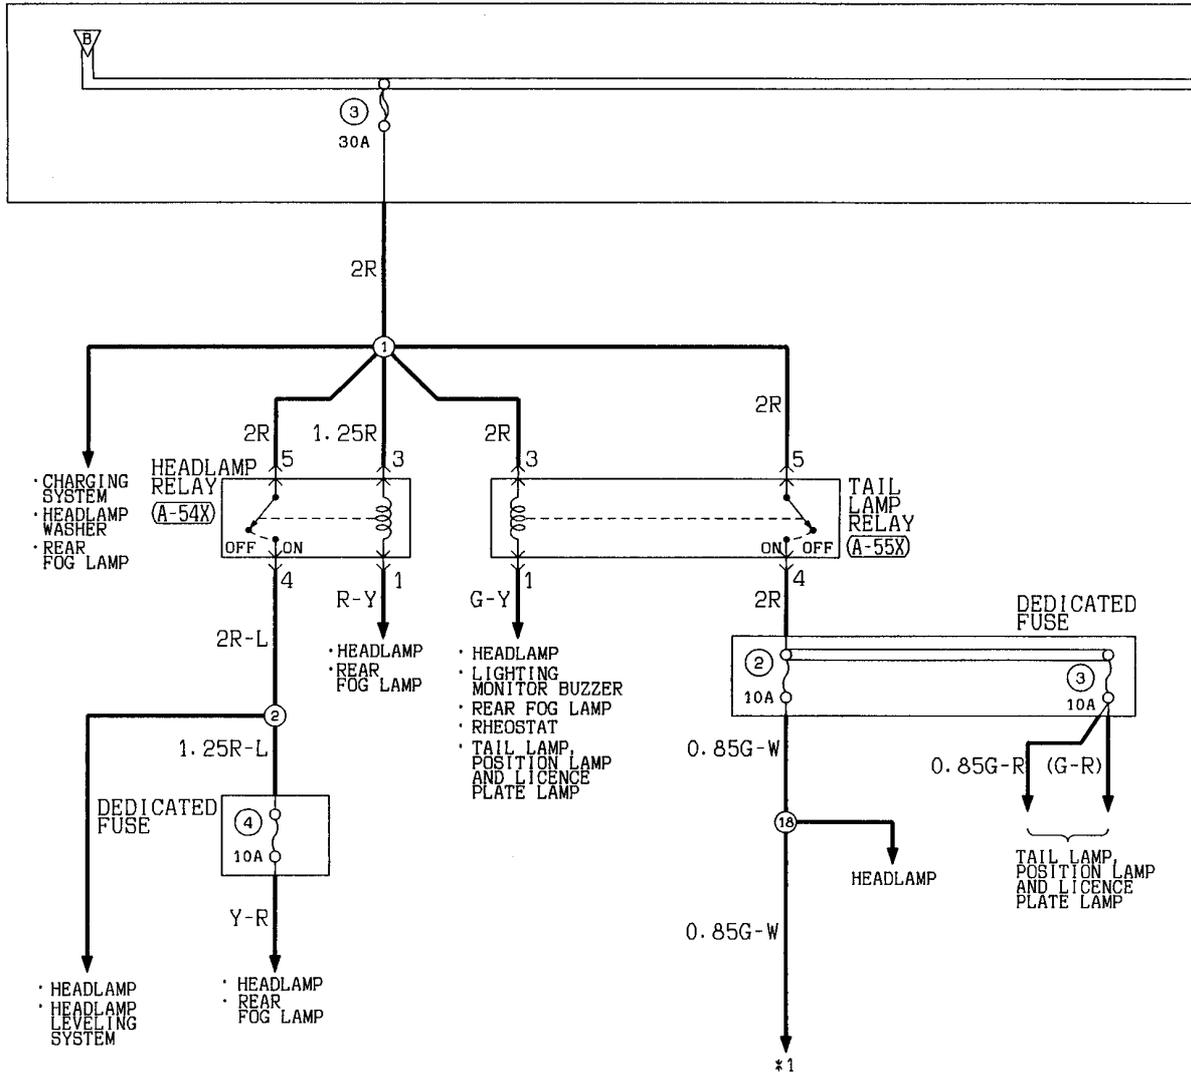

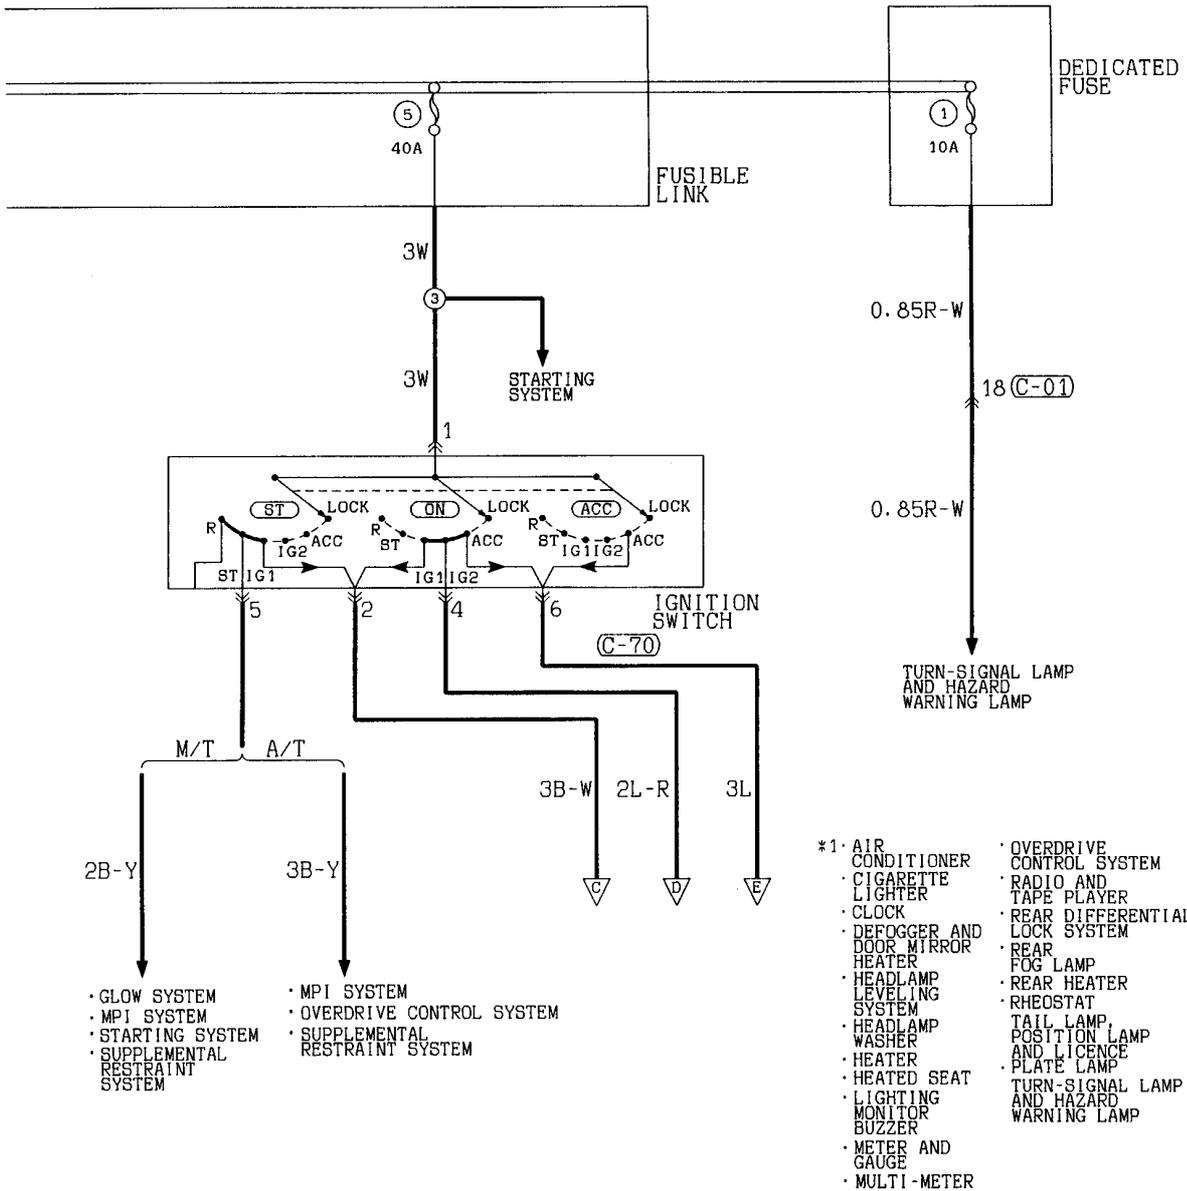

**POWER DISTRIBUTION SYSTEM <L.H. drive vehicles (1998 Models)>
(CONTINUED)**

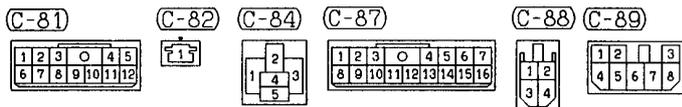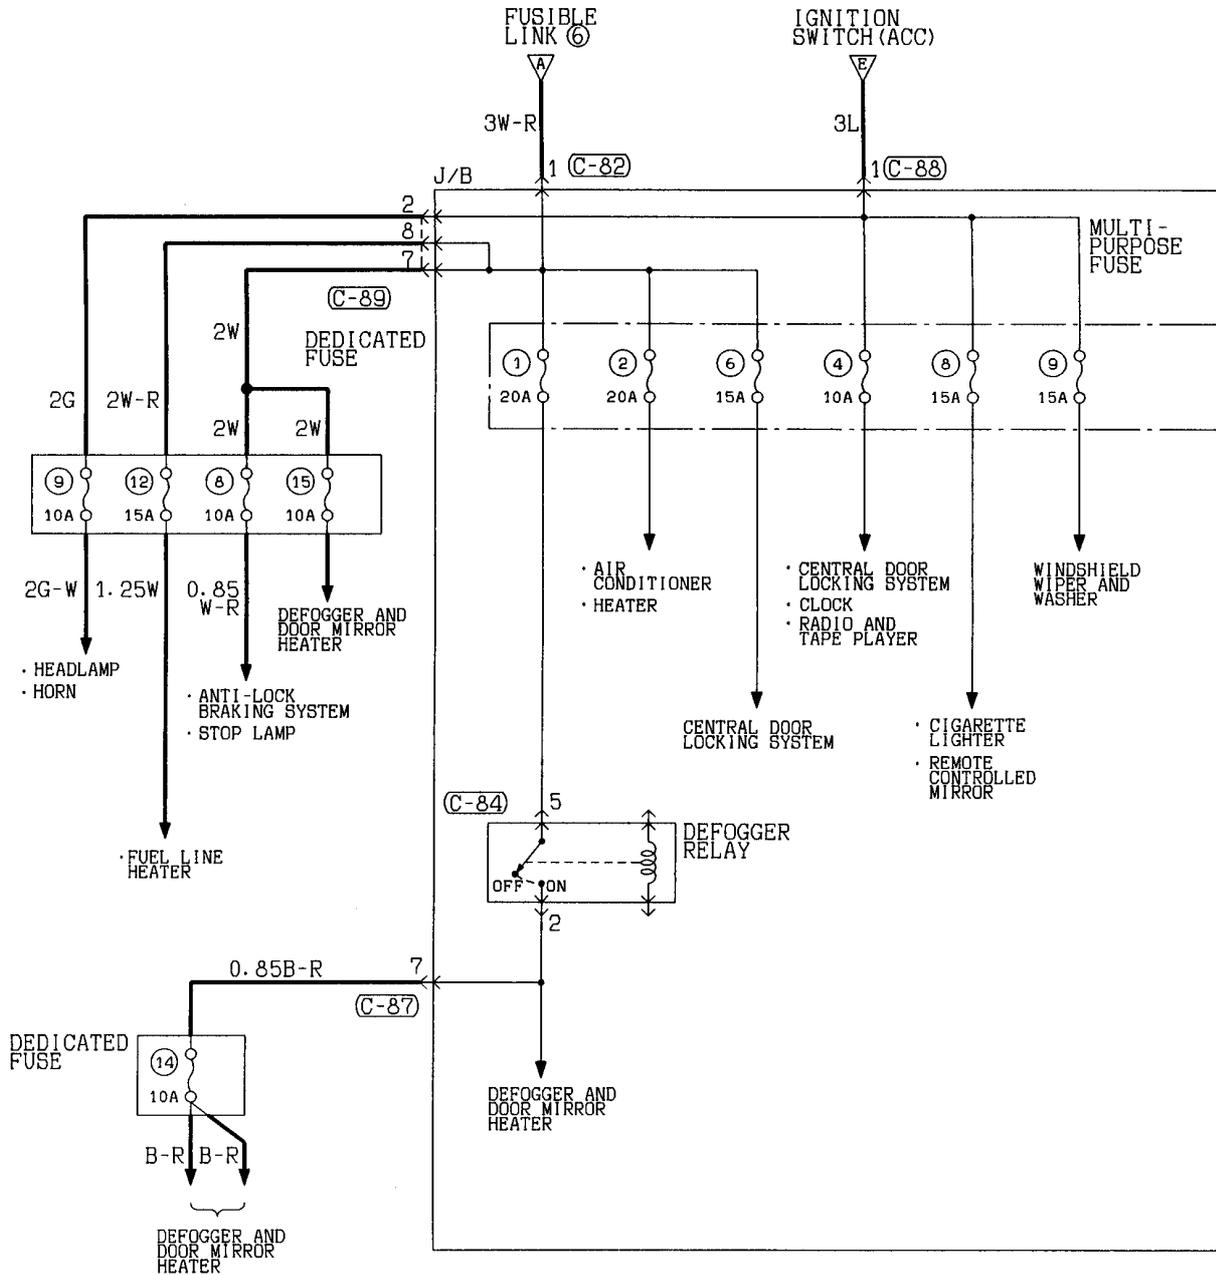


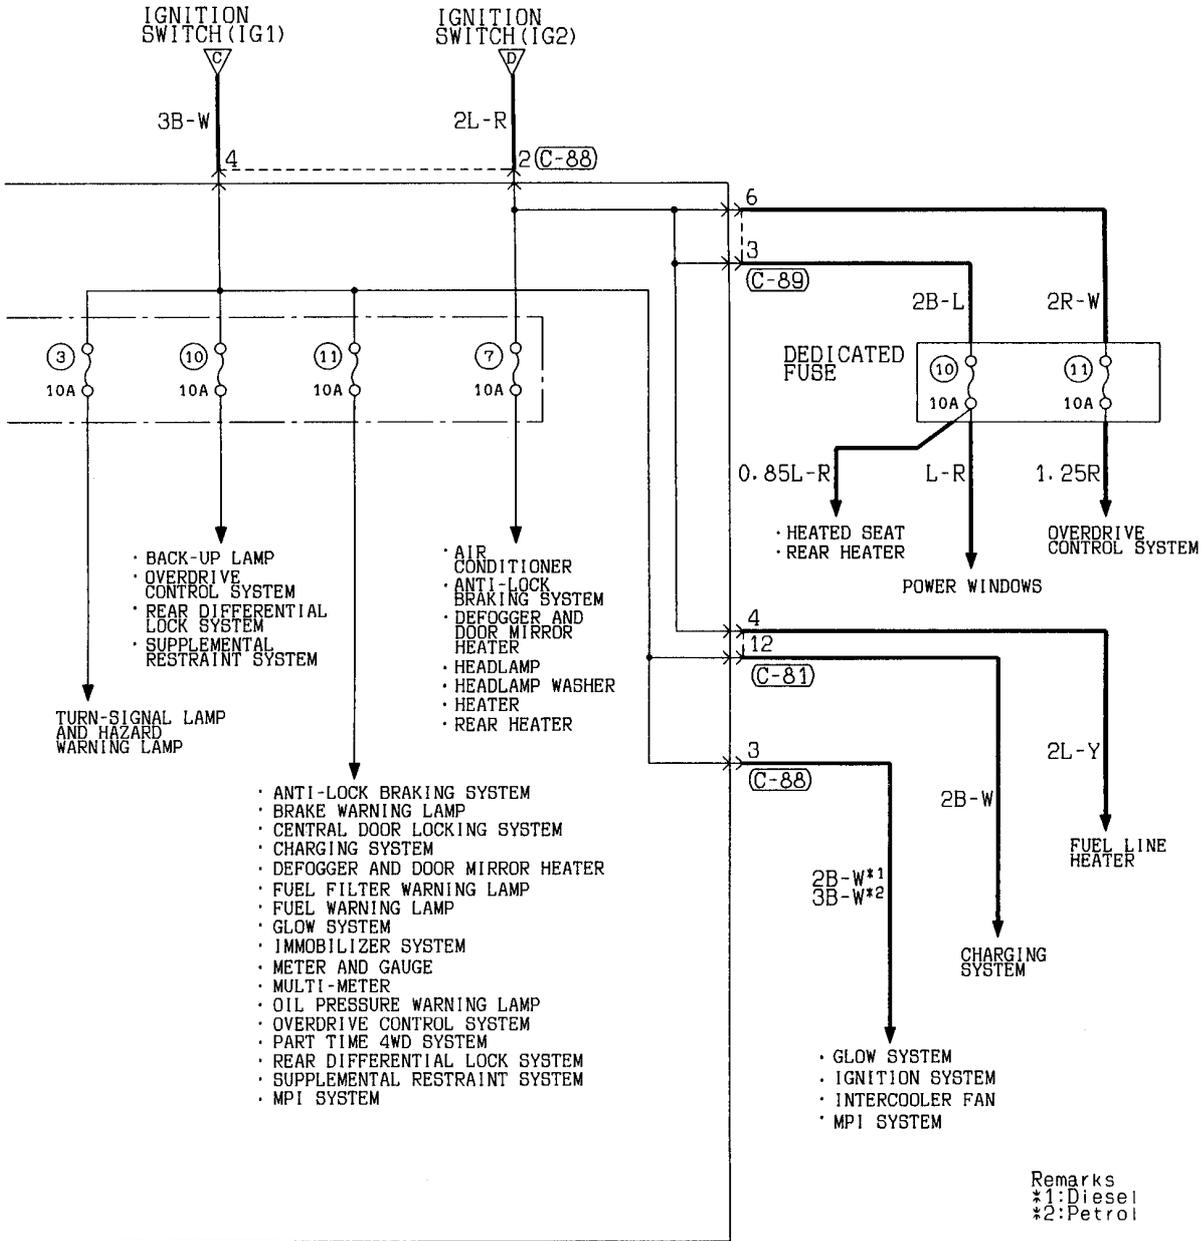

POWER DISTRIBUTION SYSTEM


90100040227

R.H. drive vehicles <1997 Models>


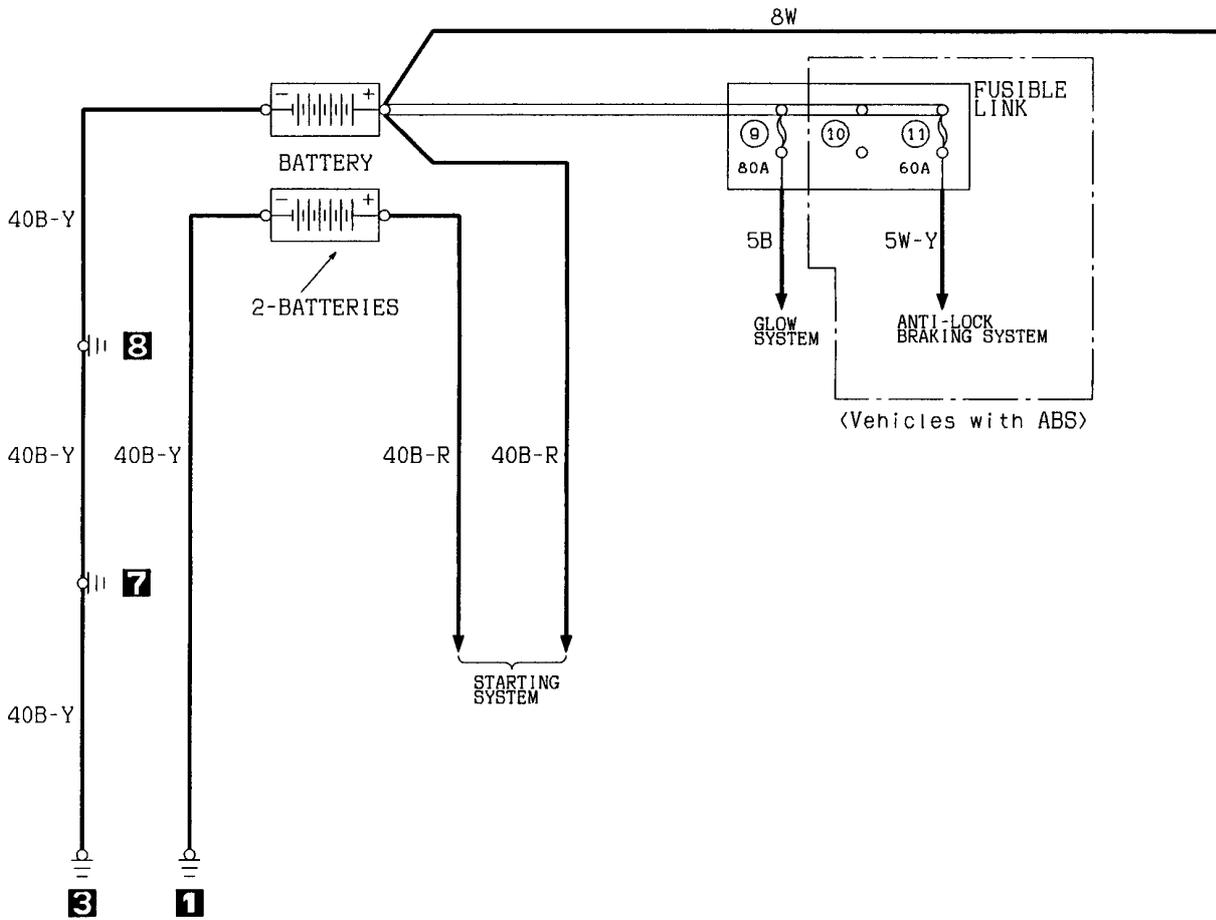



A-56X

12


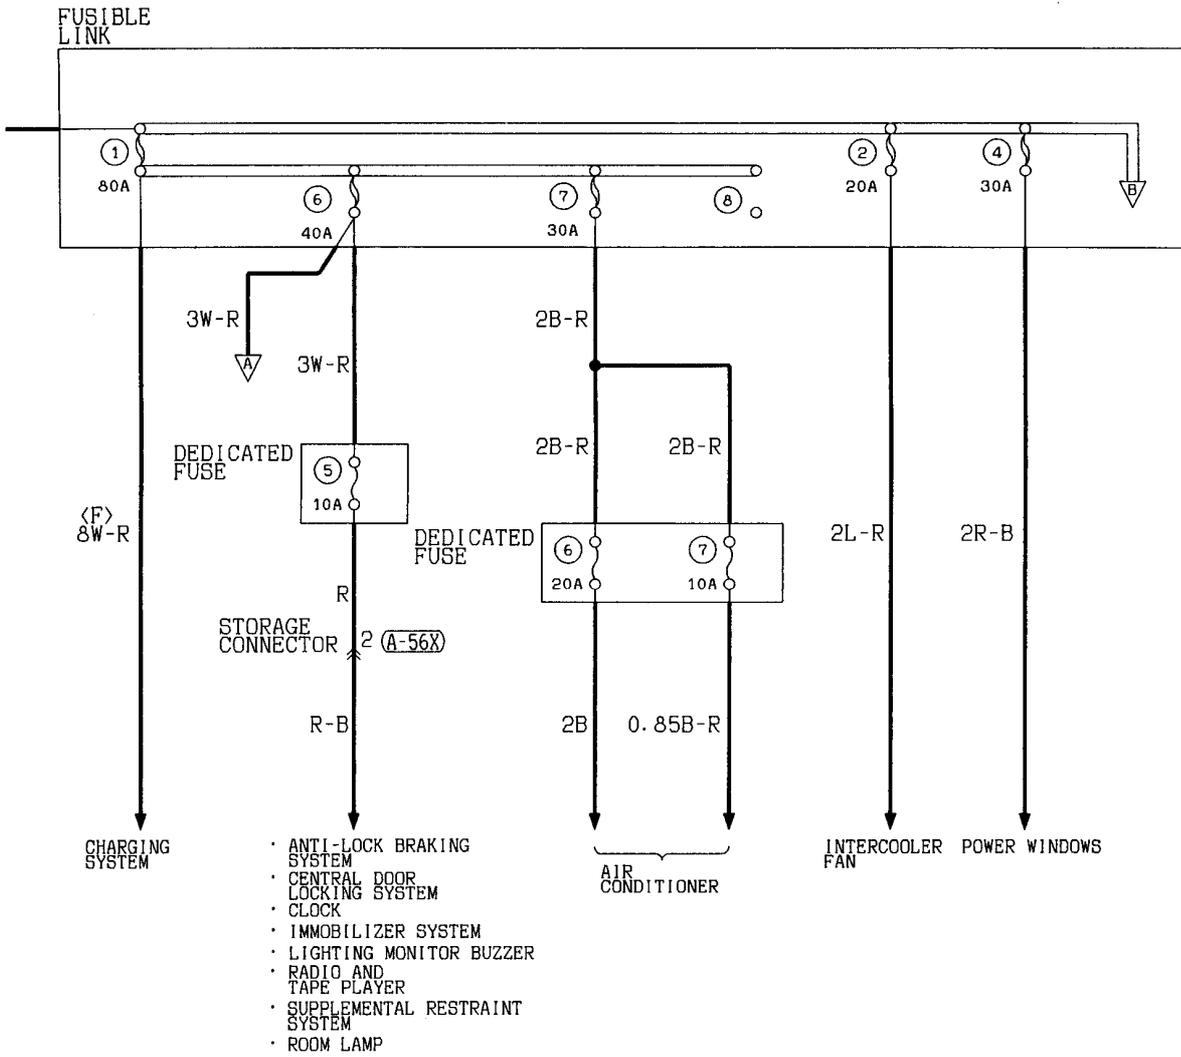



POWER DISTRIBUTION SYSTEM <R.H. drive vehicles (1997 Models)>
(CONTINUED)

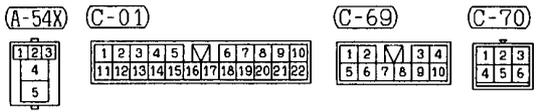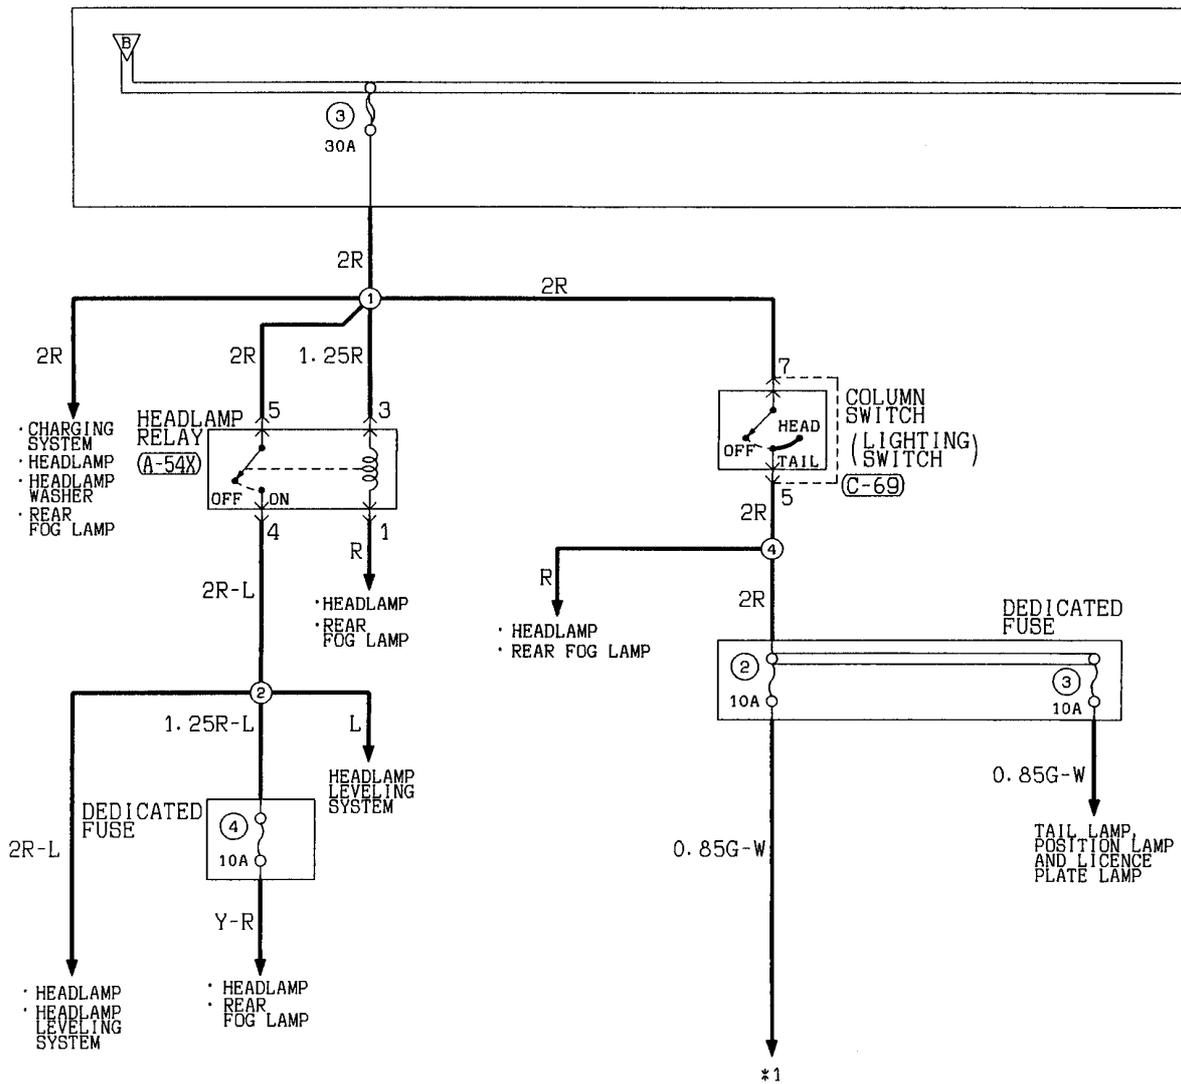

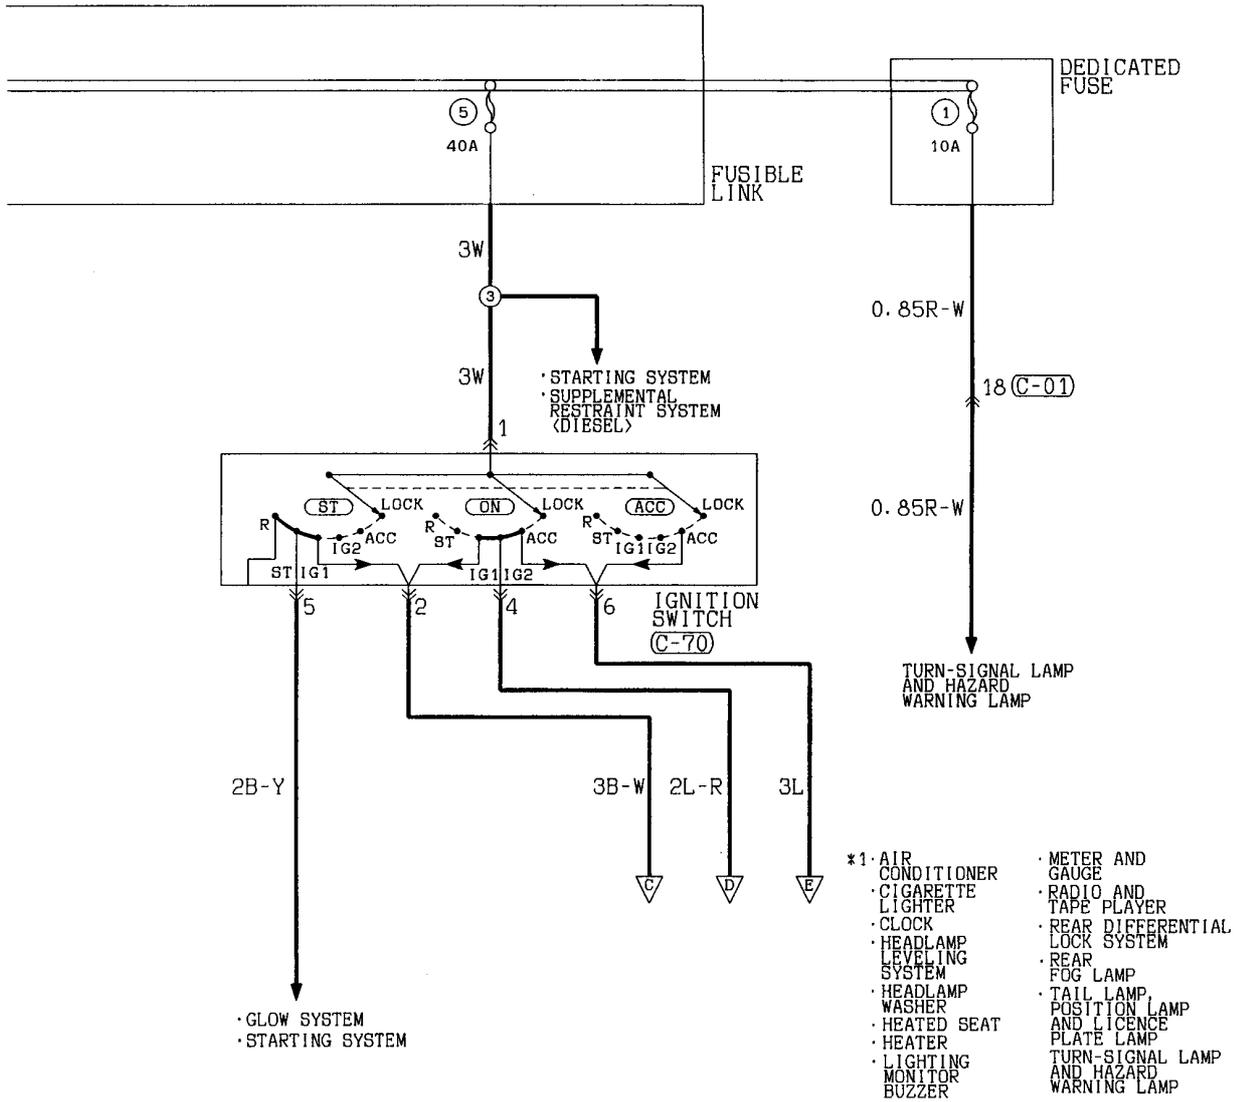

POWER DISTRIBUTION SYSTEM <R.H. drive vehicles (1997 Models)>
(CONTINUED)

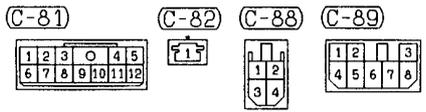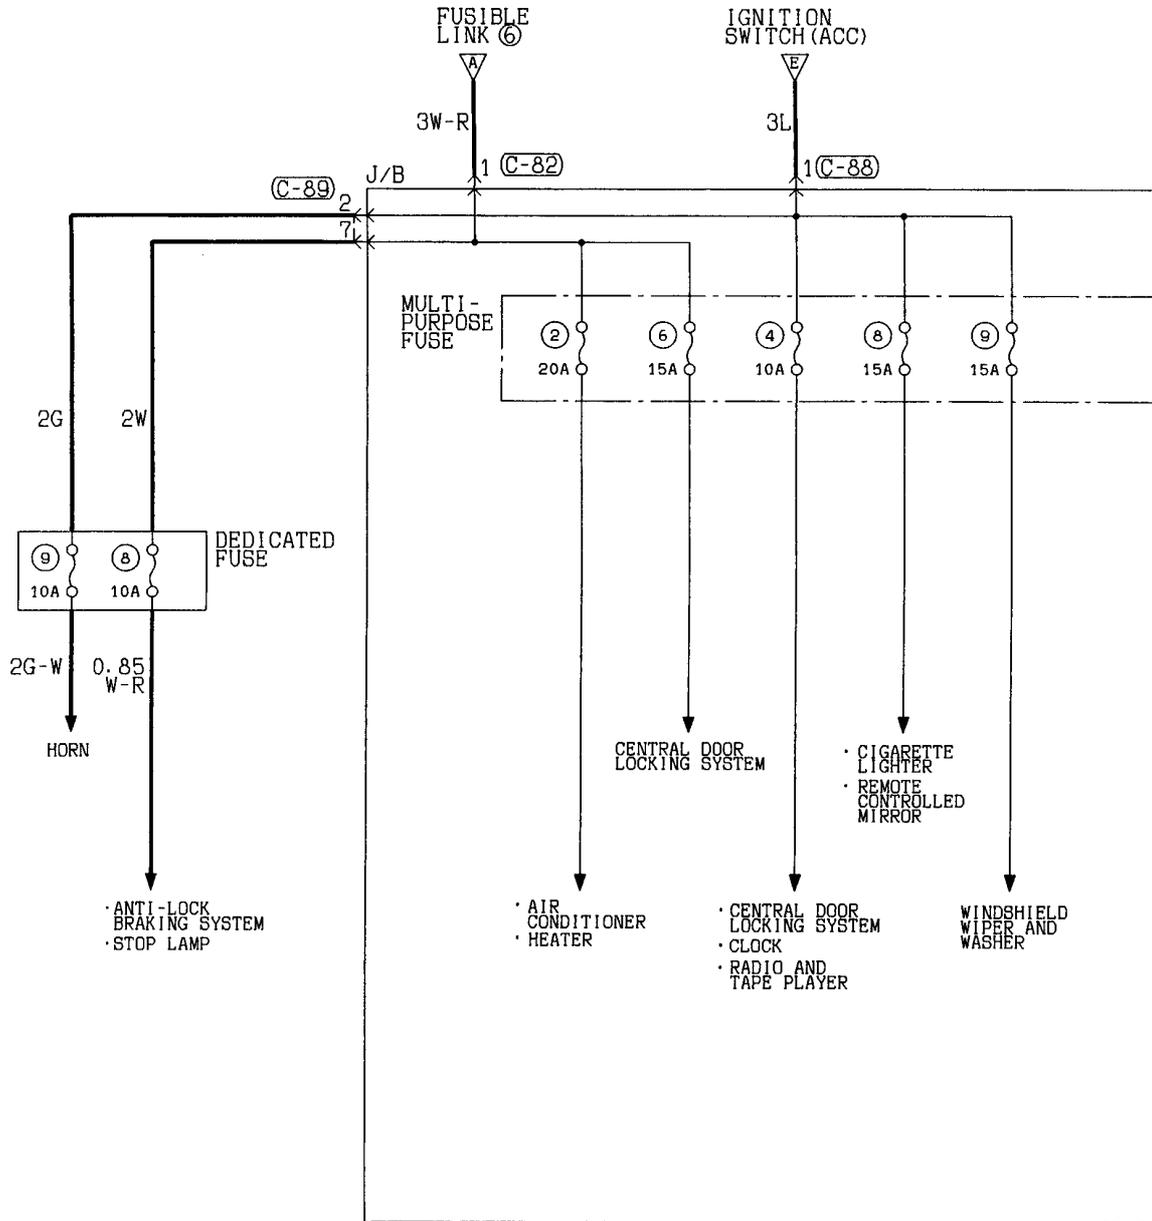


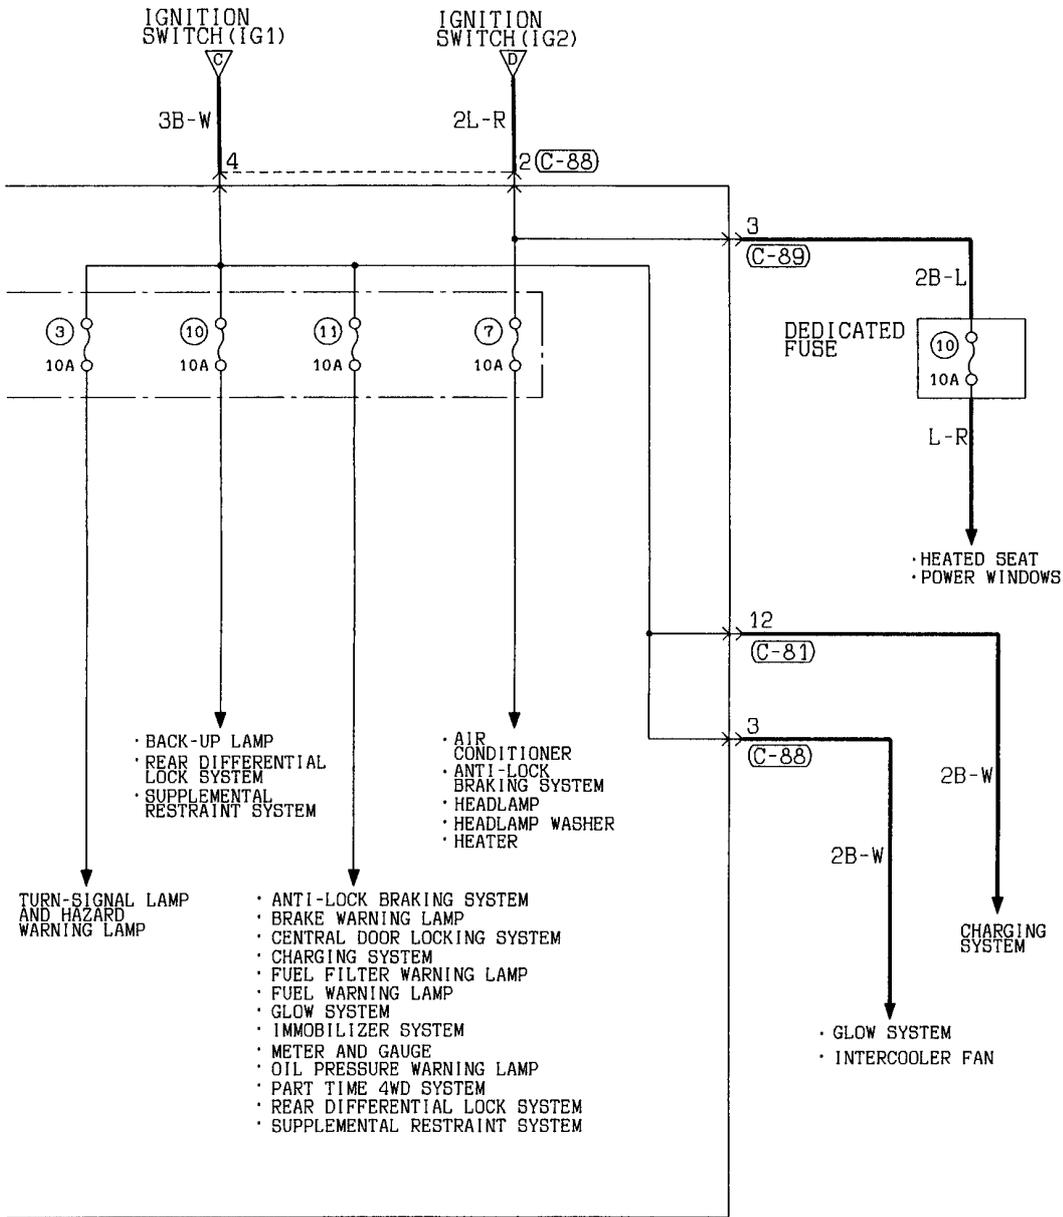

POWER DISTRIBUTION SYSTEM


90100040647

R.H. drive vehicles <1998 Models>


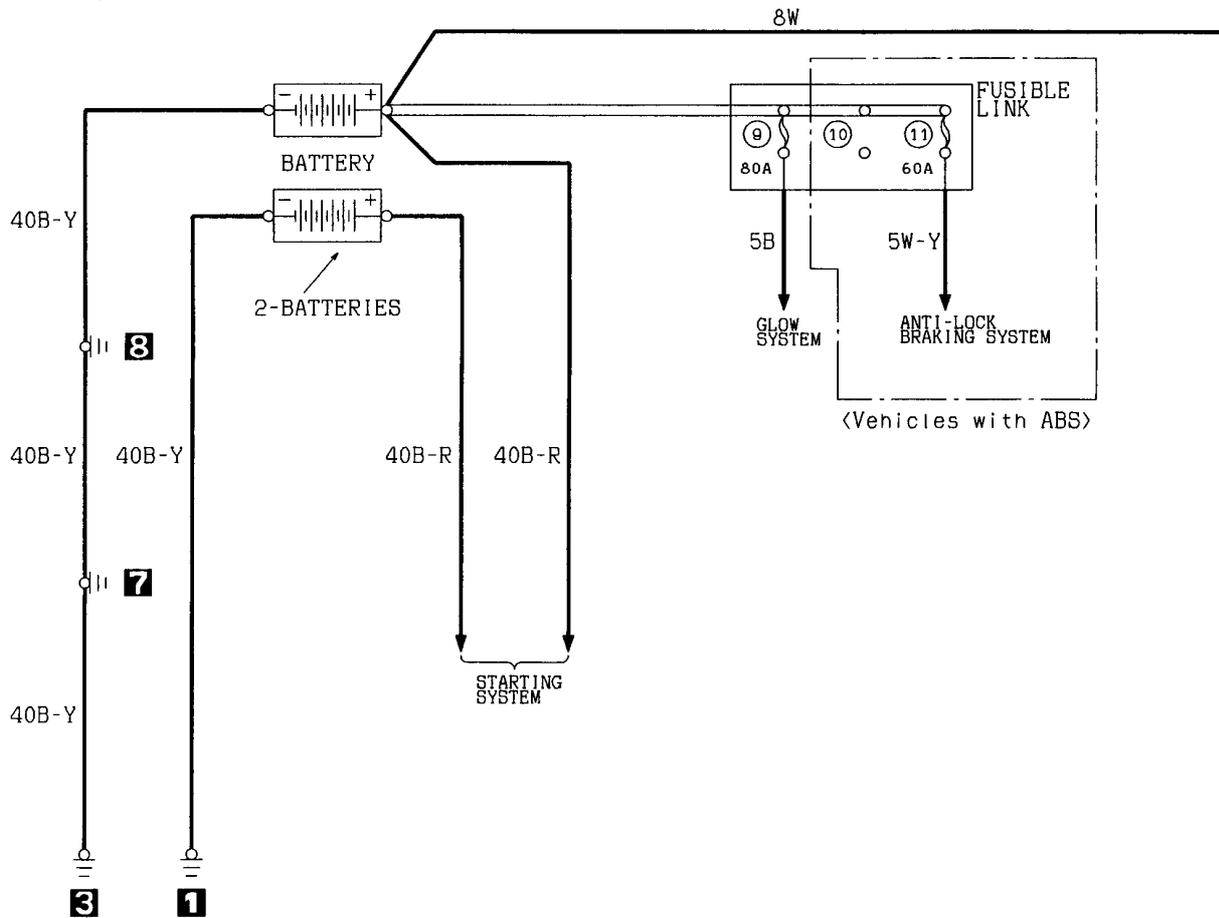



(A-56X)




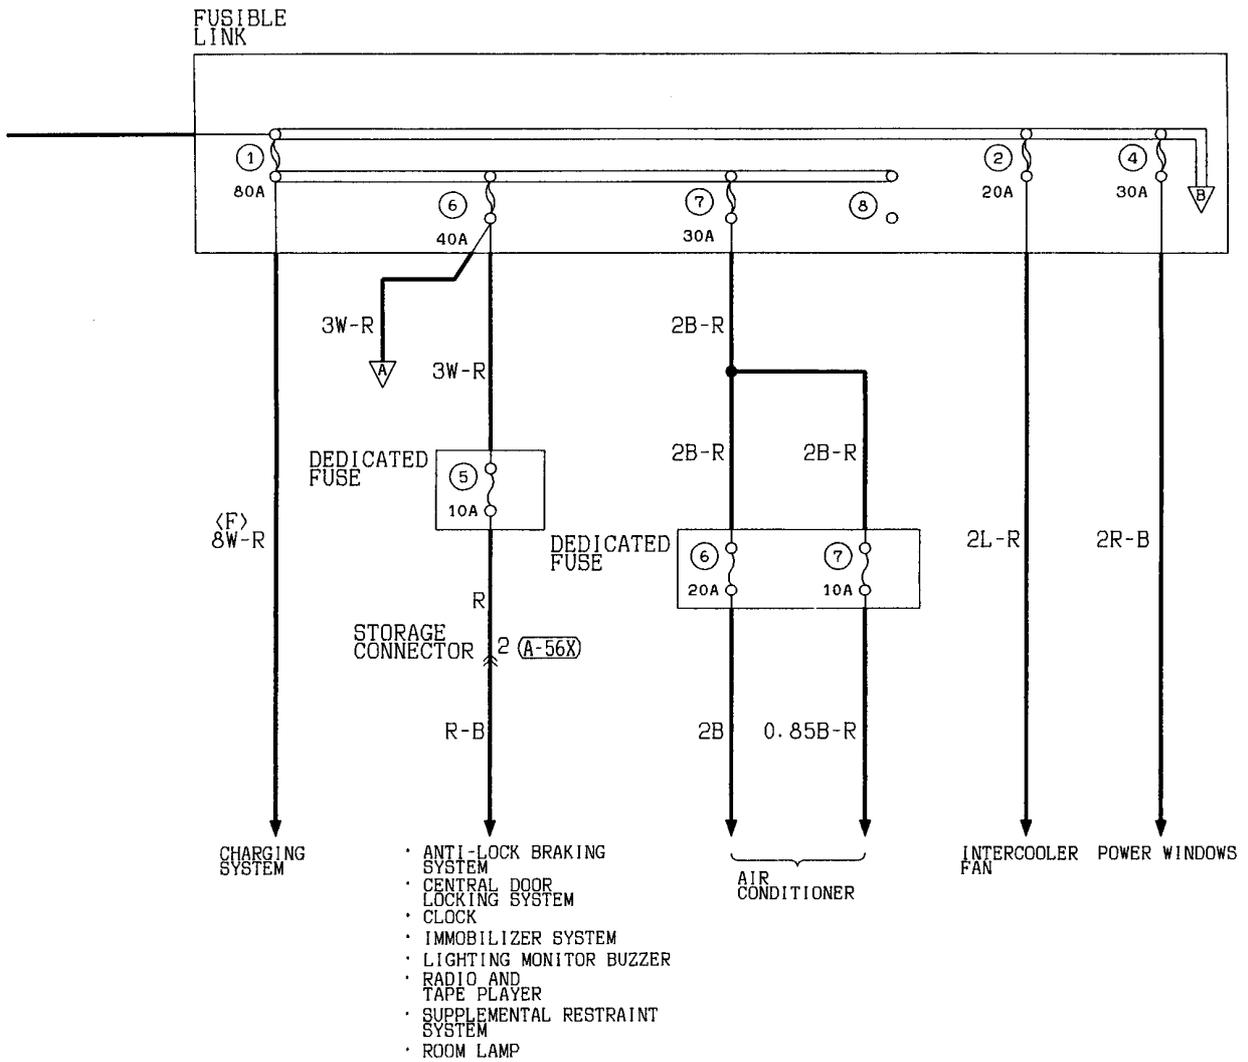



POWER DISTRIBUTION SYSTEM <R.H. drive vehicles (1998 Models)>
(CONTINUED)

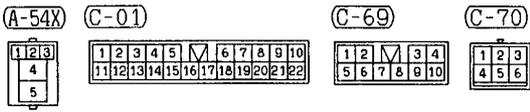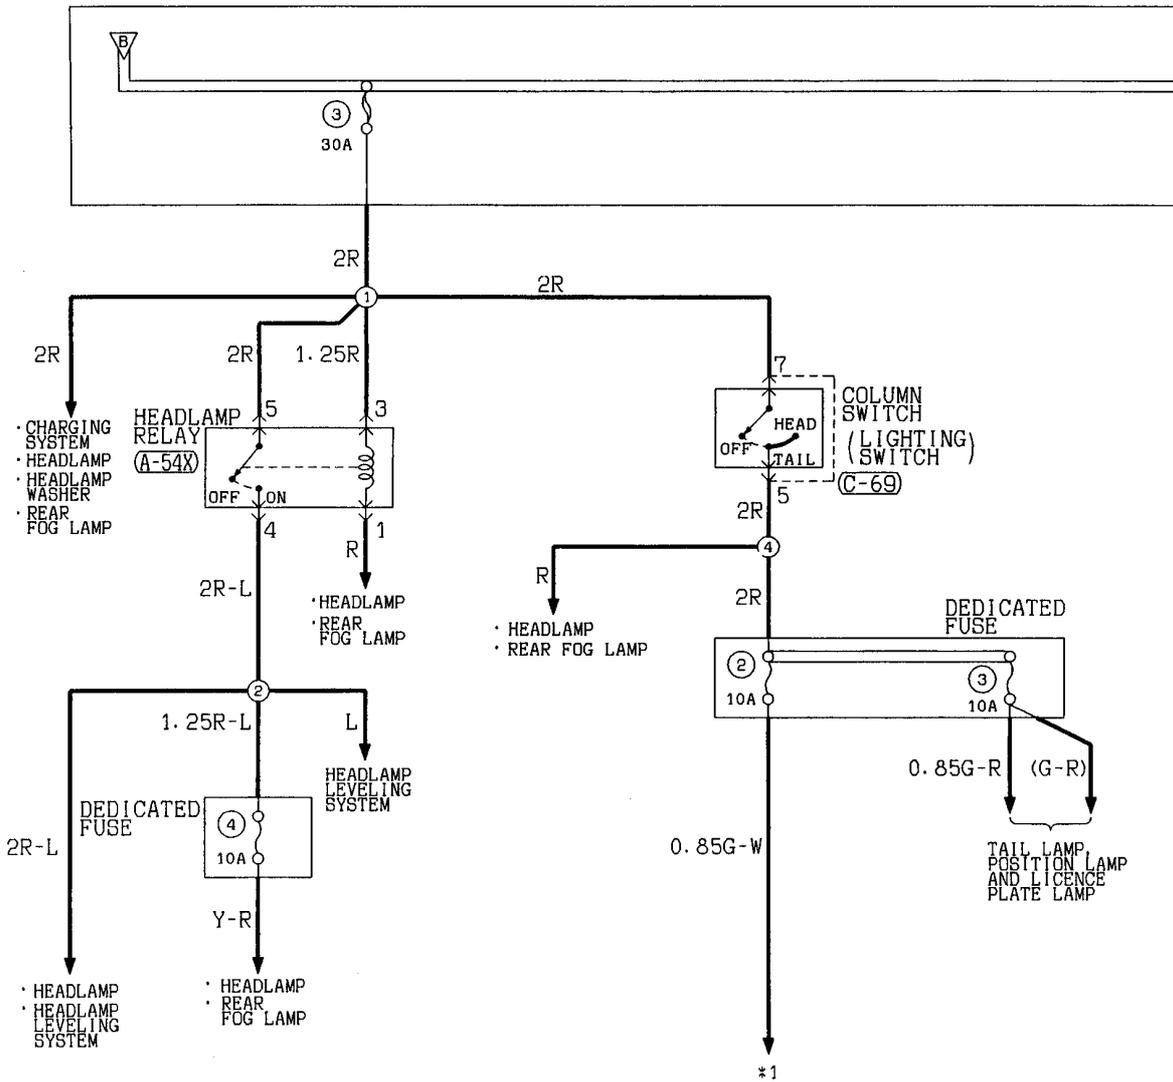

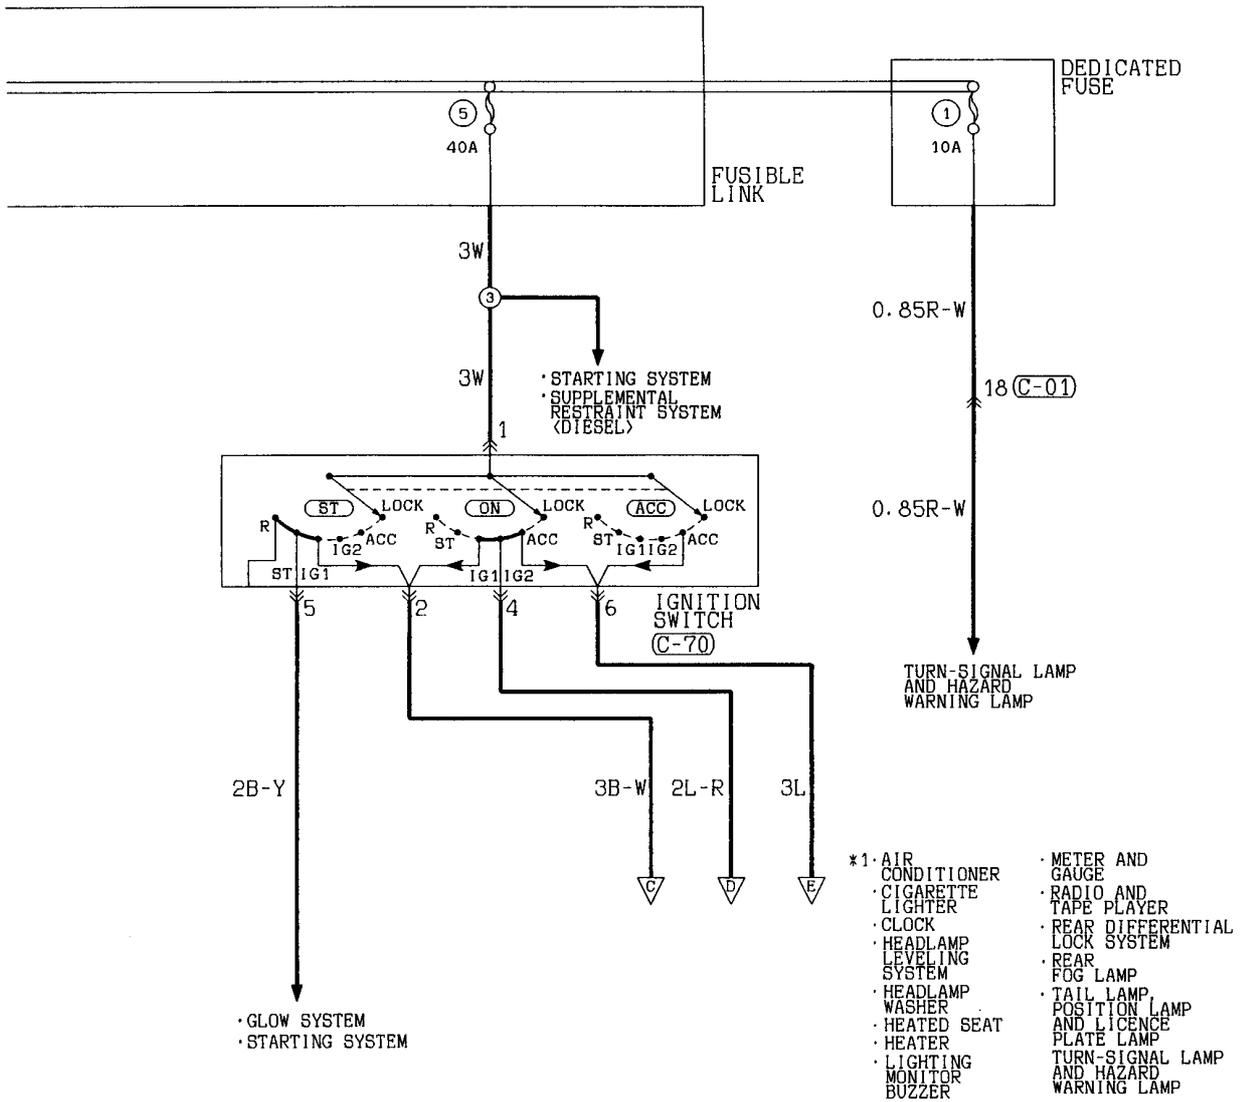

**POWER DISTRIBUTION SYSTEM <R.H. drive vehicles (1998 Models)>
(CONTINUED)**

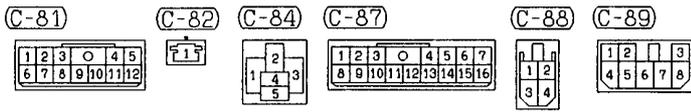
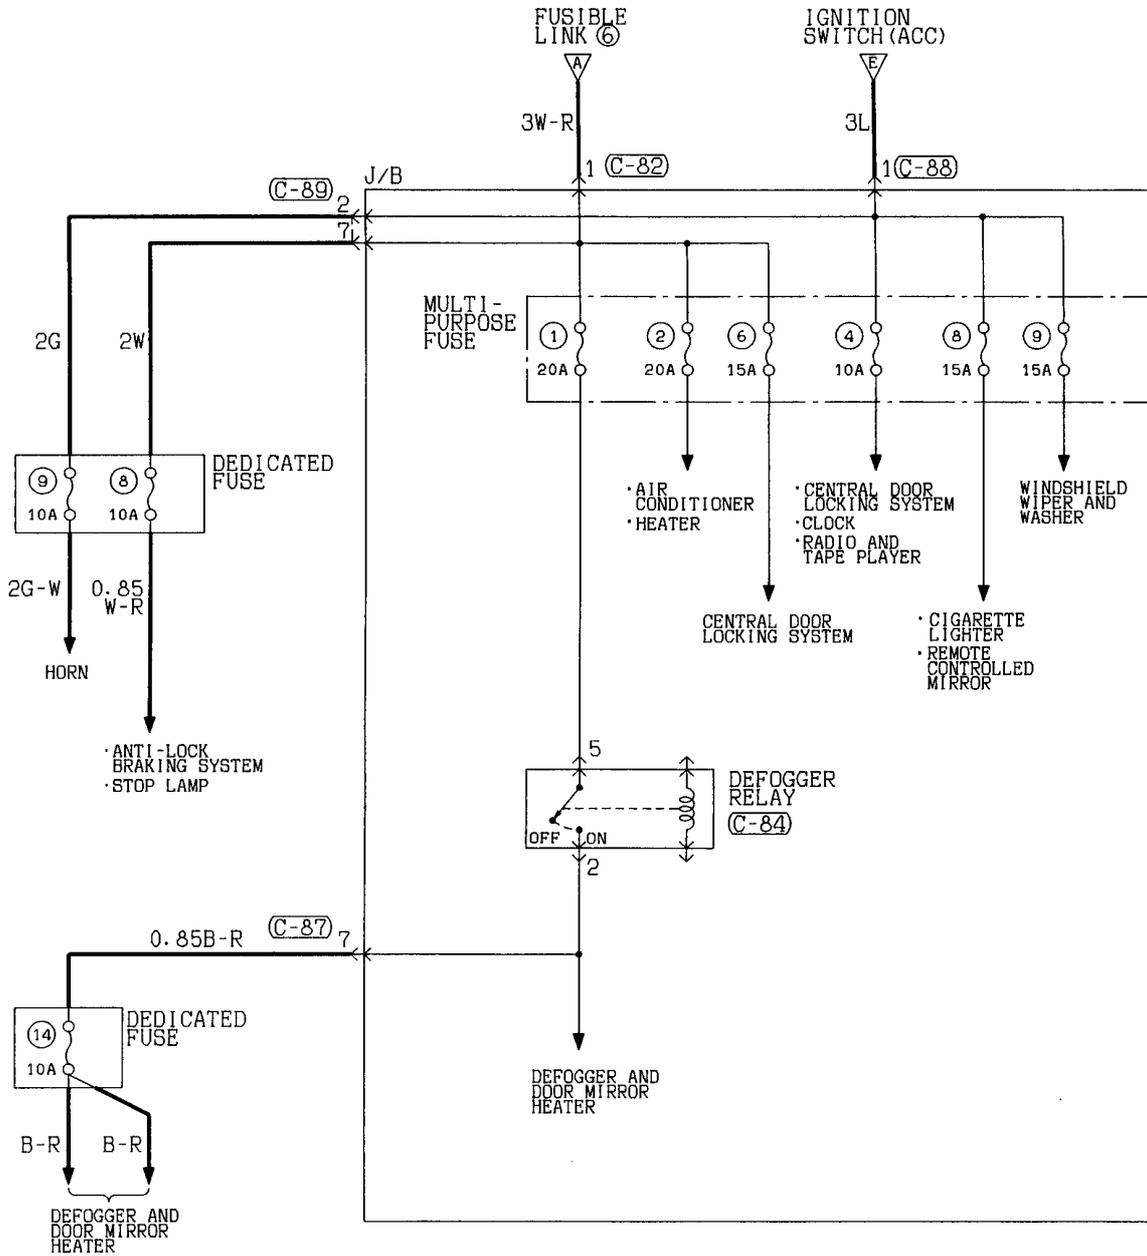


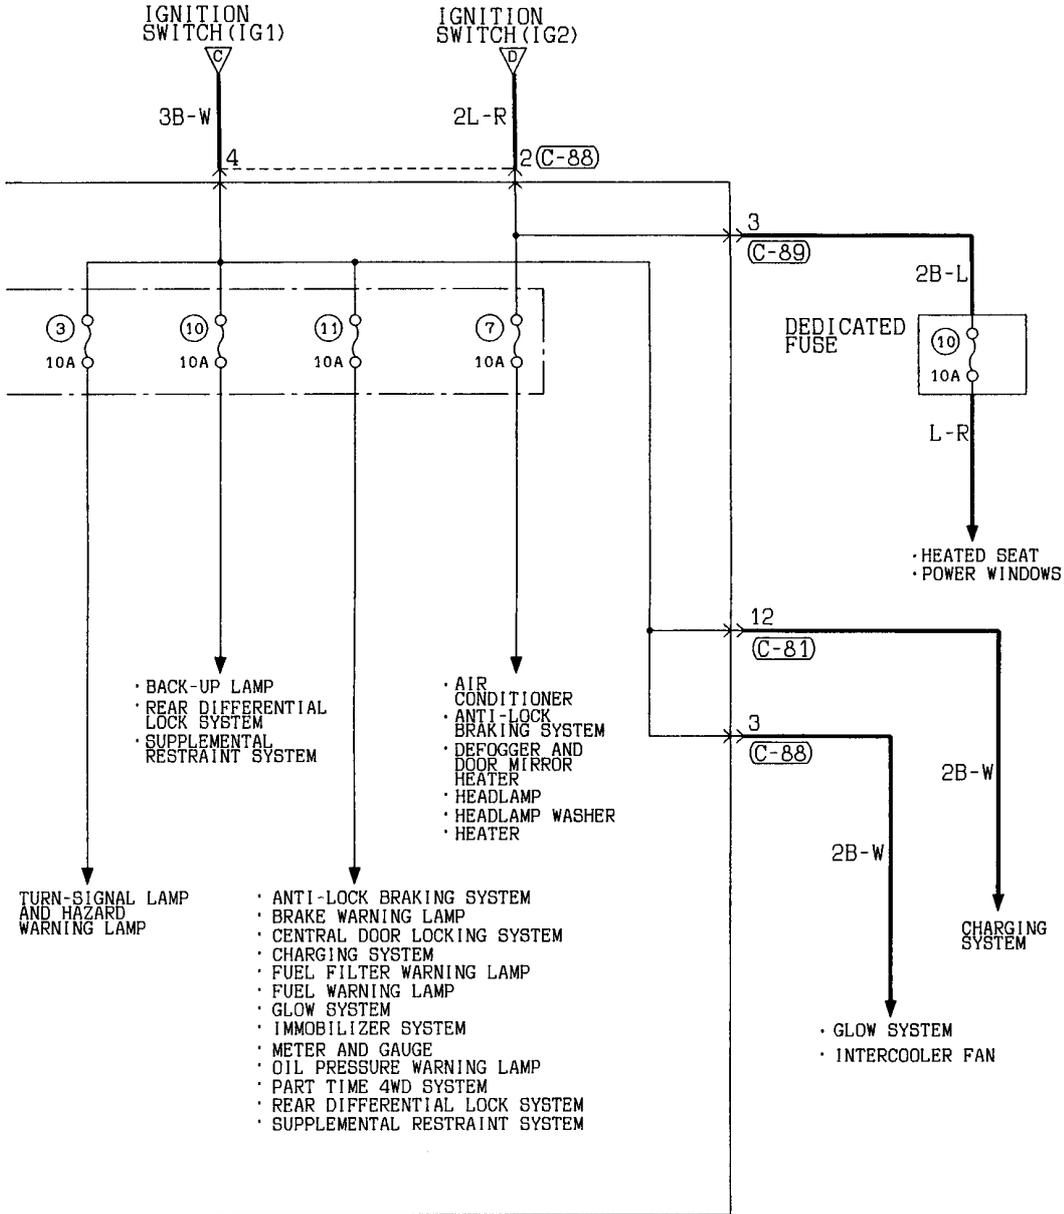

STARTING SYSTEM

90100050329



Petrol-powered vehicles

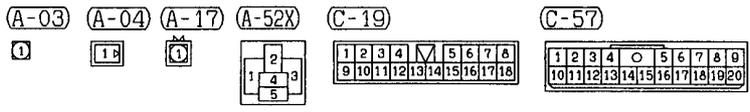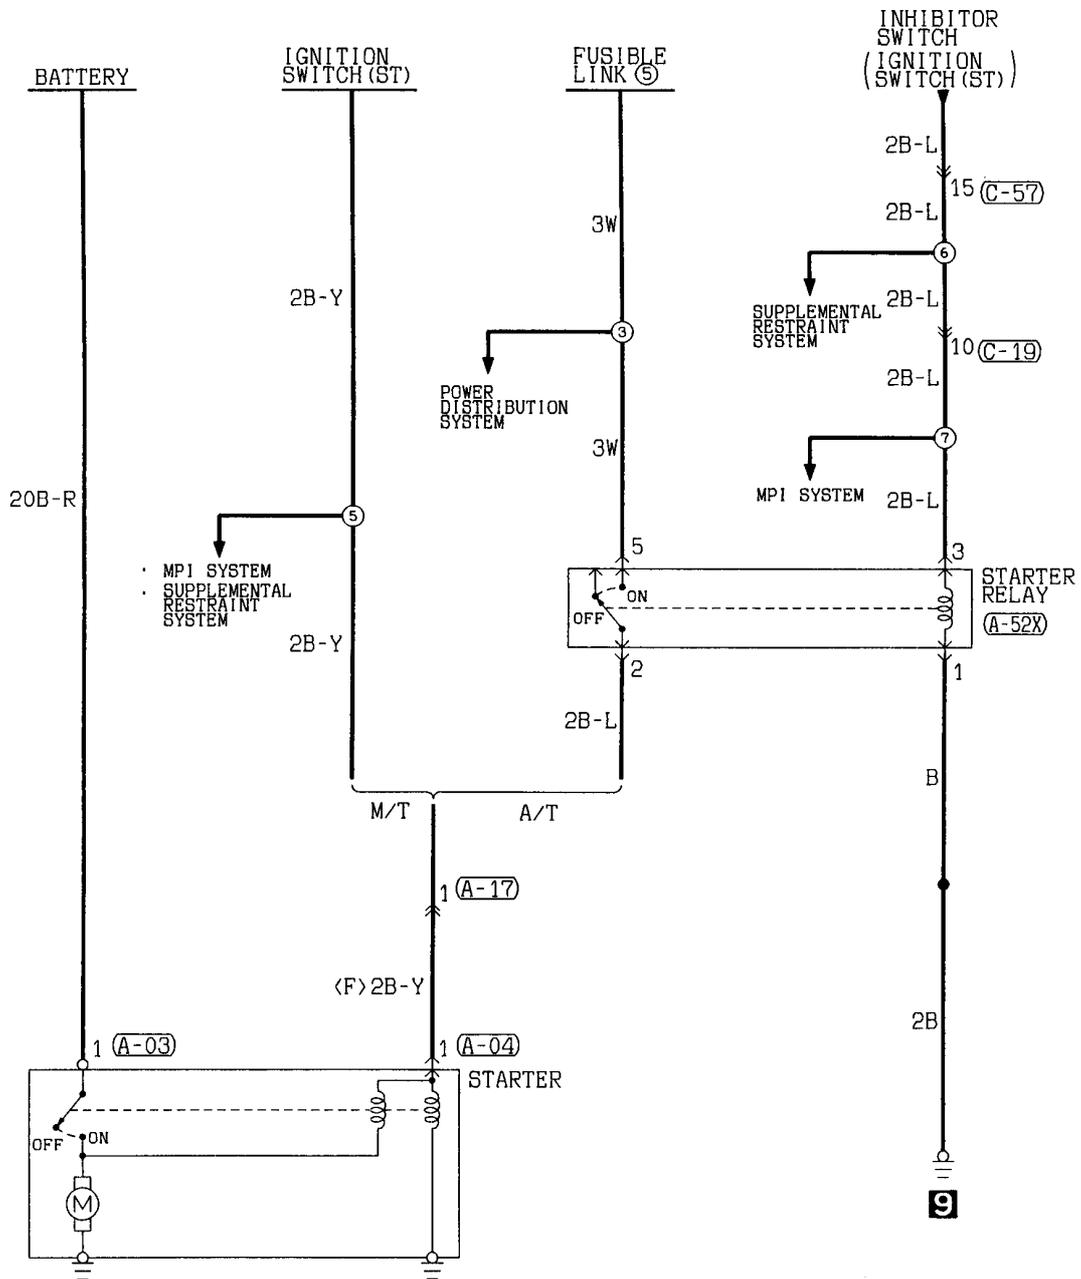

STARTING SYSTEM

90100050336

Diesel-powered vehicles

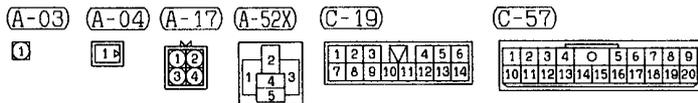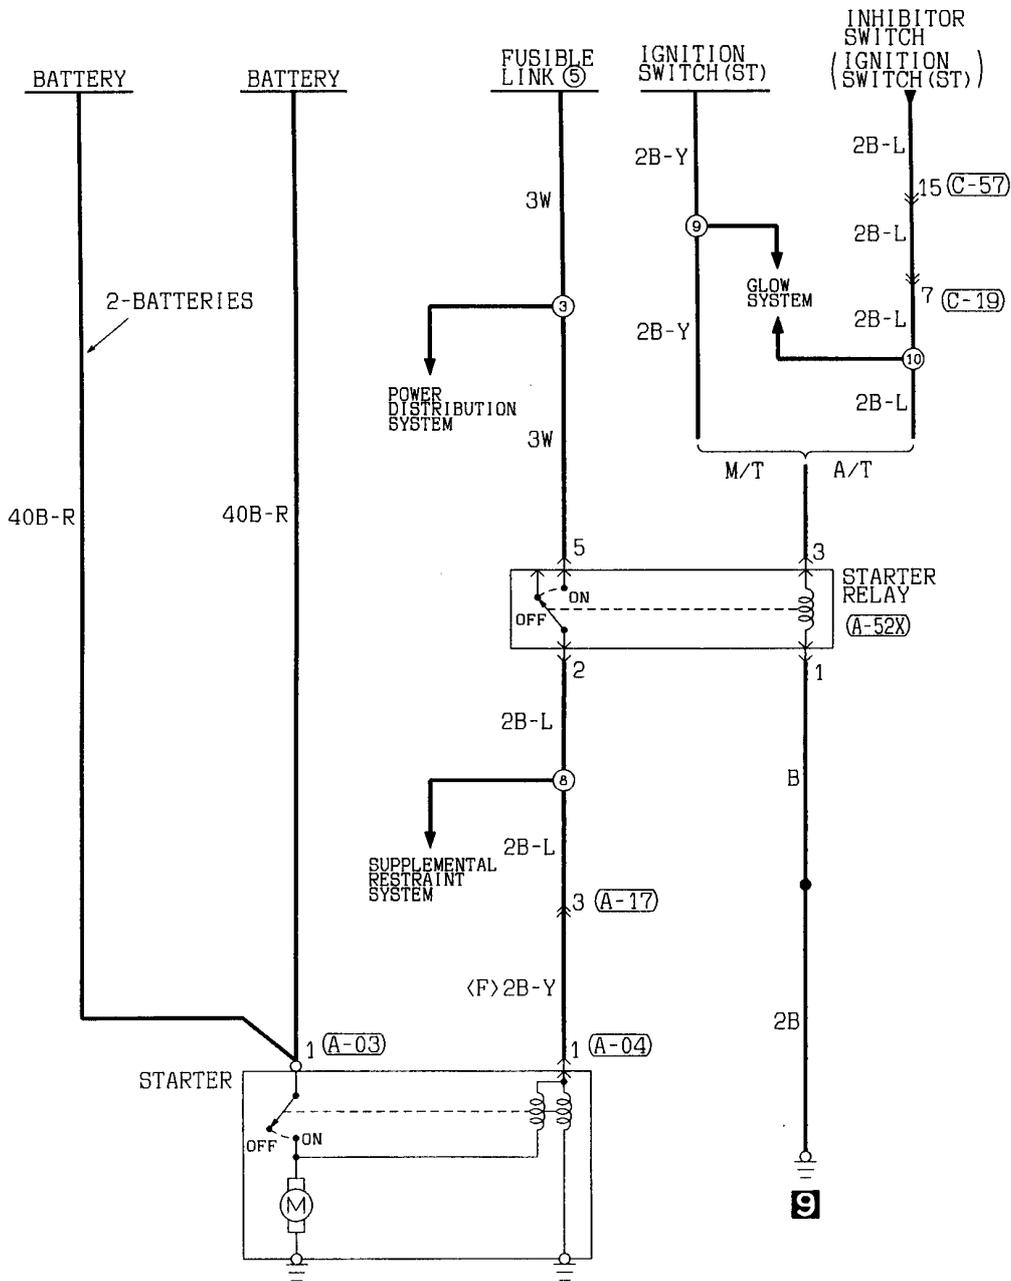

STARTING SYSTEM (See P. 4-40, 41.)

90100050343

OPERATION

For A/T vehicles, when the selector lever is in the P or N position and the ignition switch is turned to ST position, the starter relay turns on. This causes the starter contact (magnet switch) to close, and the starter motor operates.



TROUBLESHOOTING HINTS

1. Starter motor does not turn over at all.
 - Check starter (coil).
 - Check battery terminals for proper contact.
 - Starter relay inspection (petrol-powered vehicles with A/T and diesel-powered vehicle).
 - Check inhibitor switch <A/T>.
2. Starter motor does not stop rotating.
 - Check starter (magnet switch).

IGNITION SYSTEM

90100060322


1997 Models

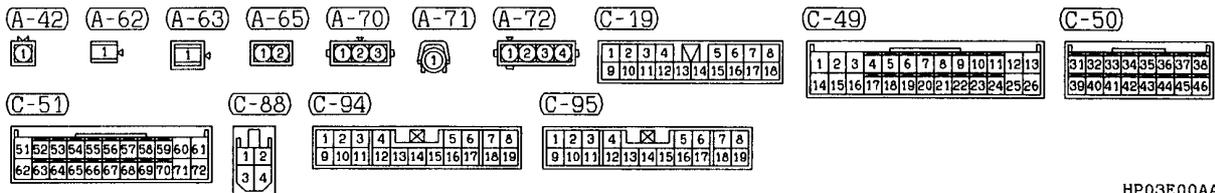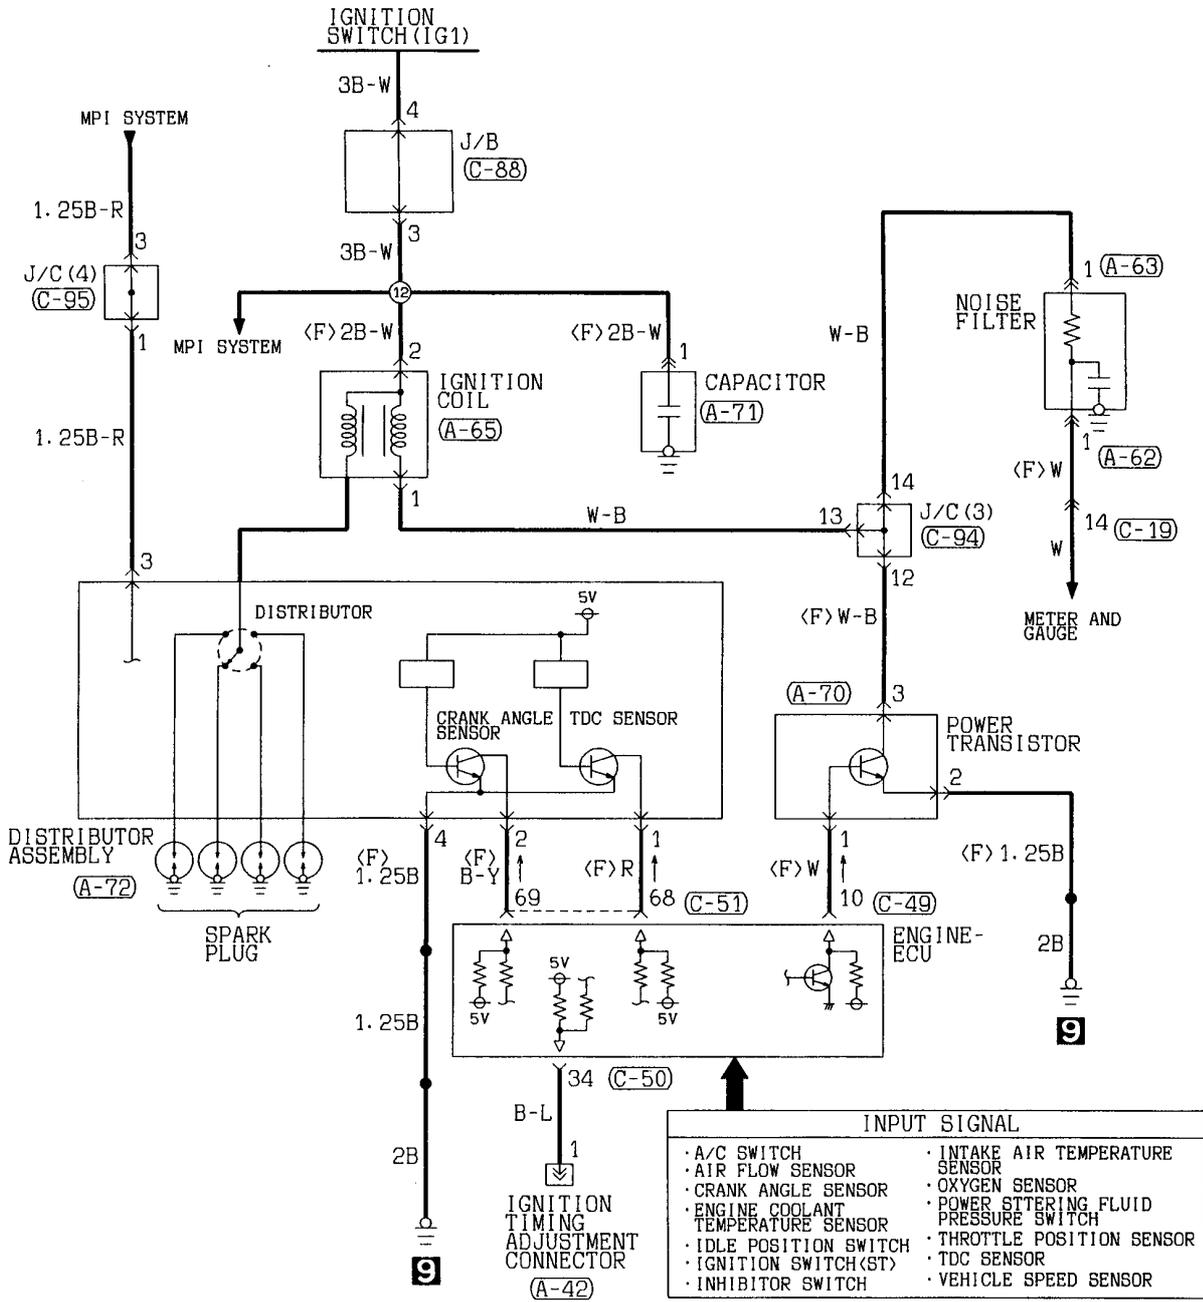


IGNITION SYSTEM

90100060810

1998 Models

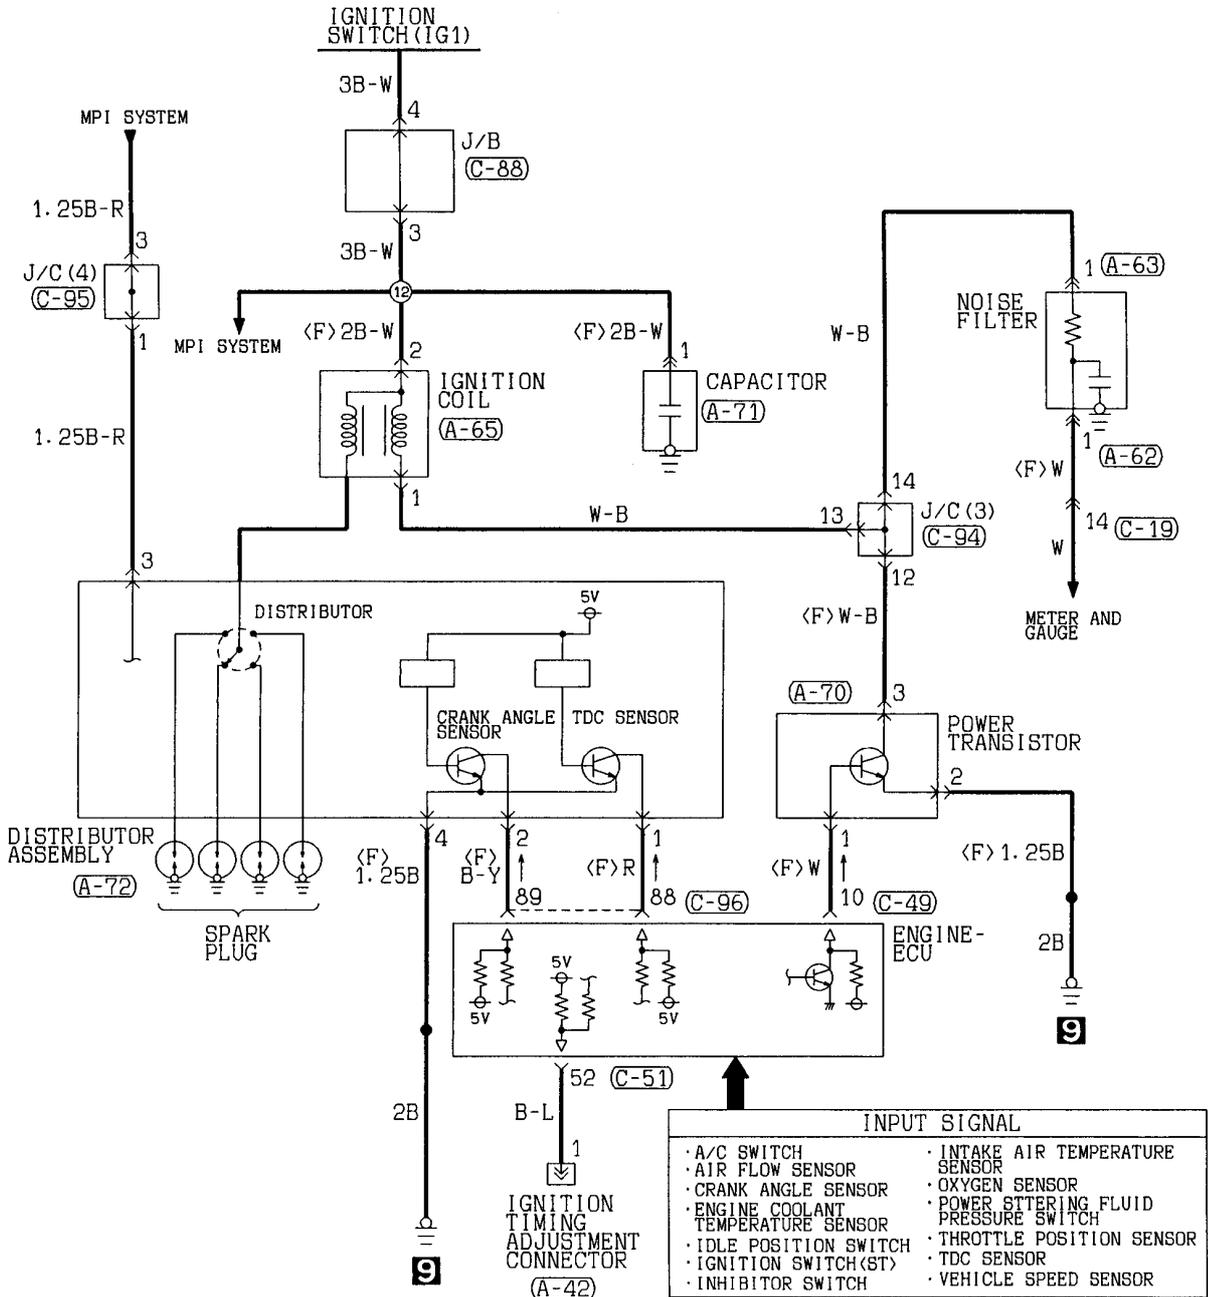

INPUT SIGNAL	
• A/C SWITCH	• INTAKE AIR TEMPERATURE SENSOR
• AIR FLOW SENSOR	• OXYGEN SENSOR
• CRANK ANGLE SENSOR	• POWER STEERING FLUID PRESSURE SWITCH
• ENGINE COOLANT TEMPERATURE SENSOR	• THROTTLE POSITION SENSOR
• IDLE POSITION SWITCH	• TDC SENSOR
• IGNITION SWITCH (ST)	• VEHICLE SPEED SENSOR
• INHIBITOR SWITCH	

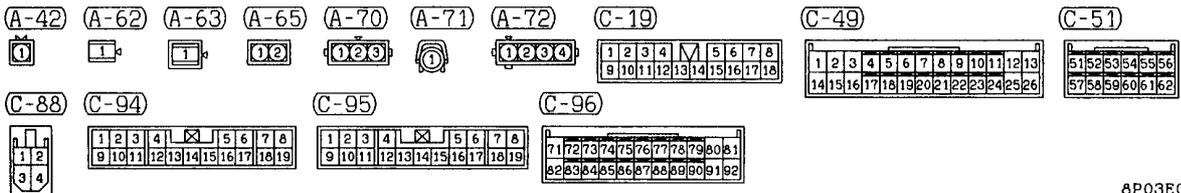

CHARGING SYSTEM (See P. 4-46, 47.)

90100070332

OPERATION

- When the ignition switch is turned to the ON position, current flows the alternator L terminal to the field coil and, at the same time, the charge warning lamp illuminates.

When engine is started and after engine has started

- When the engine is started, the charge warning lamp goes out because of the charging voltage begin applied to the alternator L terminal.
- The battery voltage being applied to the alternator S terminal is monitored by the voltage regulator. Therefore, the amount of electricity produced by the alternator is controlled by allowing and cutting off the current flowing to the field coil.
- The alternator B terminal supplies power to each load.

Remark

- The alternator relay or auto choke relay is provided to back up the flow of current to the field coil when the charge warning lamp is open.



TROUBLESHOOTING HINTS

1. Charging indicator lamp does not illuminate when the ignition switch is turned to ON position, before the engine starts.
 - Check multi-purpose fuse No. (11)
 - Check the bulb.
2. Charging indicator lamp fails to switch off once the engine starts.
 - Check voltage regulator of alternator.
3. Discharged or overcharged battery.
 - Check voltage regulator of alternator.
4. Charge warning lamp illuminates dimly.
 - Check combination meter diode (for short).

CHARGING SYSTEM

90100070318



Petrol-powered vehicles

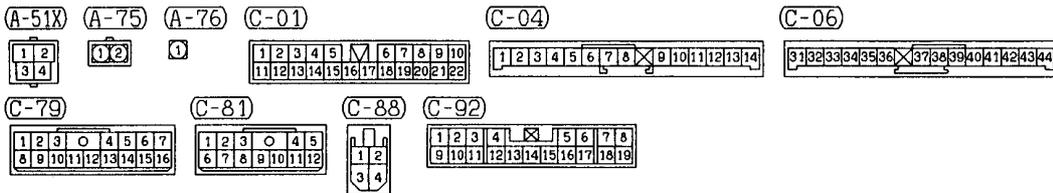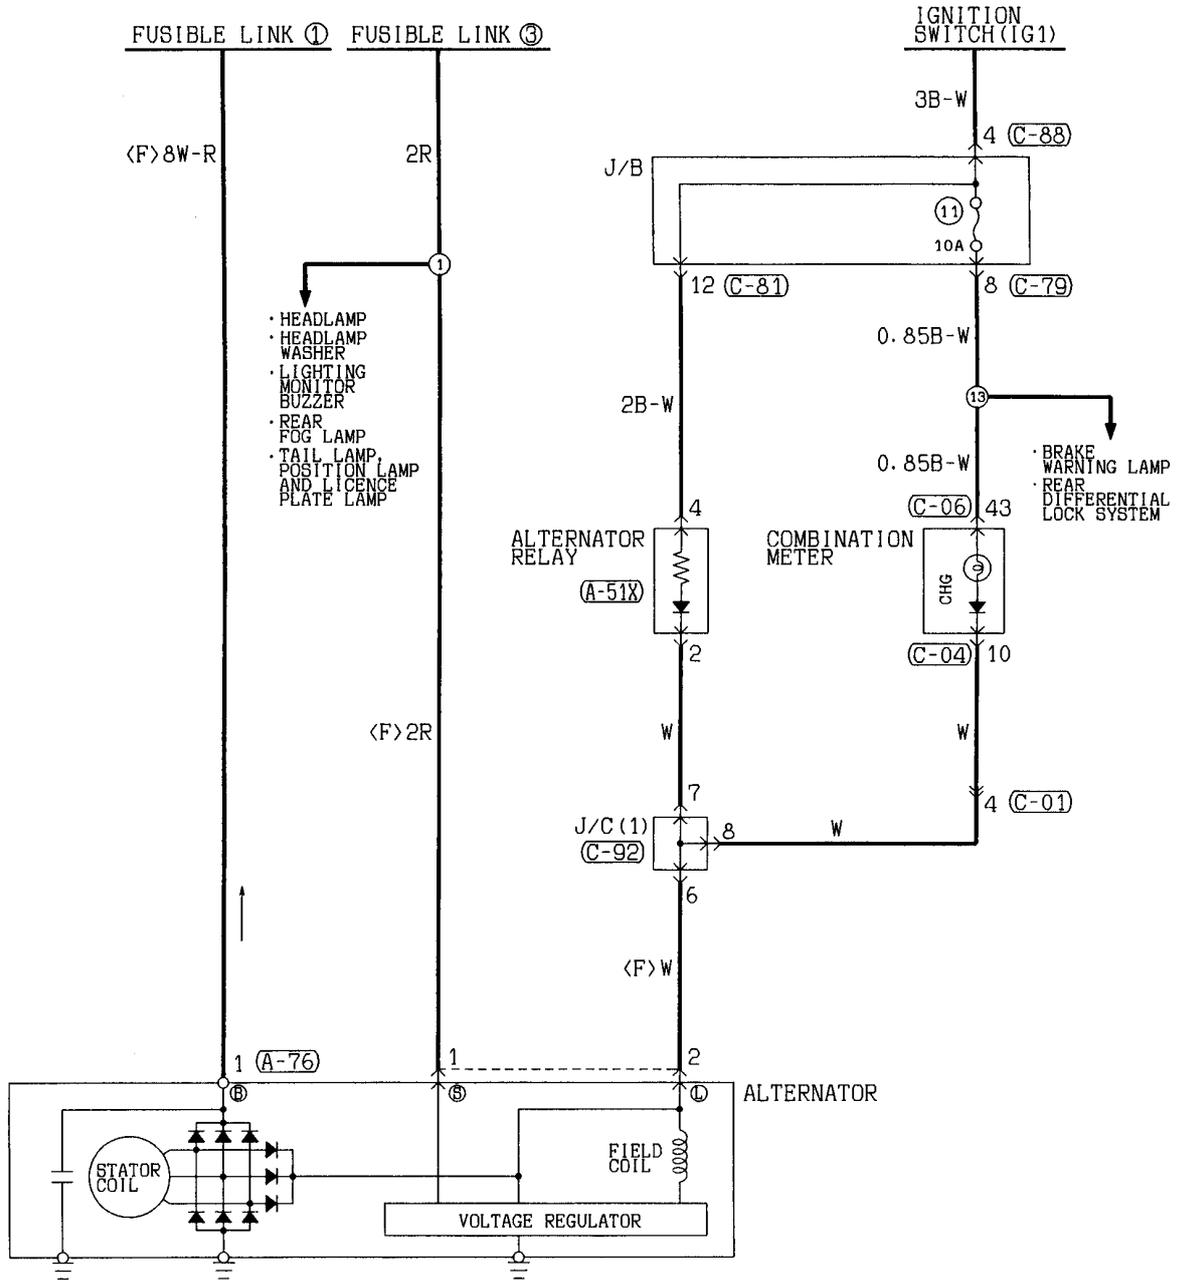

CHARGING SYSTEM


90100070325

Diesel-powered vehicles

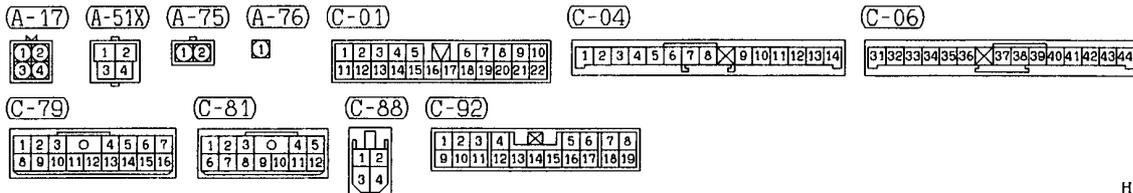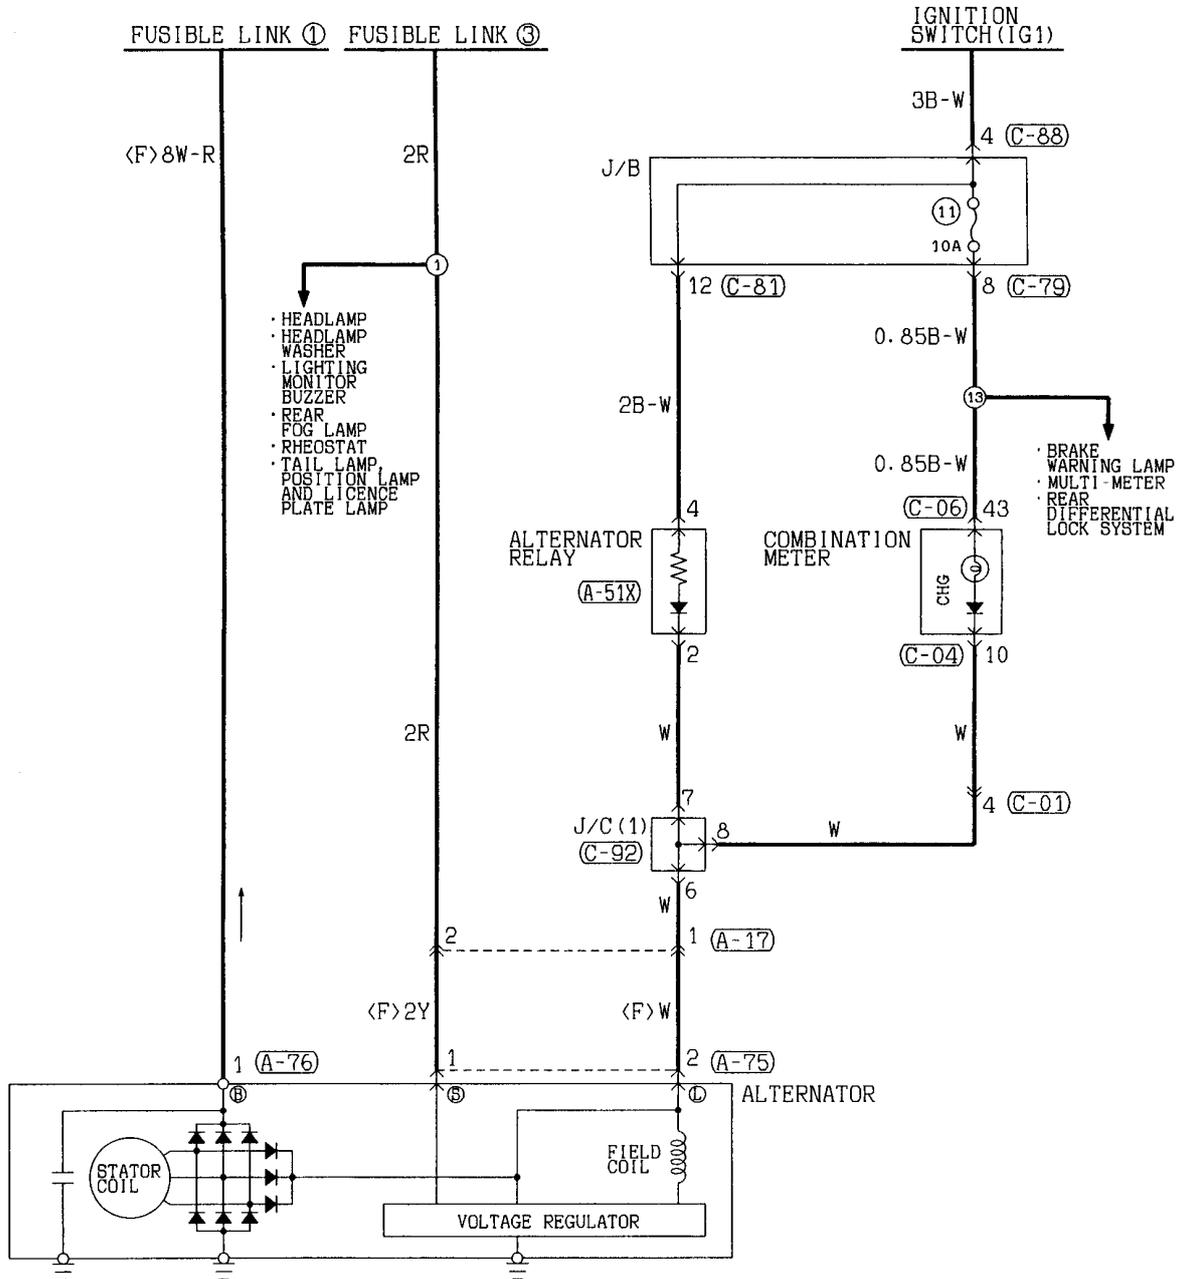


GLOW SYSTEM

9010090031

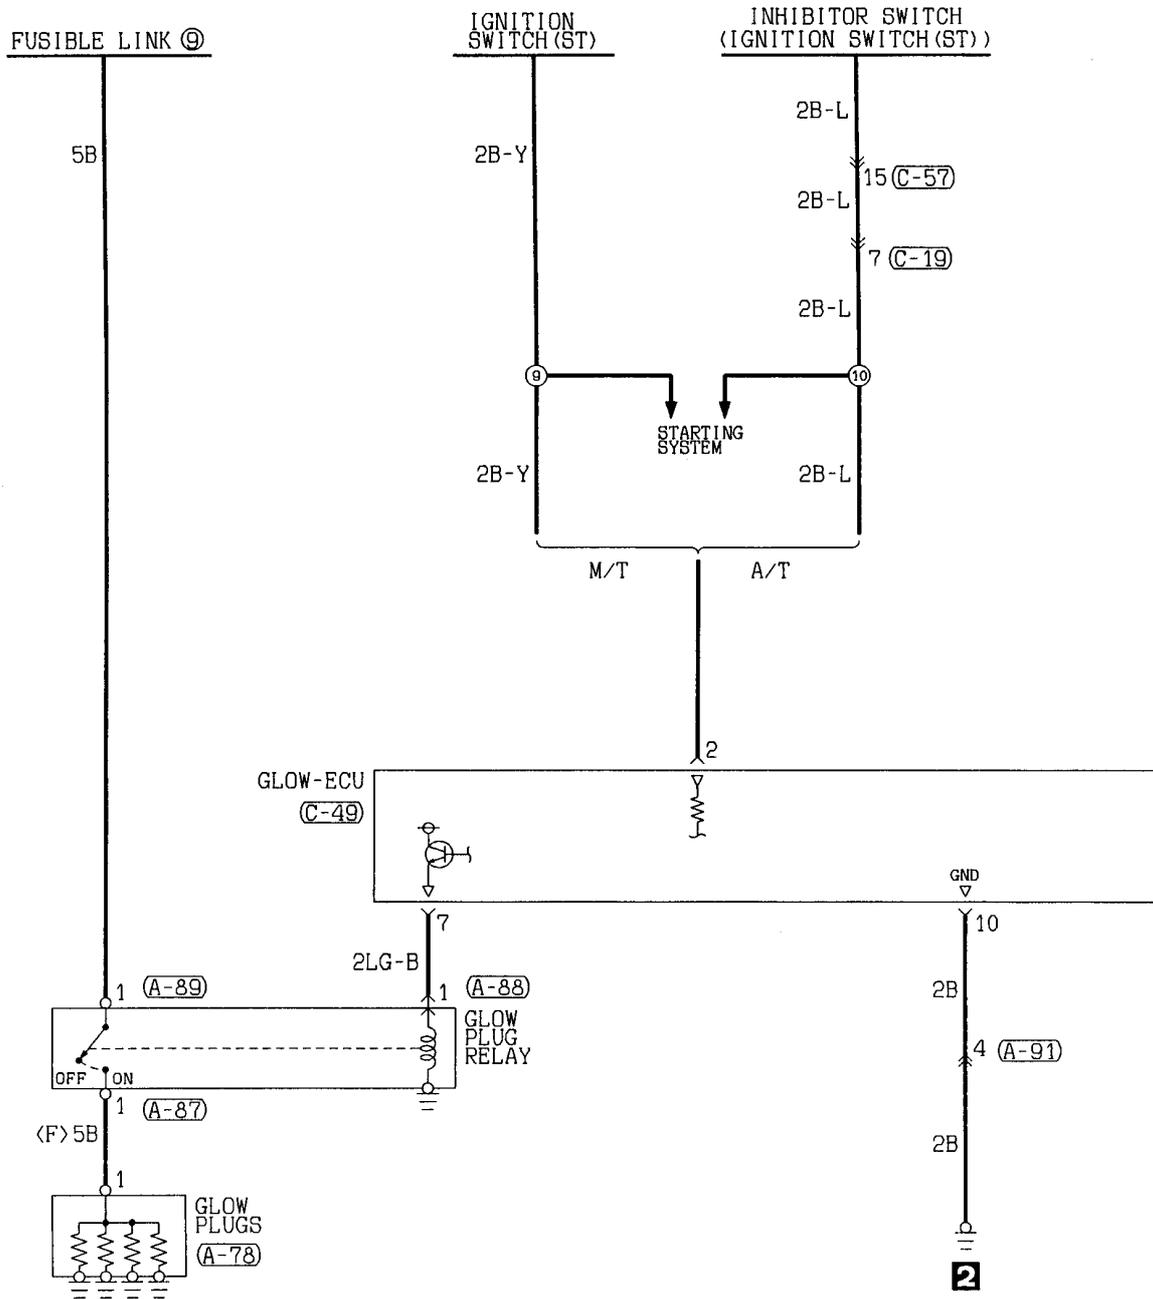

- (A-78) (A-87) (A-88) (A-89) (A-91) (A-92) (A-97) (C-01) (C-04)
- | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |



1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----
- (C-92)
- | | | | | | | | |
|---|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |

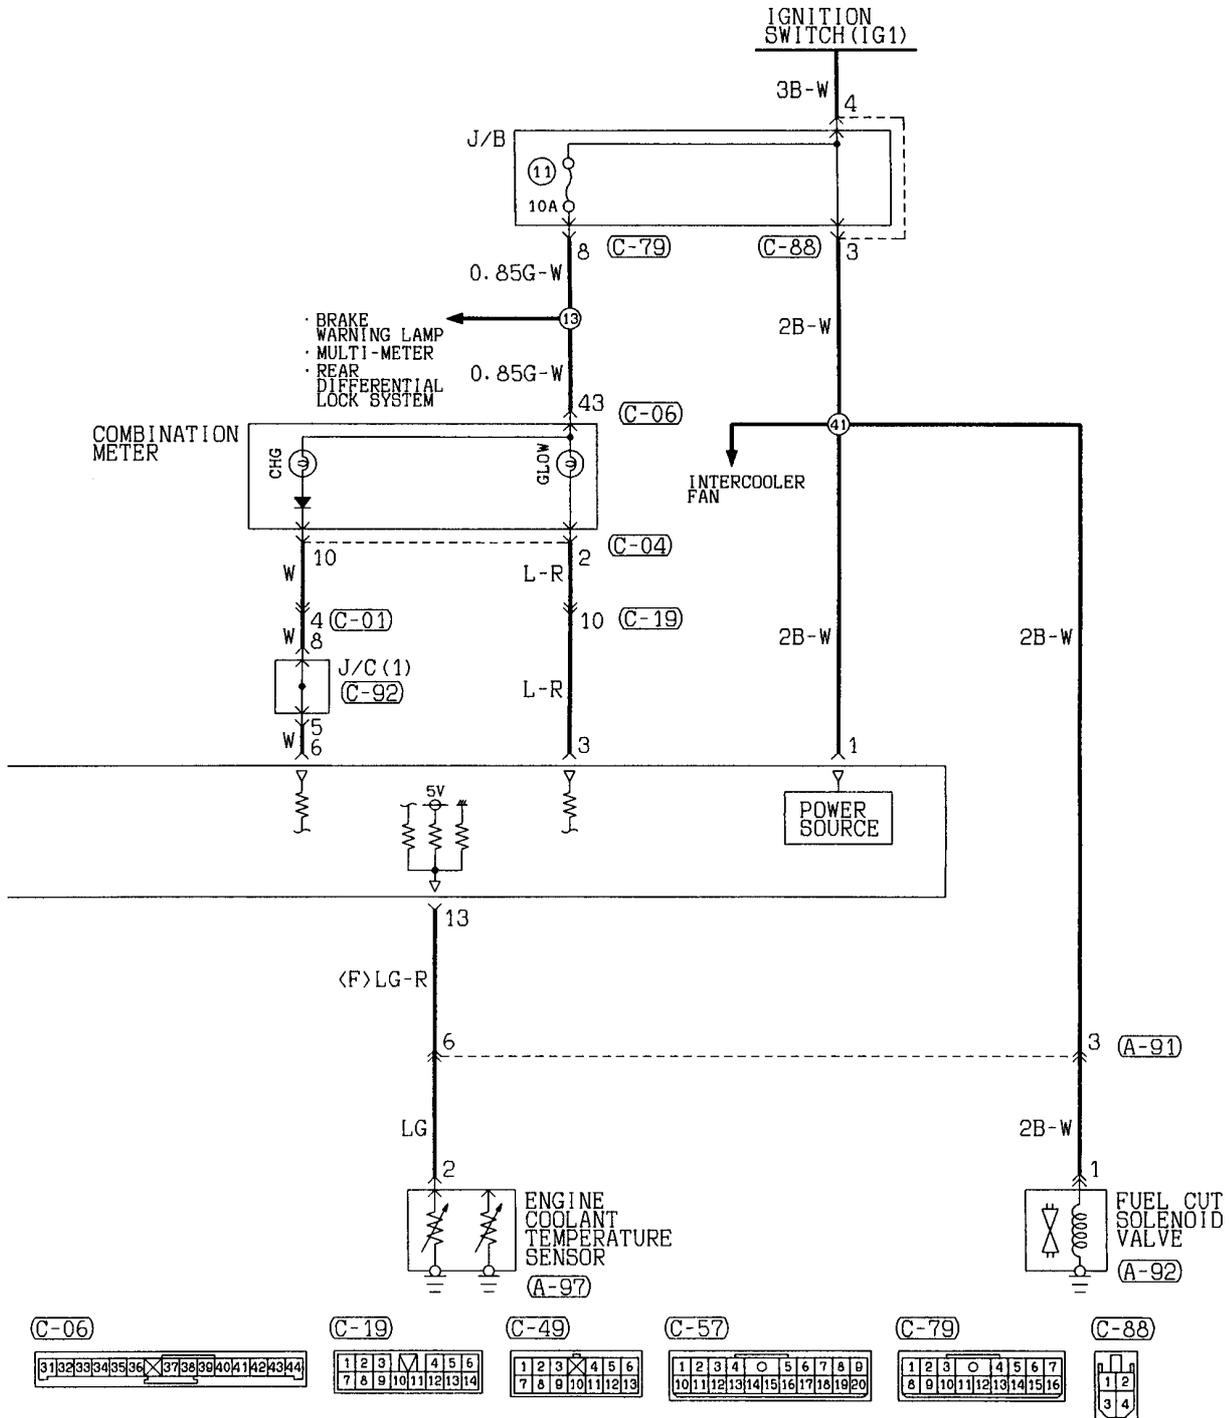


MPI SYSTEM

90100080526

1997 Models

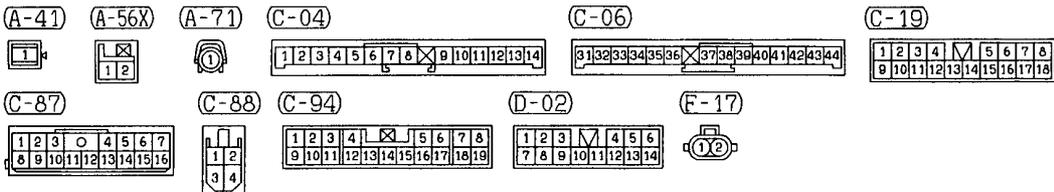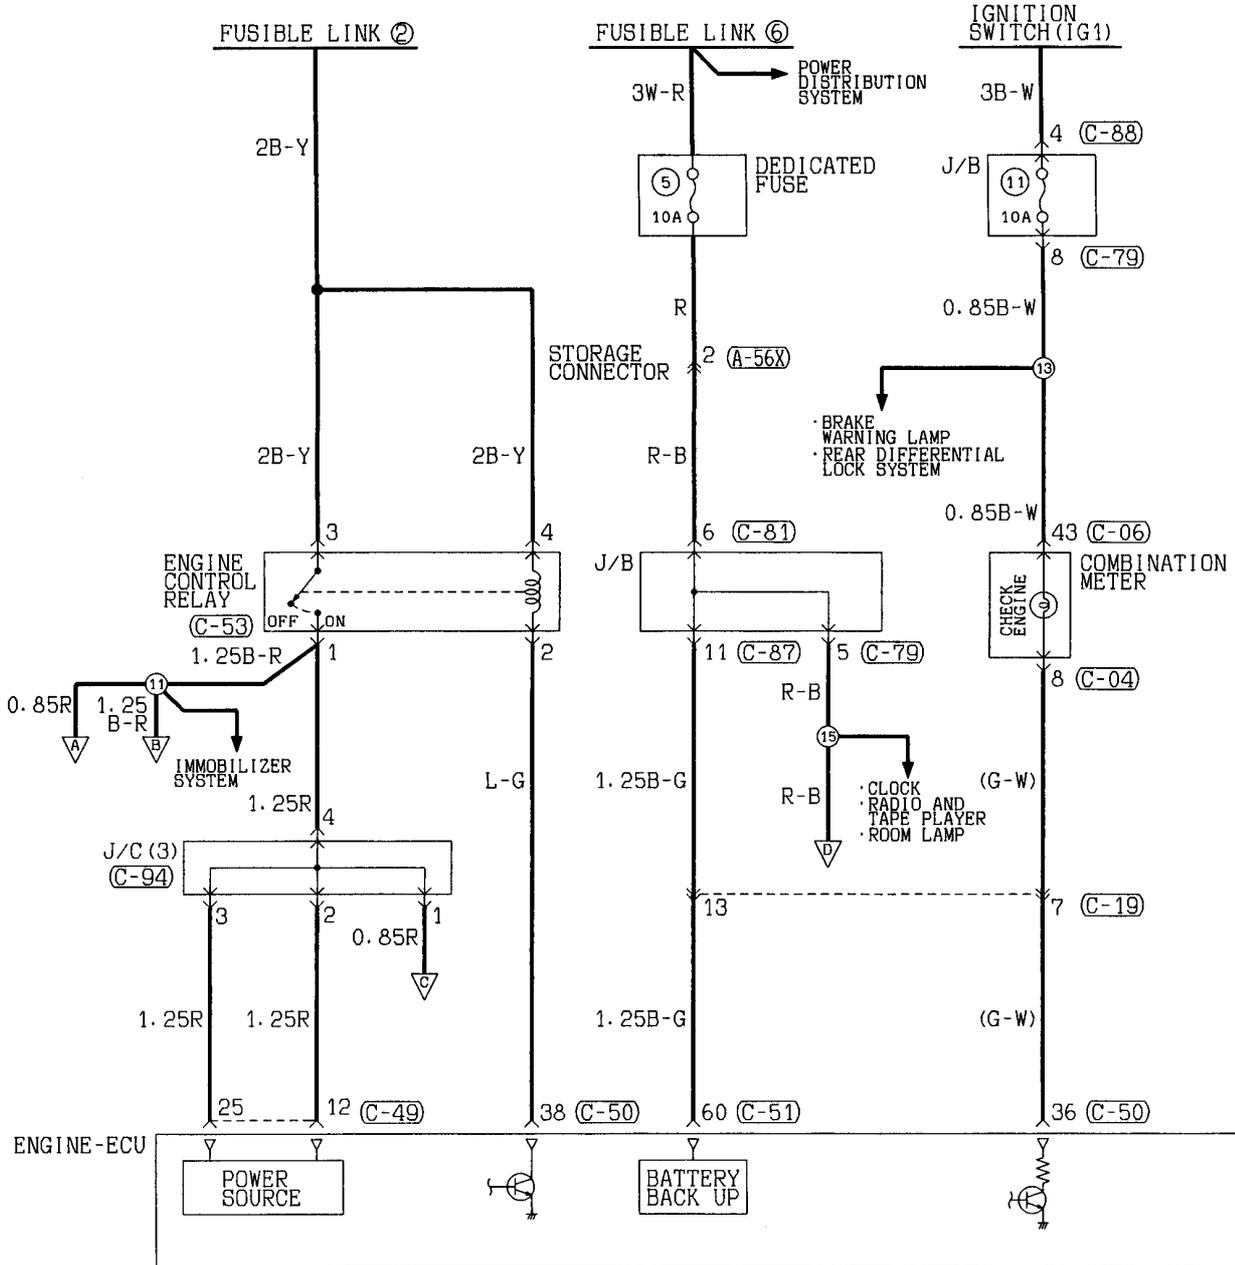


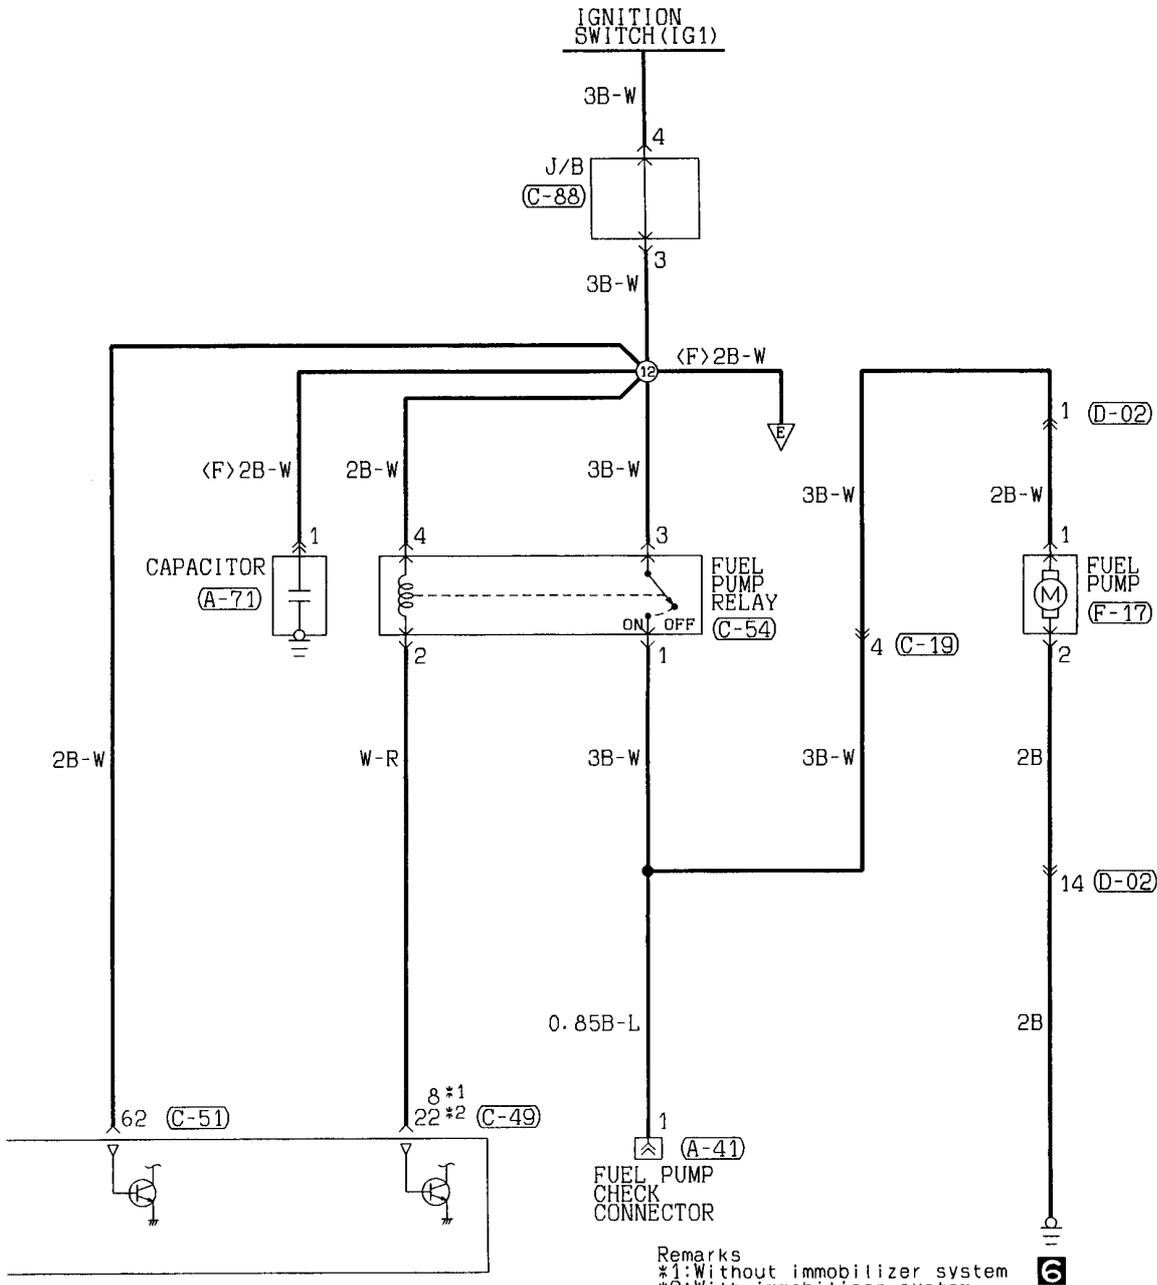

Remarks
 *1: Without immobilizer system
 *2: With immobilizer system

(C-49)	(C-50)	(C-51)	(C-53)	(C-54)	(C-79)	(C-81)																																																																																																				
<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr> <tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	<table border="1"> <tr><td>31</td><td>32</td><td>33</td><td>34</td><td>35</td><td>36</td><td>37</td><td>38</td></tr> <tr><td>39</td><td>40</td><td>41</td><td>42</td><td>43</td><td>44</td><td>45</td><td>46</td></tr> </table>	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	<table border="1"> <tr><td>51</td><td>52</td><td>53</td><td>54</td><td>55</td><td>56</td><td>57</td><td>58</td><td>59</td><td>60</td><td>61</td></tr> <tr><td>62</td><td>63</td><td>64</td><td>65</td><td>66</td><td>67</td><td>68</td><td>69</td><td>70</td><td>71</td><td>72</td></tr> </table>	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td></tr> <tr><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td></tr> <tr><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12
1	2	3	4	5	6	7	8	9	10	11	12	13																																																																																														
14	15	16	17	18	19	20	21	22	23	24	25	26																																																																																														
31	32	33	34	35	36	37	38																																																																																																			
39	40	41	42	43	44	45	46																																																																																																			
51	52	53	54	55	56	57	58	59	60	61																																																																																																
62	63	64	65	66	67	68	69	70	71	72																																																																																																
1	2																																																																																																									
3	4																																																																																																									
1	2																																																																																																									
3	4																																																																																																									
1	2	3	4	5	6	7																																																																																																				
8	9	10	11	12	13	14	15	16																																																																																																		
1	2	3	4	5																																																																																																						
6	7	8	9	10	11	12																																																																																																				

MPI SYSTEM <1997 Models> (CONTINUED)

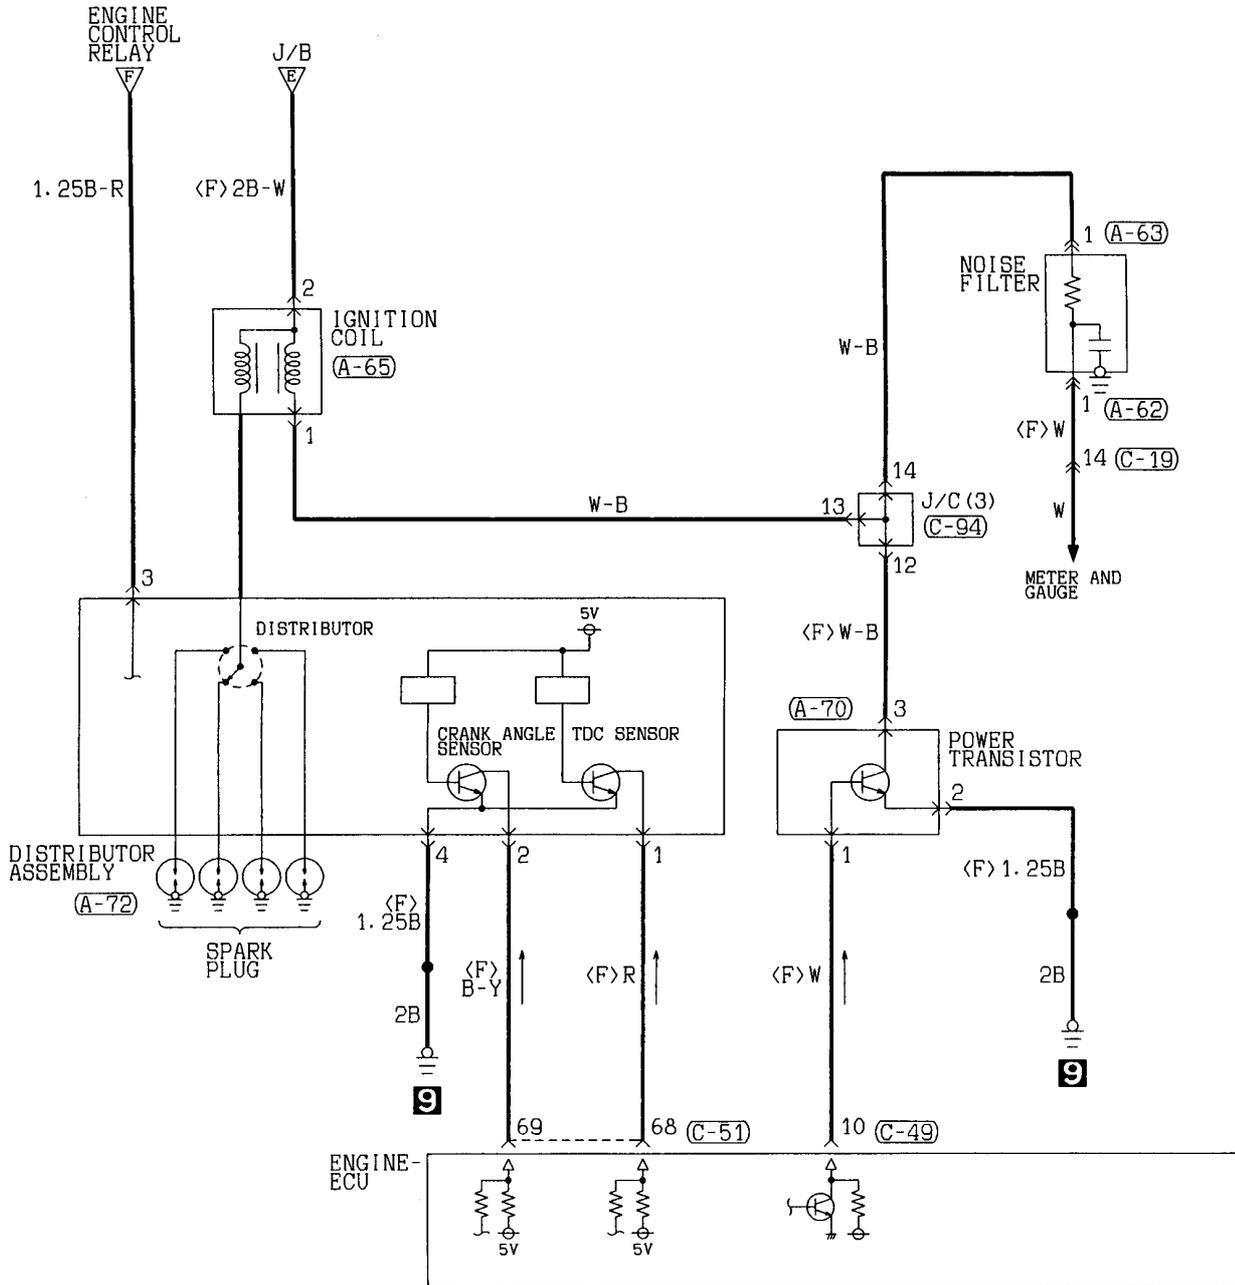

- (A-62)

1

- (A-63)

1

- (A-65)

02

- (A-70)

023

- (A-72)


0234

- (B-01)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22
- (C-01)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22
- (C-19)

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

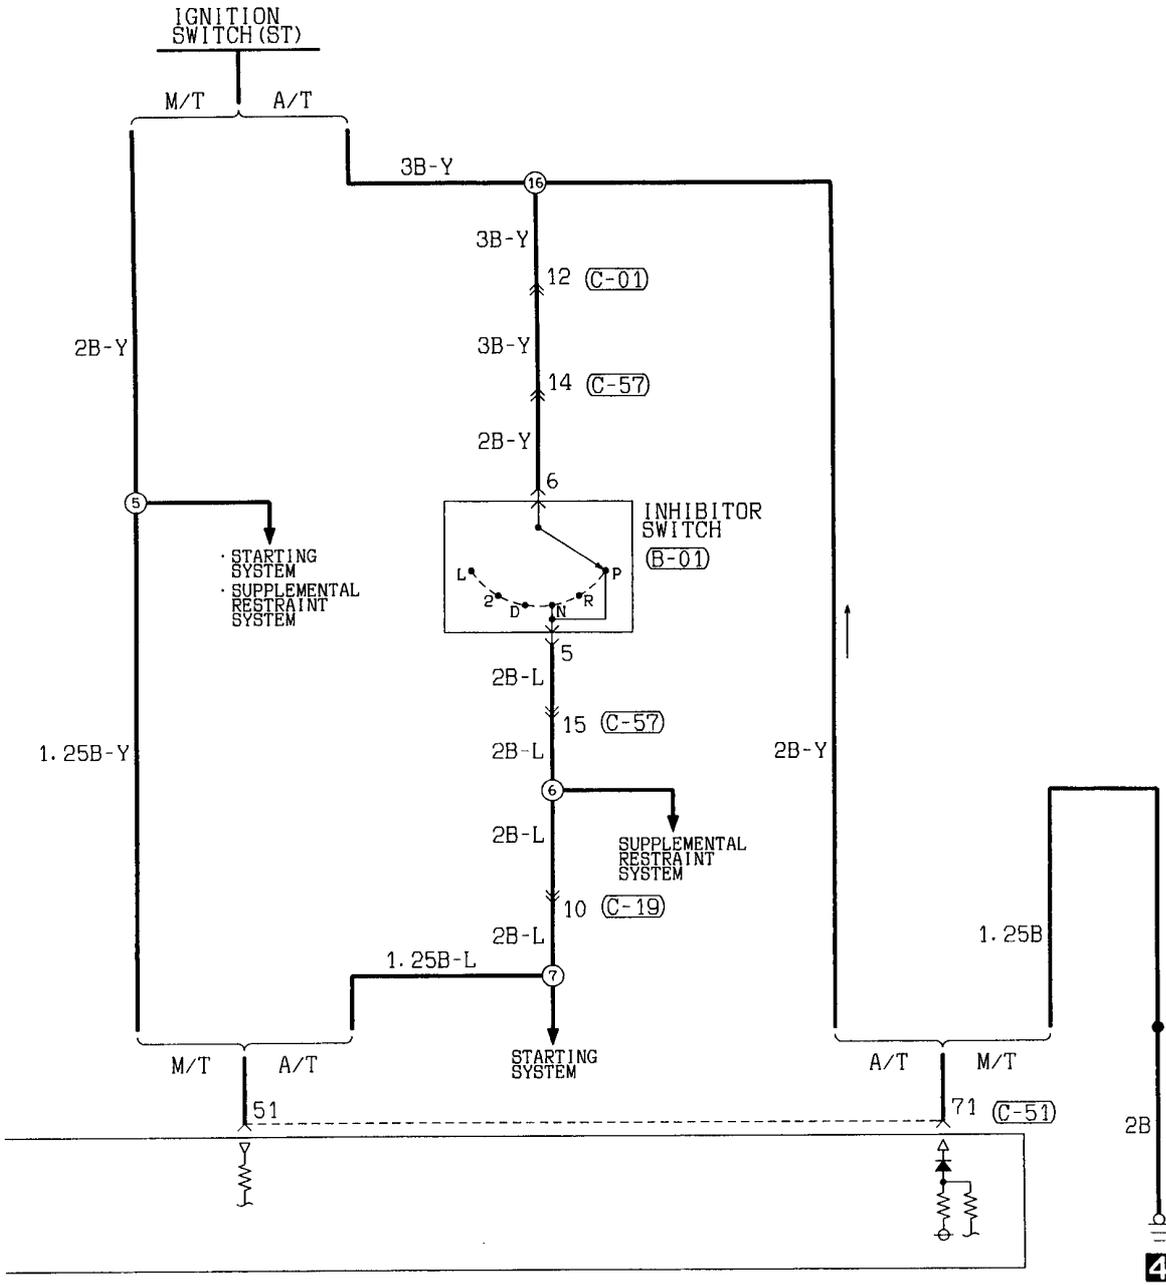

(C-49)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-51)

51	52	53	54	55	56	57	58	59	60	61
62	63	64	65	66	67	68	69	70	71	72


(C-57)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20


(C-94)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

MPI SYSTEM <1997 Models> (CONTINUED)

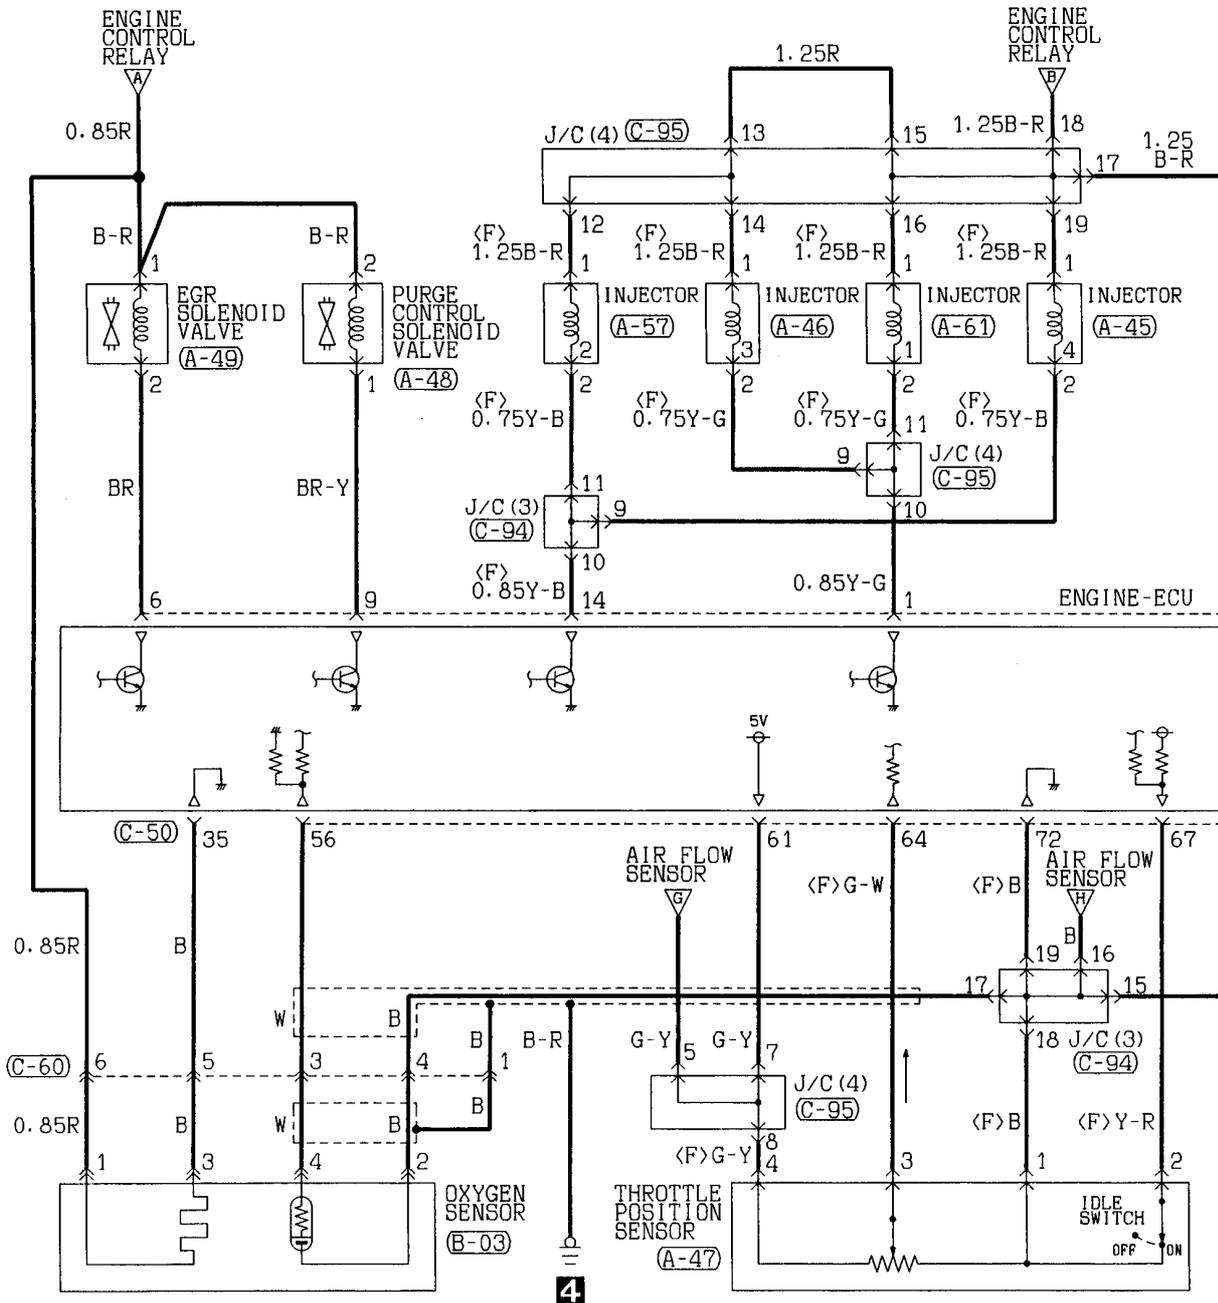

- (A-42) (A-45) (A-46) (A-47) (A-48) (A-49) (A-50) (A-57) (A-61) (A-64) (A-74) (A-77) (B-03)
- ① (A) (A) ①②③④ ①② ①② ①②③④⑤⑥ ①② (A) (A) (A) ▶ ①②③④⑤⑥⑦⑧ ①②③④
- (C-94) (C-95)
- ①②③④⑤⑥⑦⑧ ①②③④⑤⑥⑦⑧ ①②③④⑤⑥⑦⑧⑨⑩⑪⑫⑬⑭⑮⑯⑰⑱

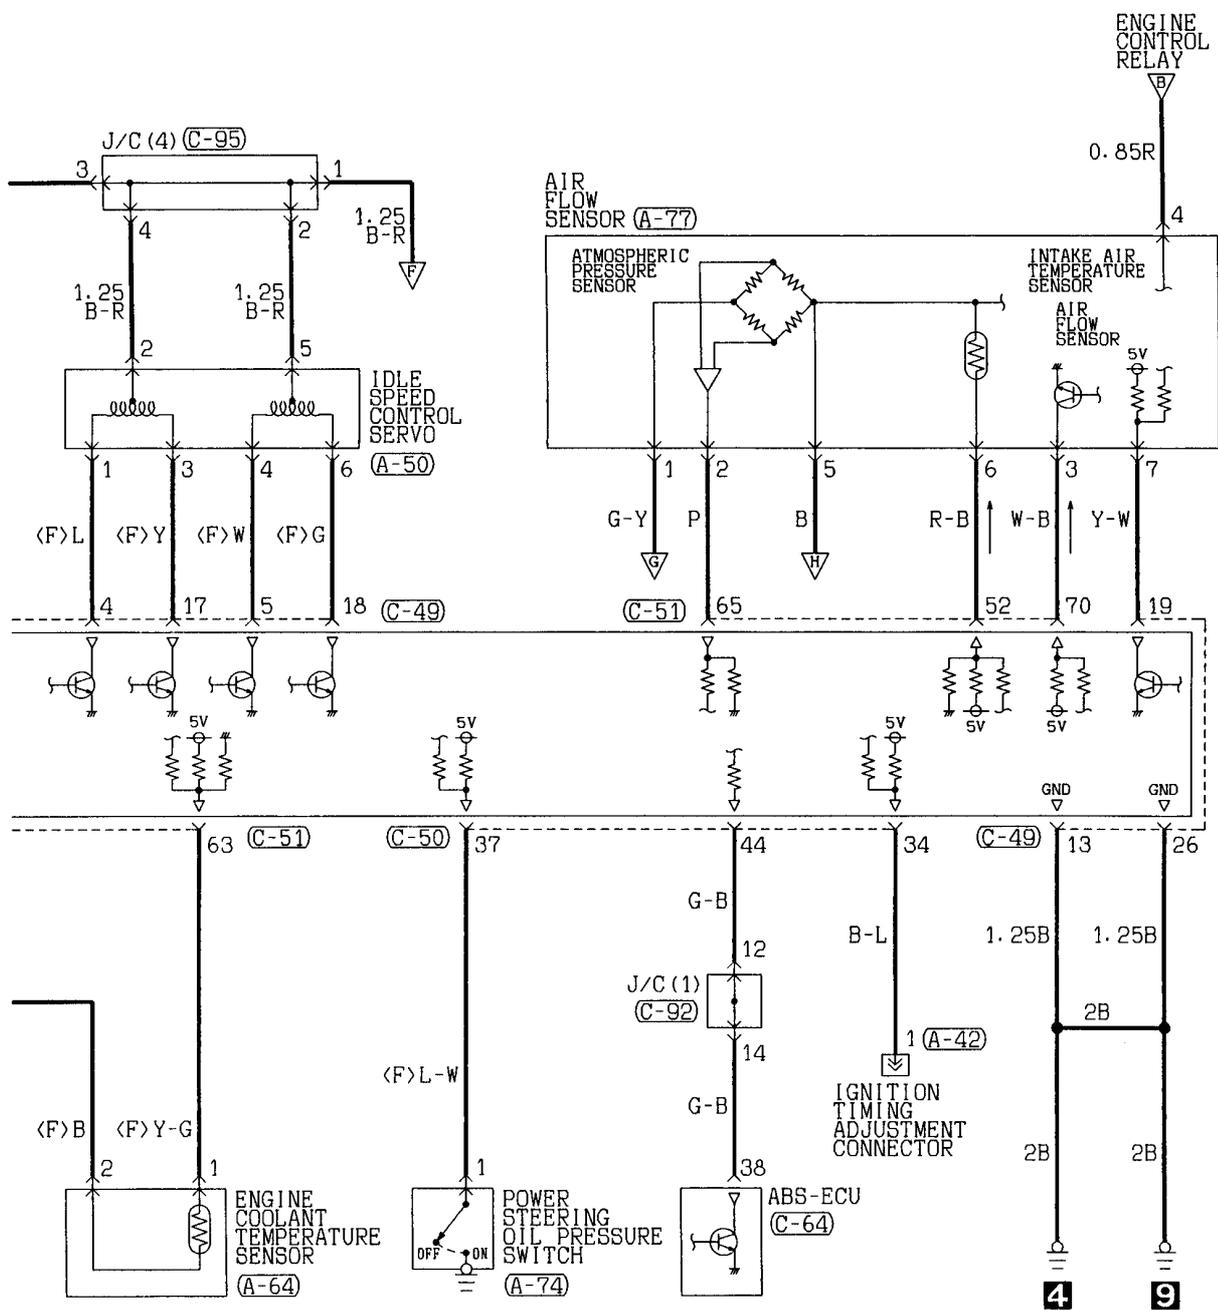

(C-49)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-50)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

(C-51)

51	52	53	54	55	56	57	58	59	60	61
62	63	64	65	66	67	68	69	70	71	72

(C-60)

1	0	2	
3	4	5	6

(C-64)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52


(C-92)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

4

9

MPI SYSTEM <1997 Models> (CONTINUED)

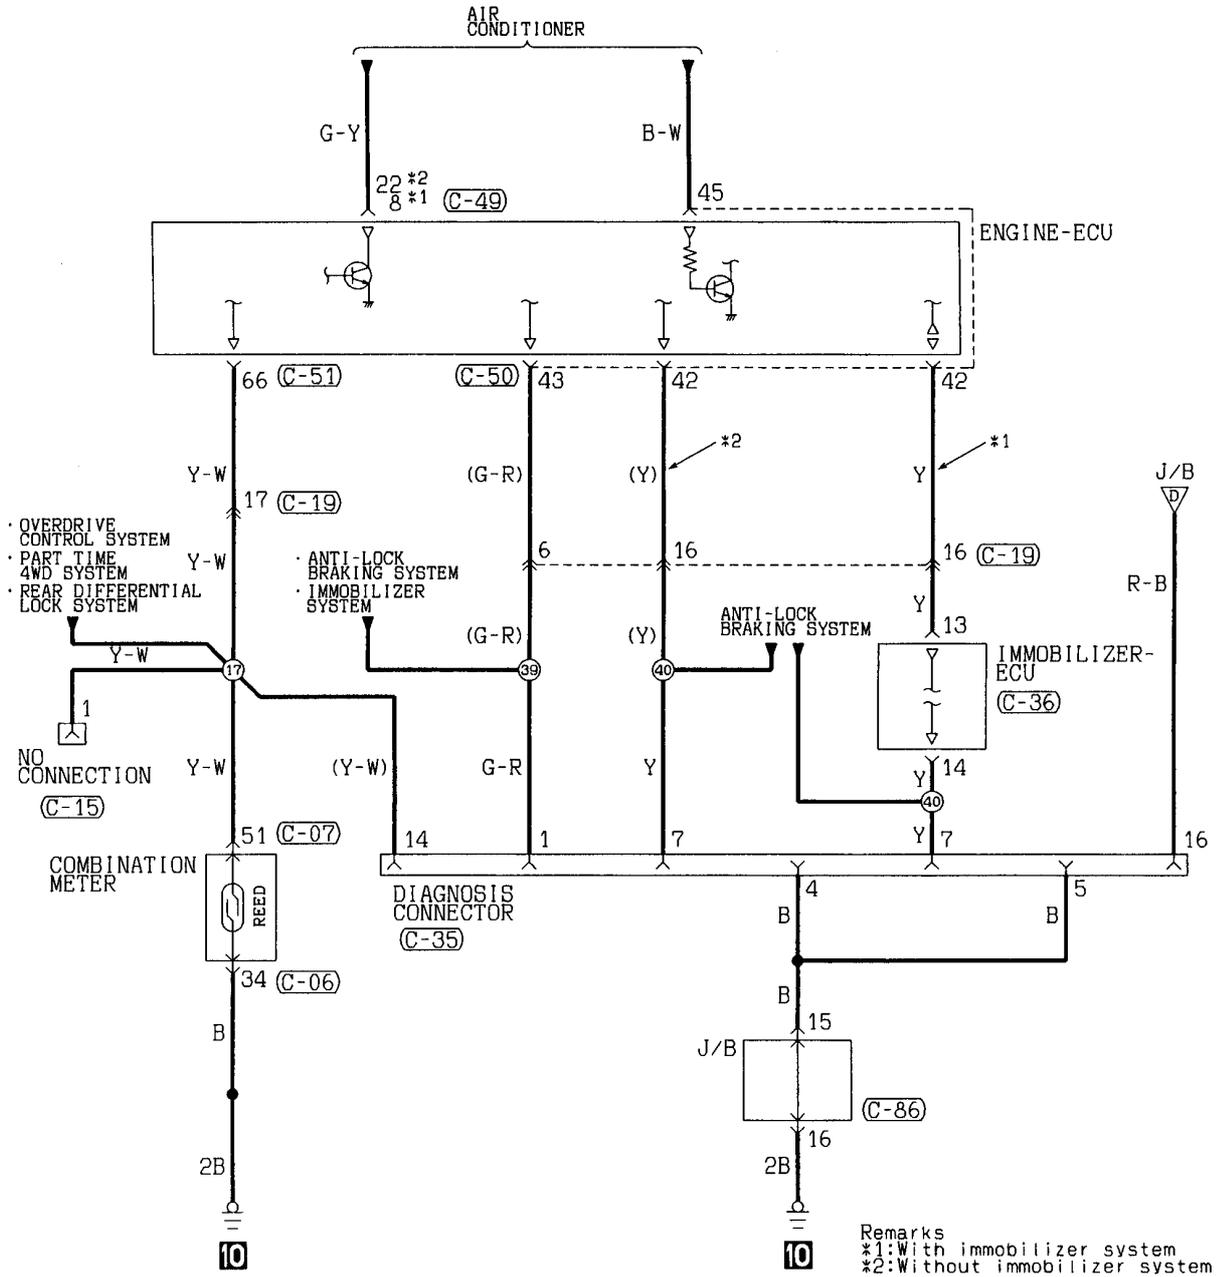

(C-06)

31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

(C-07)

51

(C-15)

1

(C-19)

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

(C-35) FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(C-36)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

(C-49)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-50)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

(C-51)

51	52	53	54	55	56	57	58	59	60	61
62	63	64	65	66	67	68	69	70	71	72

(C-86)



1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20


NOTES

MPI SYSTEM

90100081442

1998 Models

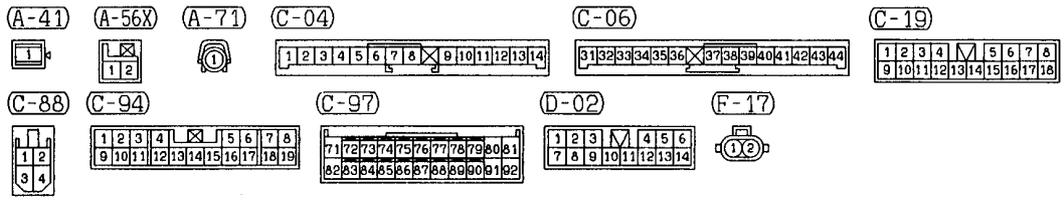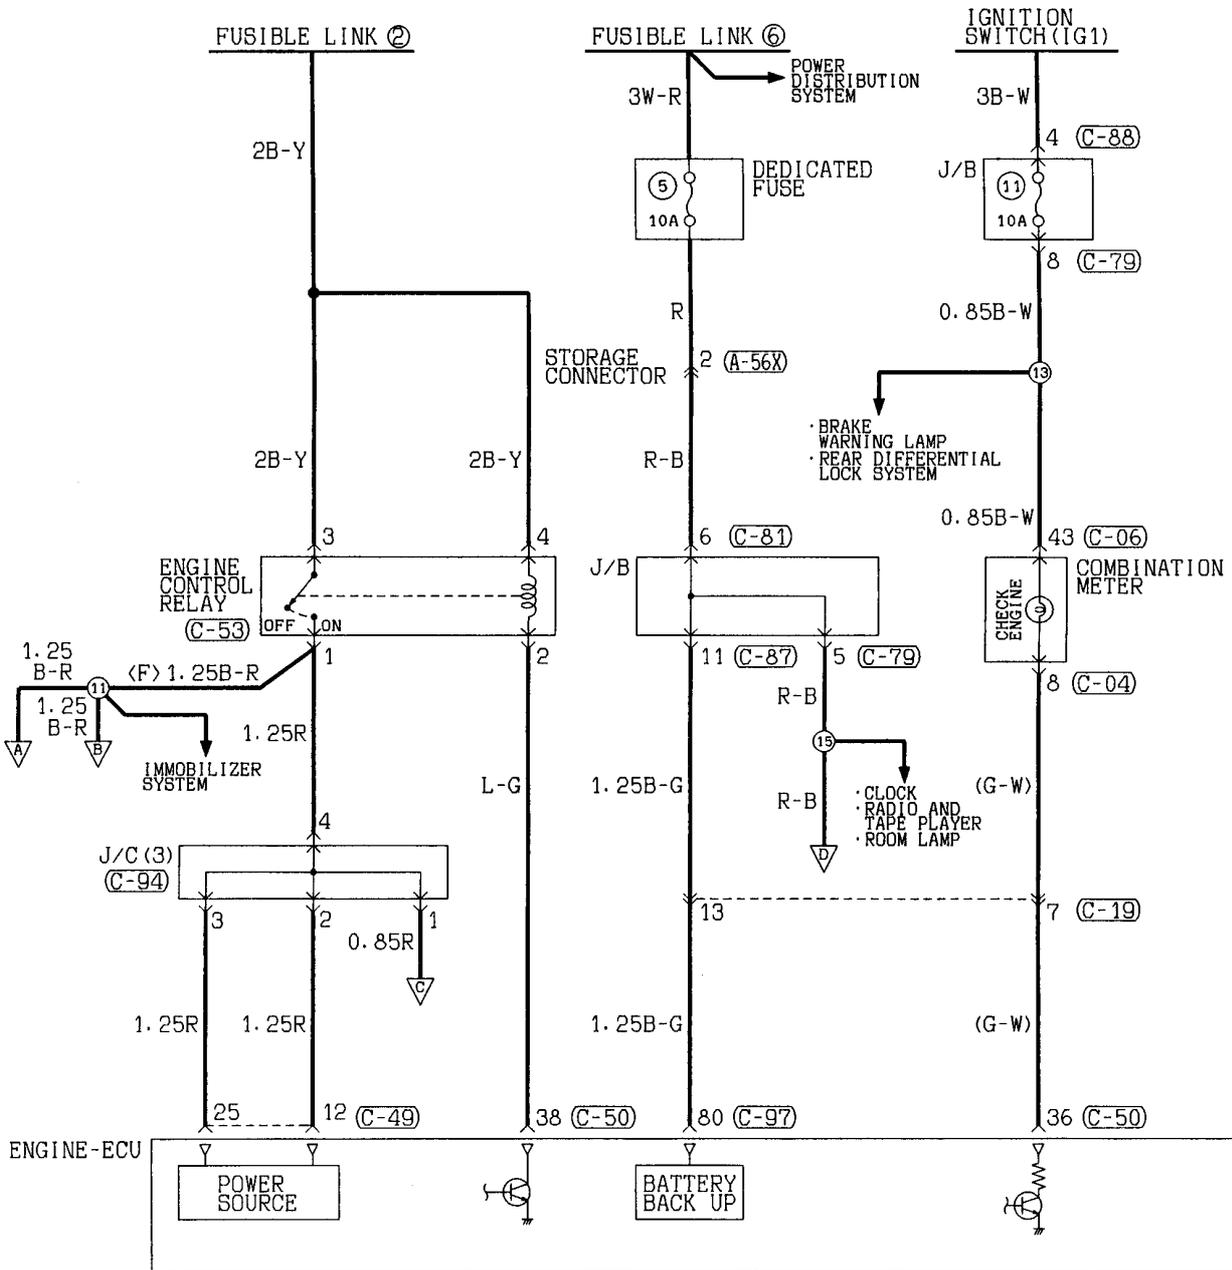

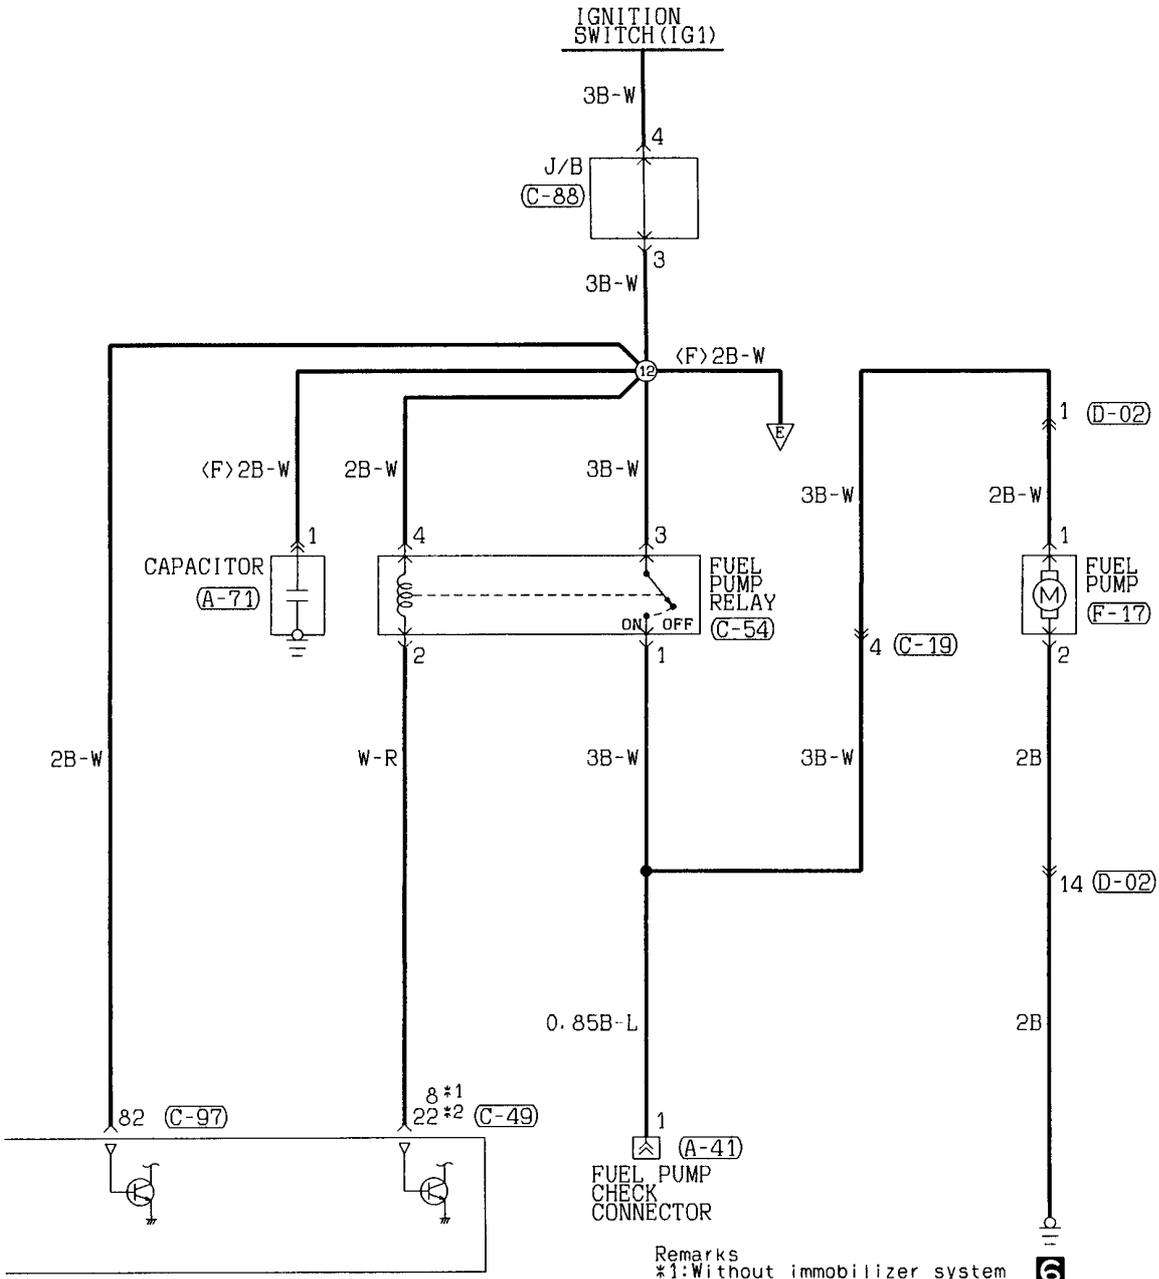

(C-49)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-50)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

(C-53)

1	2
3	4

(C-54)

1	2
3	4

(C-79)

1	2	3	0	4	5	6	7	
8	9	10	11	12	13	14	15	16


(C-81)

1	2	3	0	4	5	
6	7	8	9	10	11	12


(C-87)

1	2	3	0	4	5	6	7	
8	9	10	11	12	13	14	15	16

MPI SYSTEM <1998 Models> (CONTINUED)

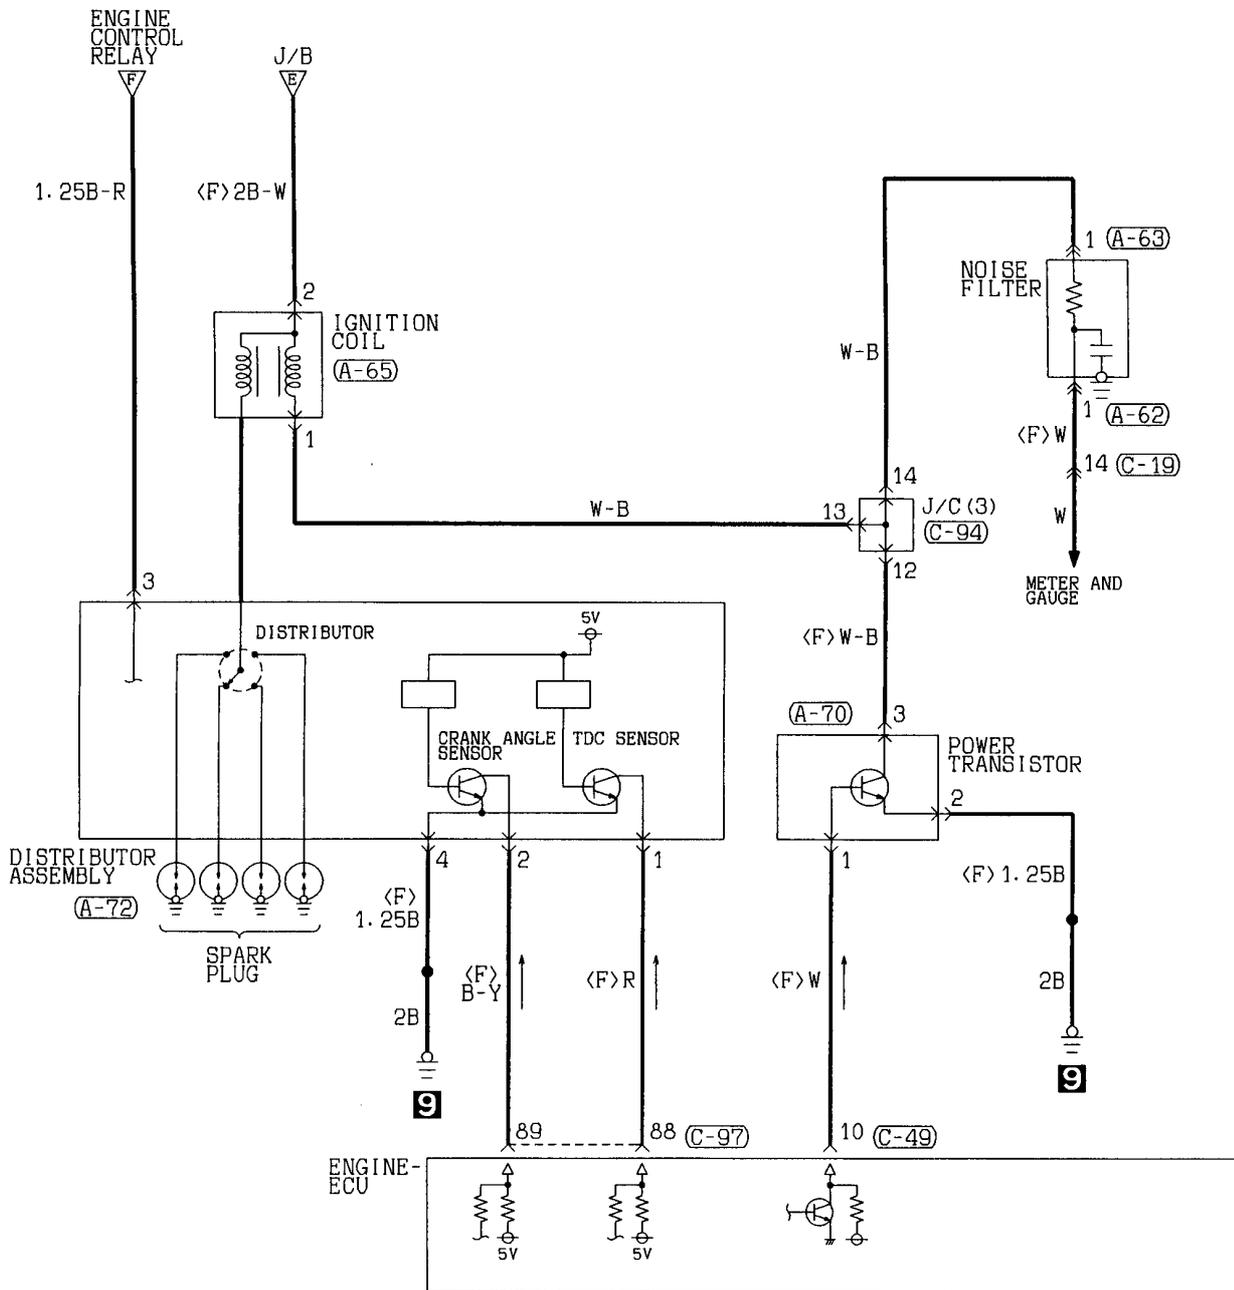

- (A-62)
- (A-63)
- (A-65)
- (A-70)
- (A-72)
- (B-01)
- (C-01)
- (C-19)

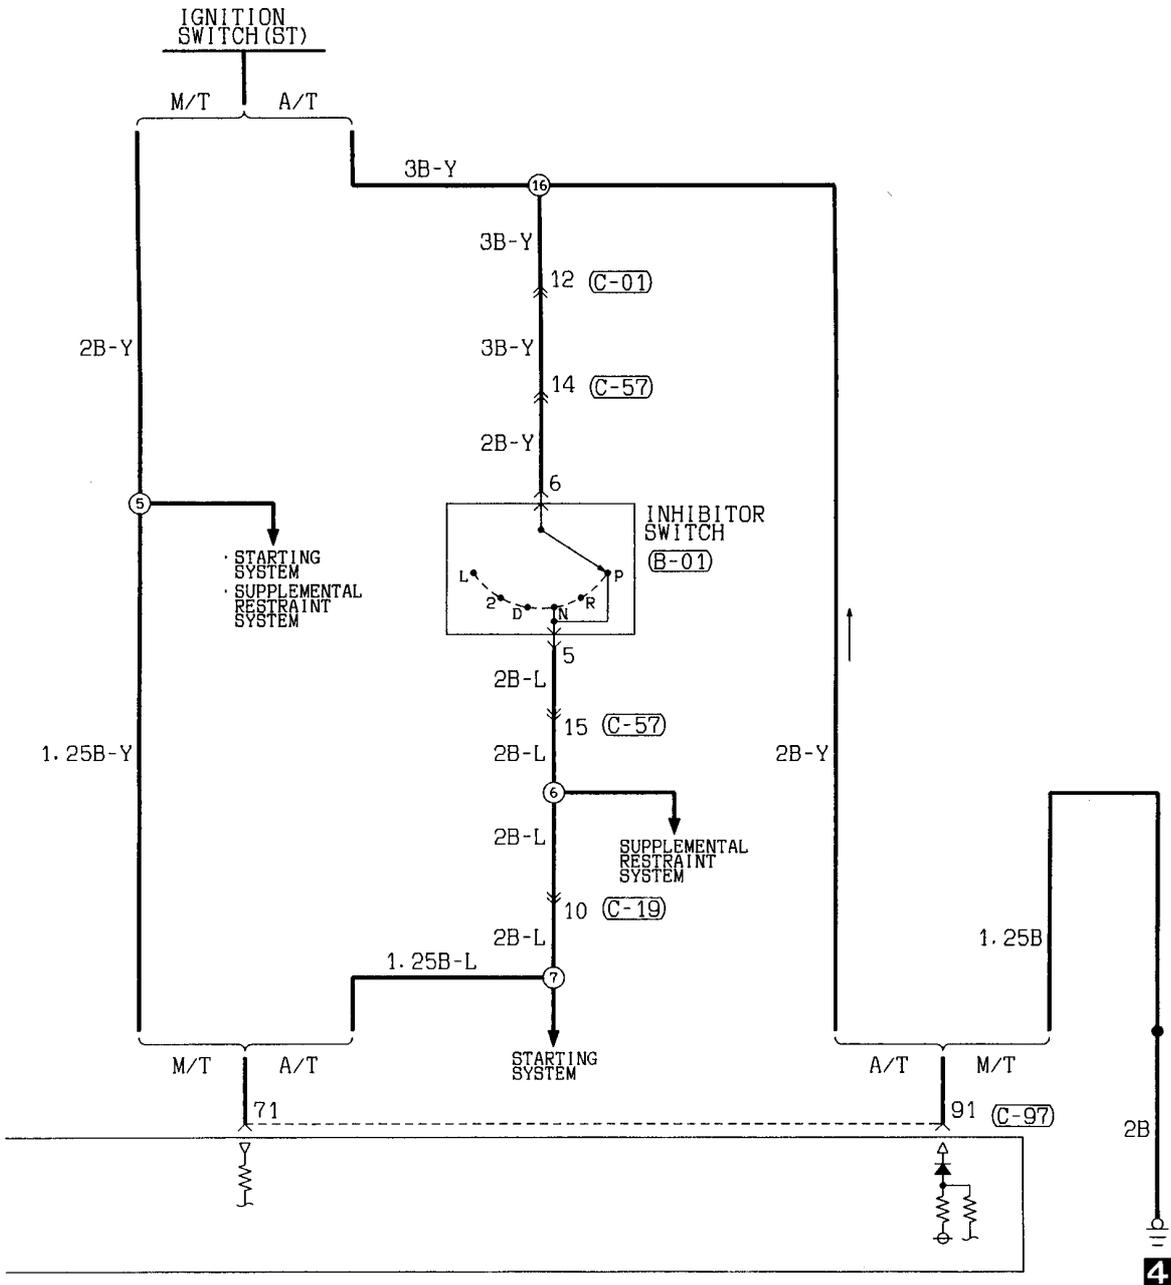

(C-49)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-57)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20


(C-94)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19


(C-97)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

MPI SYSTEM <1998 Models> (CONTINUED)

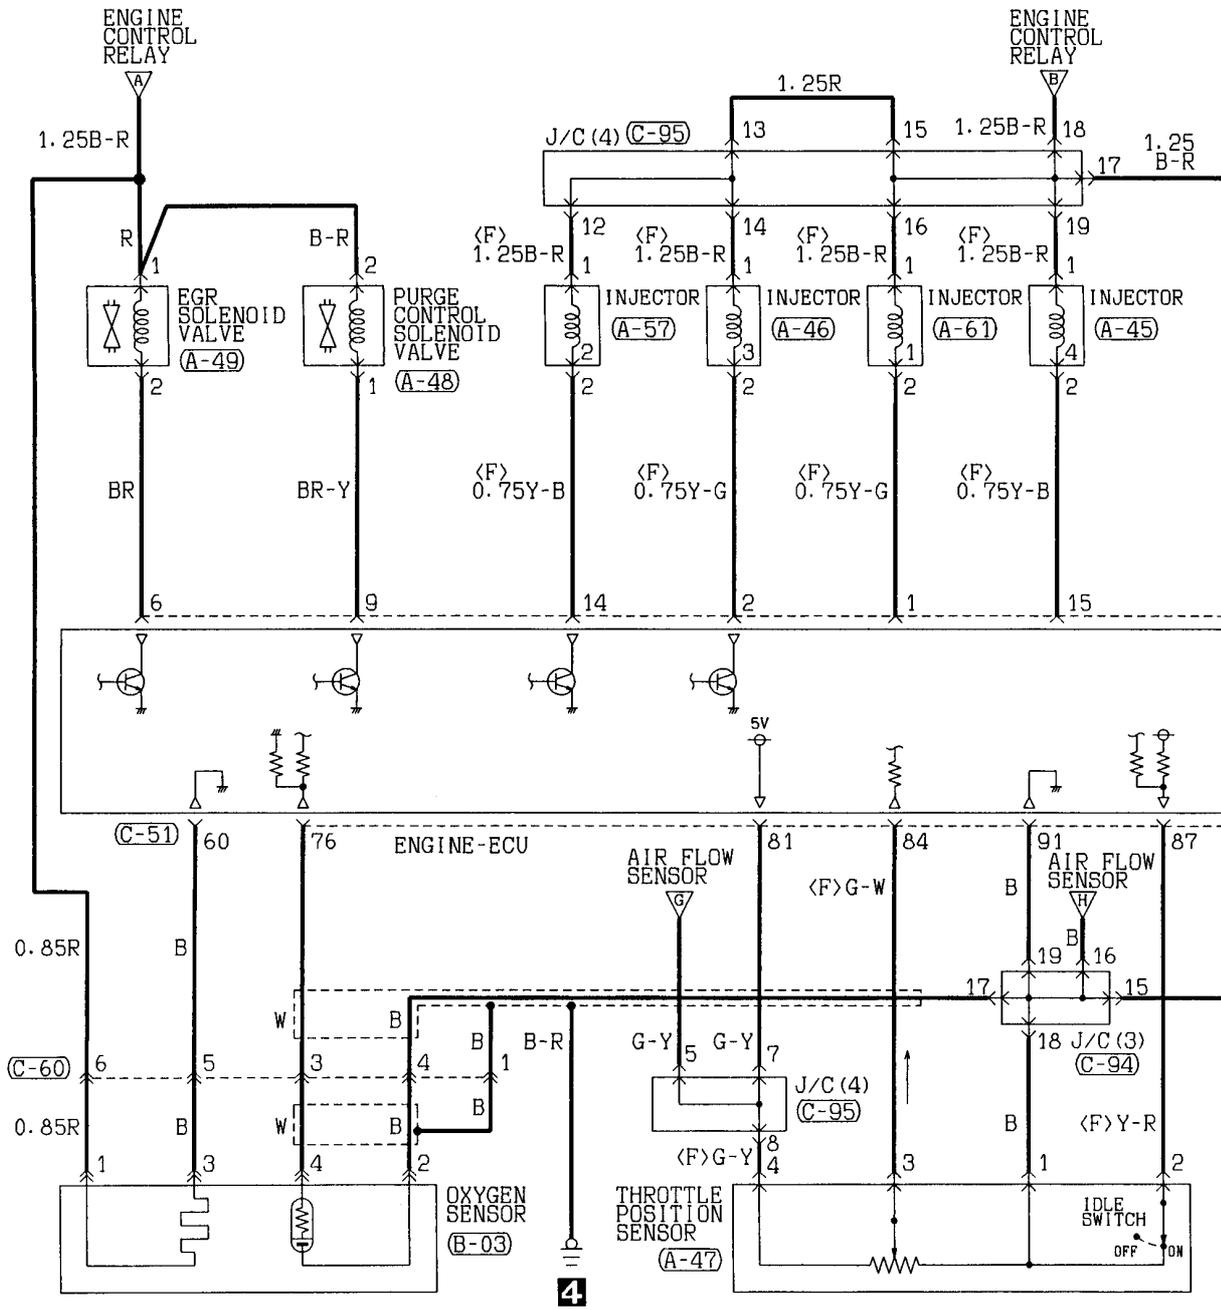

- (A-42) (A-45) (A-46) (A-47) (A-48) (A-49) (A-50) (A-57) (A-61) (A-64) (A-74) (A-77) (B-03)
- (C-94) (C-95) (C-97)

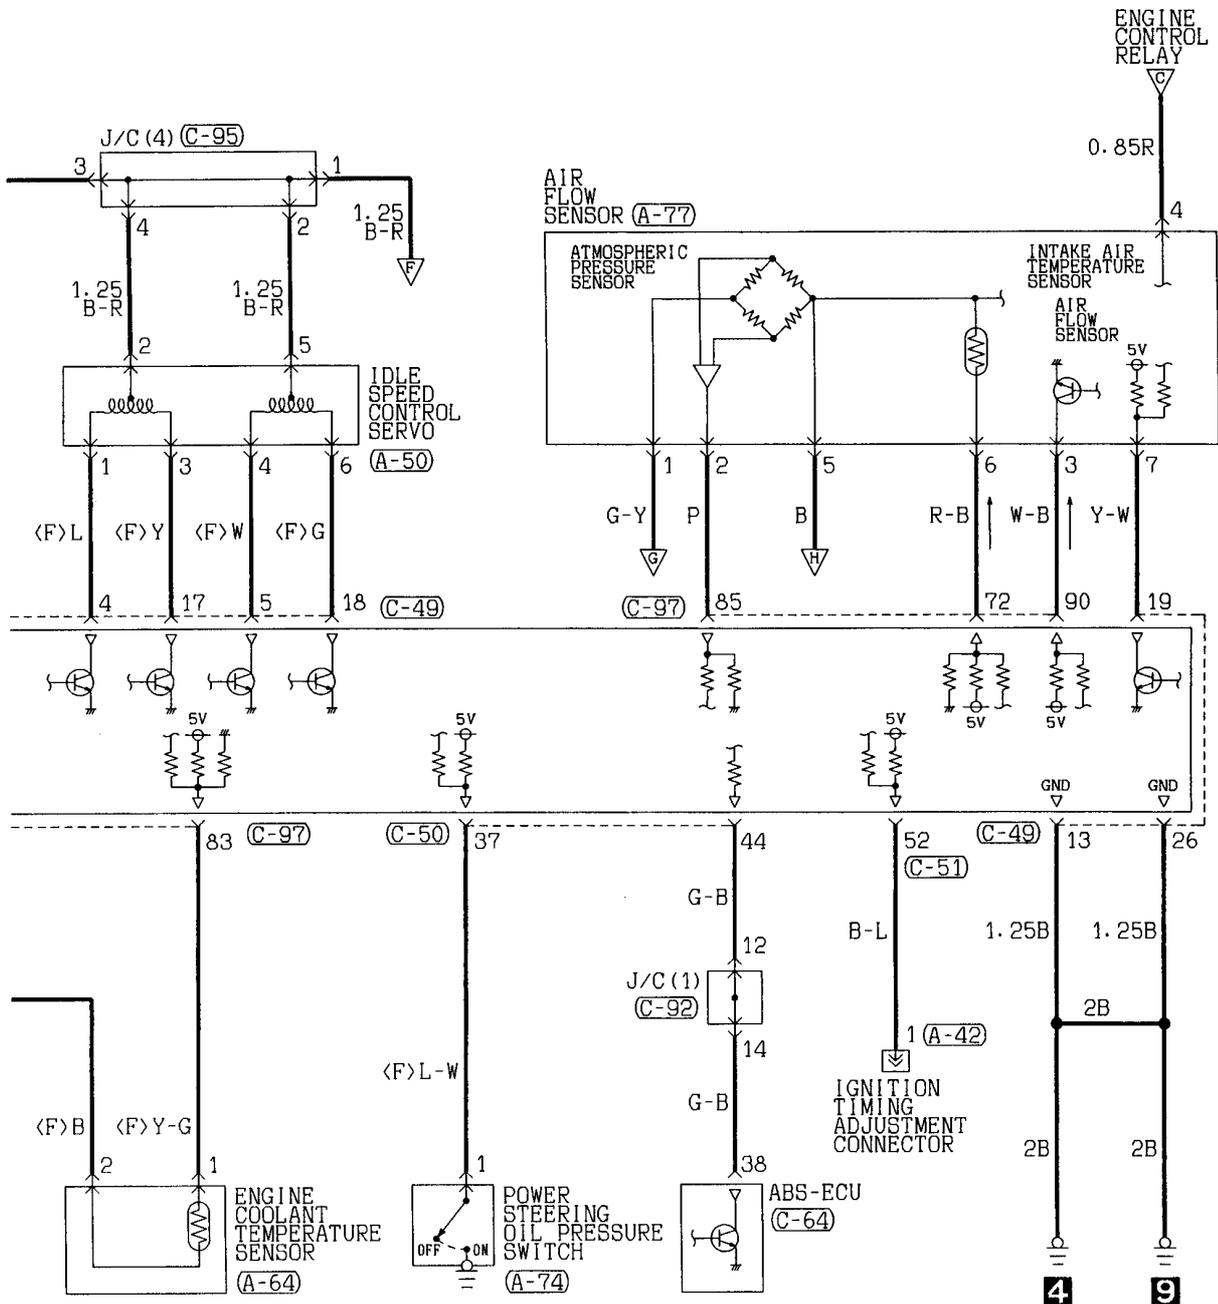

(C-49)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-50)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

(C-51)

51	52	53	54	55	56
57	58	59	60	61	62

(C-60)

1	0	2	
3	4	5	6


(C-64)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52

(C-92)

1	2	3	4	L	5	6	7	8		
9	10	11	12	13	14	15	16	17	18	19

MPI SYSTEM <1998 Models> (CONTINUED)

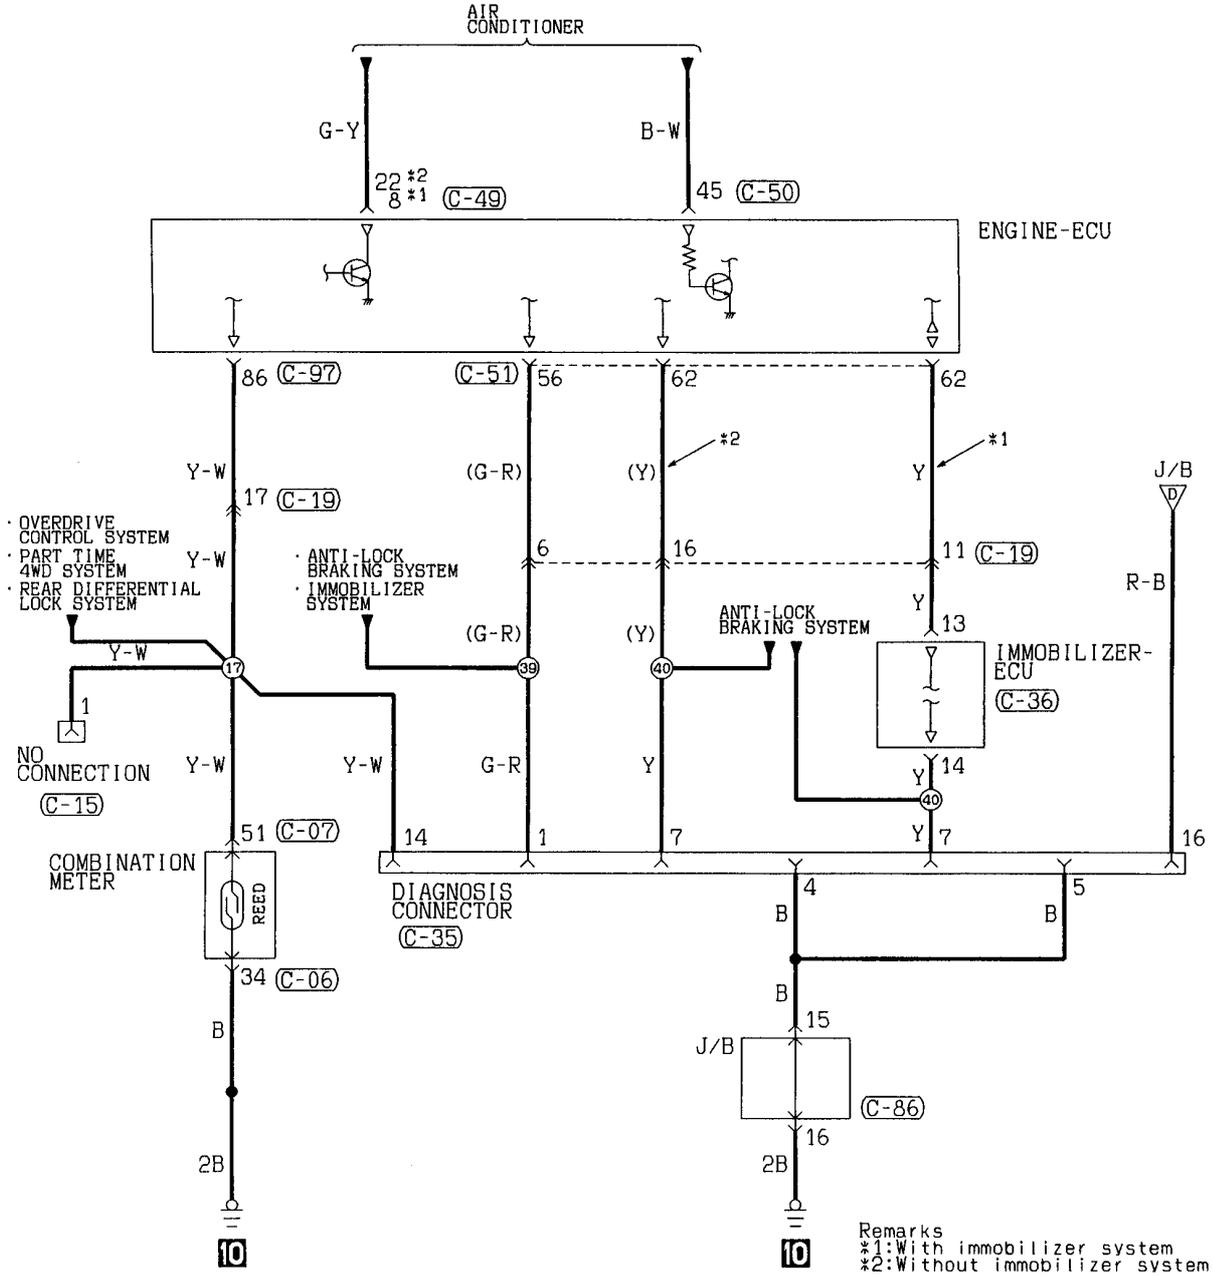

C-06

31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

C-07

51

C-15

1

C-19

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

C-35 FRONT SIDE

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

C-36

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

C-49

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

C-50

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

C-51

51	52	53	54	55	56
57	58	59	60	61	62

C-86

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

C-97



71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92


NOTES

OVERDRIVE CONTROL SYSTEM


90100130054

4G63 <1997 Models>

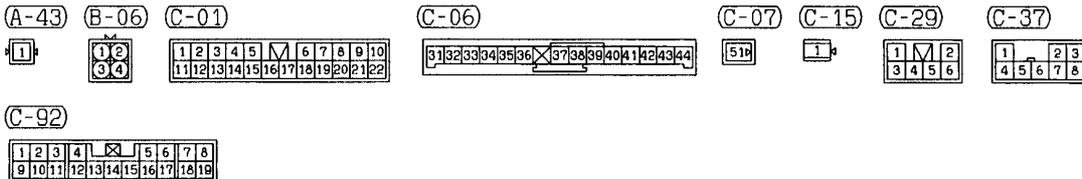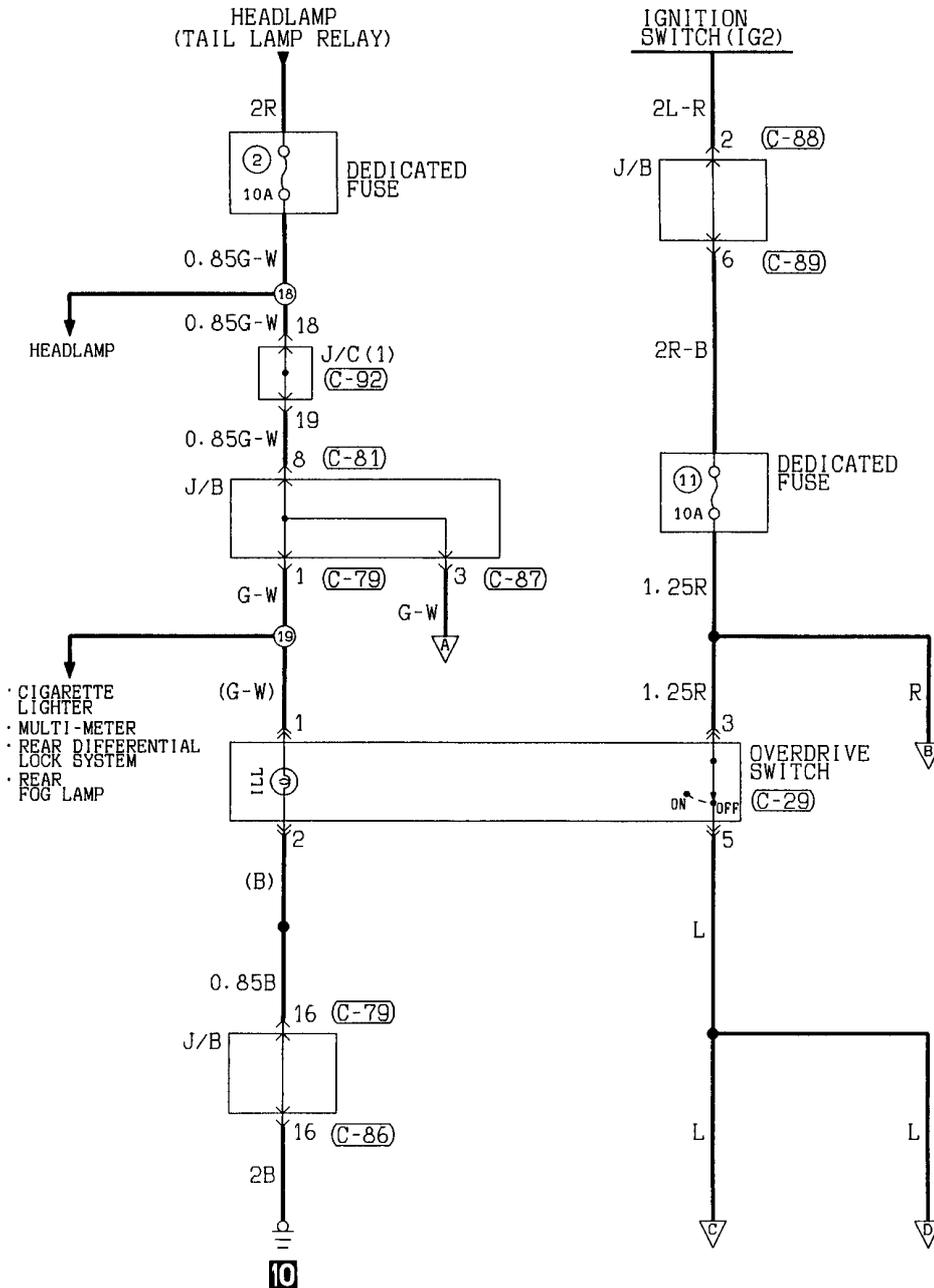


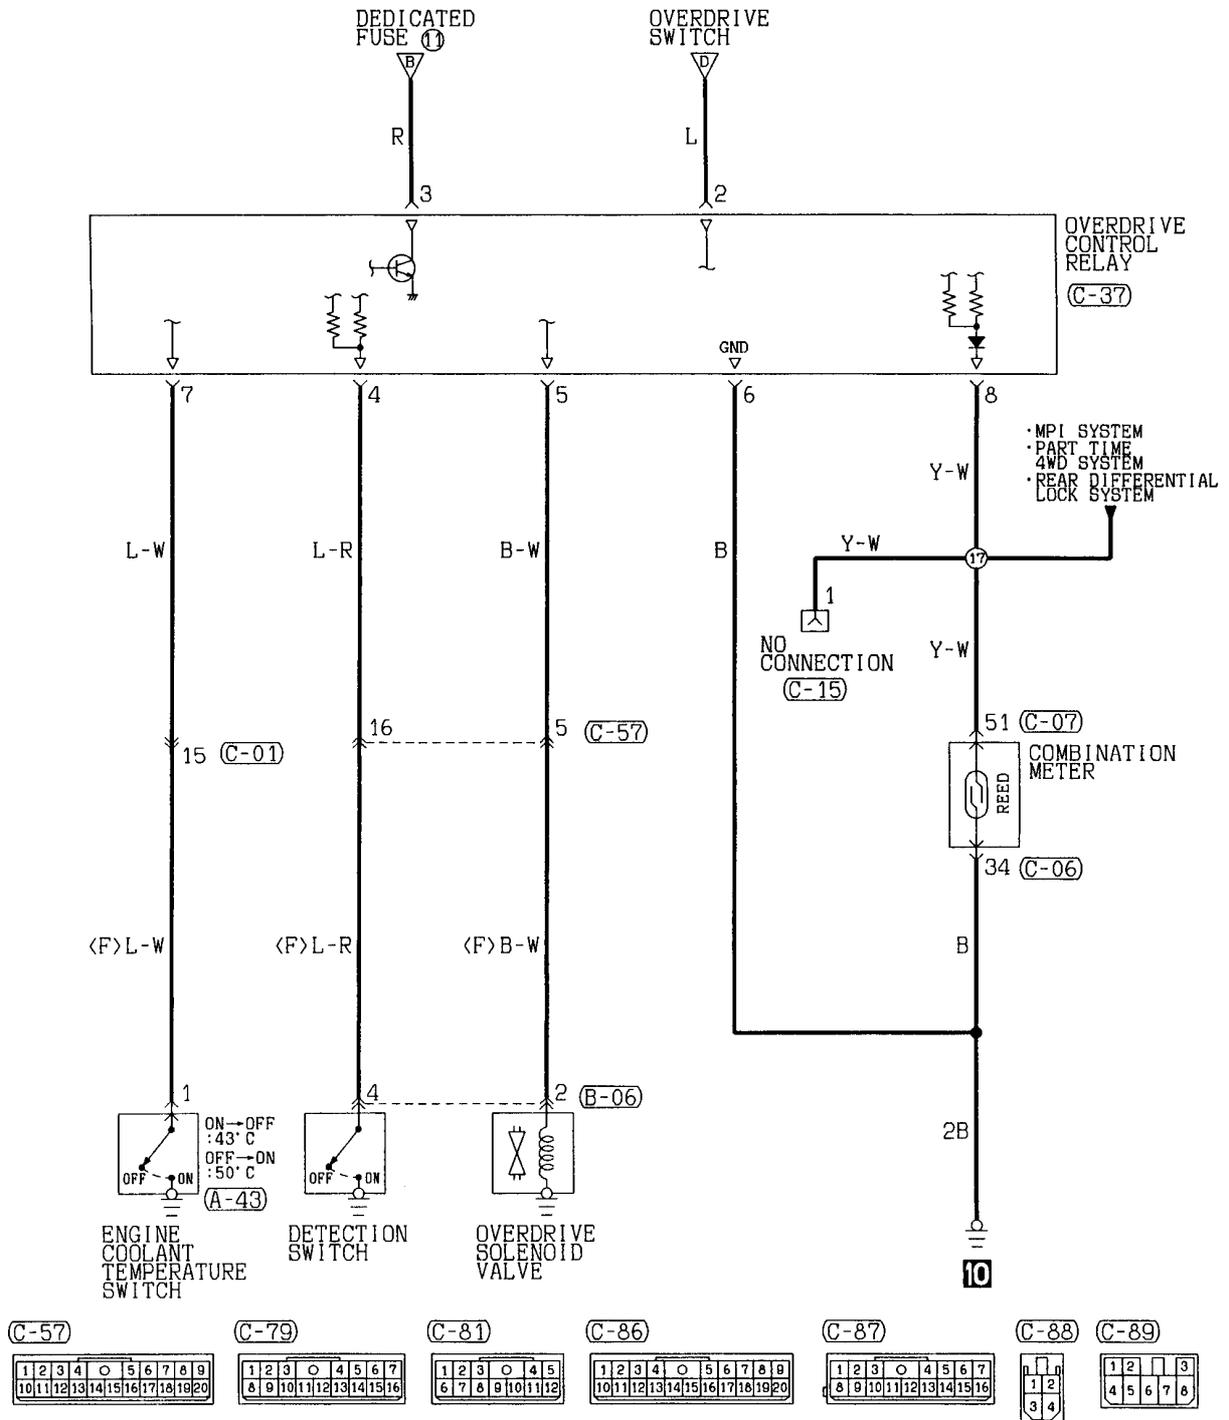


OVERDRIVE CONTROL SYSTEM <4G63 (1997 Models)> (CONTINUED)

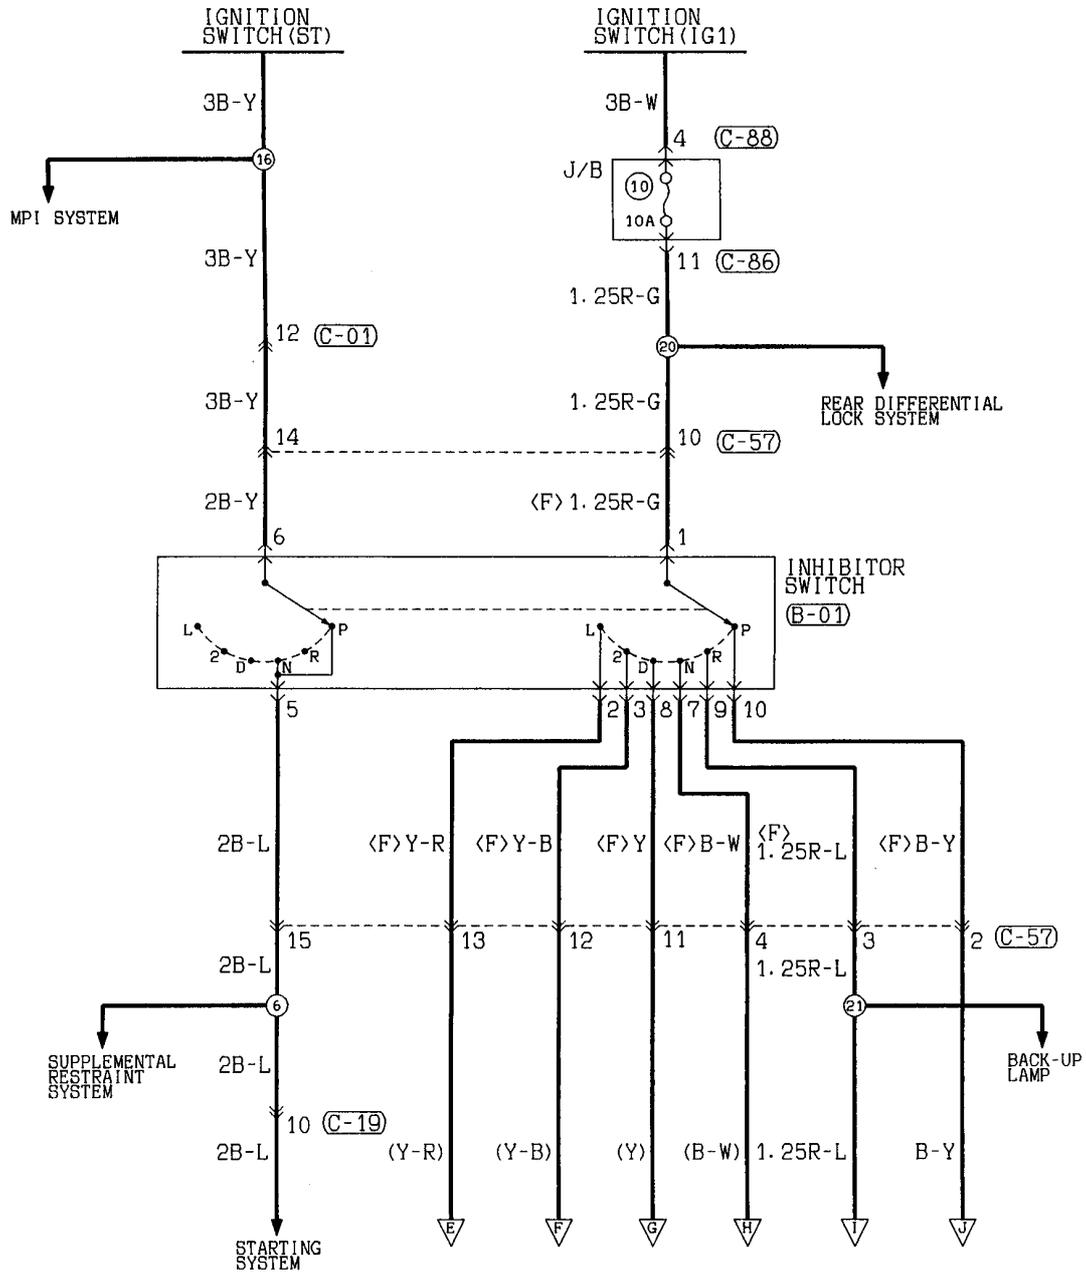


(B-01)

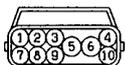


(C-01)

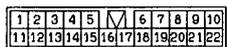


(C-05)




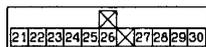


(C-06)

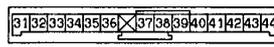

(C-19)


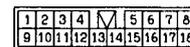


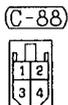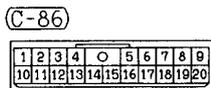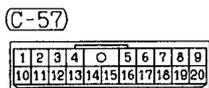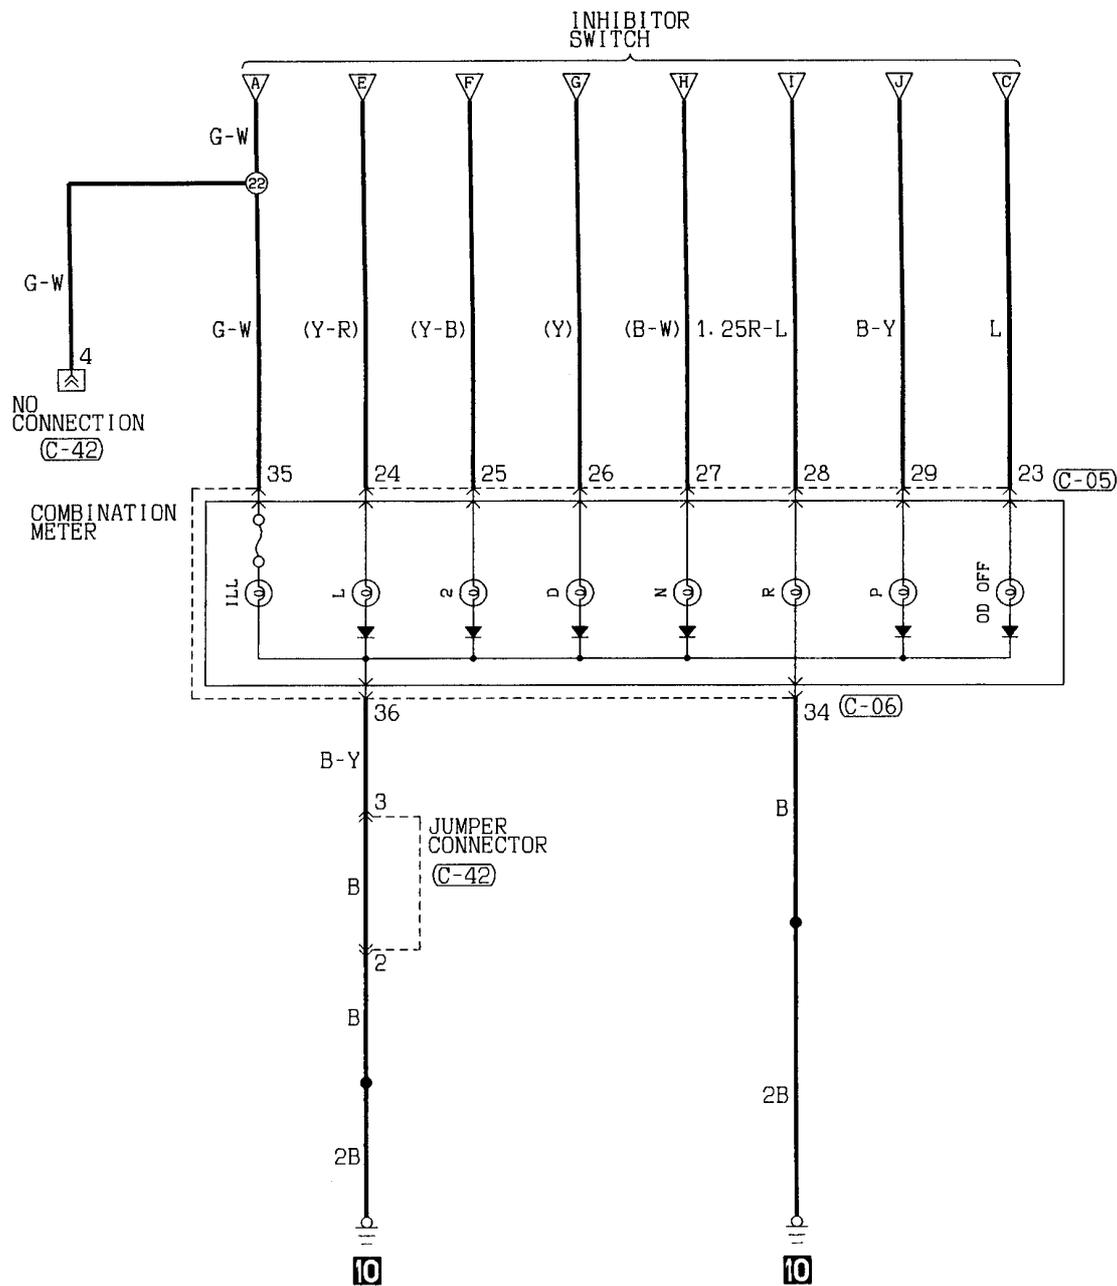


OVERDRIVE CONTROL SYSTEM







90100130085





4G63 <1998 Models>

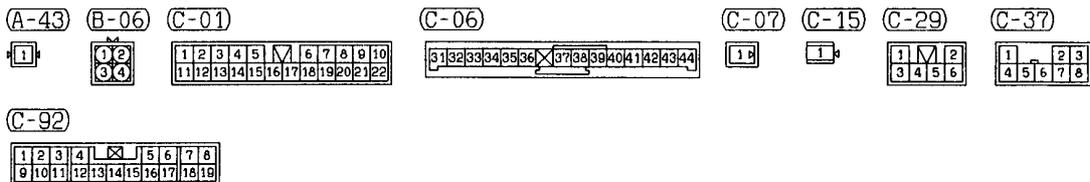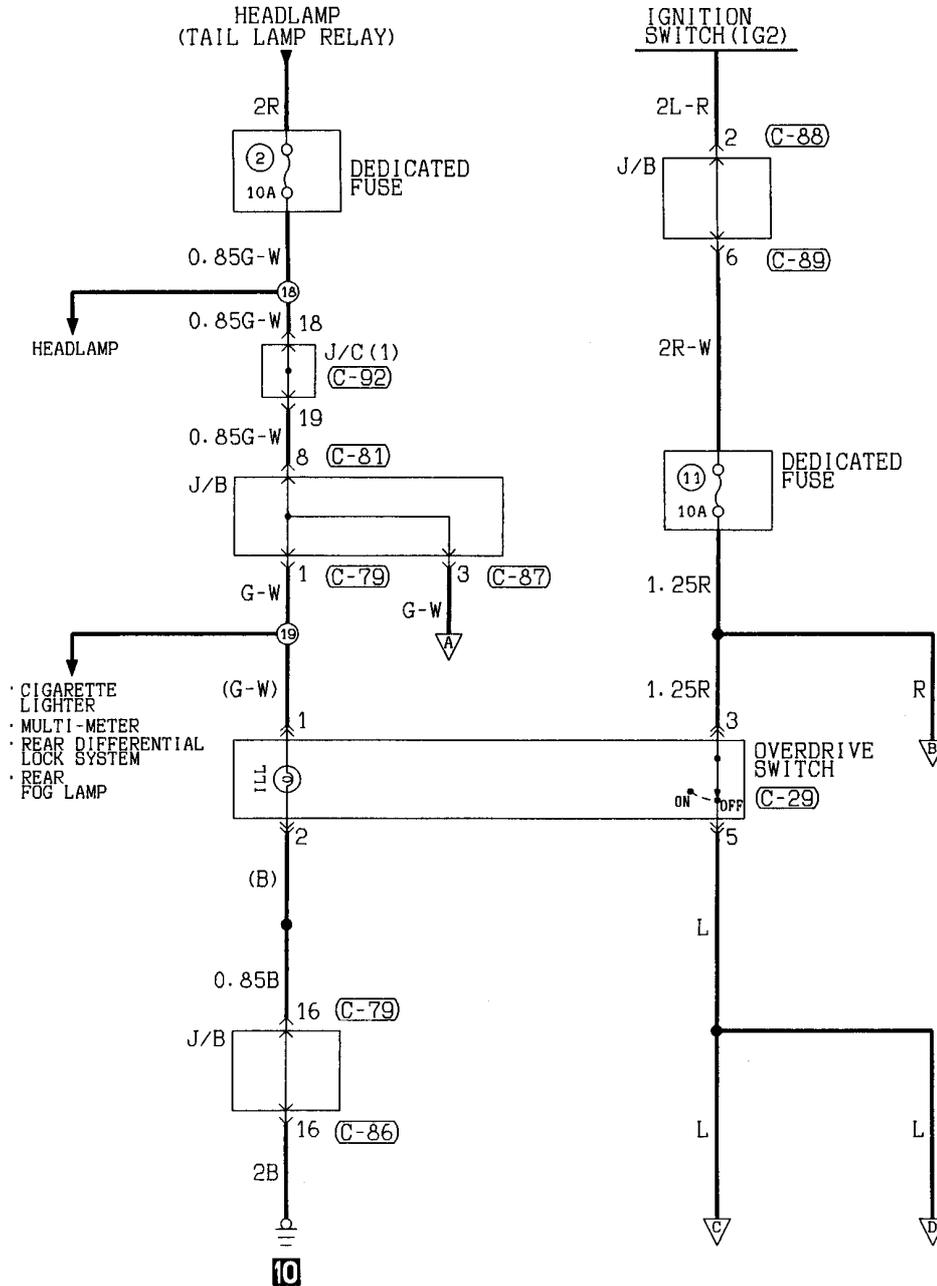

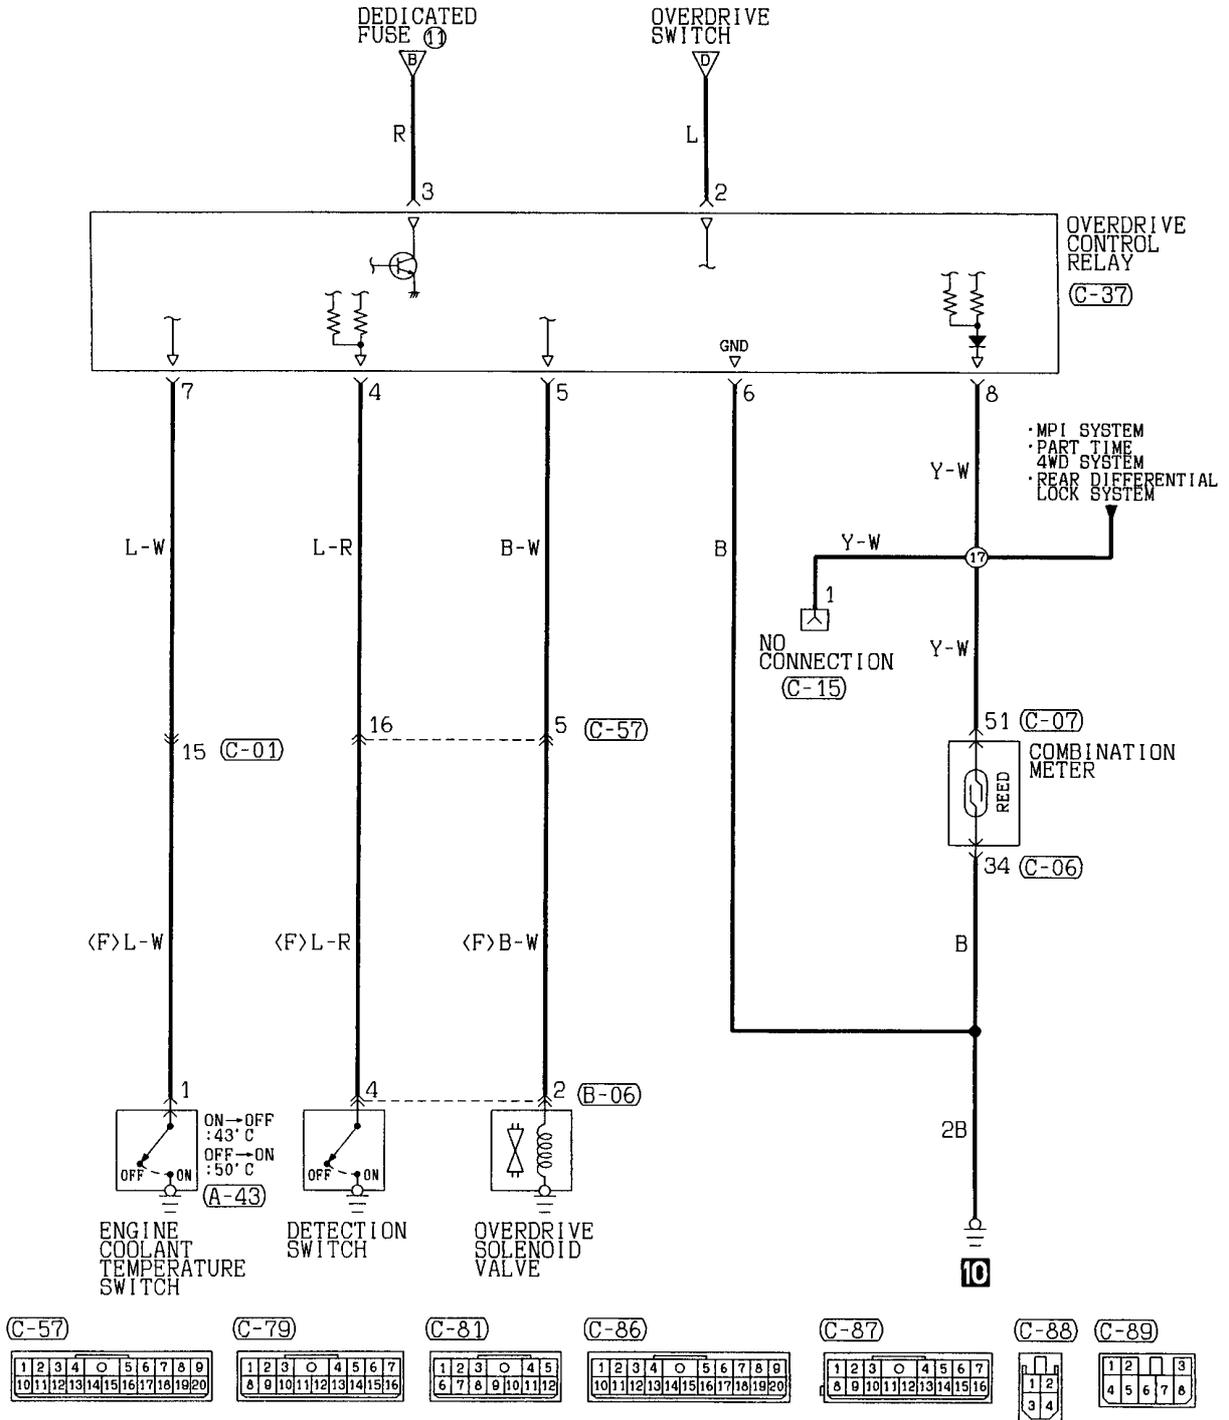

OVERDRIVE CONTROL SYSTEM <4G63 (1998 Models)> (CONTINUED)

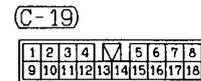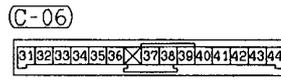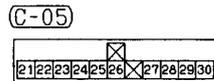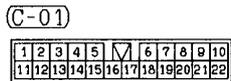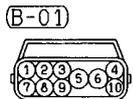
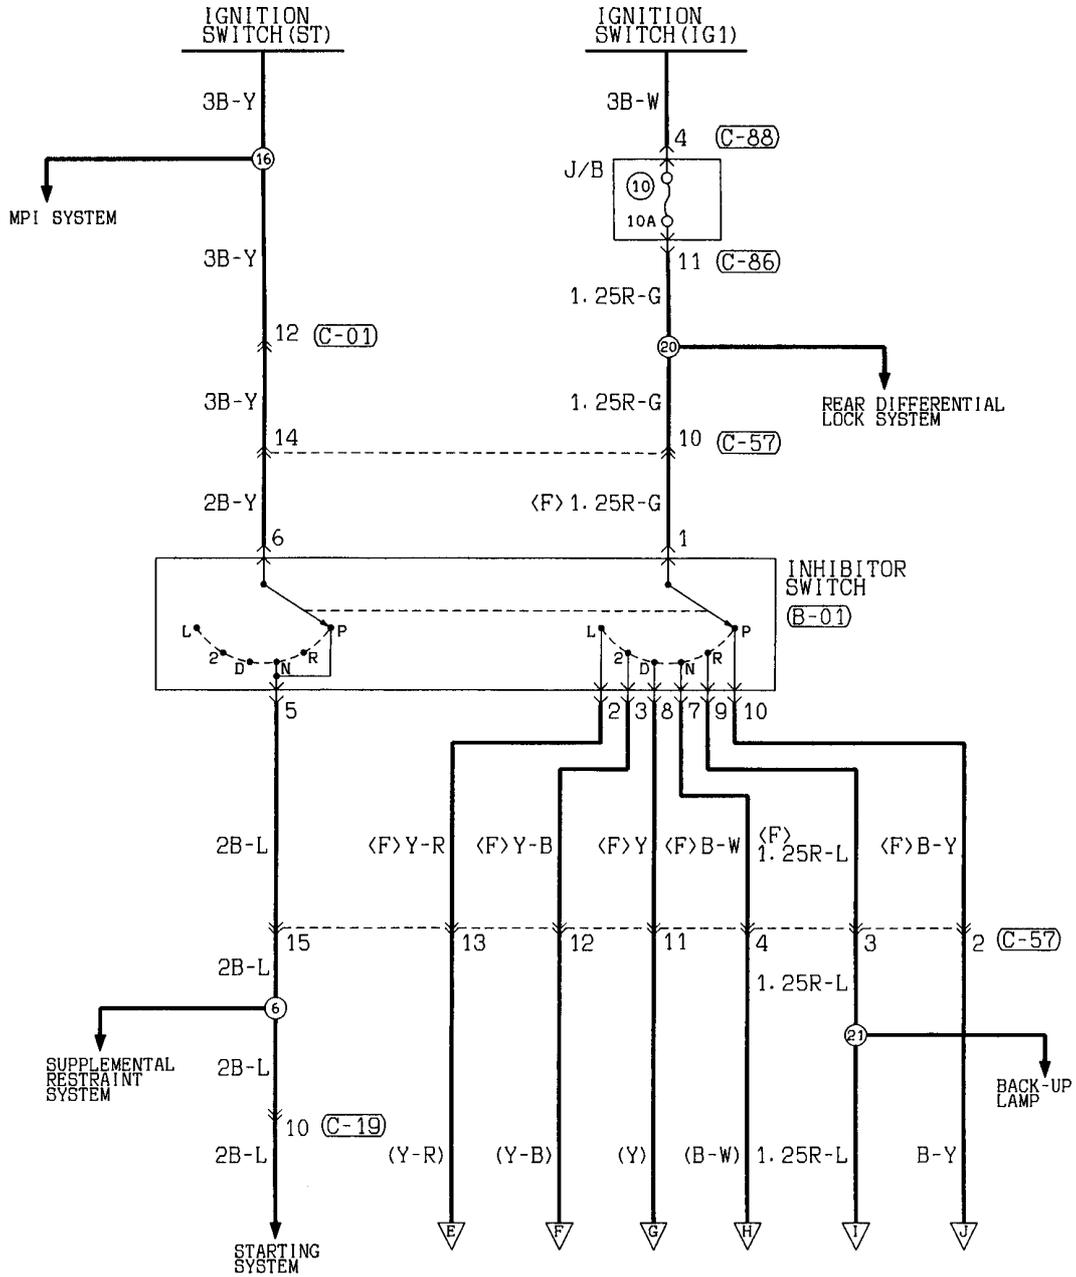


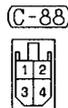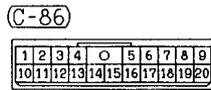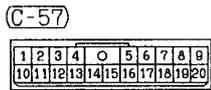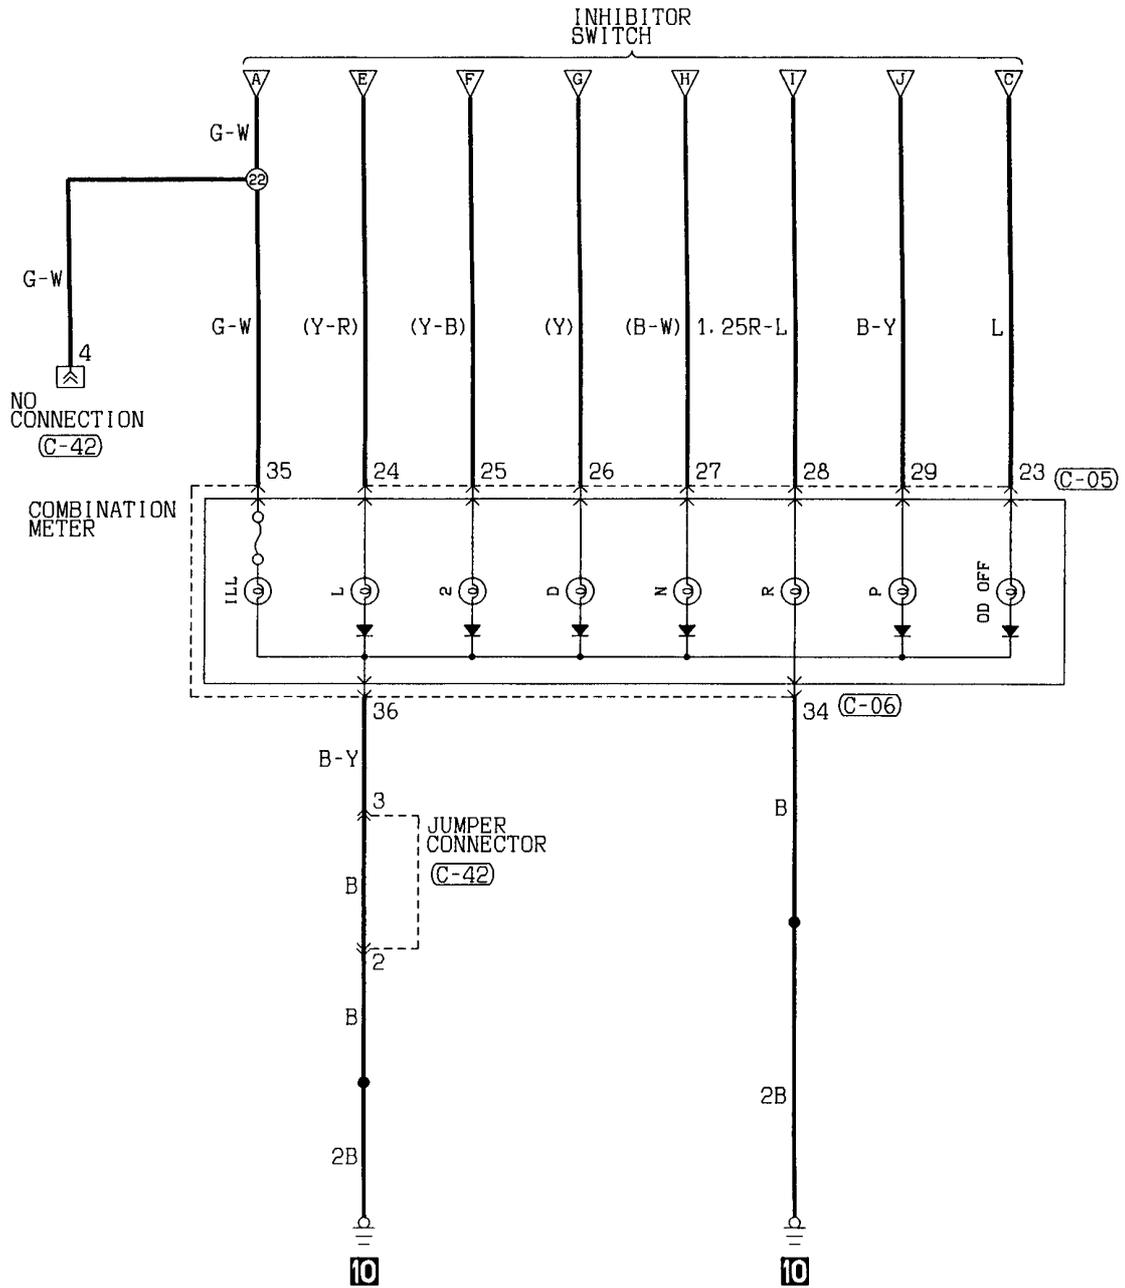


OVERDRIVE CONTROL SYSTEM

90100130061

4D56 <1997 Models>

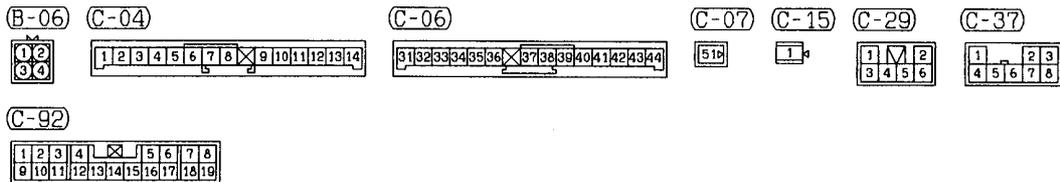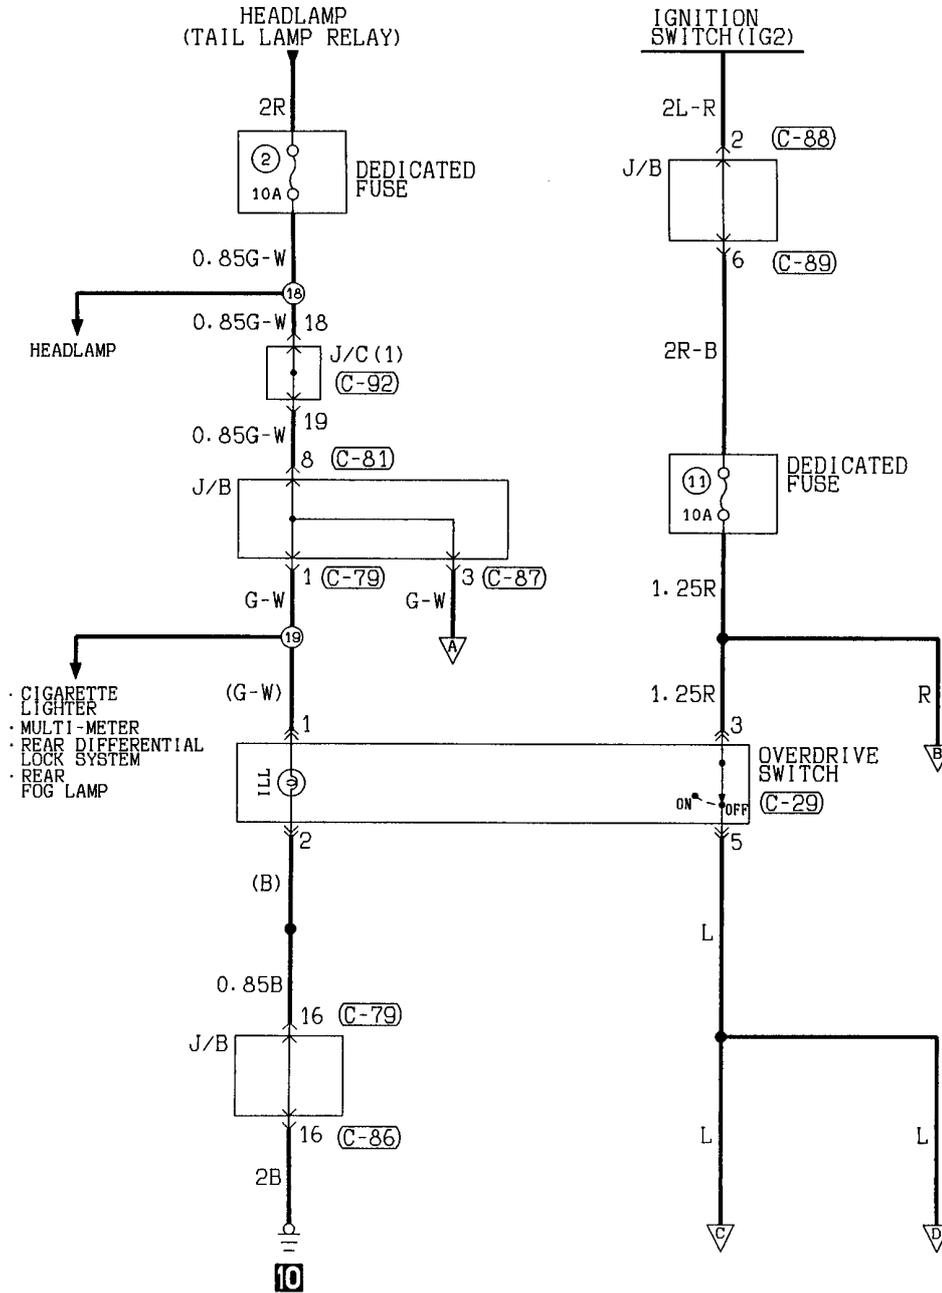

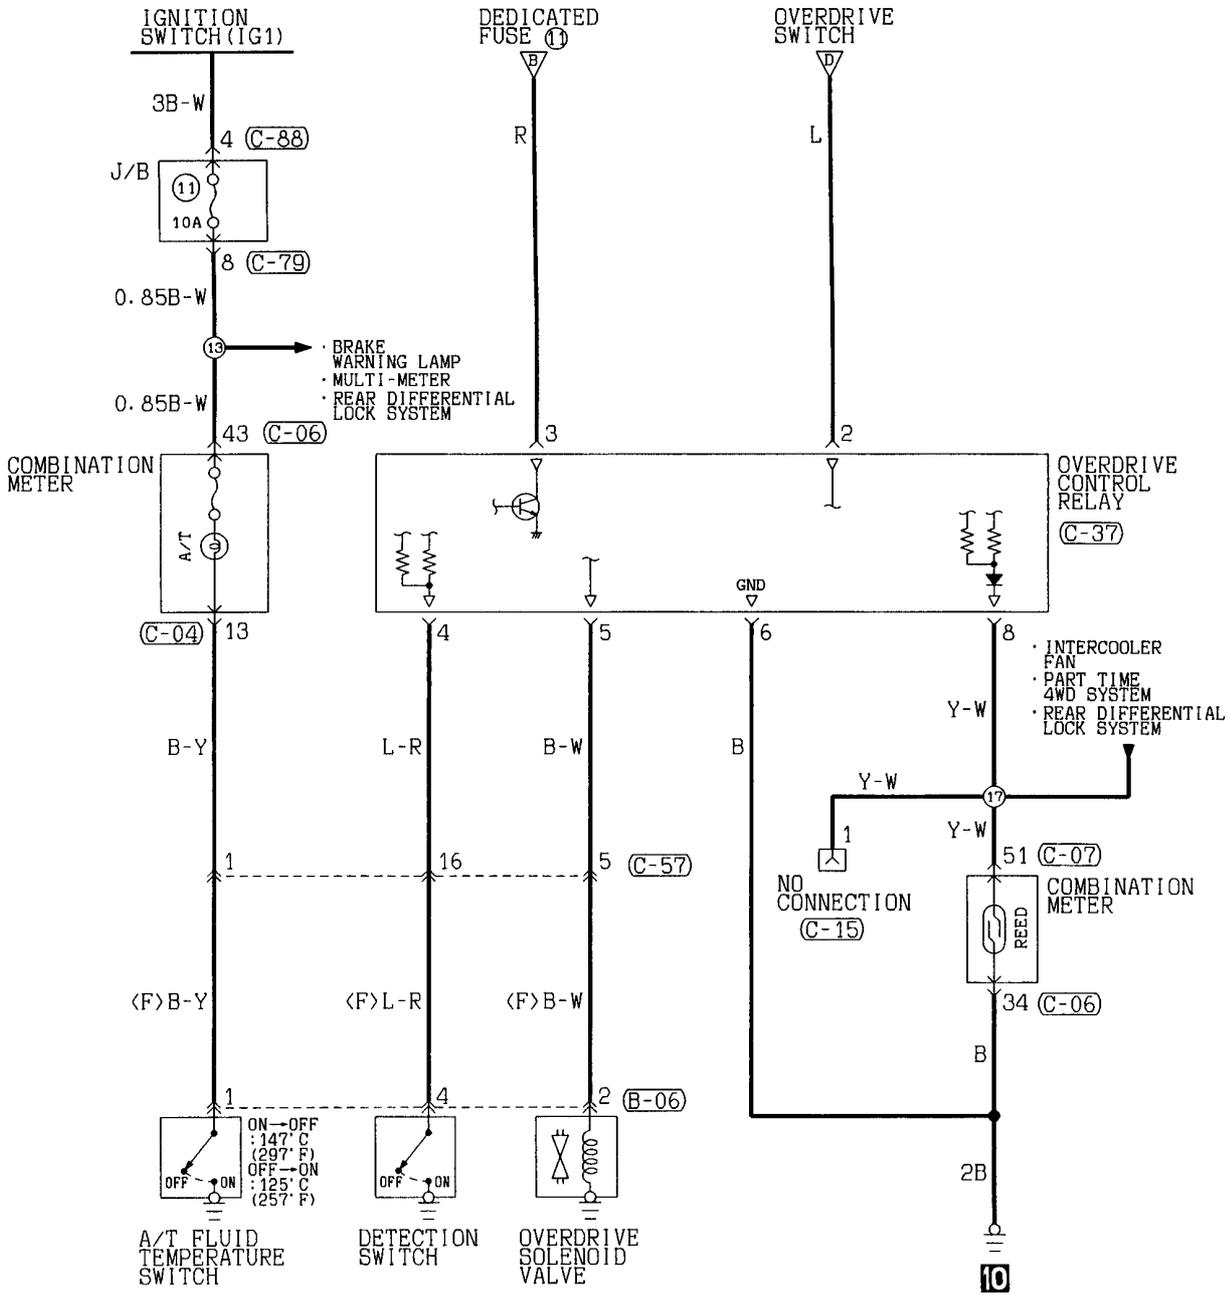

(C-57)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

(C-79)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

(C-81)

1	2	3	4	5
6	7	8	9	10
11	12			

(C-86)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

(C-87)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					


(C-88)

1	2
3	4


(C-89)

1	2	3
4	5	6
7	8	

OVERDRIVE CONTROL SYSTEM <4D56 (1997 Models)> (CONTINUED)

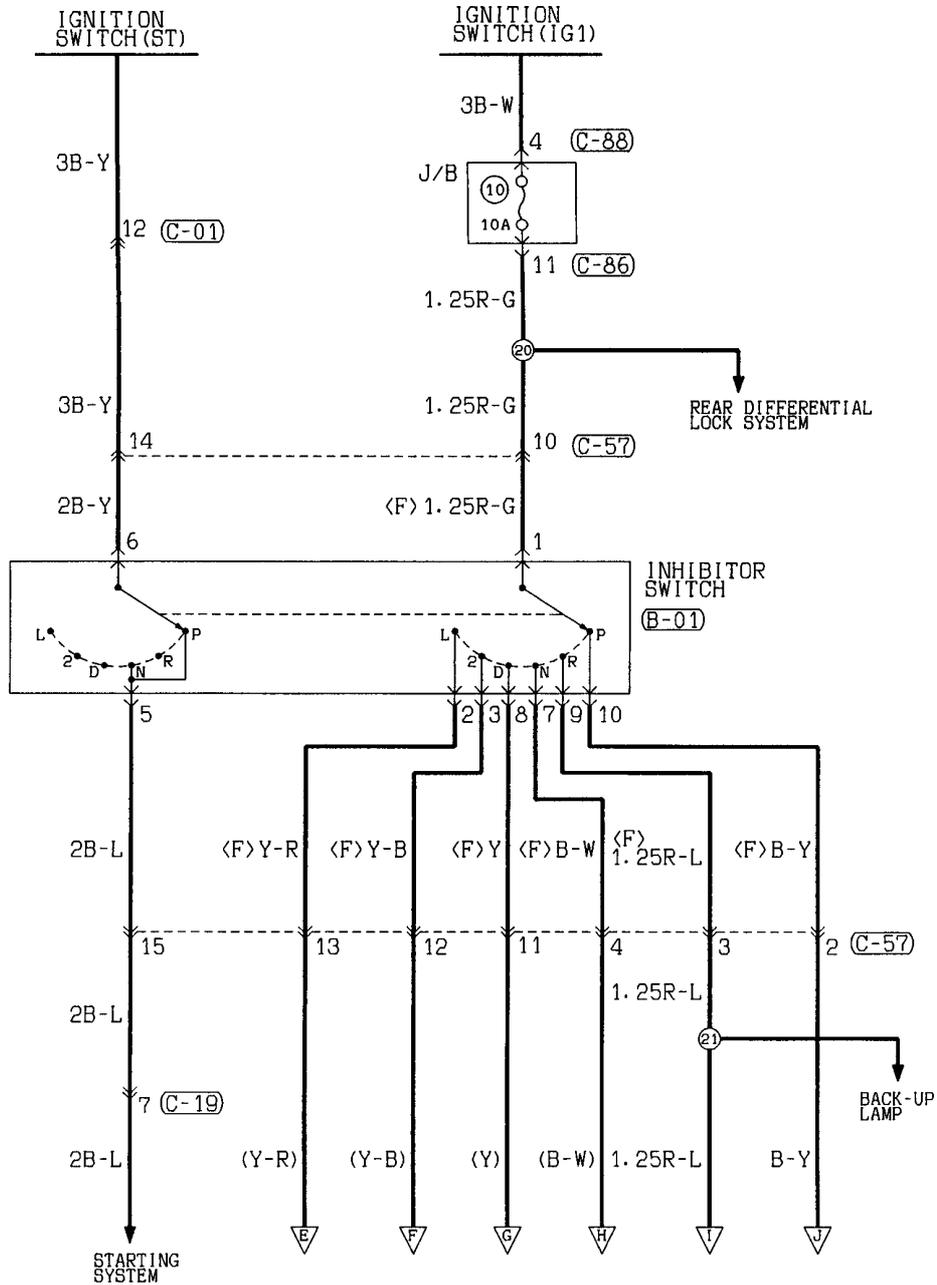

(B-01)

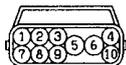

(C-01)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

(C-05)

21	22	23	24	25	26	27	28	29	30
----	----	----	----	----	----	----	----	----	----

(C-06)


31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

(C-19)

1	2	3	4	5	6		
7	8	9	10	11	12	13	14

(C-42)

1	2	3	4
---	---	---	---

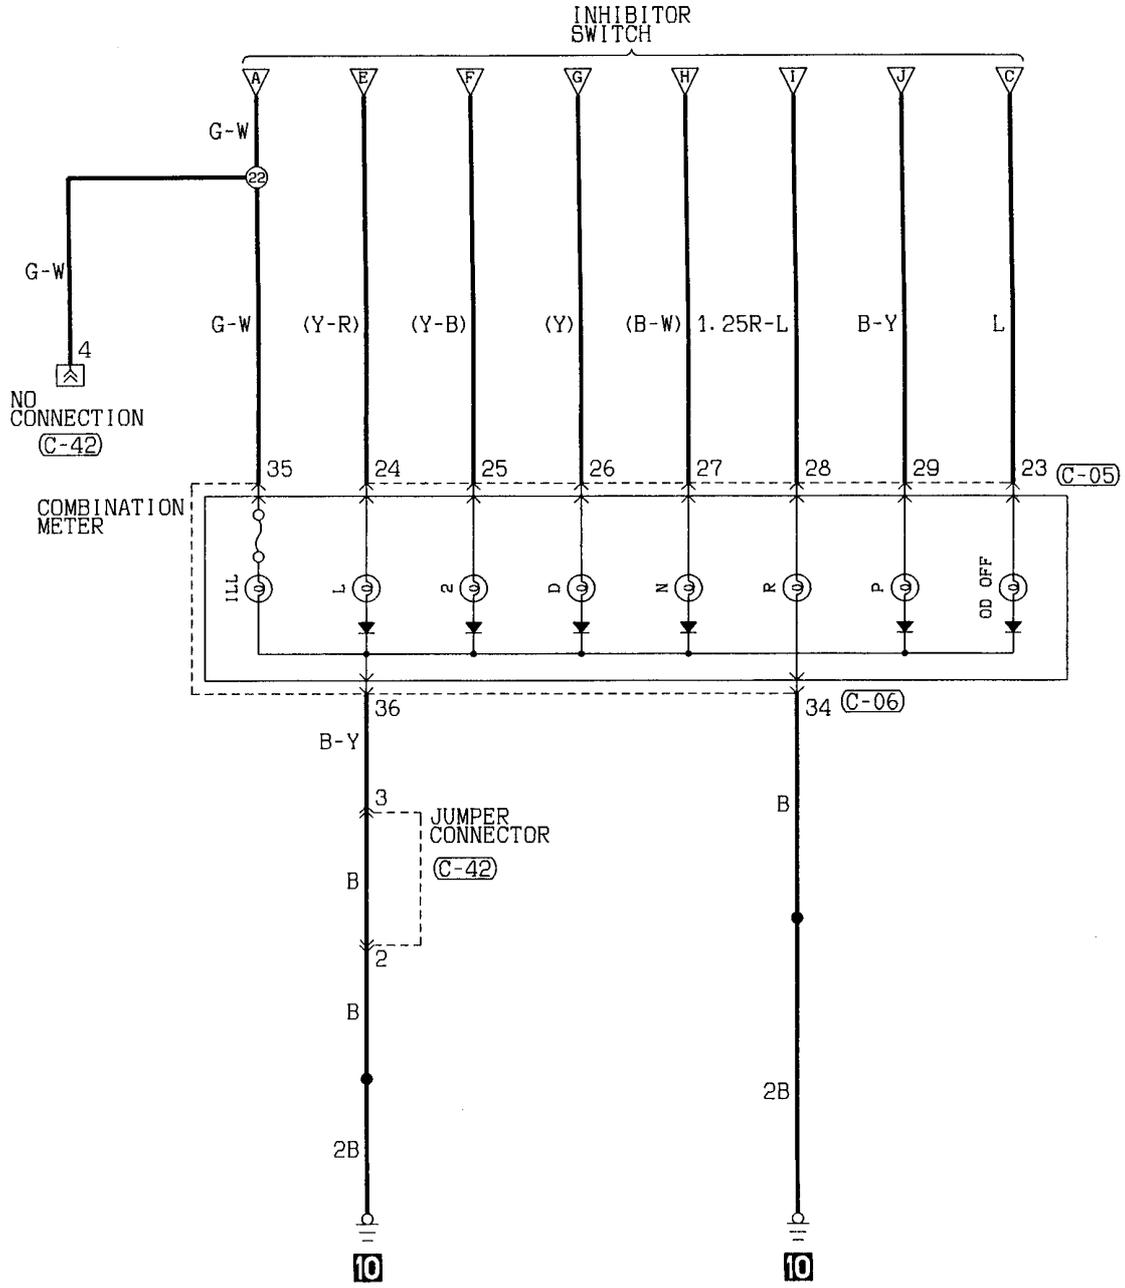

(C-57)

1	2	3	4	0	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(C-86)

1	2	3	4	0	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20



(C-88)


1	2
3	4

OVERDRIVE CONTROL SYSTEM

90100130092

4D56 <1998 Models>

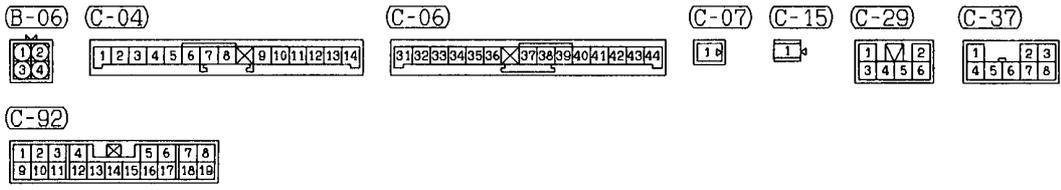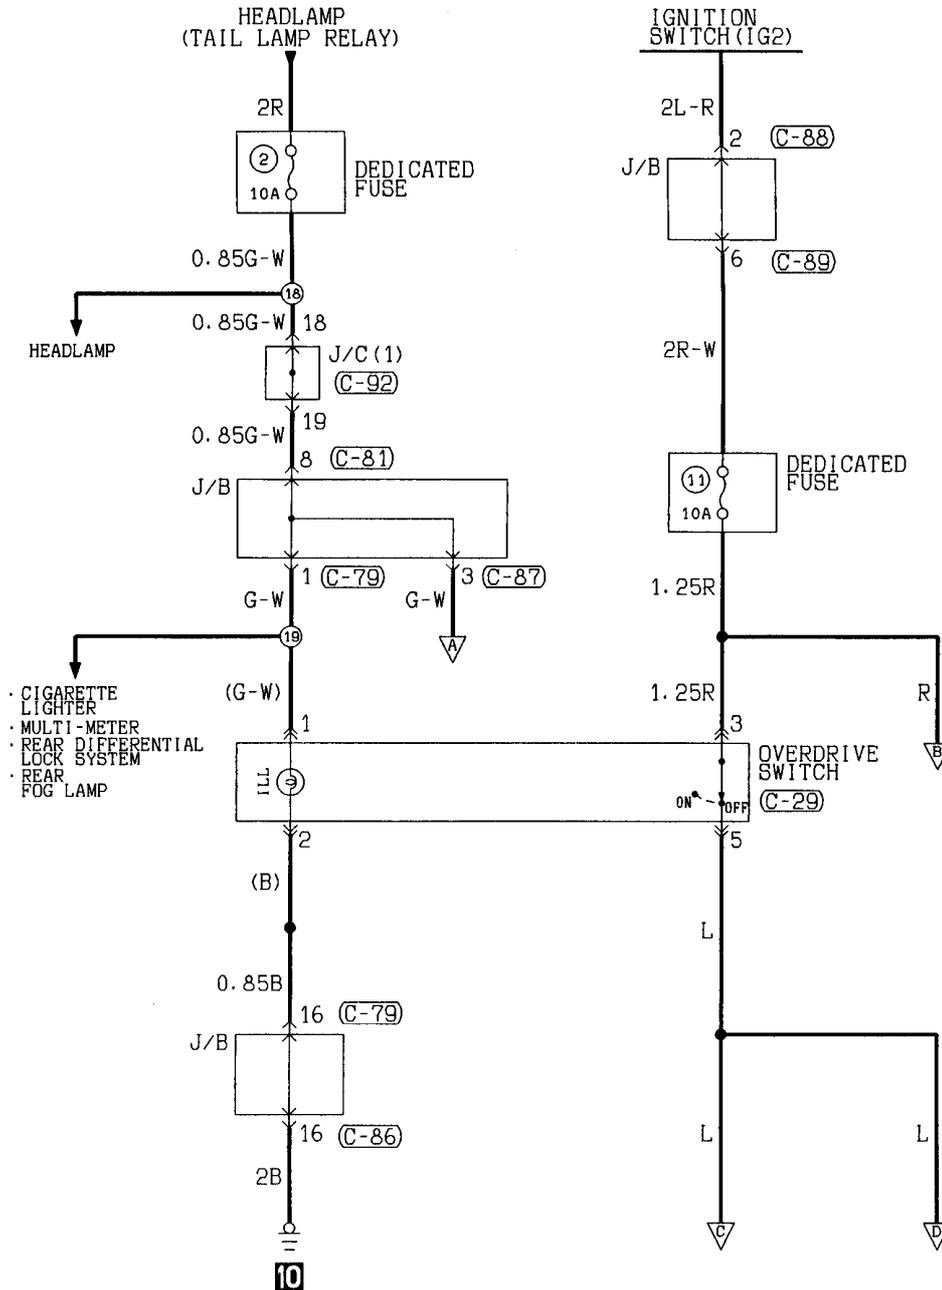

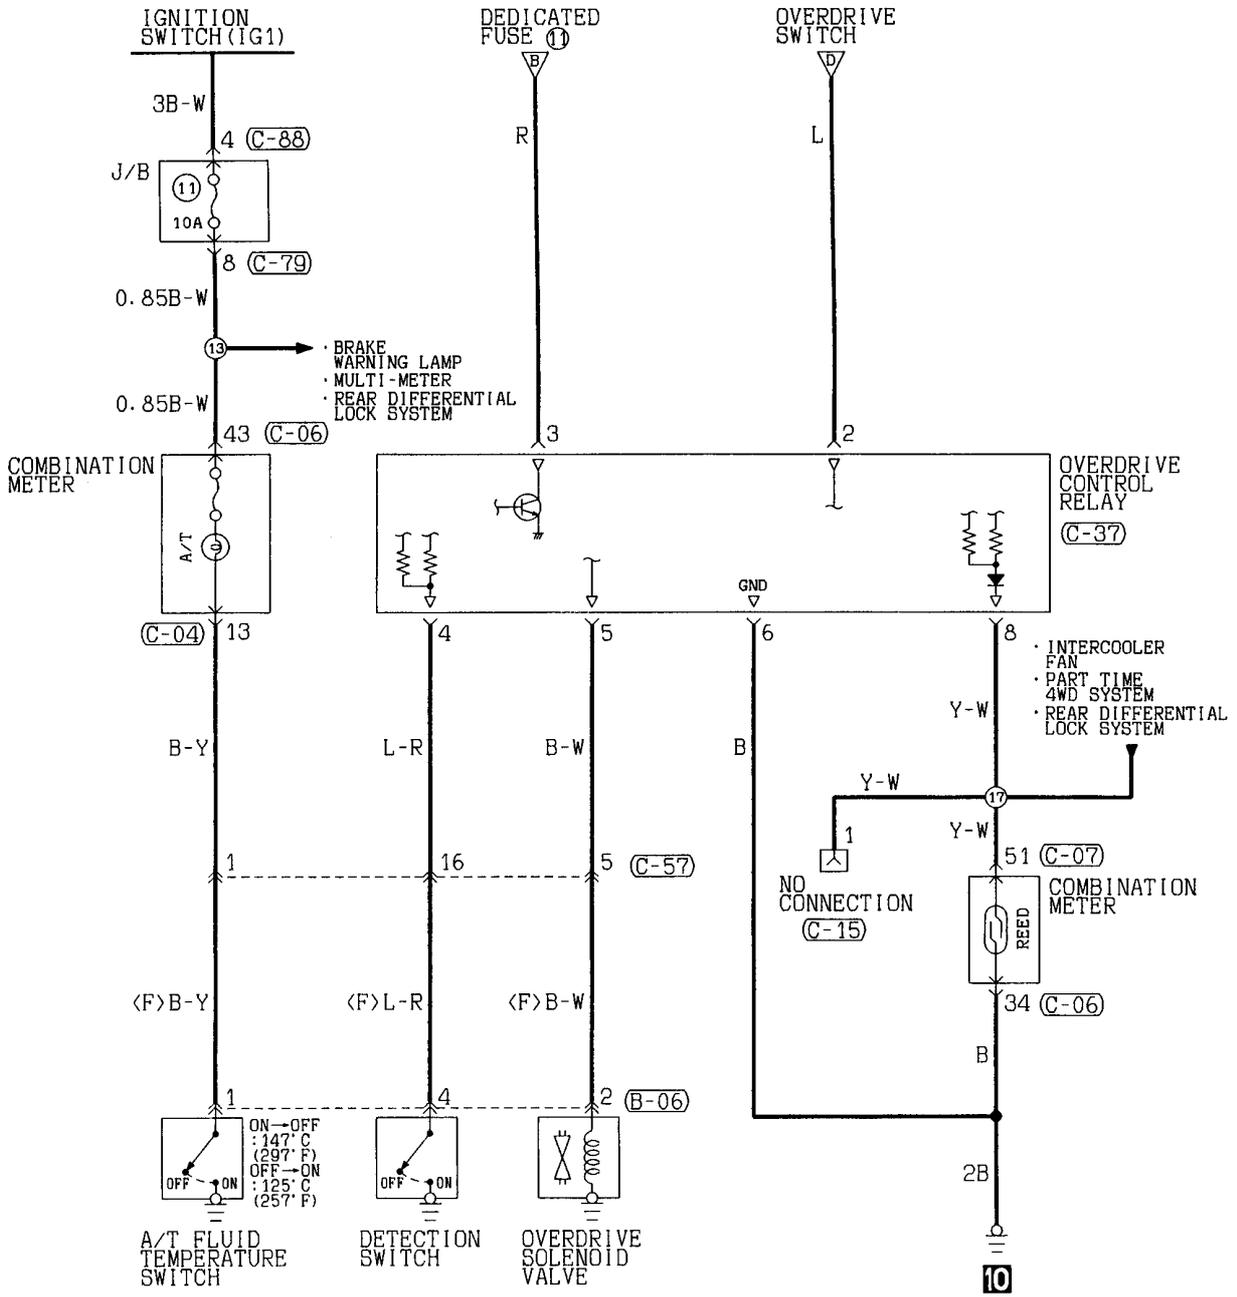

(C-57)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

(C-79)

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

(C-81)

1	2	3	4	5		
6	7	8	9	10	11	12

(C-86)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

(C-87)

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16


(C-88)

1	2
3	4


(C-89)

1	2	3		
4	5	6	7	8


OVERDRIVE CONTROL SYSTEM <4D56 (1998 Models)> (CONTINUED)

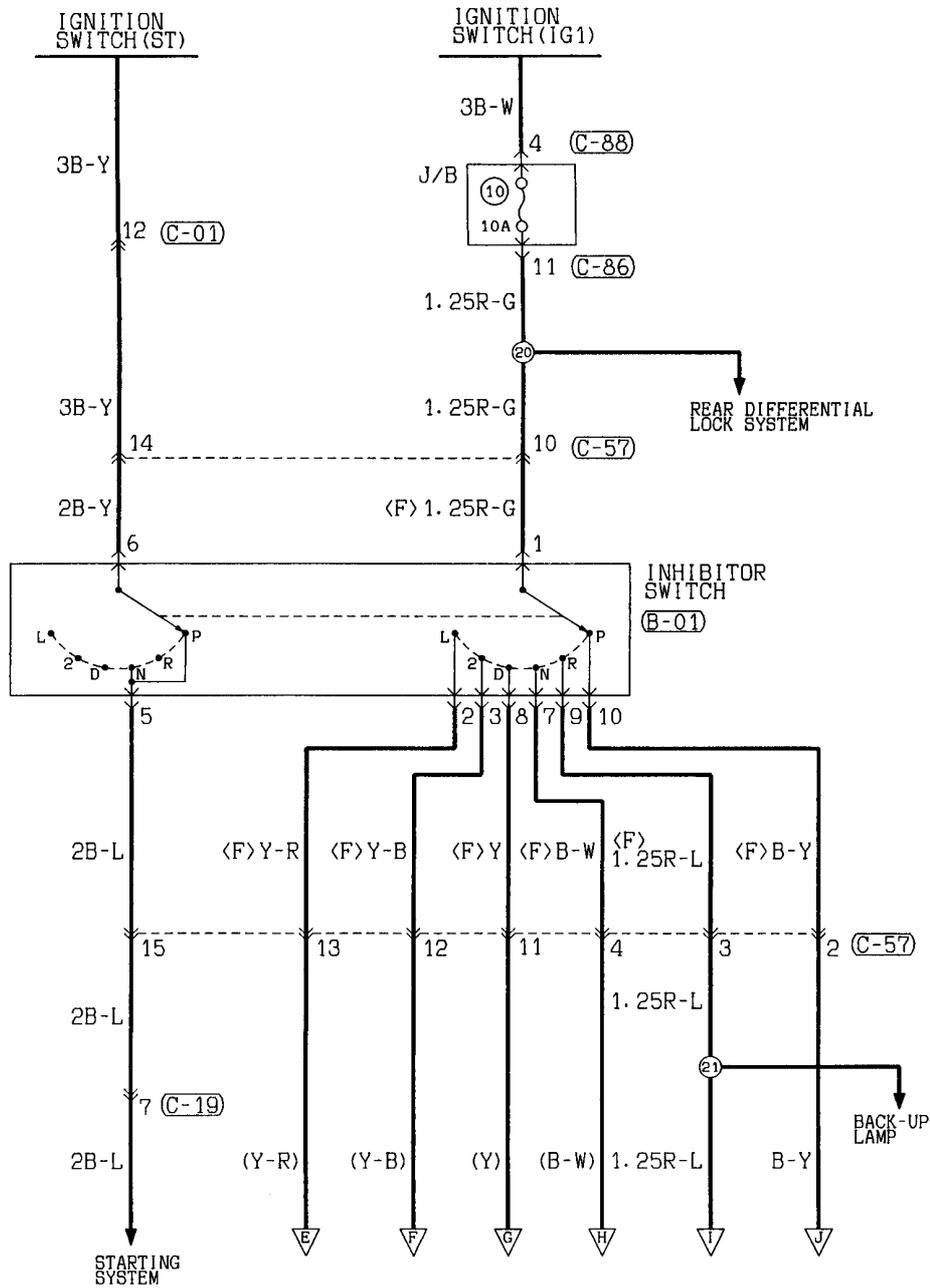


B-01

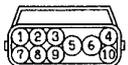


C-01

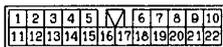


C-05

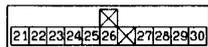

C-06

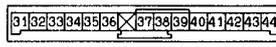


C-19

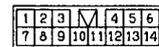

C-42



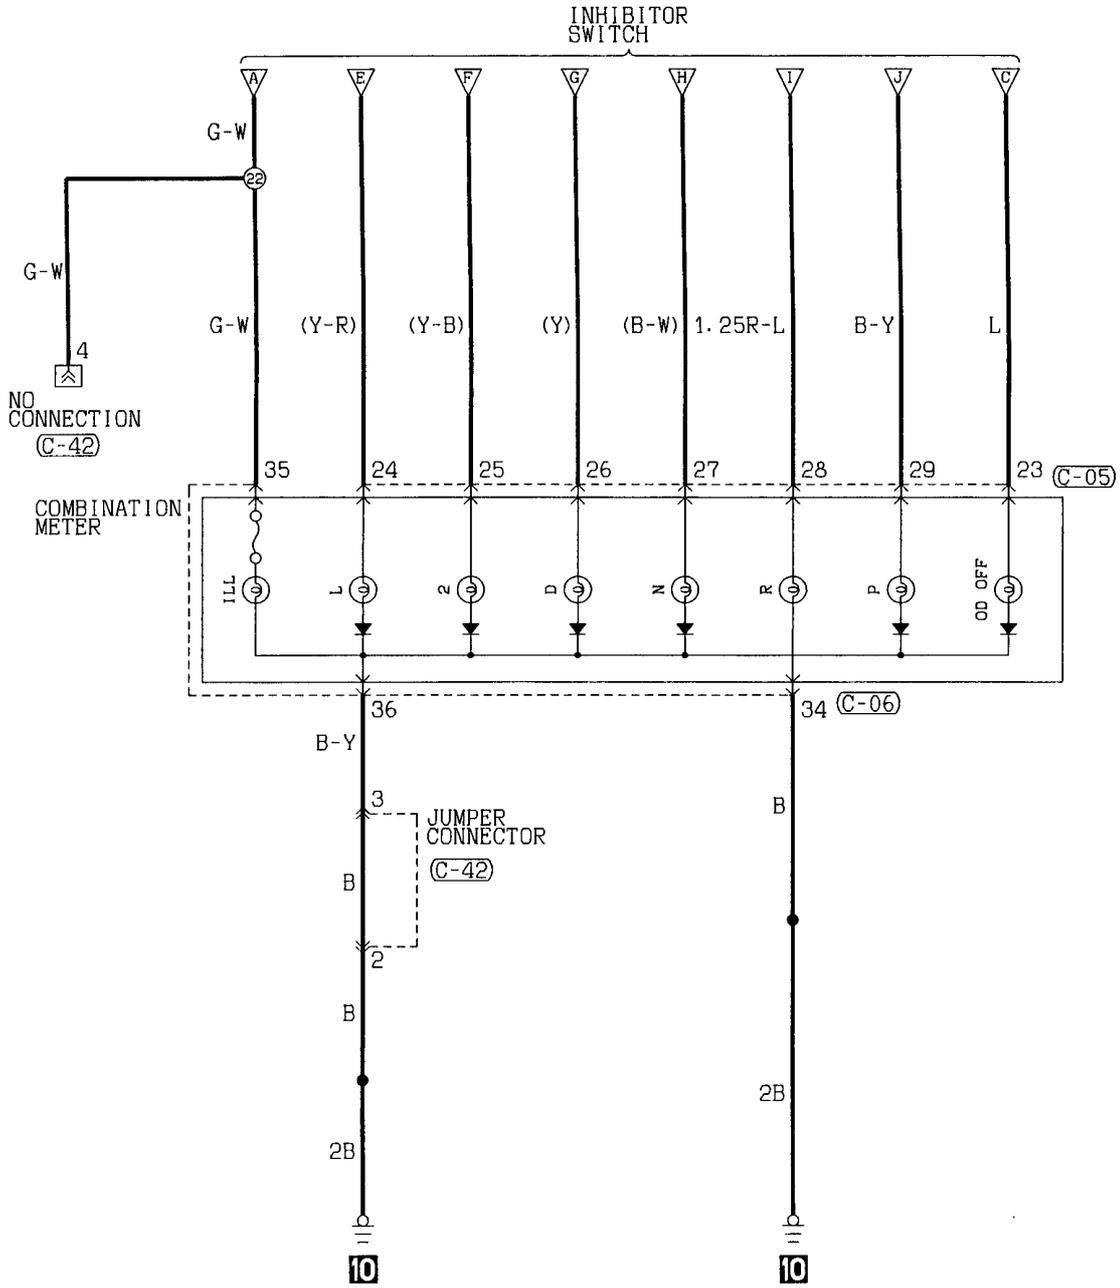

(C-57)

1	2	3	4	0	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(C-86)

1	2	3	4	0	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20



(C-88)


1	2
3	4

HEADLAMP

90100150241

L.H. drive vehicles with daytime running lamp <1997 Models>

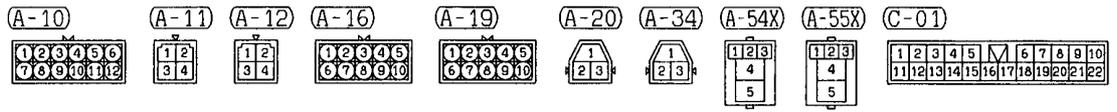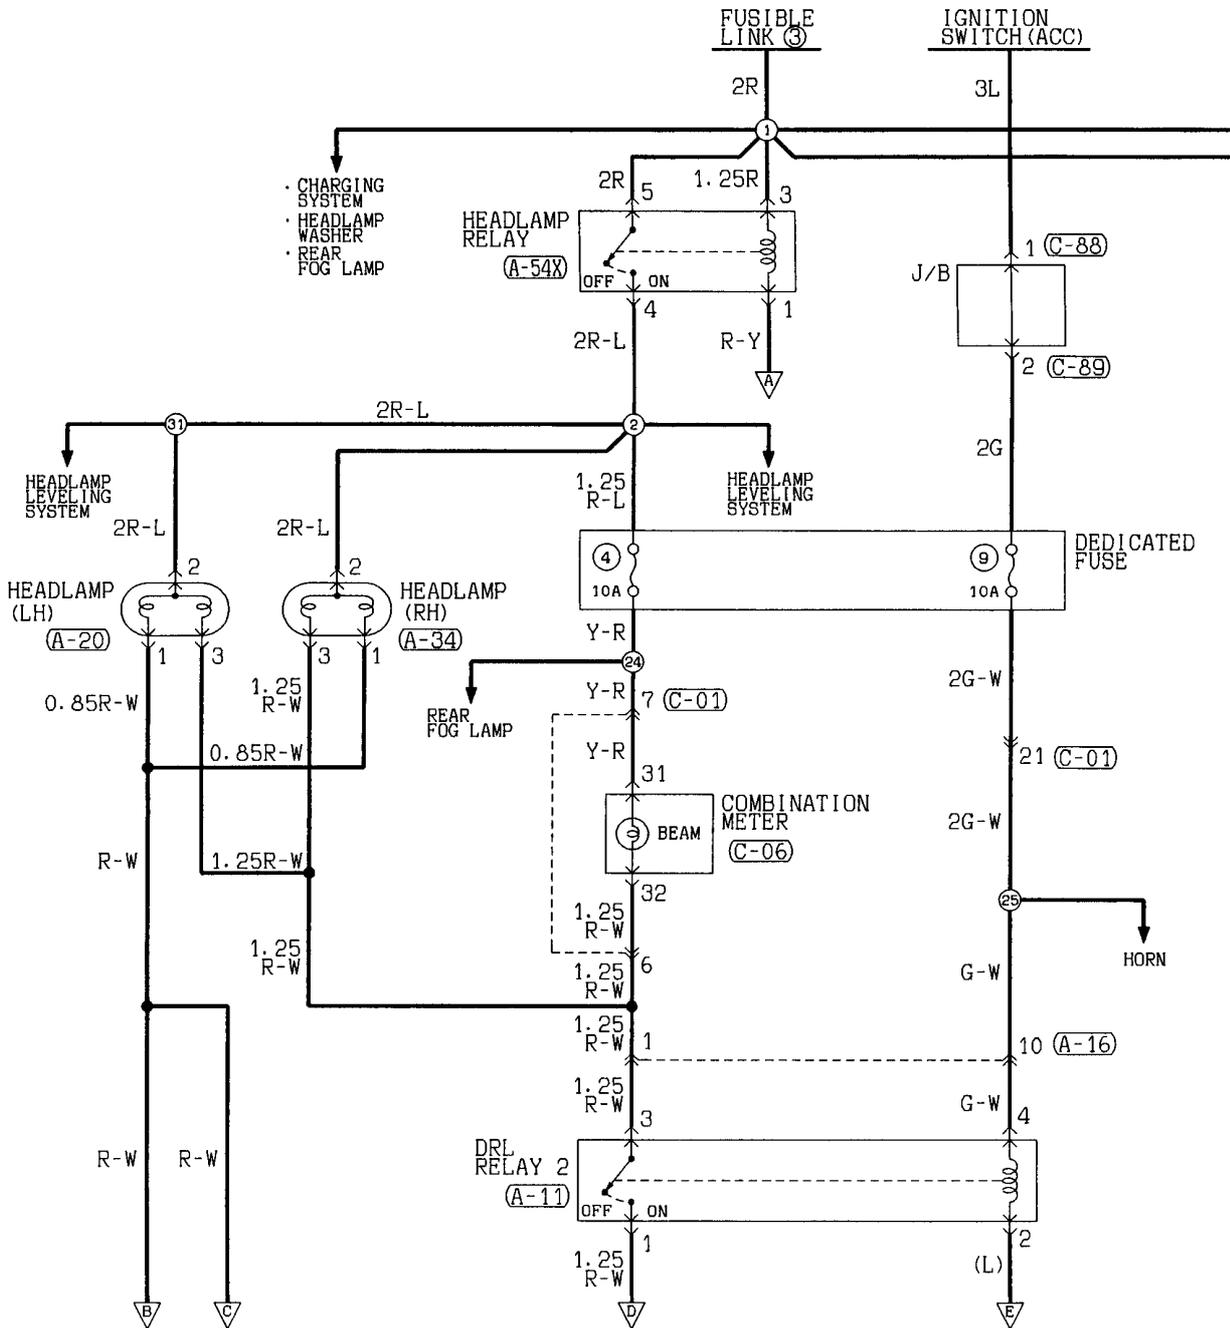

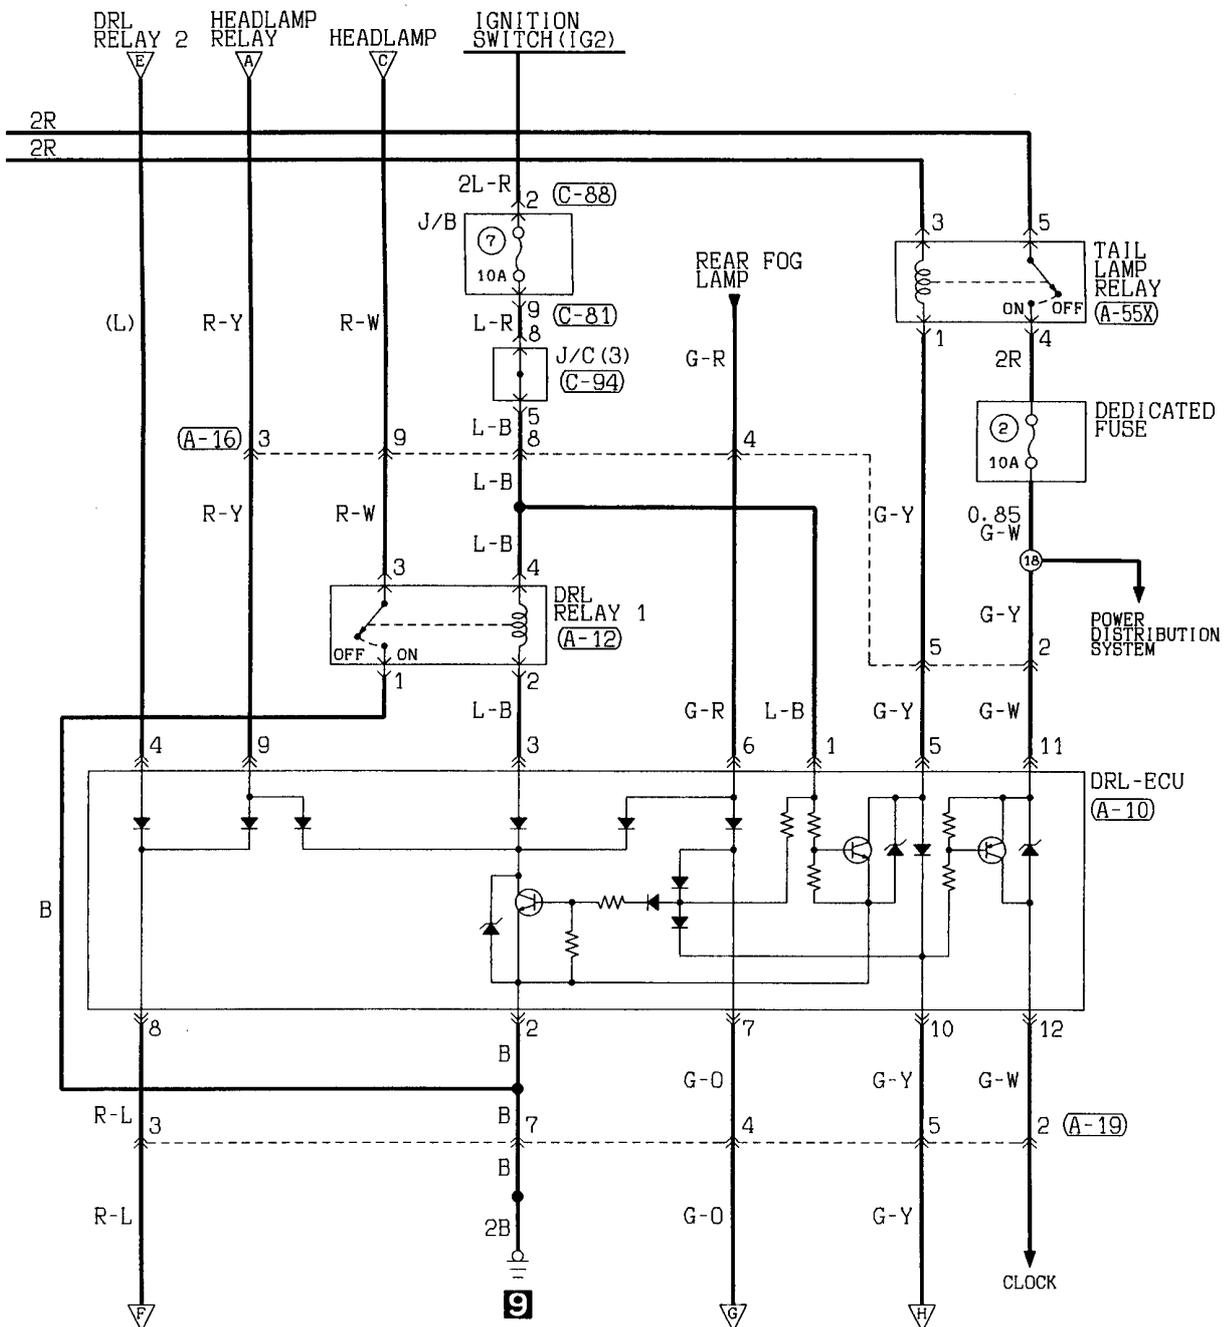

(C-06)

31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

(C-81)

1	2	3	4	5
6	7	8	9	10
11	12			

(C-88)

1	2
3	4


(C-89)

1	2	3
4	5	6
7	8	

(C-94)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					

HEADLAMP <L.H. drive vehicles with daytime running lamp (1997 Models)>
(CONTINUED)

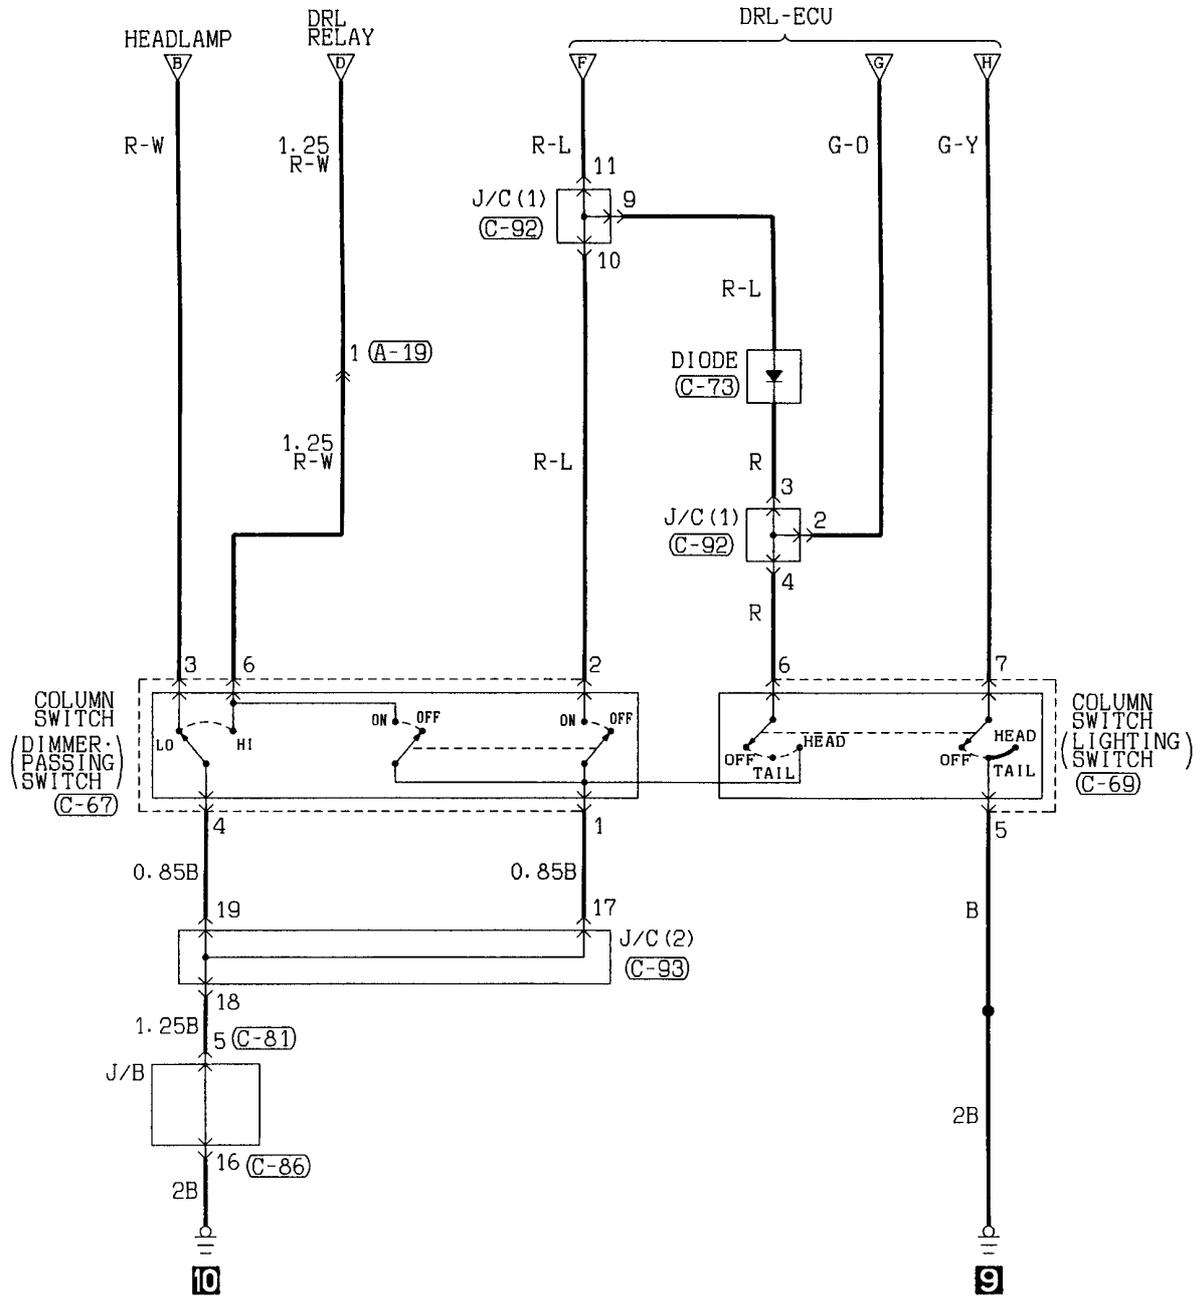

- (A-19)

1	2	3	4	5
6	7	8	9	10
- (C-67)

1	2
3	4
- (C-69)

1	2	3	4
5	6	7	8
- (C-81)

1	2	3	4	5
6	7	8	9	10
- (C-86)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
- (C-92)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
- (C-93)


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16


NOTES

HEADLAMP

90100150678

L.H. drive vehicles with daytime running lamp <1998 Models>

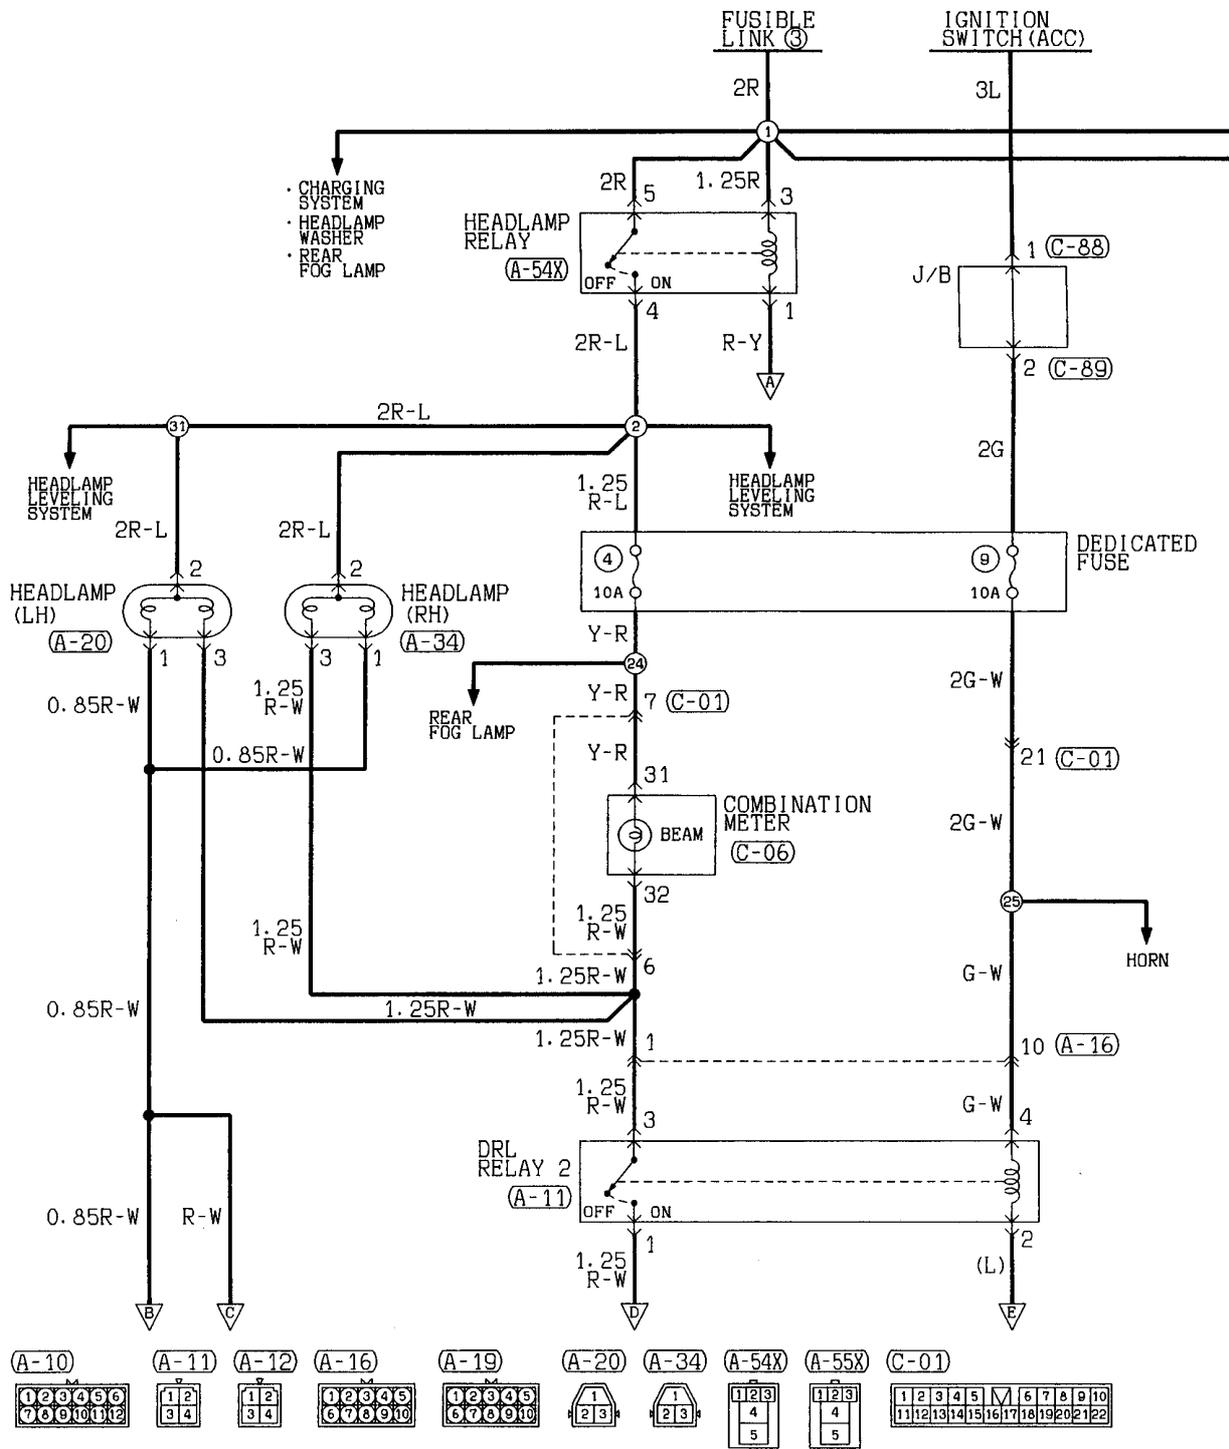

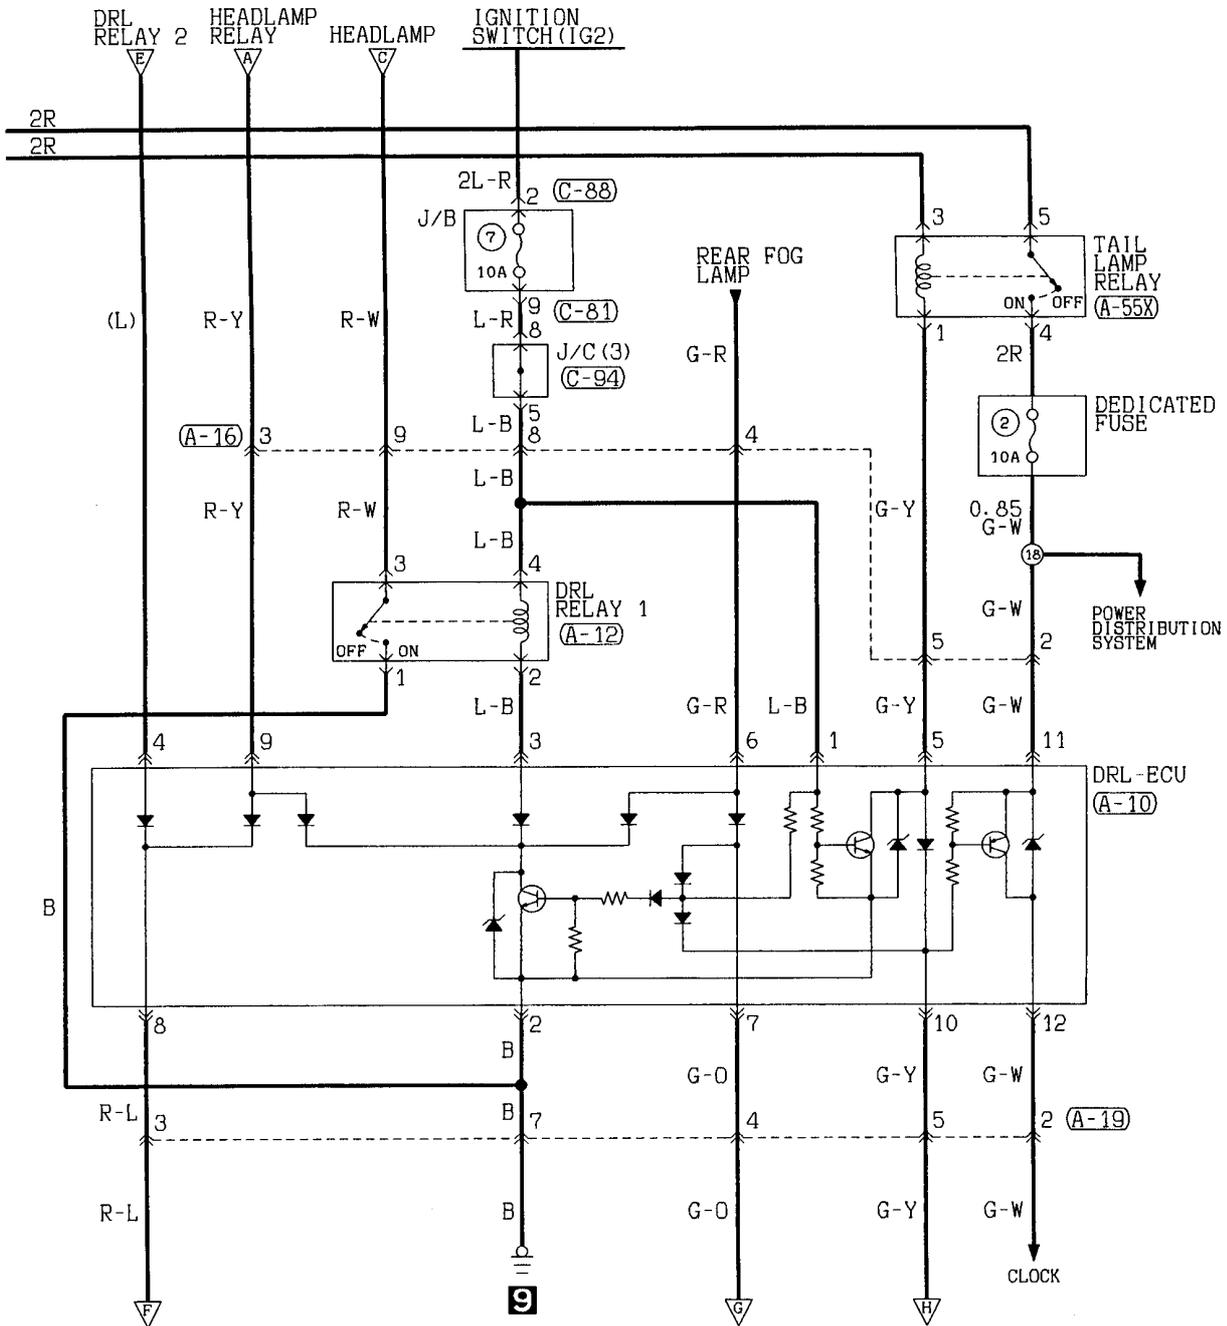

(C-06)

31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

(C-81)

1	2	3	0	4	5	
6	7	8	9	10	11	12

(C-88)

1	2
3	4



(C-89)

1	2	3		
4	5	6	7	8

(C-94)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

**HEADLAMP <L.H. drive vehicles with daytime running lamp (1998 Models)>
(CONTINUED)**

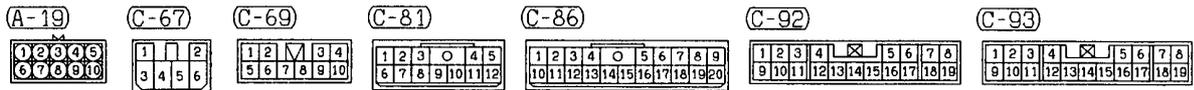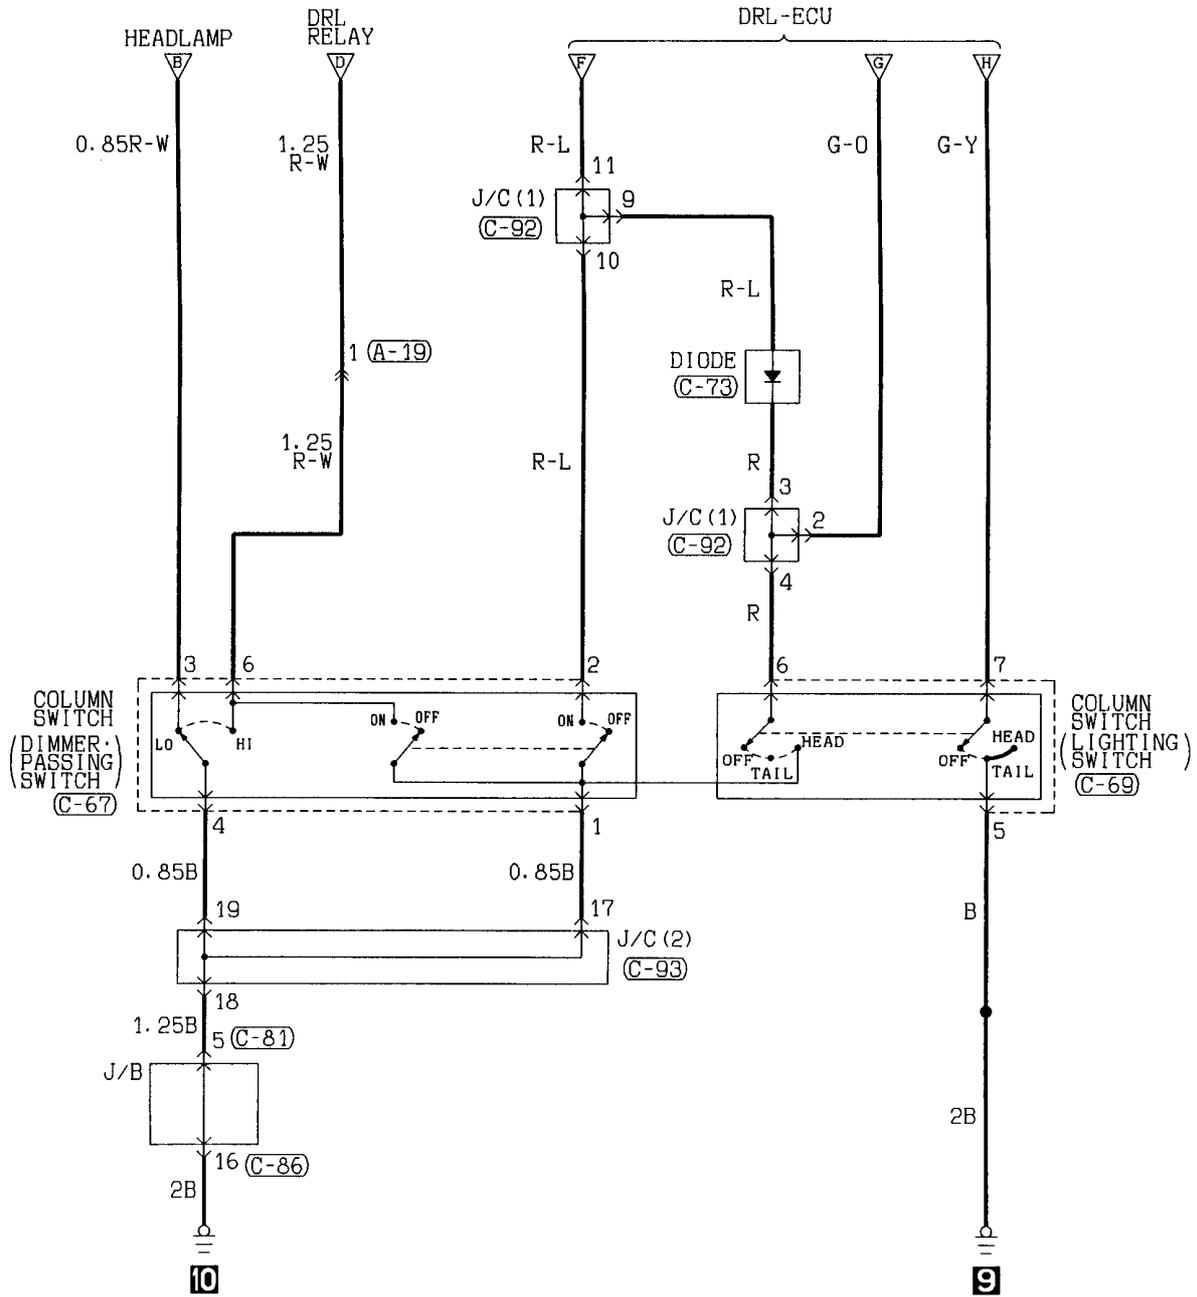

HEADLAMP <L.H. drive vehicles with daytime running lamp> (See P. 4-82, 86.)

90100150258

OPERATION

Headlamp relay activation requirements

Ignition switch	Lighting switch	Dimmer/passing switch	Headlamp relay
"ON"	"OFF"	-	On
-	"HEAD"	-	On
-	-	"PASS"	On

<Daytime running lamp operation>

- Turning the ignition switch to the ON position causes the headlamp relay, DRL relay 1, and tail lamp relay to be energized, which causes the headlamps, tail lamps, etc. to go on.

<Low-beam operation>

- Placing the lighting switch in the HEAD position causes the headlamp relay and DRL relay 2 to be energized.
- If the dimmer/passing switch is placed in the LO position at this time, the headlamps light up in low beam.

<Upper-beam operation>

- Placing the lighting switch in the HEAD position causes the headlamp relay and DRL relay 2 to be energized.
- If the dimmer/passing switch is placed in the HI position at this time, the headlamps light up in upper beam.

<Upper-beam indicator lamp>

- This lamp lights up when the upper/passing beams are on, indicating that the headlamps are on in upper beam.

<Passing operation>

- When the dimmer/passing switch is set to the "ON" position, the headlamp relay is switched ON and the upper beam of the headlamps illuminates.


TROUBLESHOOTING HINTS


- Headlamps don't go on.
 - But the tail lamps do illuminate.
 - Check the headlamp relay.
 - Check the lighting switch.
 - The tail lamps also don't illuminate.
 - Check the fusible link No. (3).
- The low beam at both sides doesn't illuminate.
 - Check the dimmer switch LO contacts.
- The upper beam at both sides doesn't illuminate.
 - The passing signal functions OK.
 - Check the dimmer switch HI contacts.
 - The passing signal does not function.
 - Check the dimmer switch.
 - Check the DRL relay 2.
 - Check the DRL-ECU.
- One headlamp doesn't illuminate.
 - Check the lamp bulb.
- Can't switch from low to upper beam or vice-versa.
 - Check the dimmer switch.
- With the ignition switch at the "ON" position, the headlamps' low beam does not illuminate.
 - Check the DRL relay 1.
 - Check the DRL-ECU.
- Upper-beam indicator lamp does not go on.
 - Headlamp upper beams are operational.
 - Check dedicated fuse No. (4).
 - Check the indicator lamp bulb.

HEADLAMP

90100150265

L.H. drive vehicles without daytime running lamp <1997 Models>

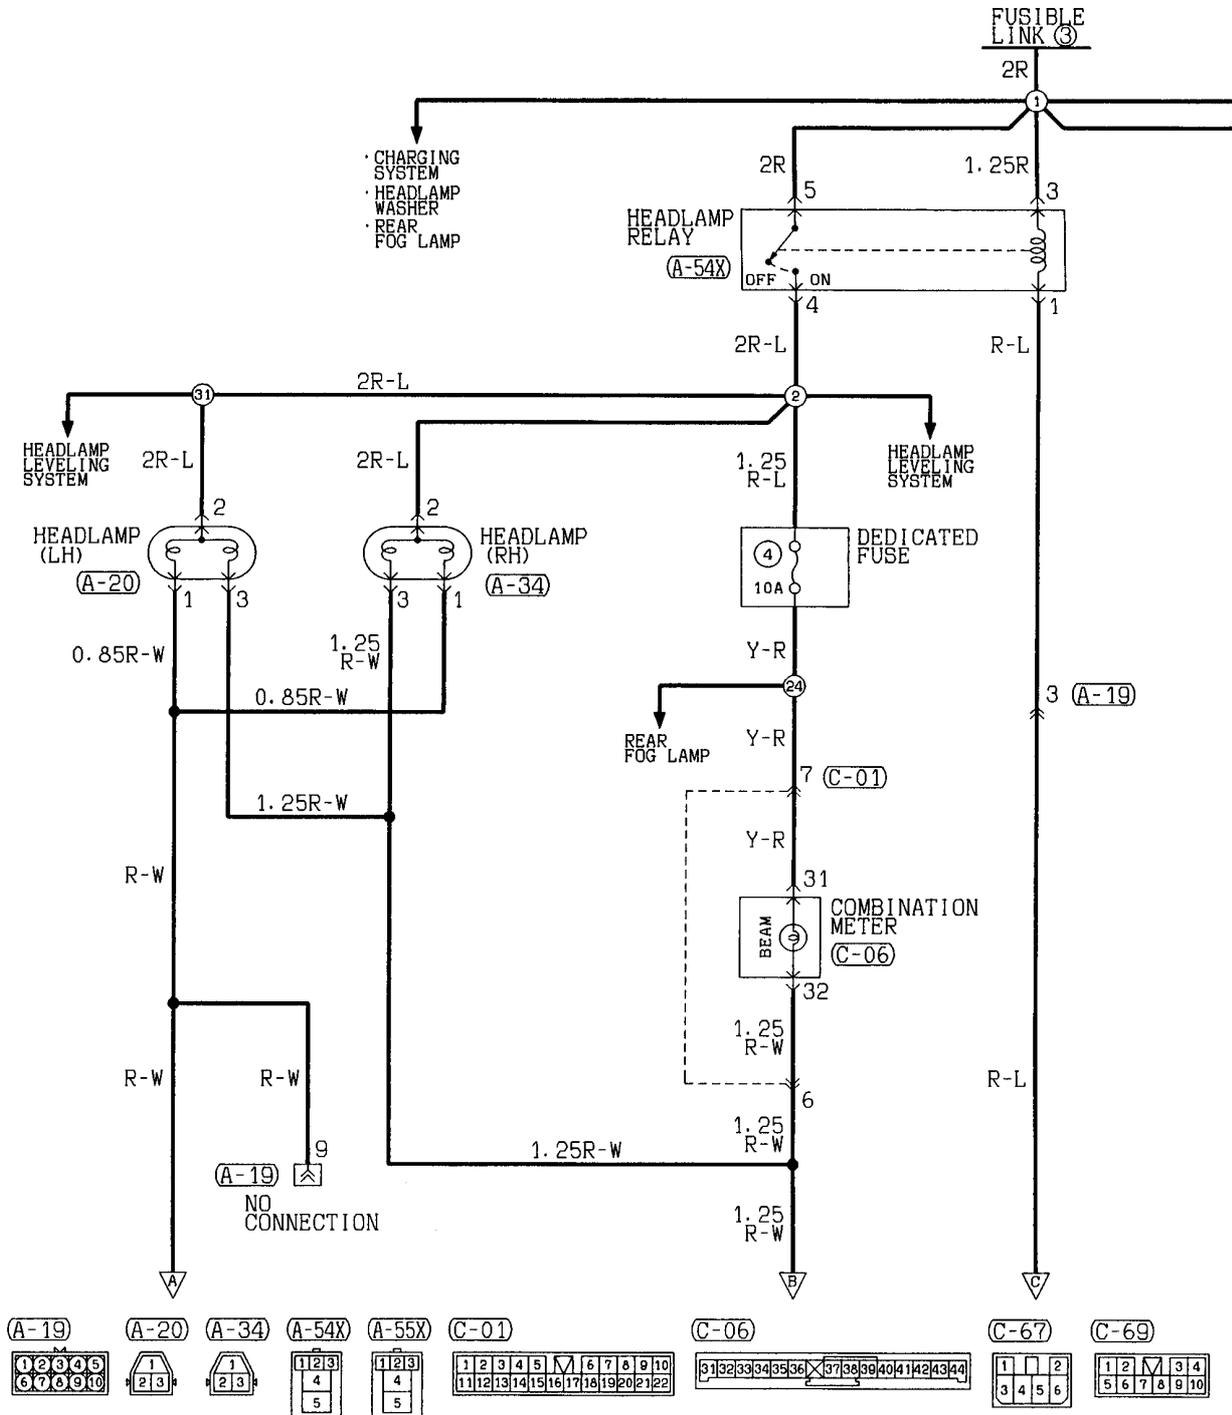

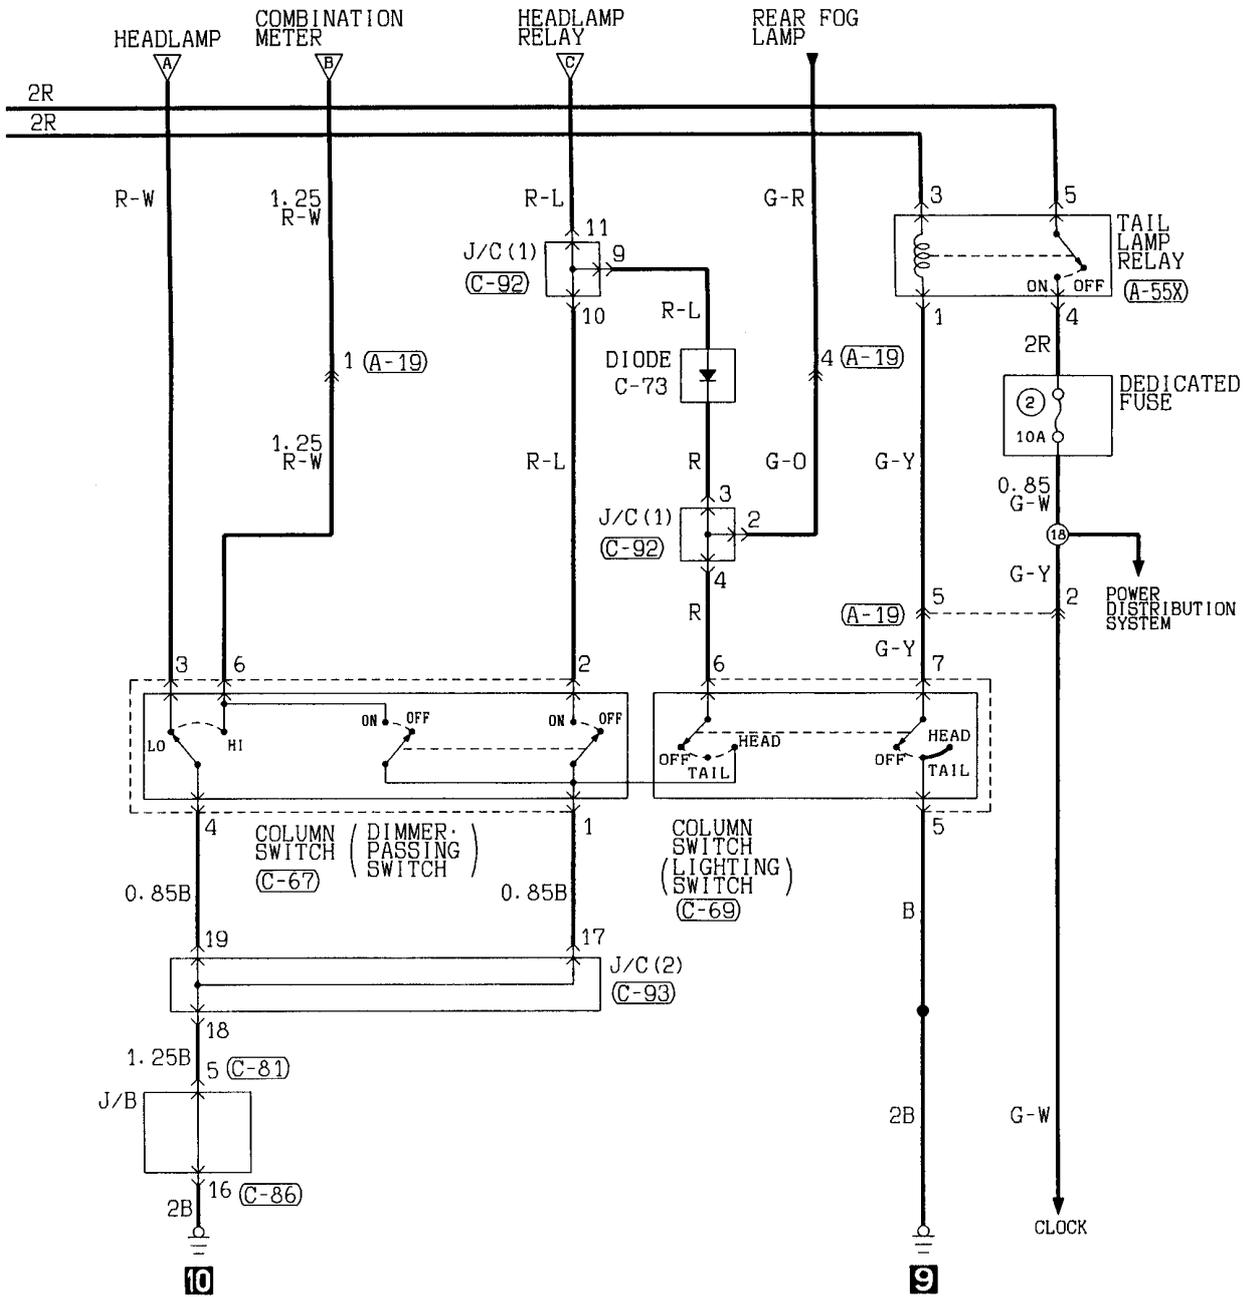

(C-81)

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20

(C-86)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

(C-92)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					


(C-93)


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					

HEADLAMP


90100150685

L.H. drive vehicles without daytime running lamp <1998 Models>

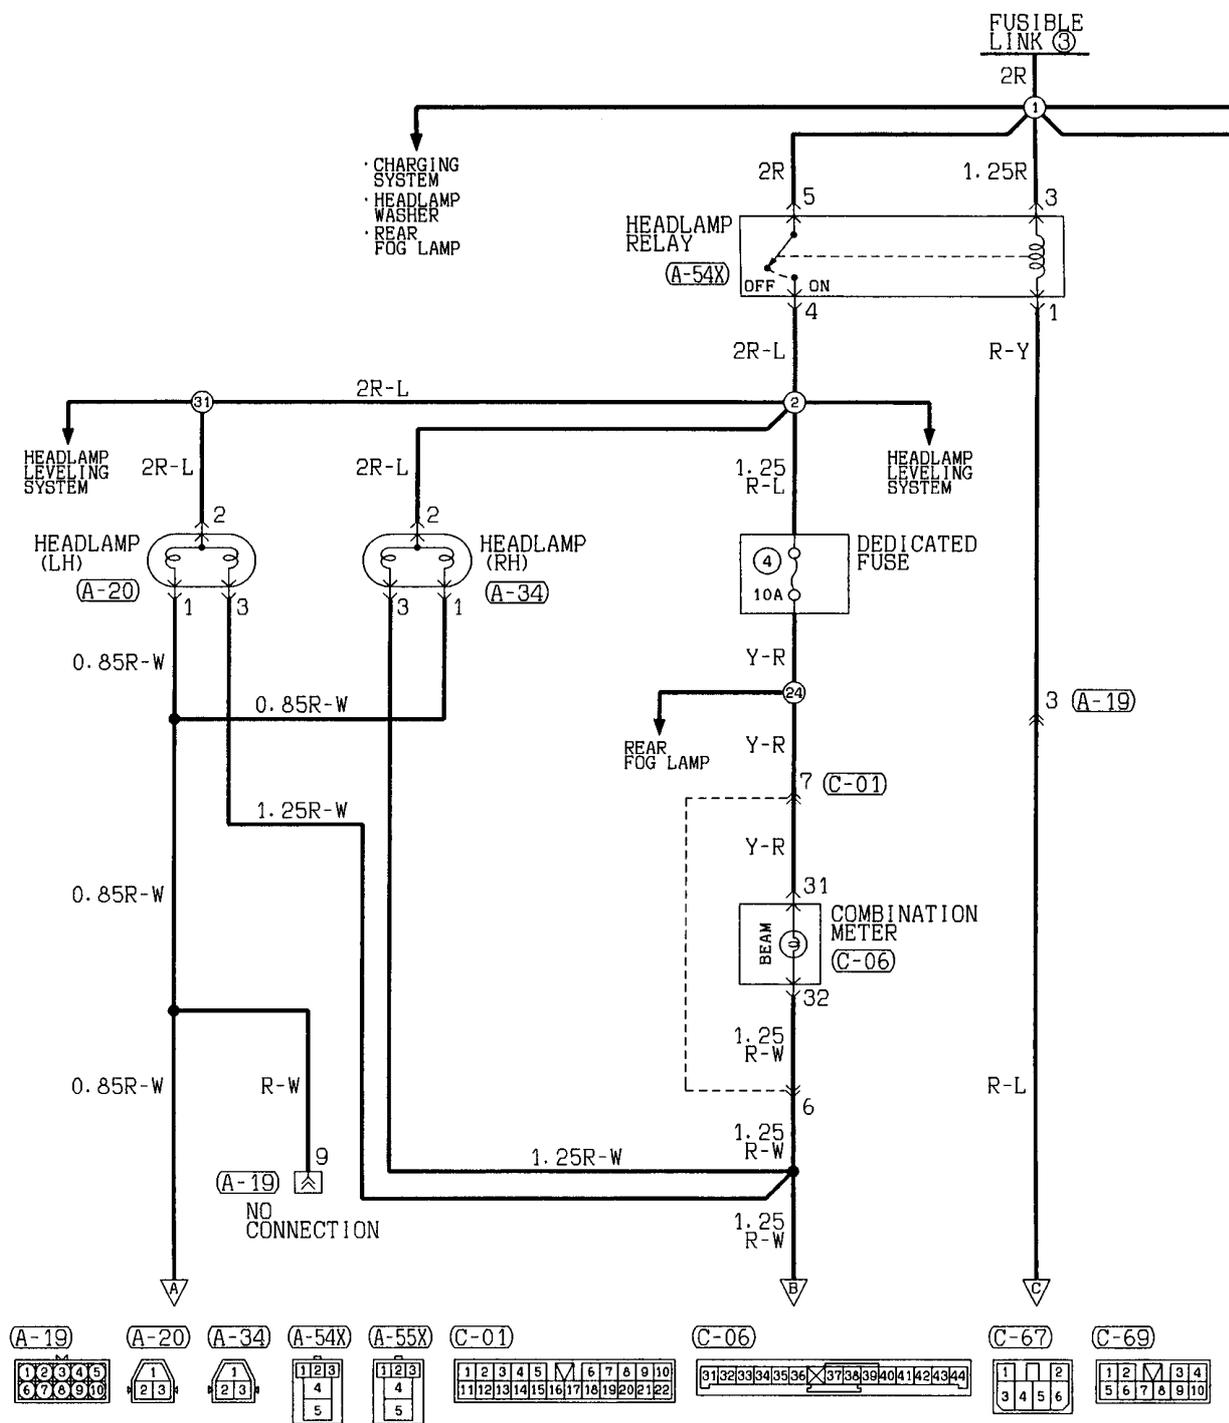


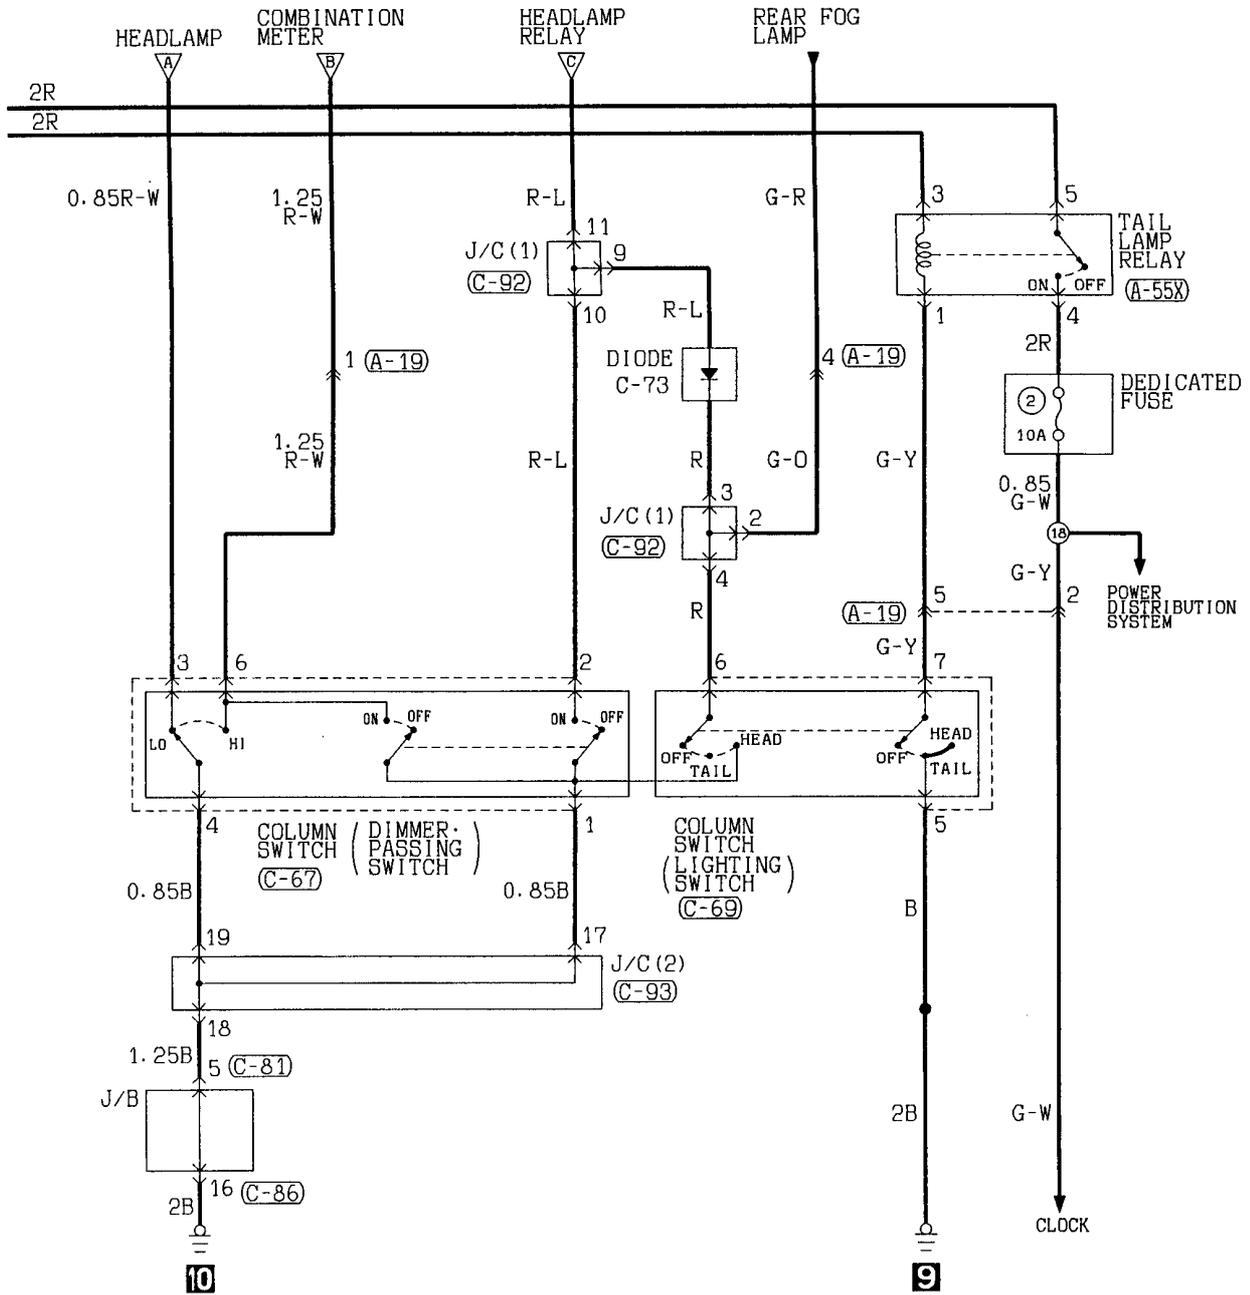


C-81

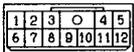


C-86

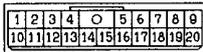

C-92

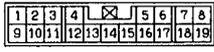

C-93

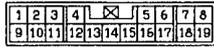

HEADLAMP <L.H. drive Vehicles without daytime running lamp> (See P. 4-90, 92.)

90100150272

OPERATION

Headlamp relay activation requirements

Lighting switch	Dimmer/passing switch	Headlamp relay
"HEAD"	-	On
-	"ON"	On

<Low-beam operation>

- Placing the lighting switch in the HEAD position causes the headlamp relay to be energized.
- If the dimmer/passing switch is placed in the LO position at this time, the headlamps light up in low beam.

<Upper-beam operation>

- Placing the lighting switch in the HEAD position causes the headlamp relay to be energized.
- If the dimmer/passing switch is placed in the HI position at this time, the headlamps light up in upper beam.

<Upper-beam Indicator lamp>

- This lamp lights up when the upper/passing beams are on, indicating that the headlamps are on in upper beam.

<Passing operation>

- When the dimmer/passing switch is set to the "ON" position, the headlamp relay is switched ON and the upper beam of the headlamps illuminates.

TROUBLESHOOTING HINTS

- Headlamps don't go on.
 - But the tail lamps illuminate.
 - Check the headlamp relay.
 - Check the lighting switch.
 - The tail lamps also don't illuminate.
 - Check the fusible link No. (3).
- The low beam at both sides doesn't illuminate.
 - Check the dimmer switch LO contacts.
- The upper beam at both sides doesn't illuminate.
 - The passing signal functions OK.
 - Check the dimmer switch HI contacts.
 - The passing signal does not function.
 - Check the dimmer switch.
- One headlamp doesn't illuminate.
 - Check the lamp bulb.
- Can't switch from low to upper beam or vice-versa.
 - Check the dimmer switch.
- Upper-beam indicator lamp does not go on.
 - Headlamp upper beams are operational.
 - Check dedicated fuse No. (4).
 - Check the indicator lamp bulb.

HEADLAMP <R.H. drive vehicles> (See P. 4-96, 98.)

90100150289

OPERATION

Headlamp relay activation requirements

Ignition switch	Lighting switch	Dimmer/passing switch	Headlamp relay
"ON"	"TAIL"	-	On
-	"HEAD"	-	On
-	-	"PASS"	On

<Dim-dip lamp operation>

- Placing the lighting switch in the TAIL position causes dim-dip lamp relay 1 to be energized.
- This causes the headlamp relay to be also energized resulting in the headlamps being lit up dimly through the circuit by way of resistor.

<Low-beam operation>

- Placing the lighting switch in the HEAD position causes the headlamp relay, dim-dip lamp relay 2 and dim-dip lamp relay 3 to be energized.
- If the dimmer/passing switch is placed in the LO position at this time, the headlamps light up in low beam.

<Upper-beam operation>

- Placing the lighting switch in the HEAD position causes the headlamp relay, dim-dip lamp relay 2 and dim-dip lamp relay 3 to be energized.
- If the dimmer/passing switch is placed in the HI position at this time, the headlamps light up in upper beam.

<Upper-beam Indicator lamp>


- This lamp lights up when the upper/passing beams are on, indicating that the headlamps are on in upper beam.

<Passing operation>

- When the dimmer/passing switch is set to the "ON" position, the headlamp relay is switched ON and the upper beam of the headlamps illuminates.

TROUBLESHOOTING HINTS

- Headlamps don't go on.
 - But the tail lamps do illuminate.
 - Check the headlamp relay.
 - Check the lighting switch.
 - Check the dim-dip lamp relays 2 and 3.
 - The tail lamps also don't illuminate.
 - Check the fusible link No. (3).
- The low beam at both sides doesn't illuminate.
 - Check the dimmer switch LO contacts.
- The upper beam at both sides doesn't illuminate.
 - The passing signal functions OK.
 - Check the dimmer switch HI contacts.
 - The passing signal does not function.
 - Check the dimmer switch.
- One headlamps doesn't illuminate.
 - Check the lamp bulb.
- Can't switch from low to upper beam or vice-versa.
 - Check the dimmer switch.
- The headlamp low beam does not illuminate at the "TAIL" position of the lighting switch.
 - The low beam does illuminate, however, when, with lighting switch at the "HEAD" position, the dimmer switch is set to "LO".
 - Check the dim-dip lamp relay 1.
 - Check the resistor.
 - Check the diode.
- Upper-beam indicator lamp does not go on.
 - Headlamp upper beams are operational.
 - Check dedicated fuse No. (4).
 - Check the indicator lamp bulb.

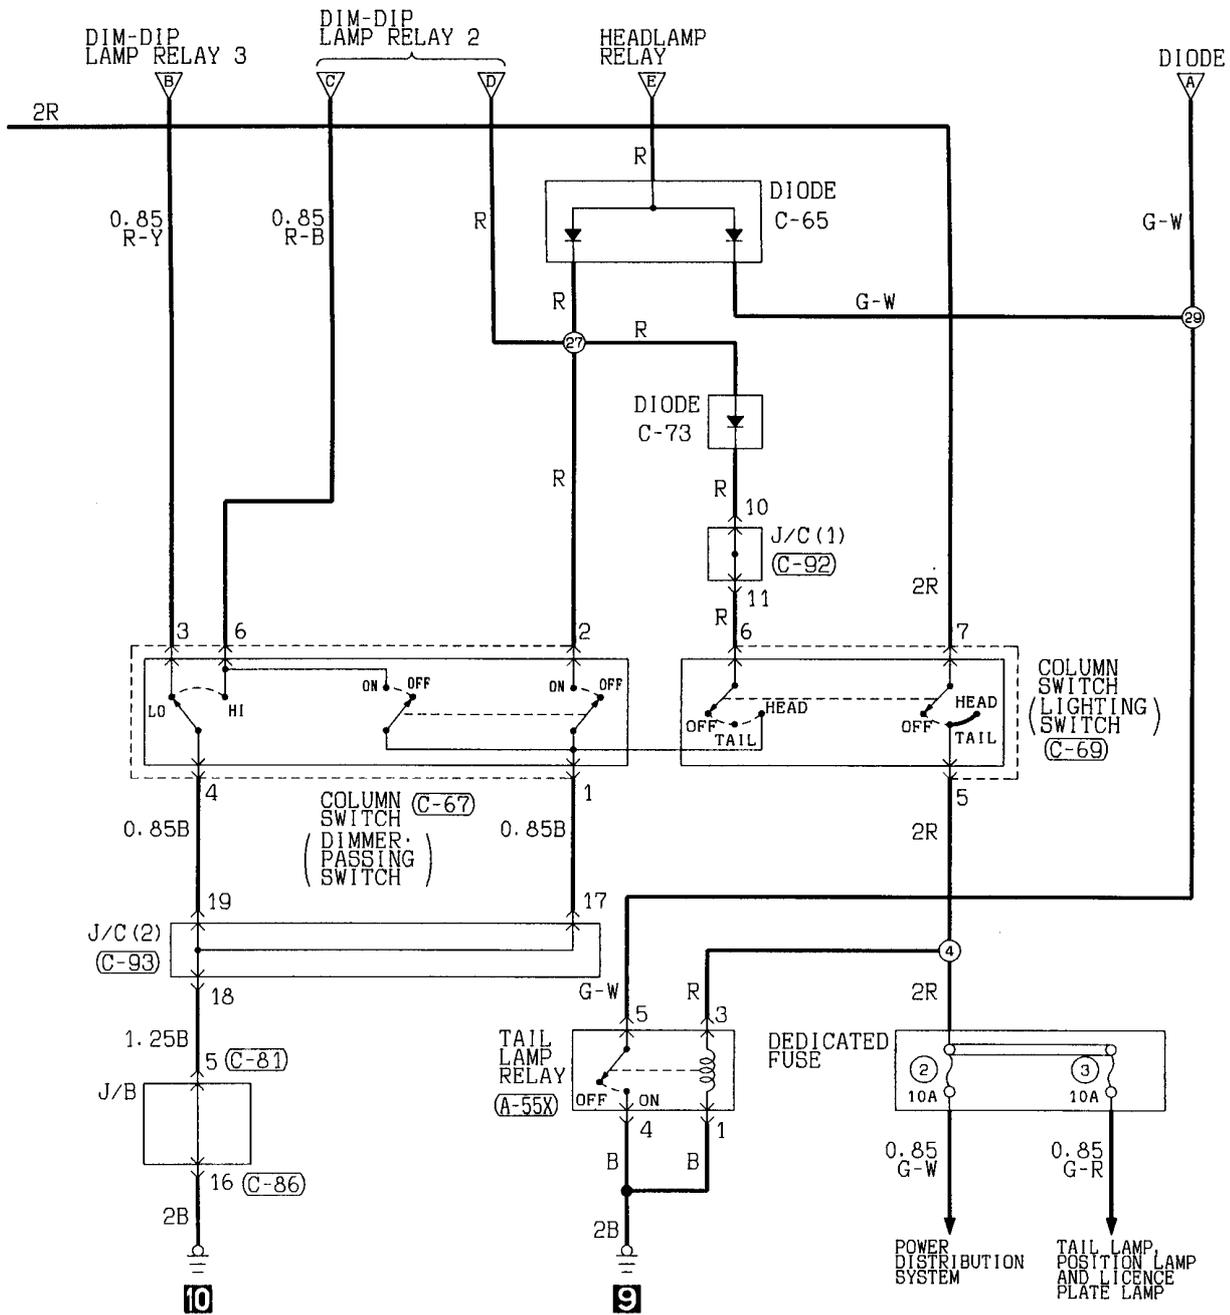

C-67

1	2
3	4
5	6

C-69

1	2	3	4
5	6	7	8
9	10		

C-81

1	2	3	4	5
6	7	8	9	10
11	12			

C-86

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

C-88

1	2
3	4

C-92

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					


C-93


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					

HEADLAMP

90100150692

R.H. drive vehicles <1998 Models>

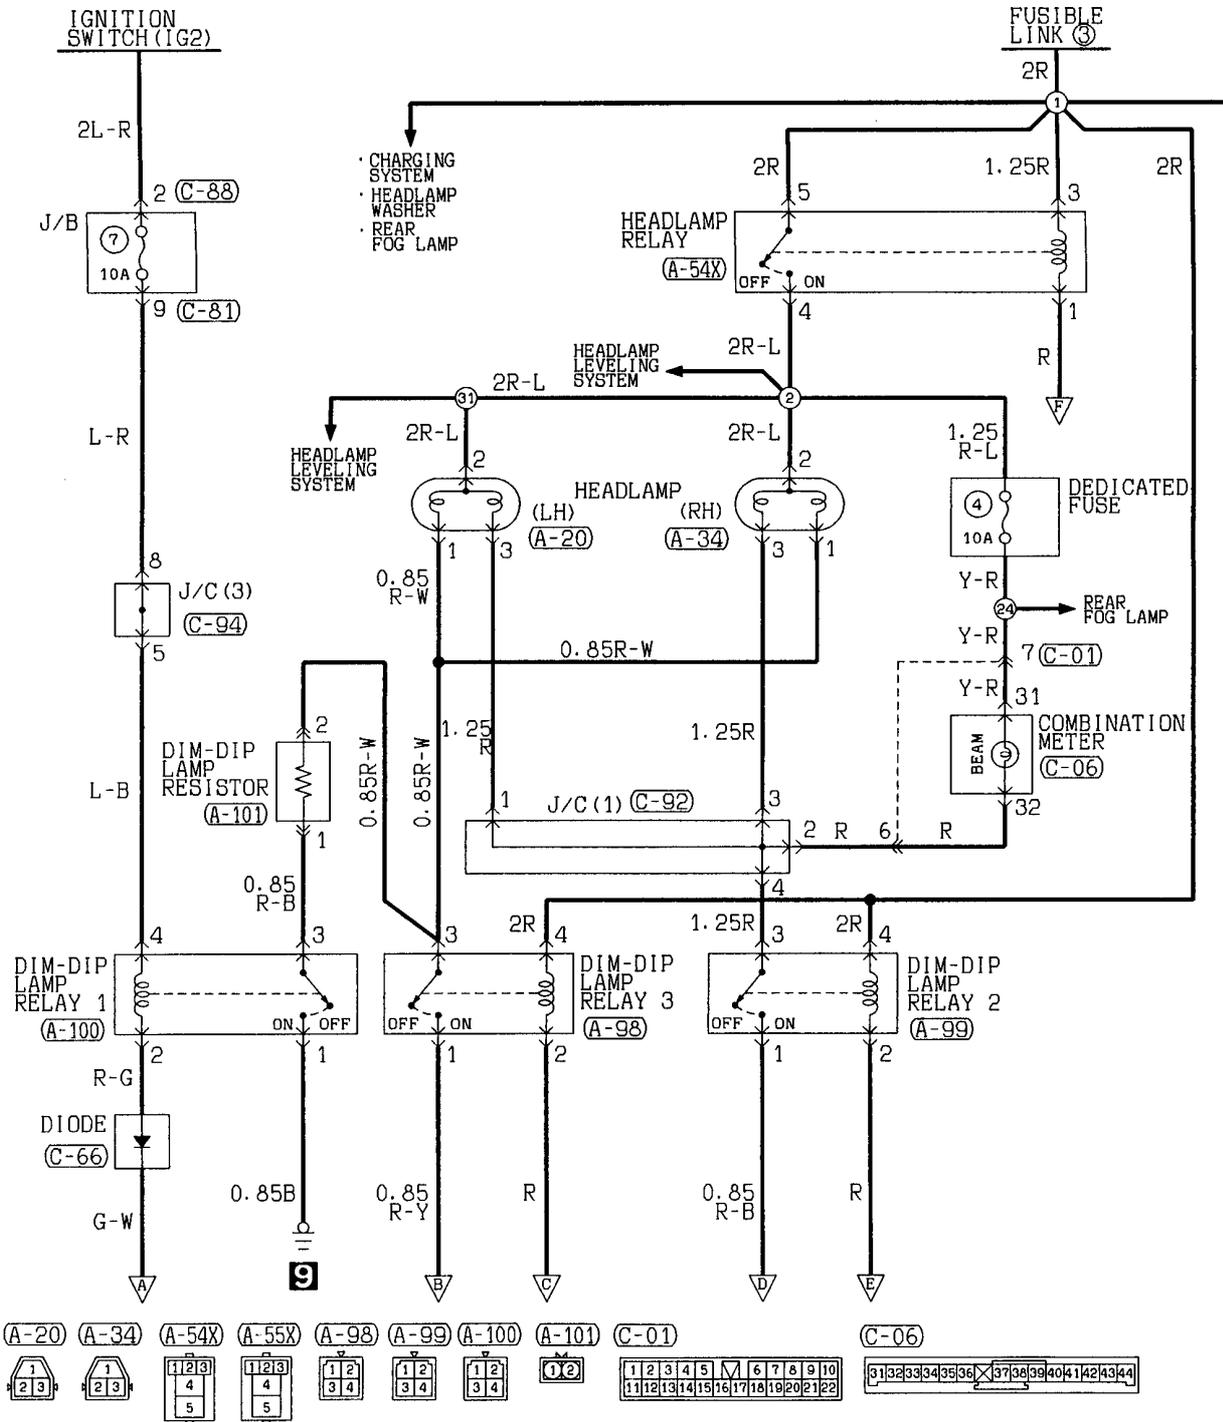

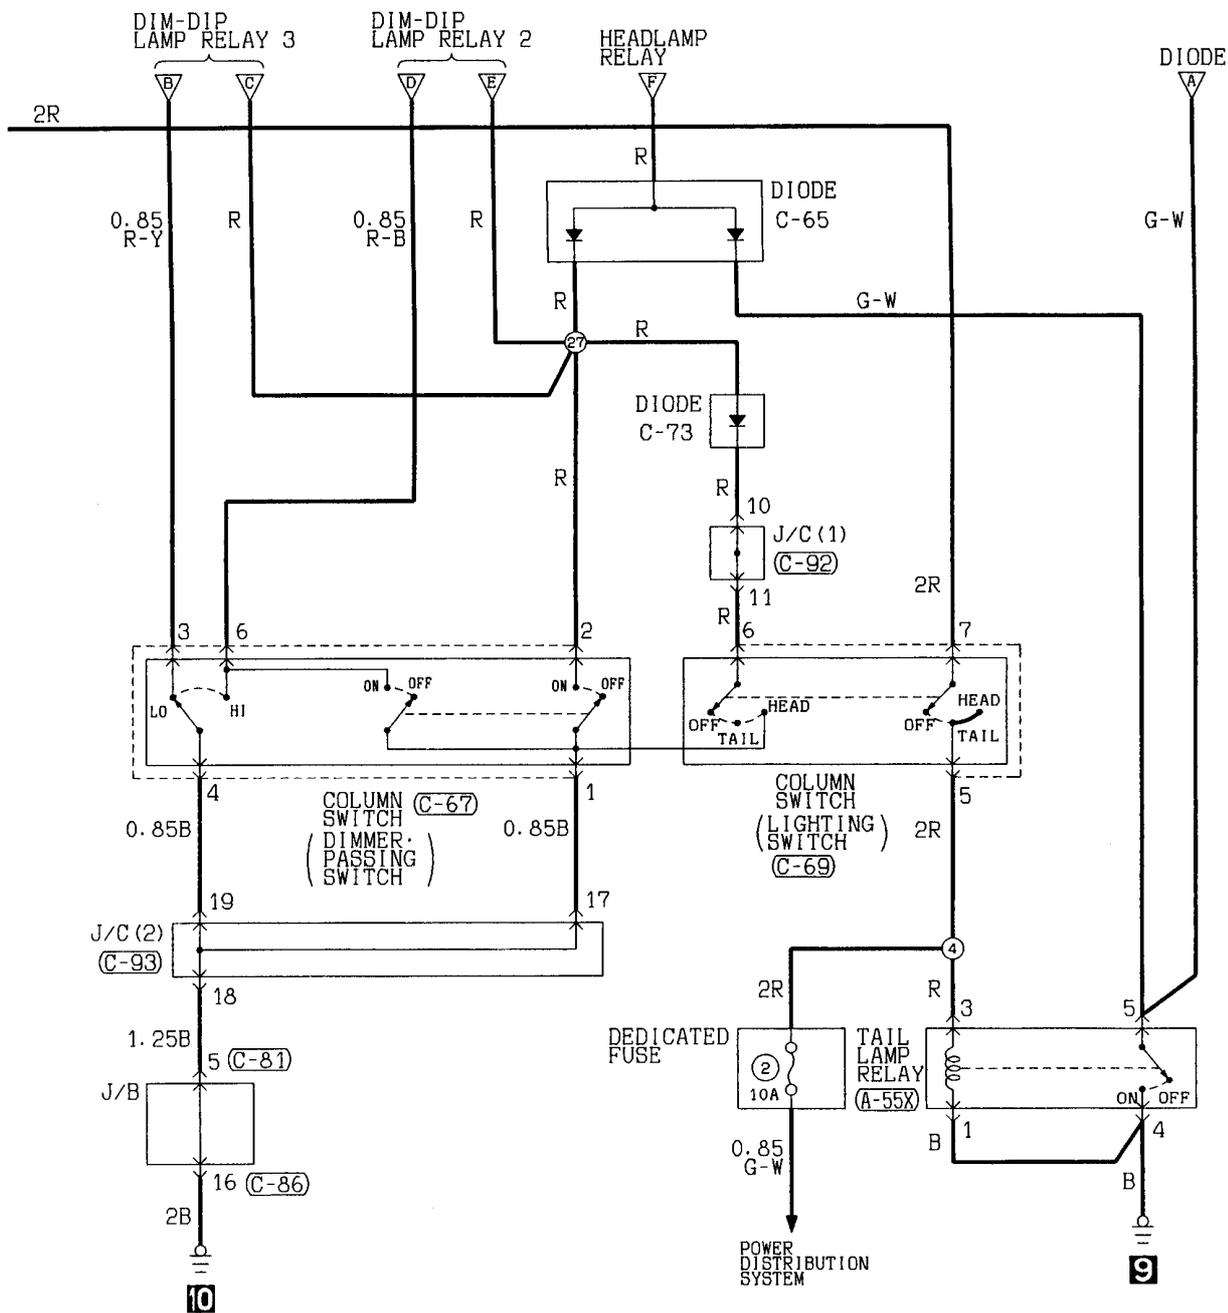

C-67

1	2
3	4
5	6

C-69

1	2	3	4
5	6	7	8
9	10	11	12

C-81

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15

C-86

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27

C-88

1	2
3	4

C-92

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24


C-93

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24


TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP

90101260158


L.H. drive vehicles <1997 Models>

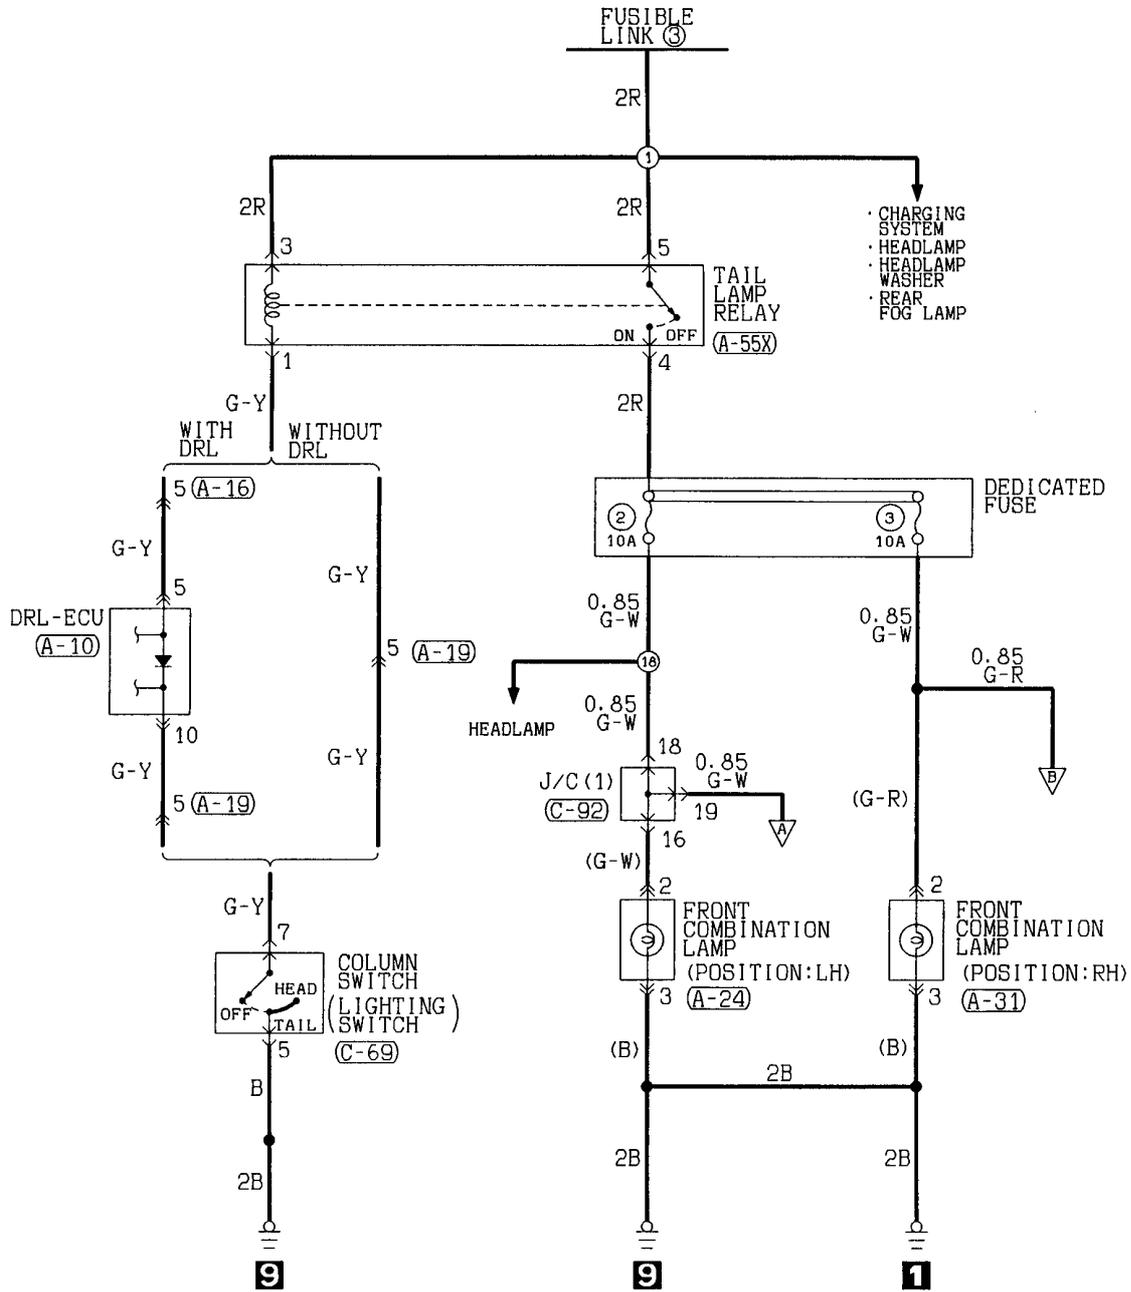


(A-10)

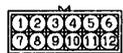

(A-16)

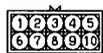

(A-19)

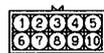

(A-24)




(A-31)




(A-55X)




(C-01)

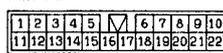

(C-69)


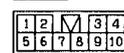


(C-81)

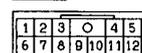

(F-14)






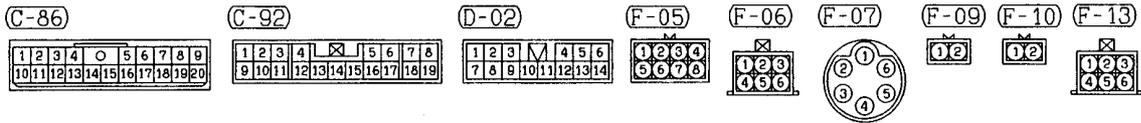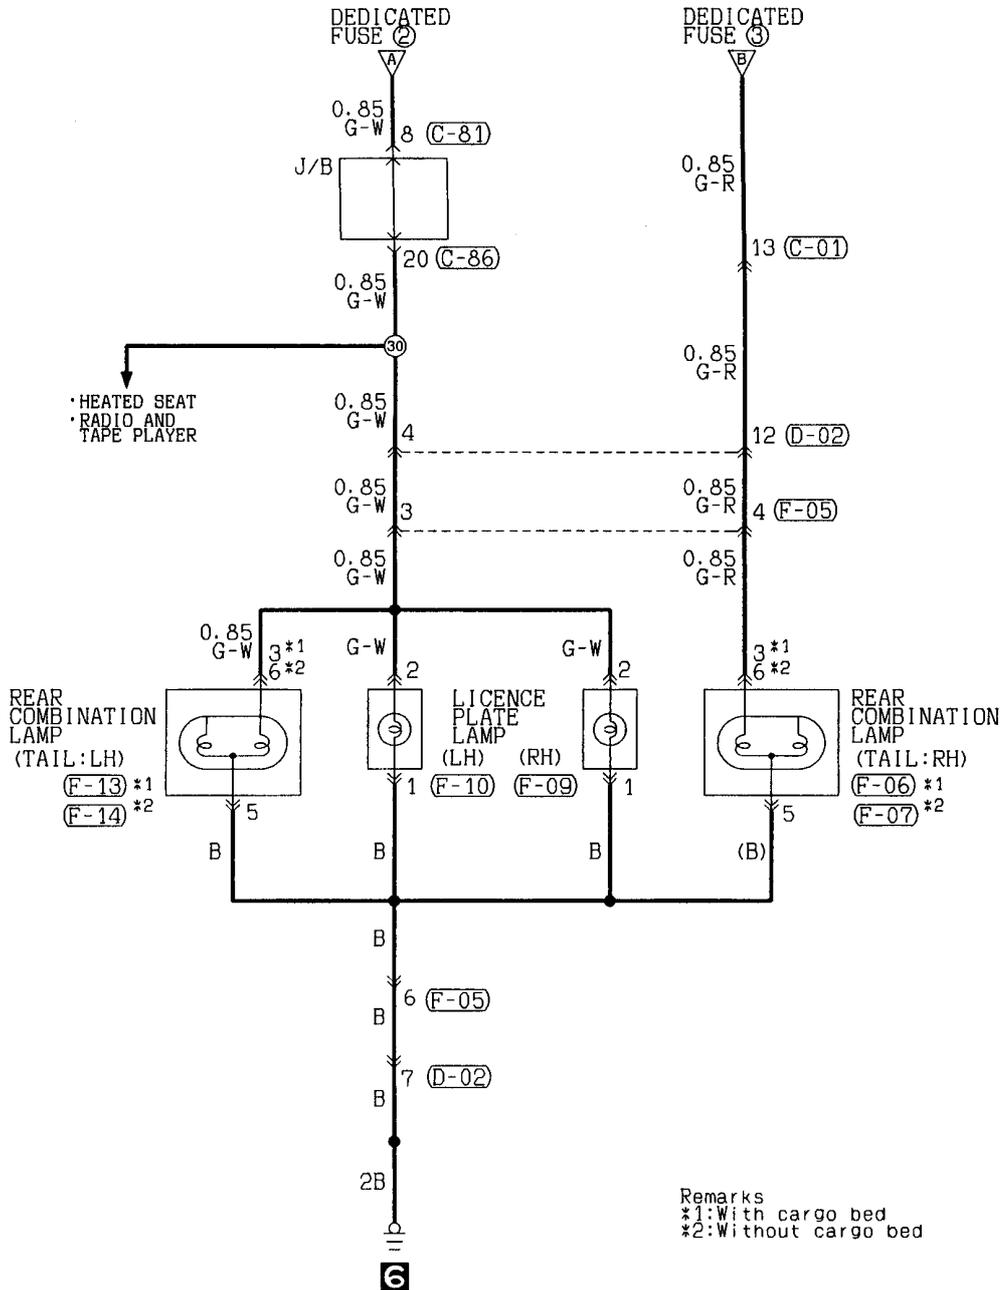


TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP


90101260318

L.H. drive vehicles <1998 Models>

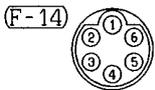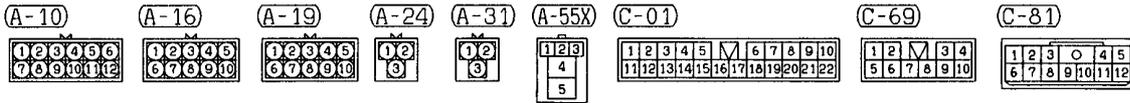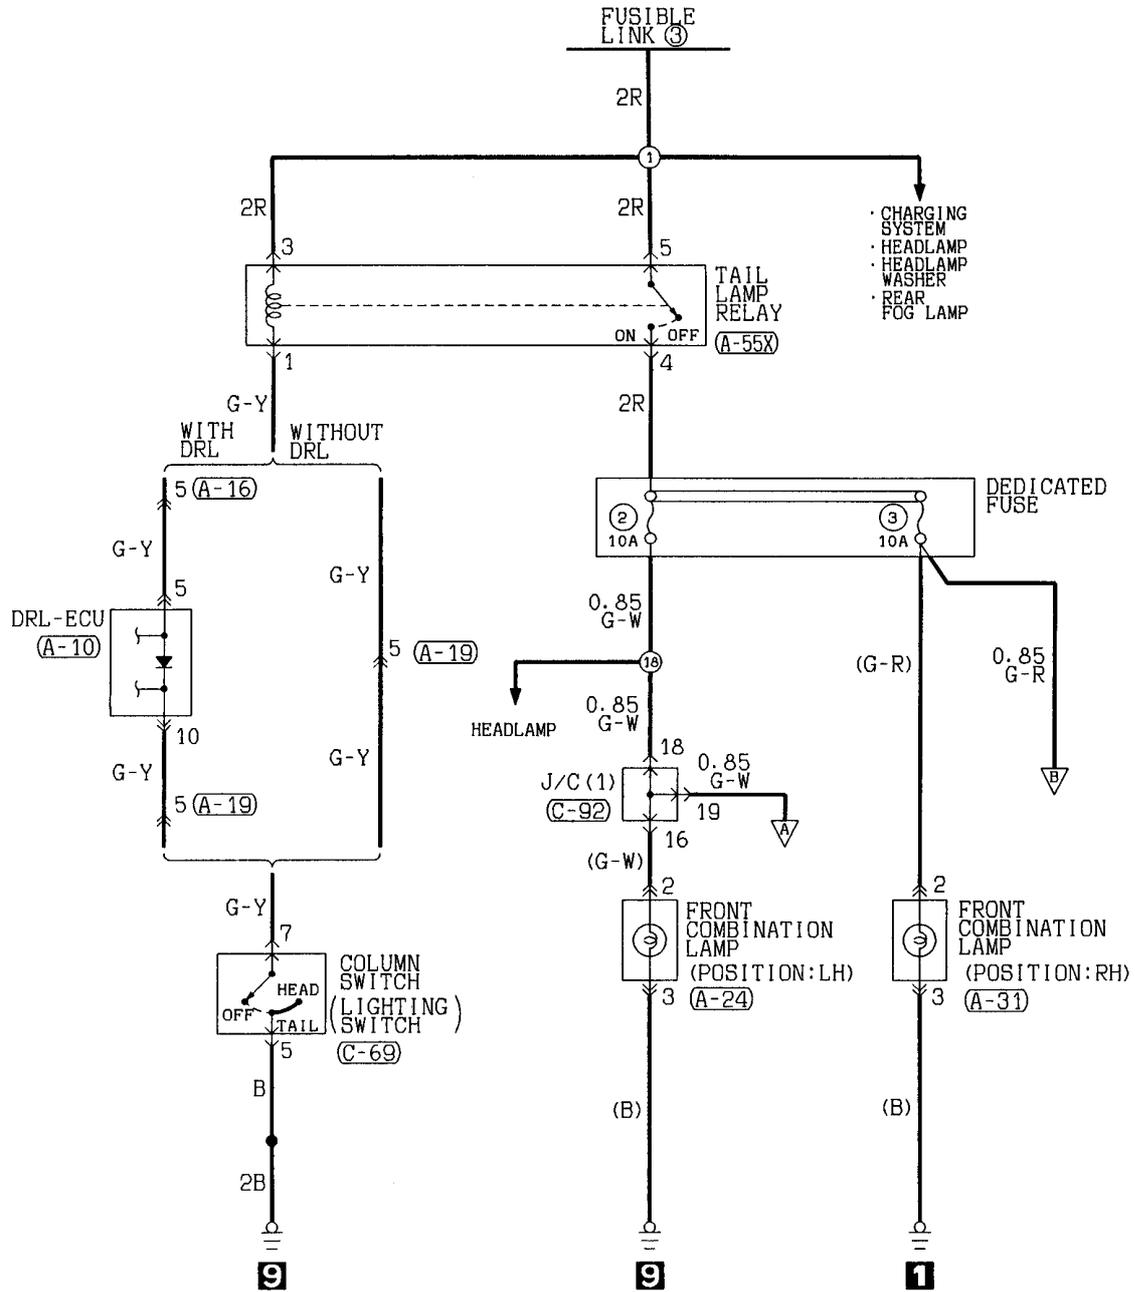


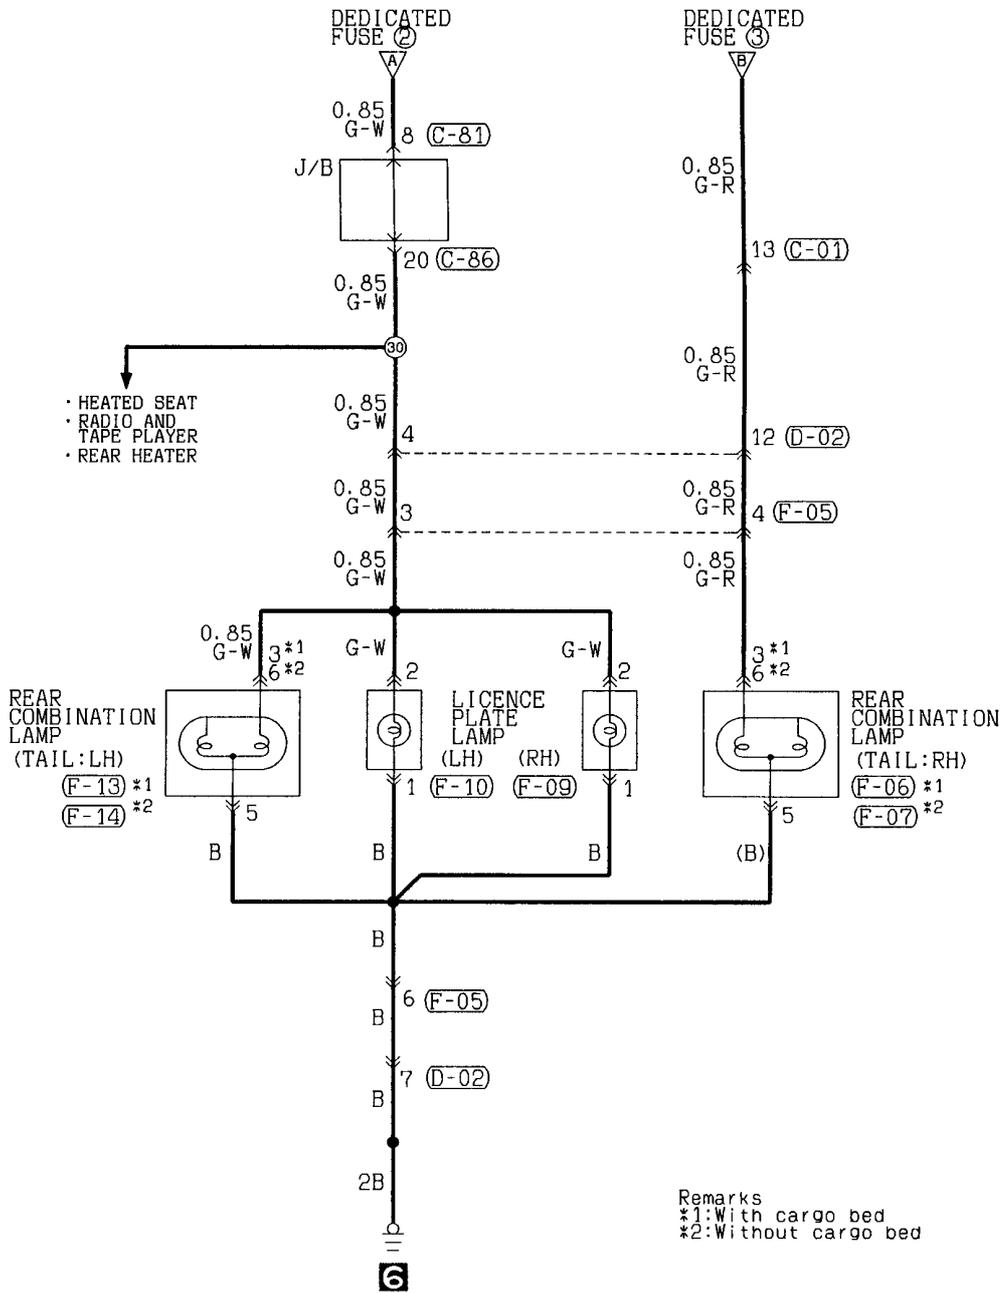


C-86

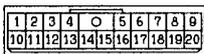

C-92

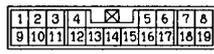

D-02

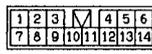

F-05



F-06



F-07



F-09



F-10




F-13



TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP

90101260165

R.H. drive vehicles <1997 Models>

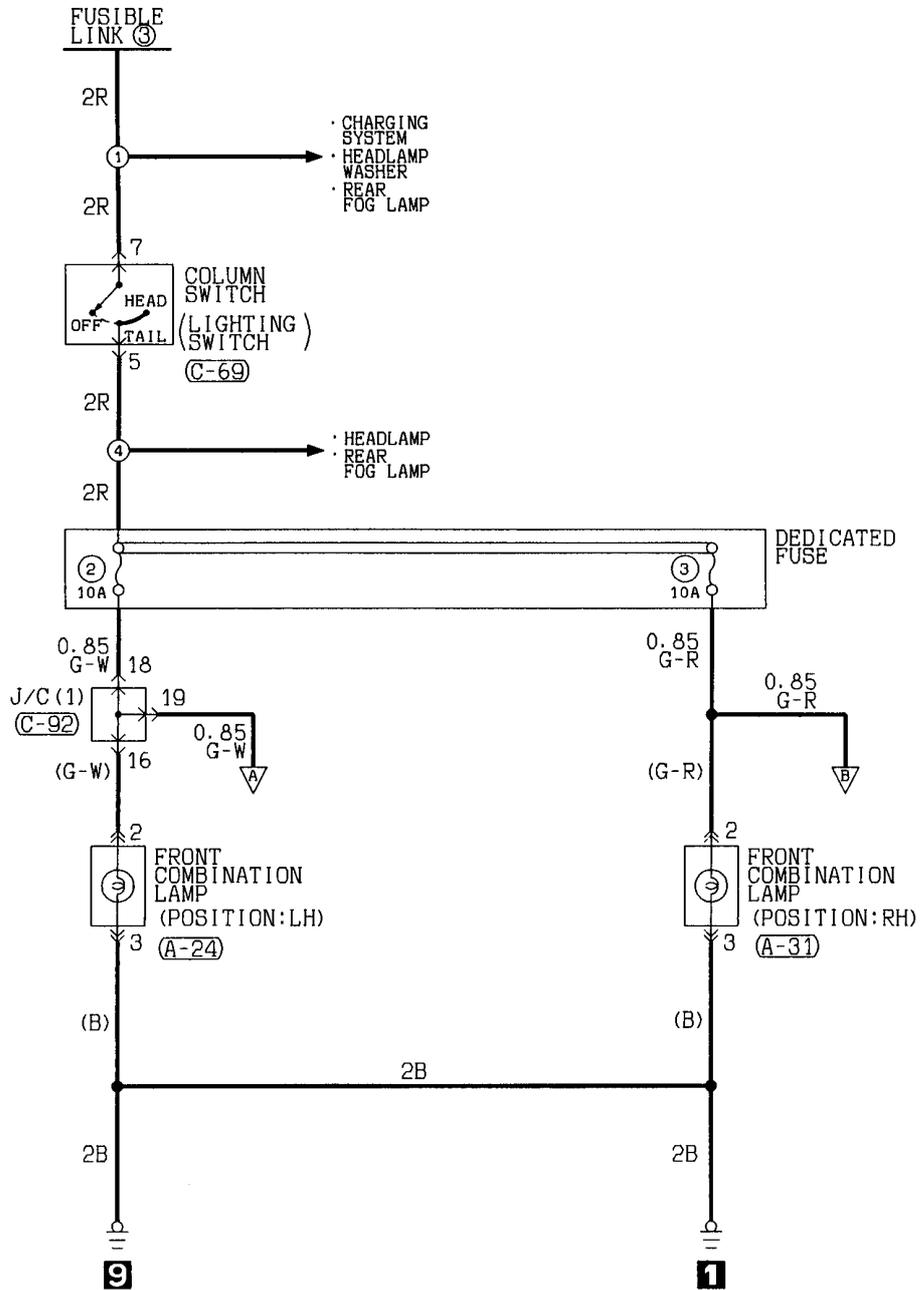


(A-24) (A-31) (C-01)




(C-69)




(C-81)

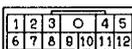


(C-86)

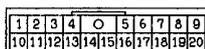


(C-92)

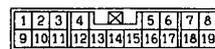

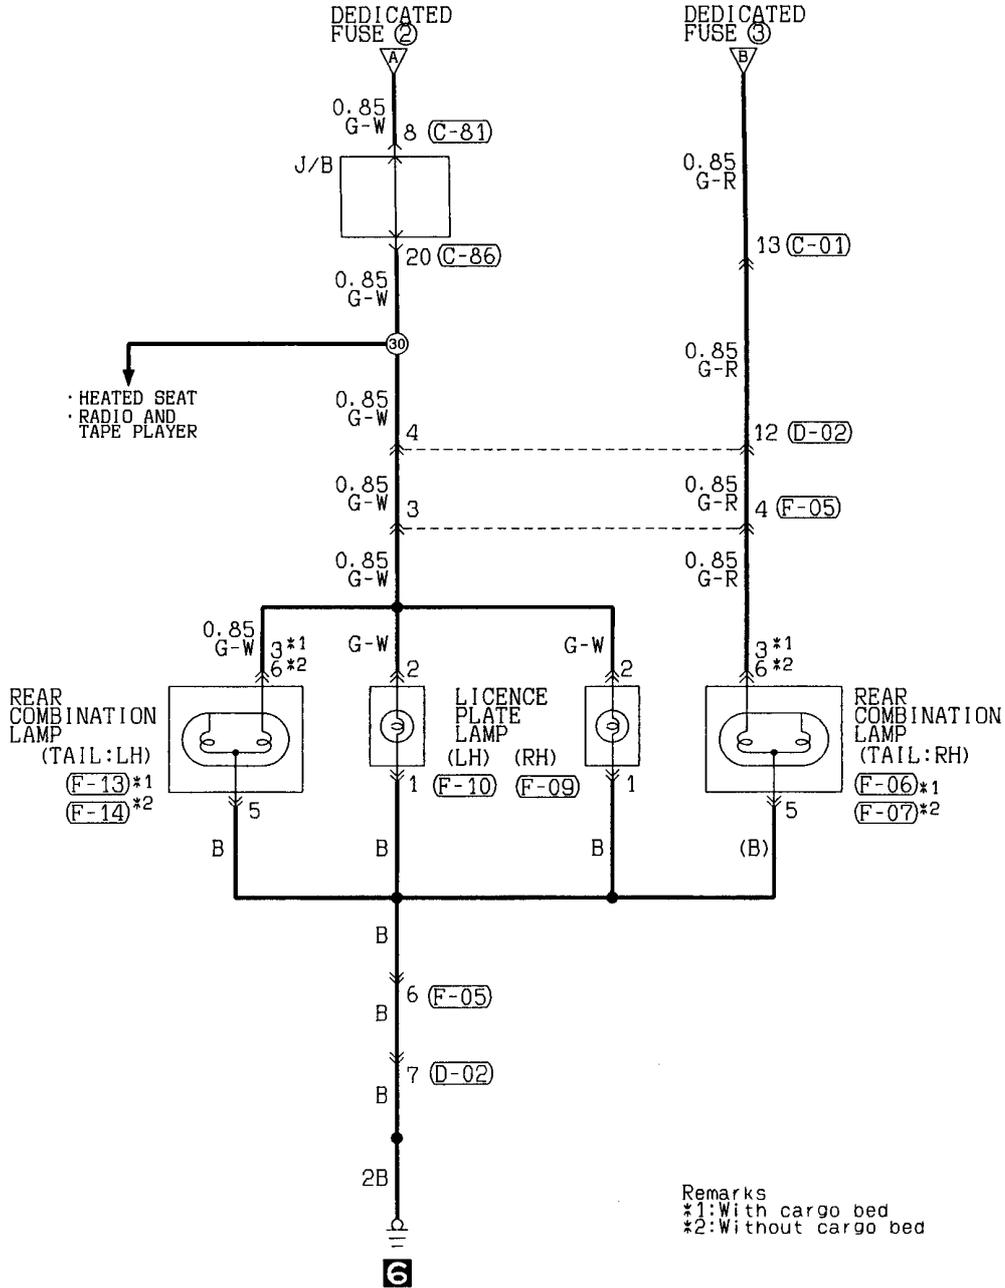


Remarks
 *1: With cargo bed
 *2: Without cargo bed

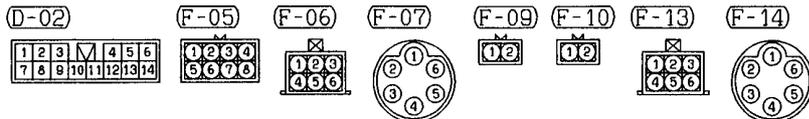


TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP

90101260325


R.H. drive vehicles <1998 Models>

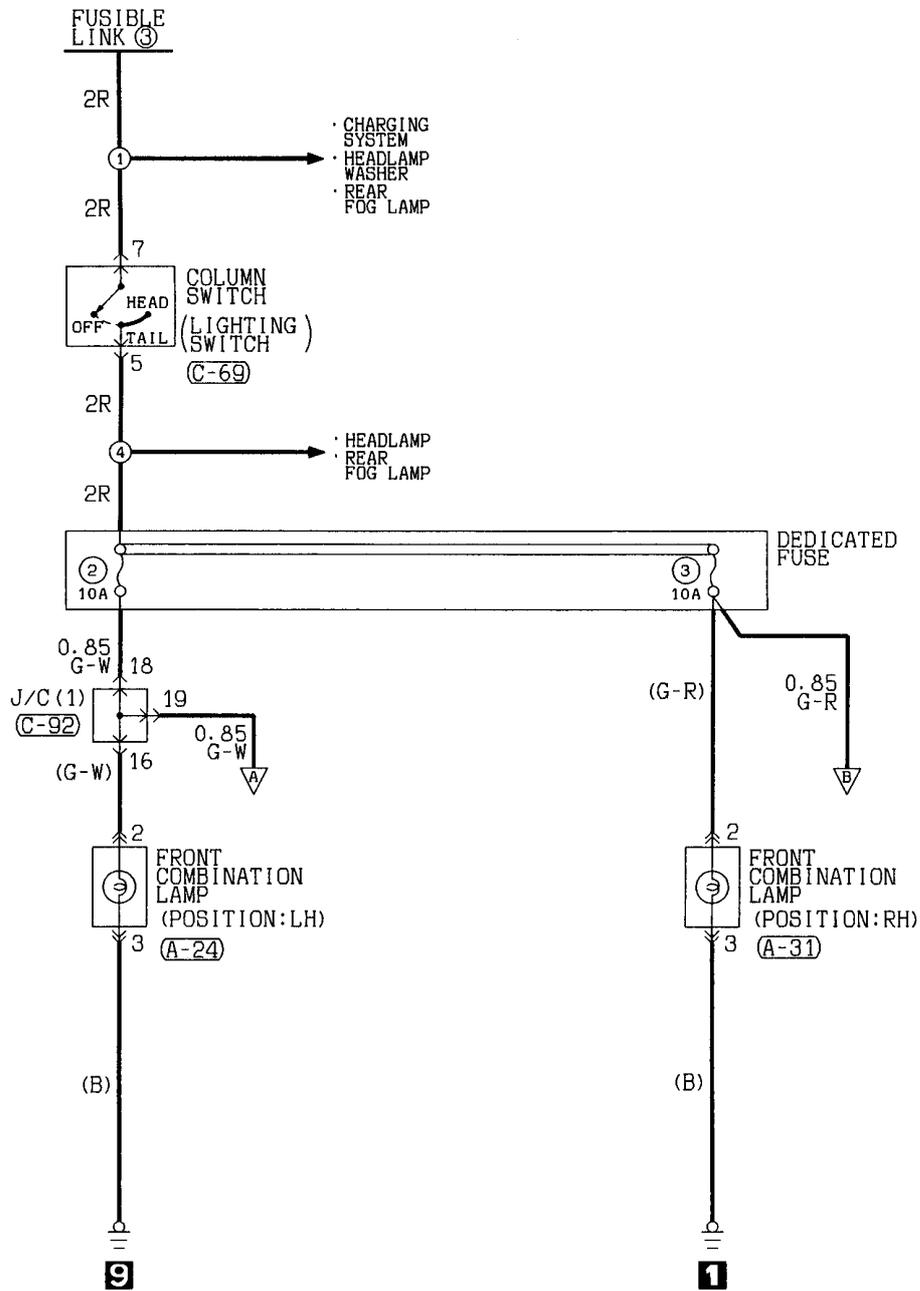


(A-24) (A-31) (C-01)

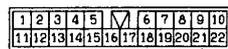


(C-69)

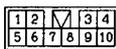


(C-81)


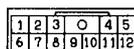


(C-86)

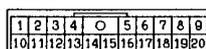

(C-92)

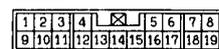

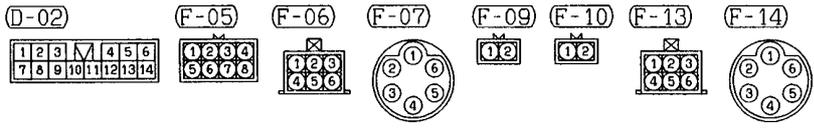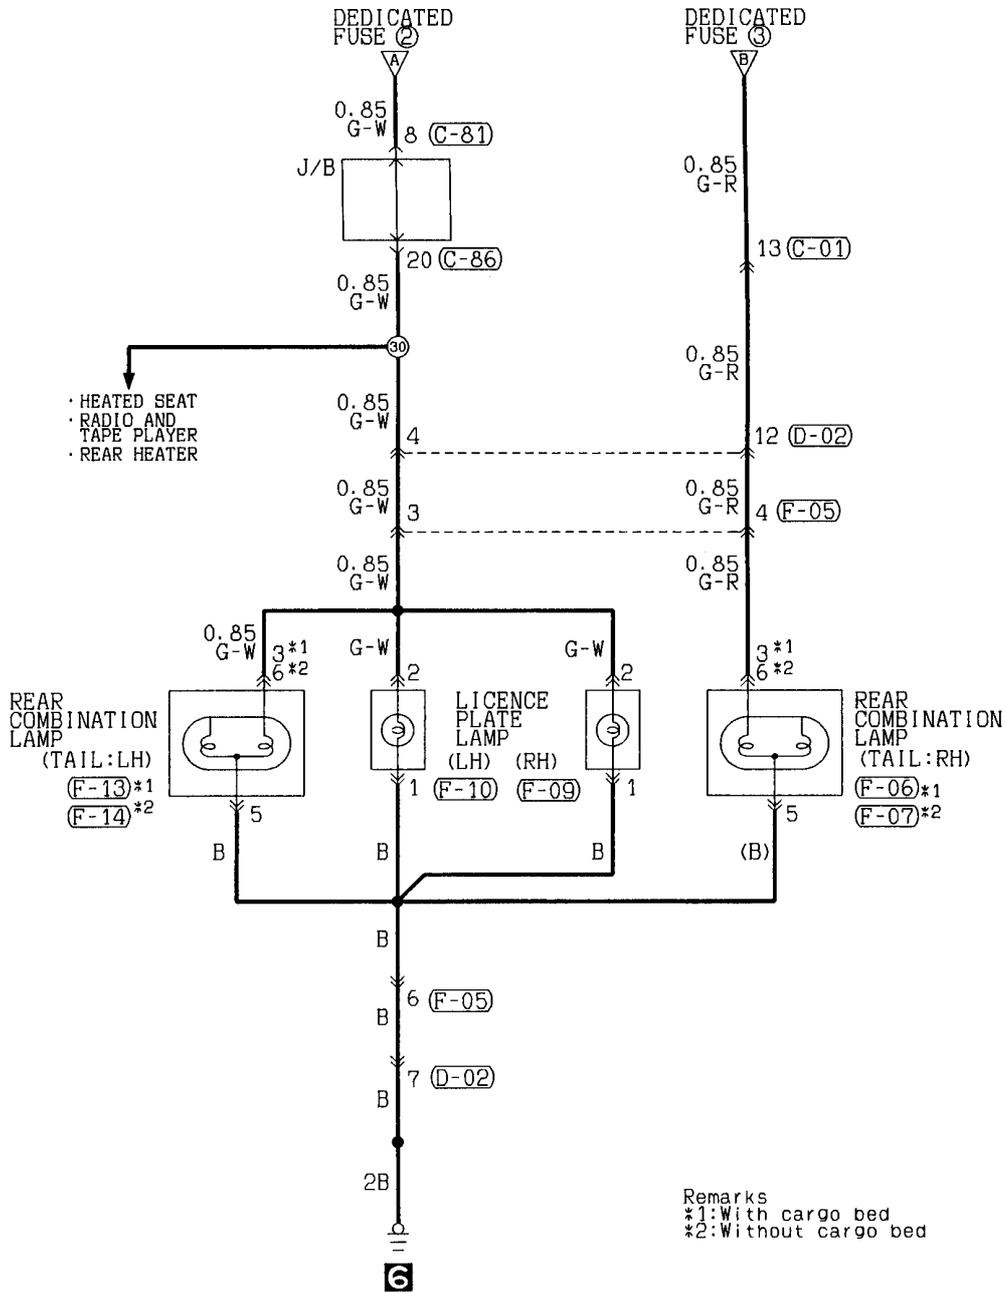

TAIL LAMP, POSITION LAMP AND LICENCE PLATE (See P. 4-100, 102, 104, 106.)

90101260172

OPERATION

- Placing the lighting switch in the "TAIL" or "HEAD" position causes the tail lamp relay to be energized.
For vehicles with daytime running lamps, if the ignition switch is turned to the "ON" position, the tail lamp relay normally is always "ON".
- As resultt, current flows by way of dedicated fuse No. (2) and No. (3) to each lamp, causing the lamp to go on.

TROUBLESHOOTING HINTS

1. No lamp go on.
 - (1) Headlamps do not go on, either.
 - Check fusible link No. (3).
 - (2) Headlamps go on.
 - Check tail lamp relay.
 - Check dedicated fuse No. (2) and No. (3).

REAR FOG LAMP (See P. 4-110, 114, 118, 122.)

90101200105

OPERATION

Rear fog lamp relay activation requirements

<Vehicles without daytime running lamp>

ignition switch	Lighting switch	Rear fog lamp relay
-	"HEAD"	On

<Vehicles with daytime running lamp>

ignition switch	Lighting switch	Rear fog lamp relay
-	"HEAD"	On
"ON"	"OFF" or "HEAD"	On

- Placing the lighting switch in the HEAD position causes the rear fog lamp relay to be energized. For vehicles with daytime running lamps, if the ignition switch is in the "ON" position and the lighting switch is in the "OFF" position, the rear fog lamp relay will be energized.
- When the rear fog lamp switch is turned ON in this condition, the fog lamp goes on.


TROUBLESHOOTING HINTS


1. The rear fog lamp doesn't illuminate.
 - (1) Headlamp go on.
 - Check the rear fog lamp relay.
 - Check the rear fog lamp switch.
 - Check the dedicated fuse No. (4)
 - (2) Headlamps do not go on, either.
 - Check the lighting switch.
 - Check the fusible link No. (3).
2. The rear fog lamp at the one side doesn't illuminate.
 - Check the lamp bulb.

REAR FOG LAMP

90101200112

L.H. drive vehicles <1997 Models>

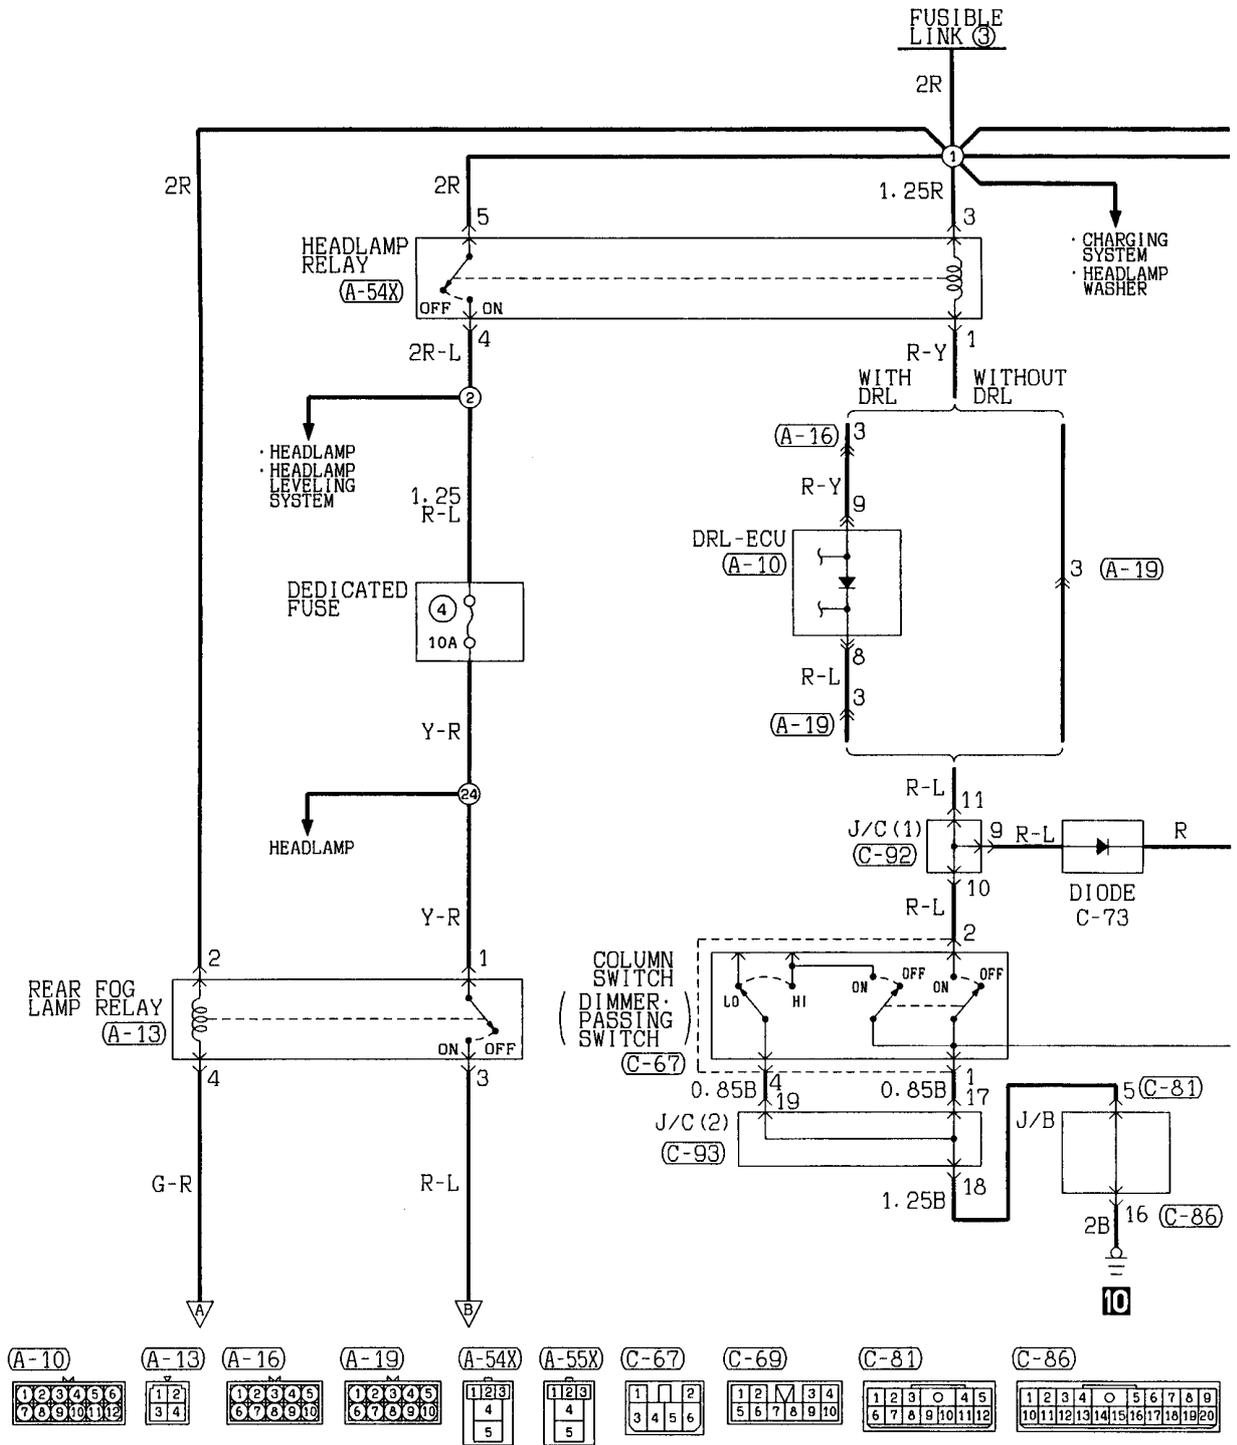

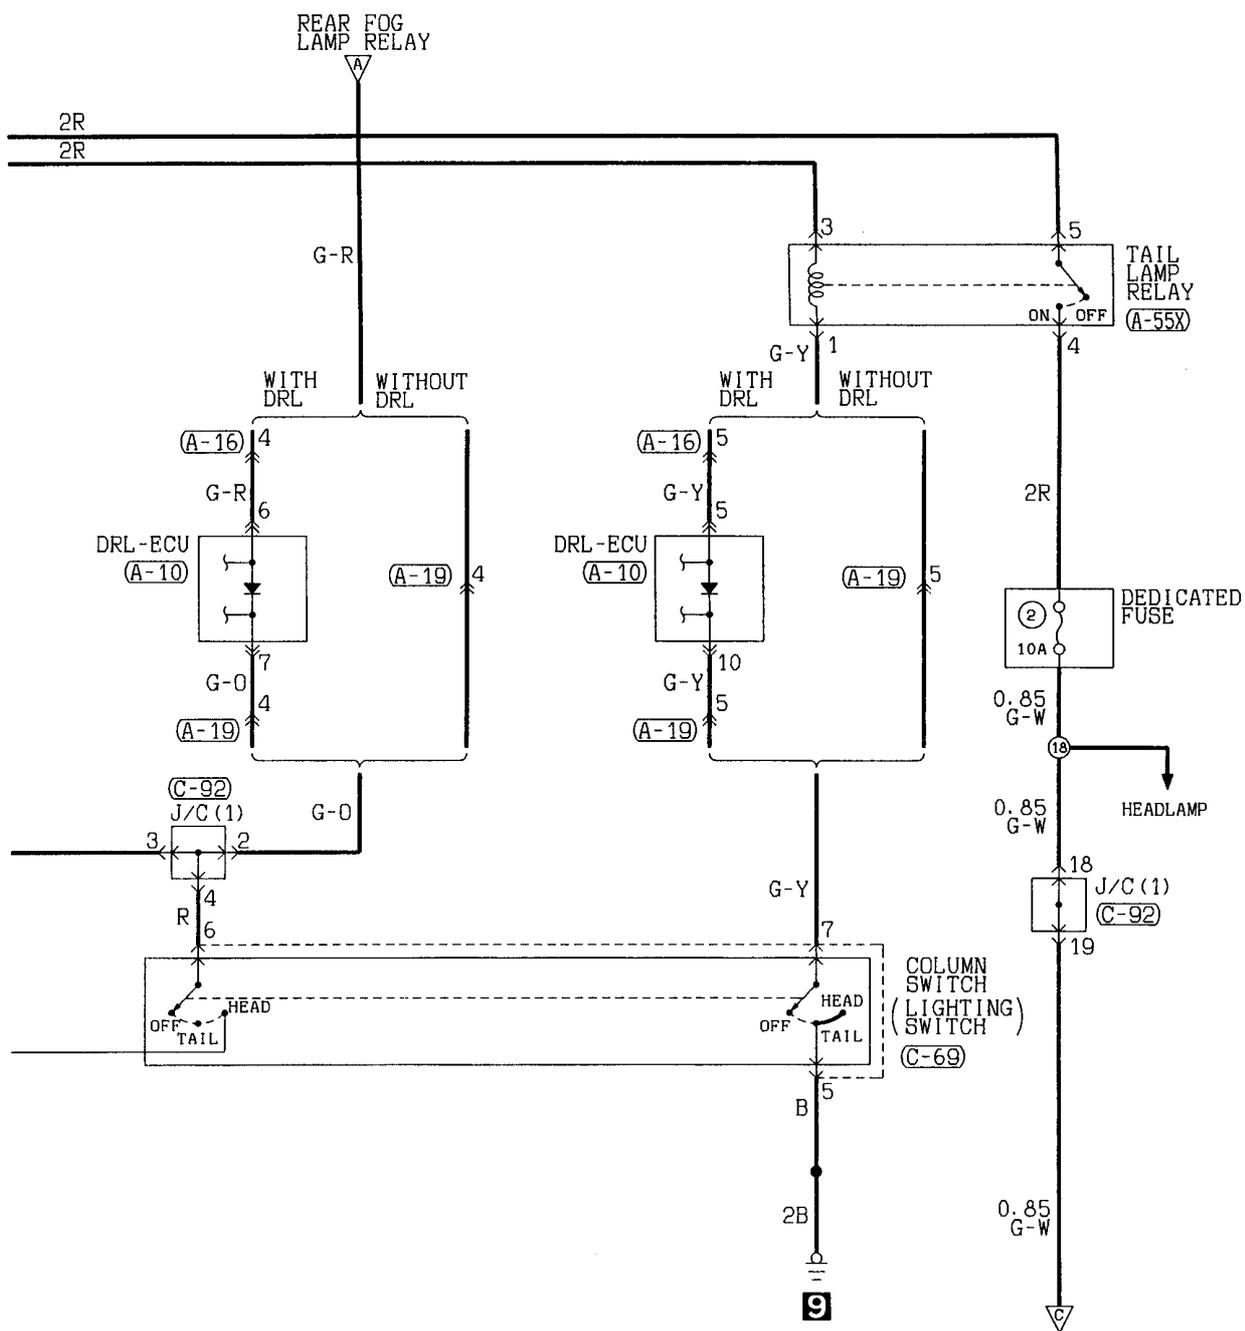


C-92

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19


C-93

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19


REAR FOG LAMP <L.H. drive vehicles (1997 Models)> (CONTINUED)

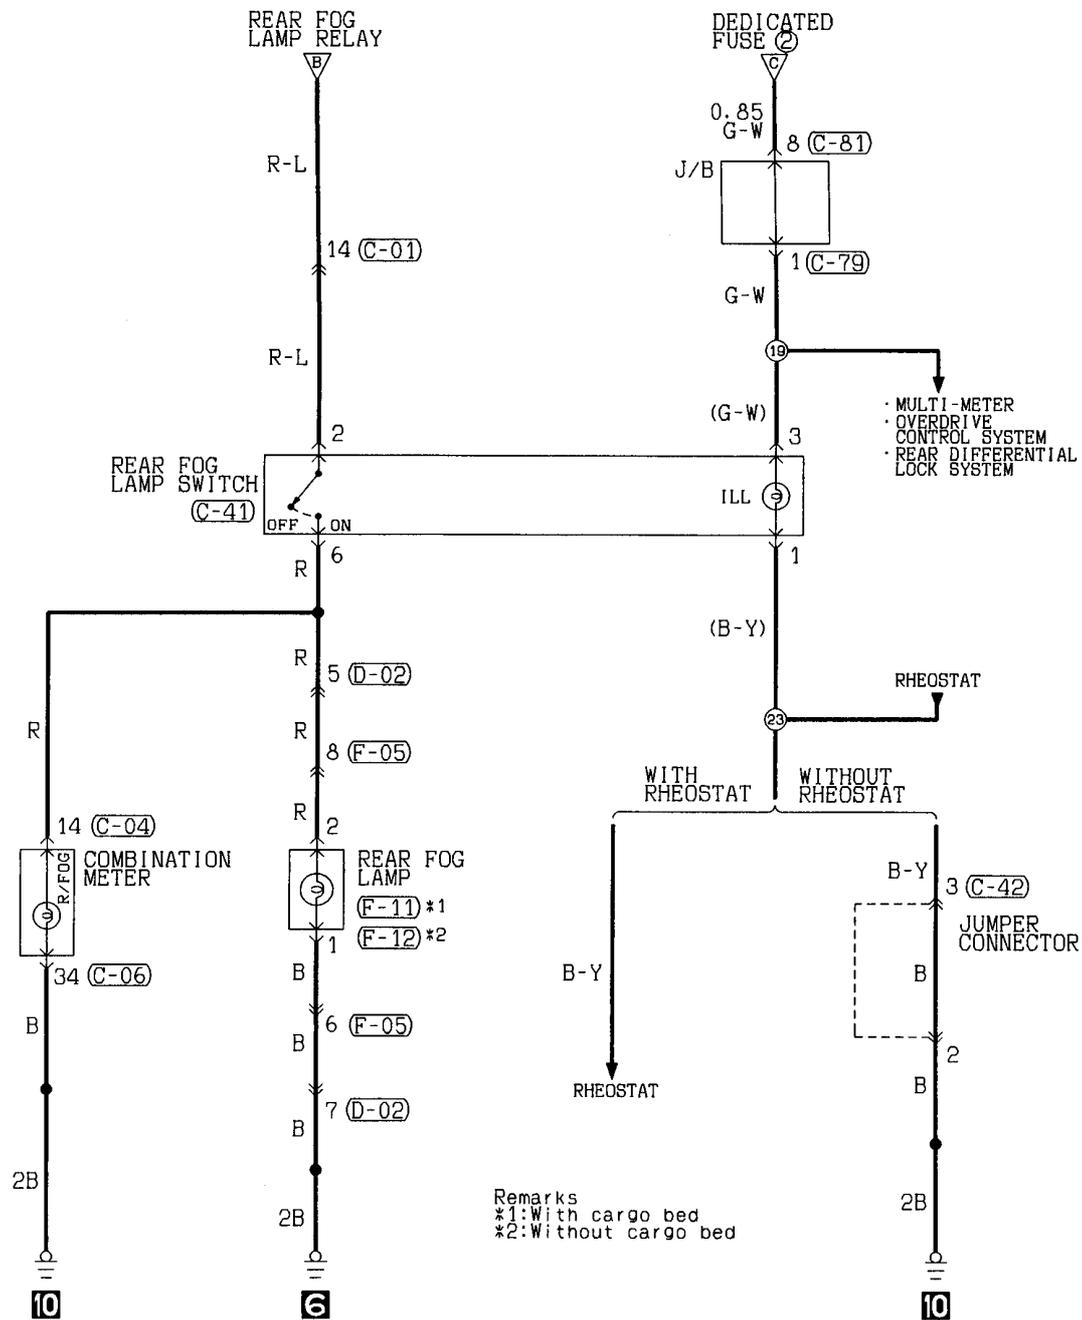


(C-01)

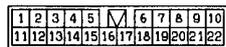

(C-04)

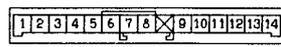

(C-06)

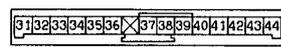


(C-41)




(C-42)




(C-79)

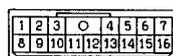

(C-81)

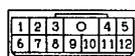

(D-02)

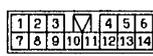

(F-05)



(F-11)



(F-12)





NOTES

REAR FOG LAMP


90101200365

L.H. drive vehicles <1998 Models>

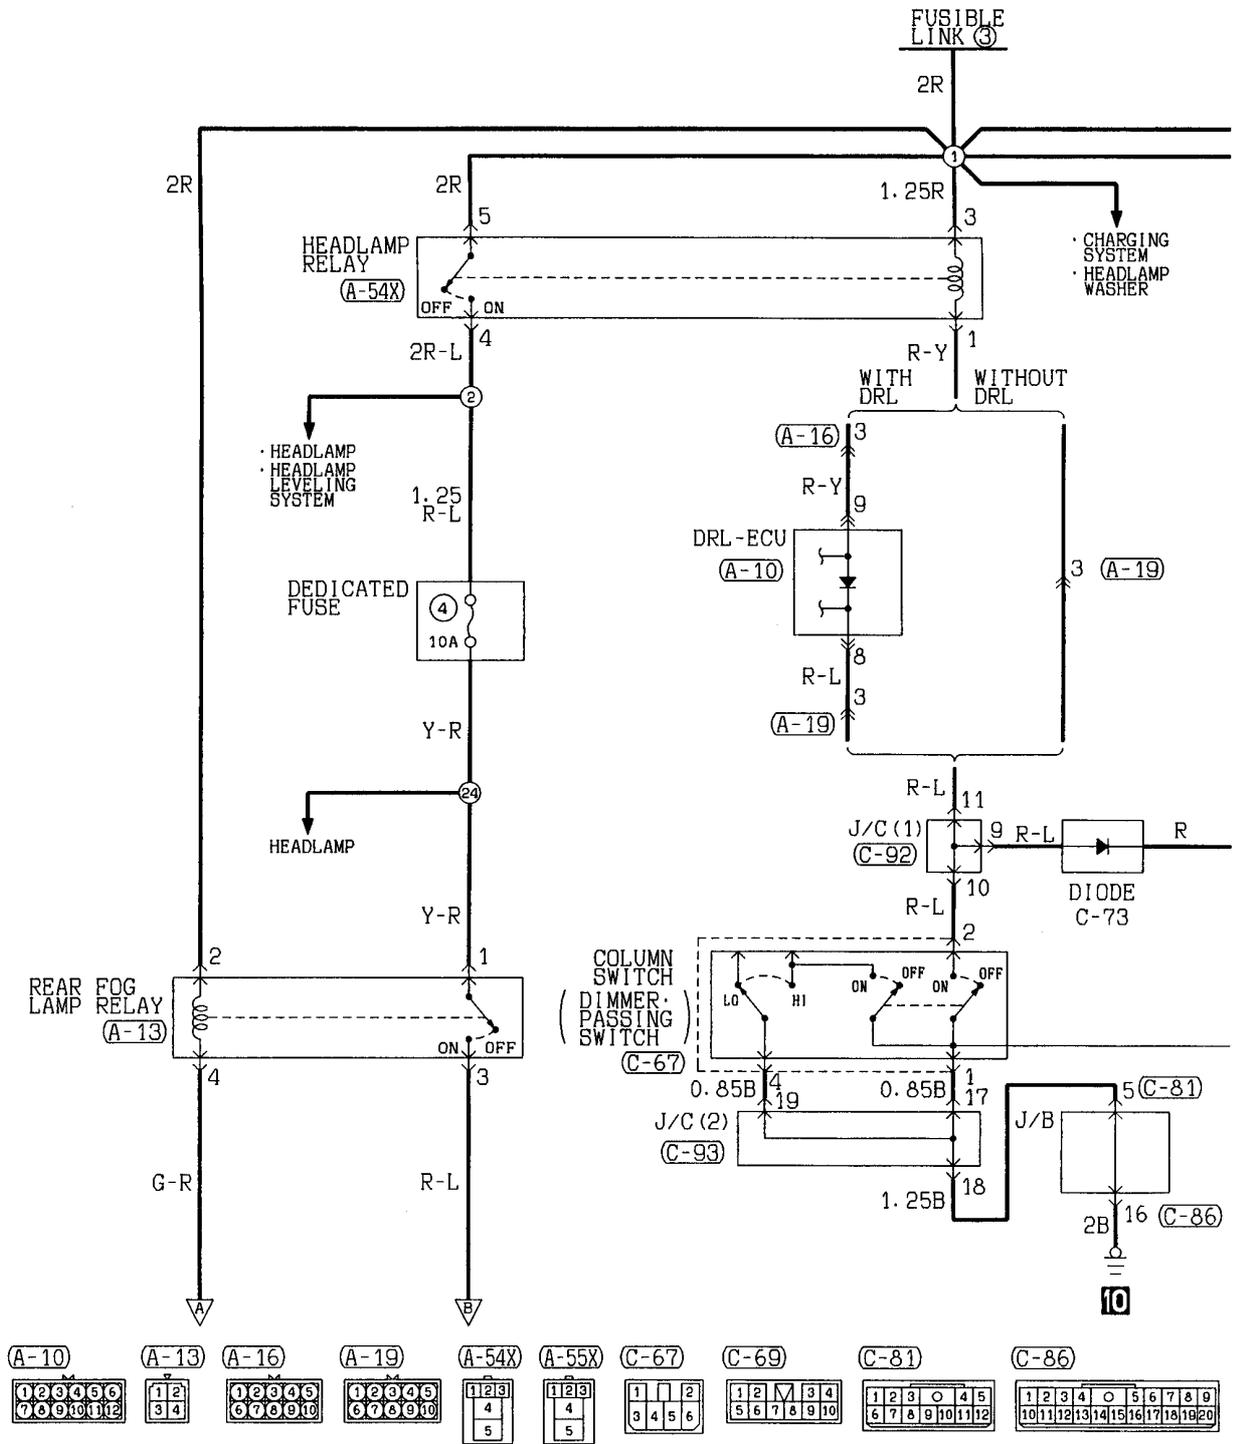


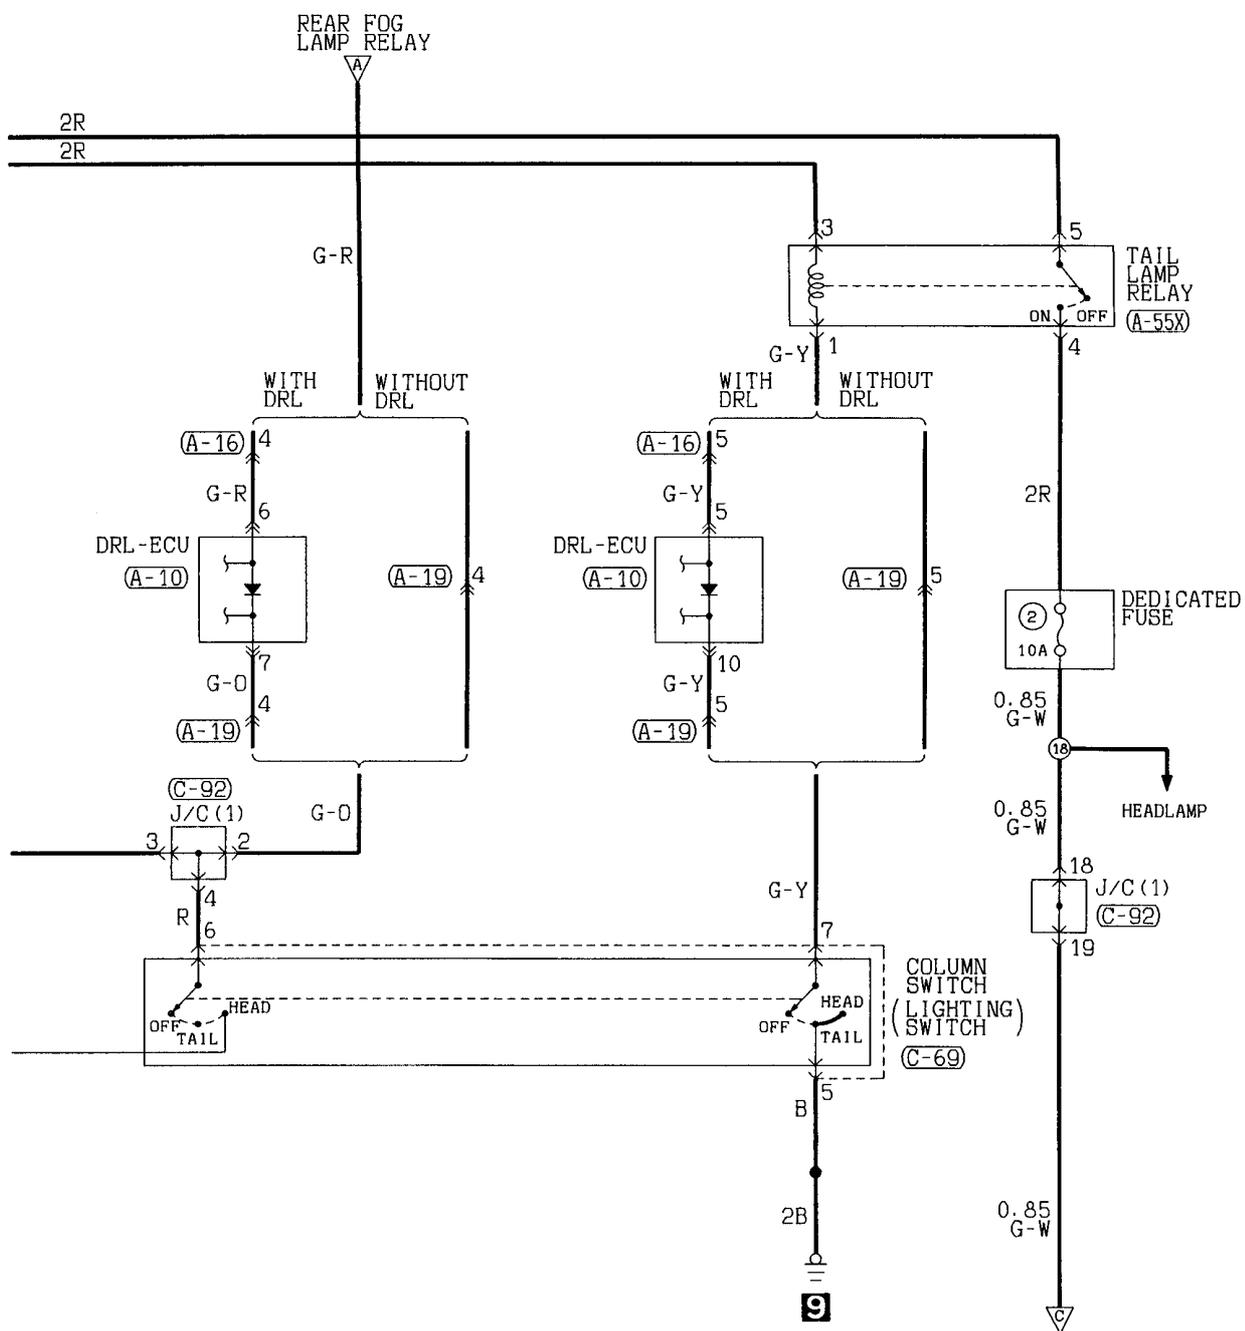


(C-92)

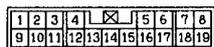

(C-93)

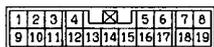

REAR FOG LAMP <L.H. drive vehicles (1998 Models)> (CONTINUED)

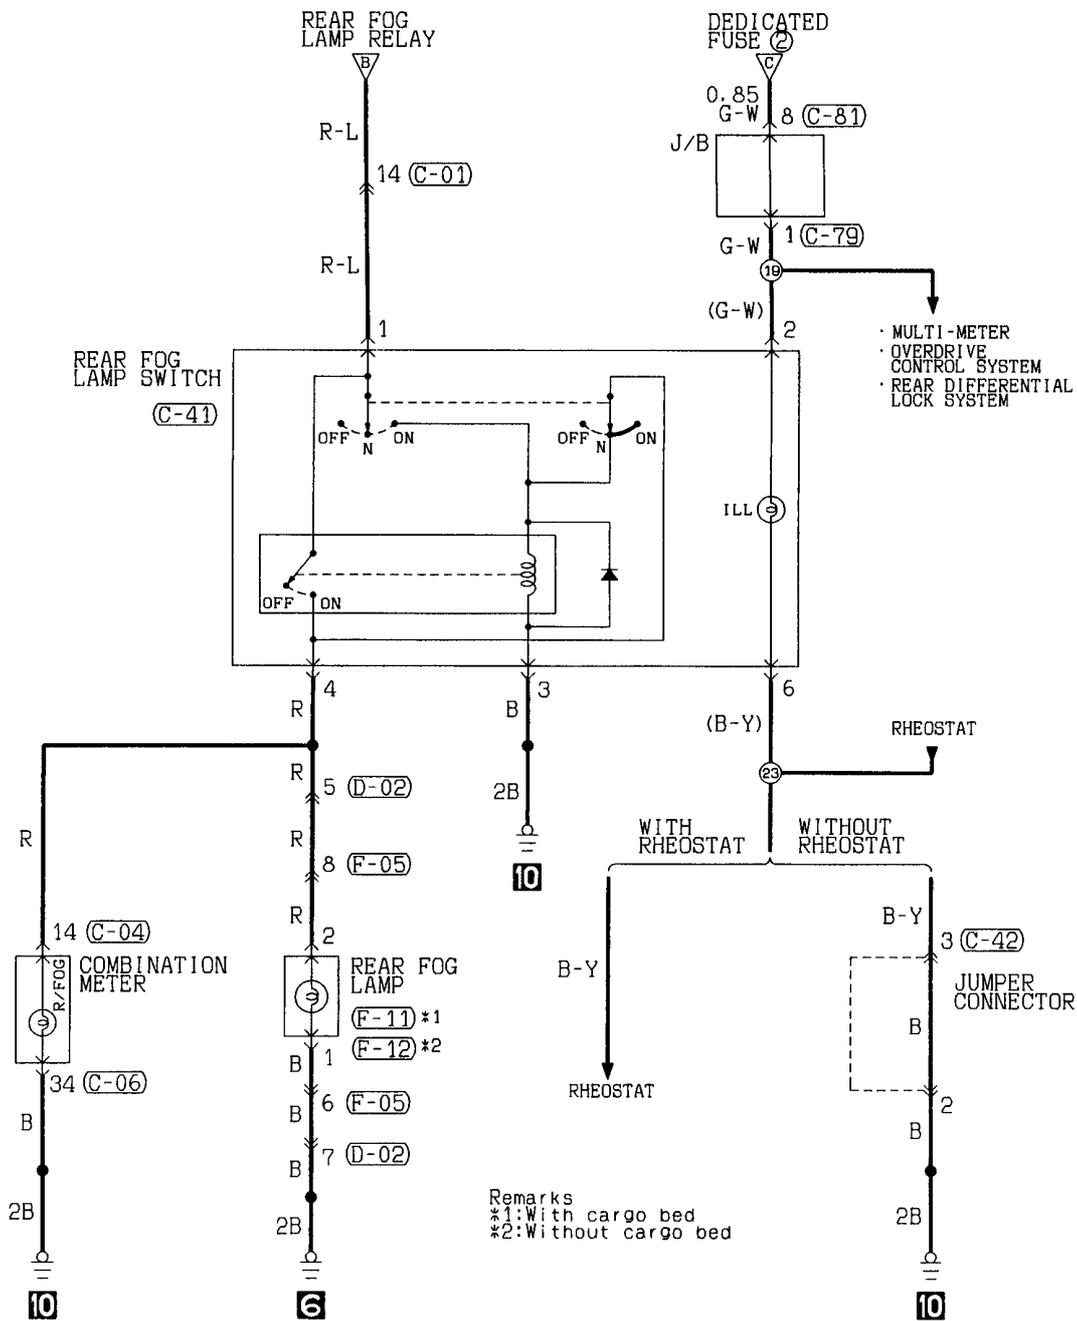

C-01

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

C-04

1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----

C-06

31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

C-41

1	M	2	
3	4	5	6

C-42

1	2	3	4
---	---	---	---

C-79

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

C-81

1	2	3	4	5		
6	7	8	9	10	11	12

D-02

1	2	3	M	4	5	6	
7	8	9	10	11	12	13	14

F-05

0	2	3	4
5	6	7	8

F-11

0	2
---	---

F-12



0	2
---	---


NOTES

REAR FOG LAMP

90101200129

R.H. drive vehicles <1997 Models>

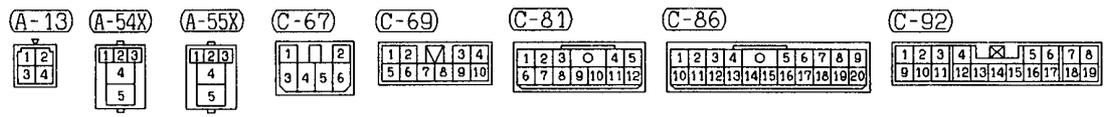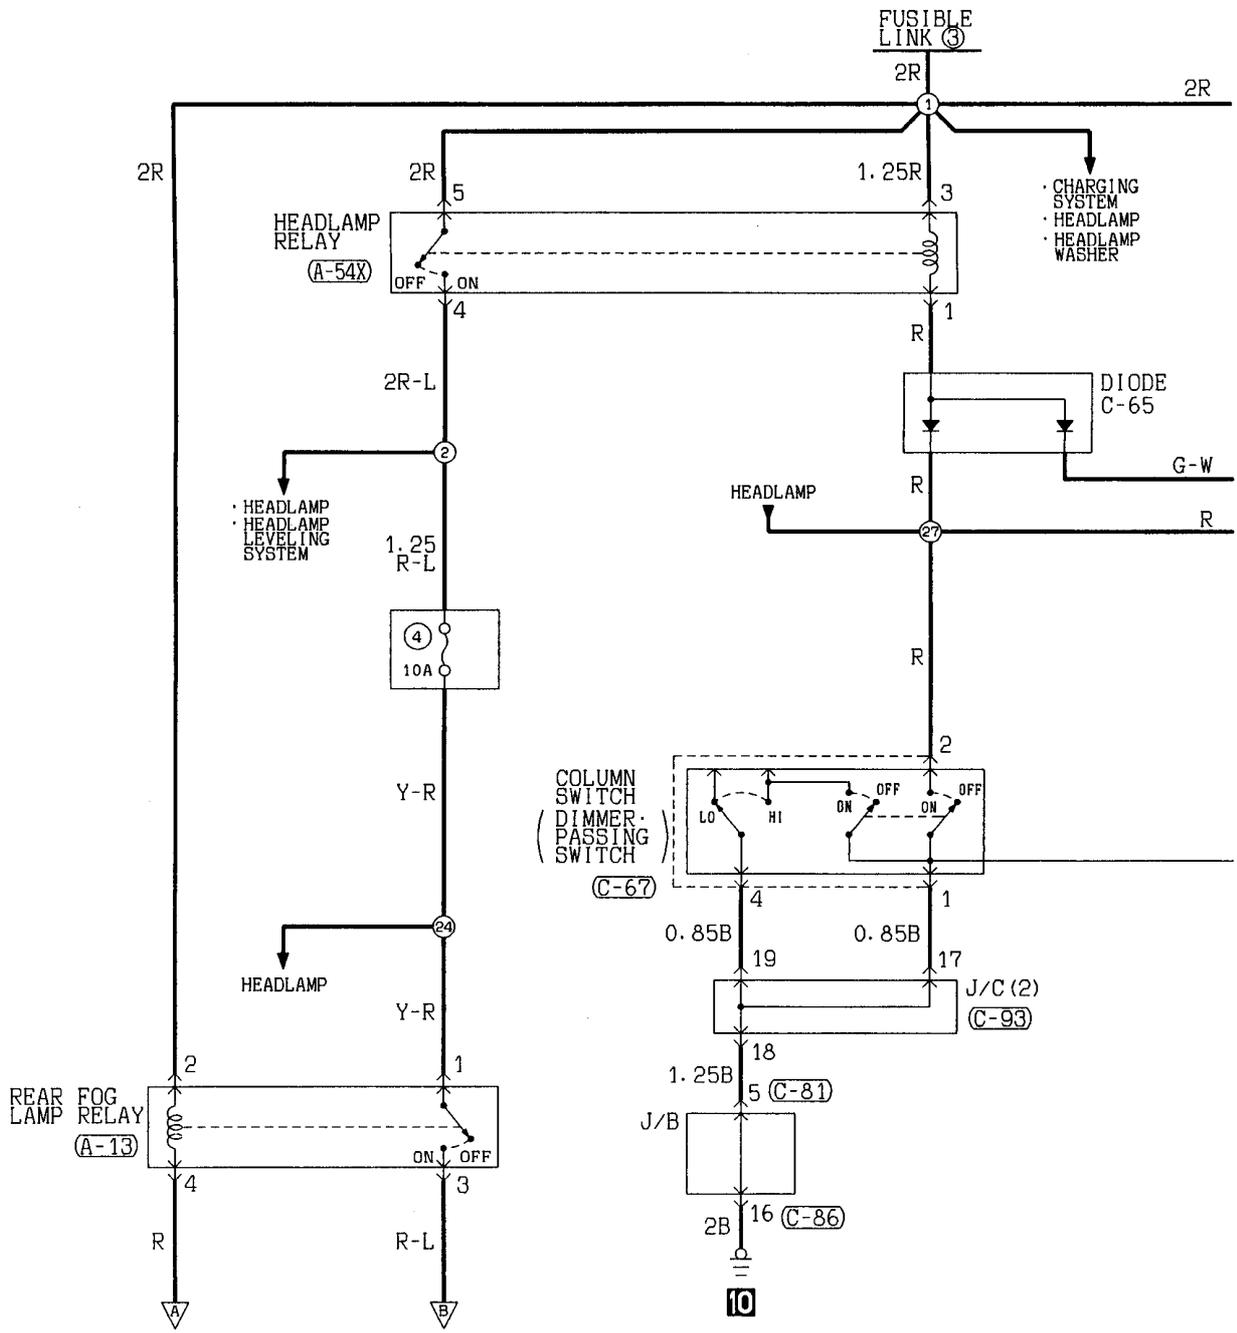


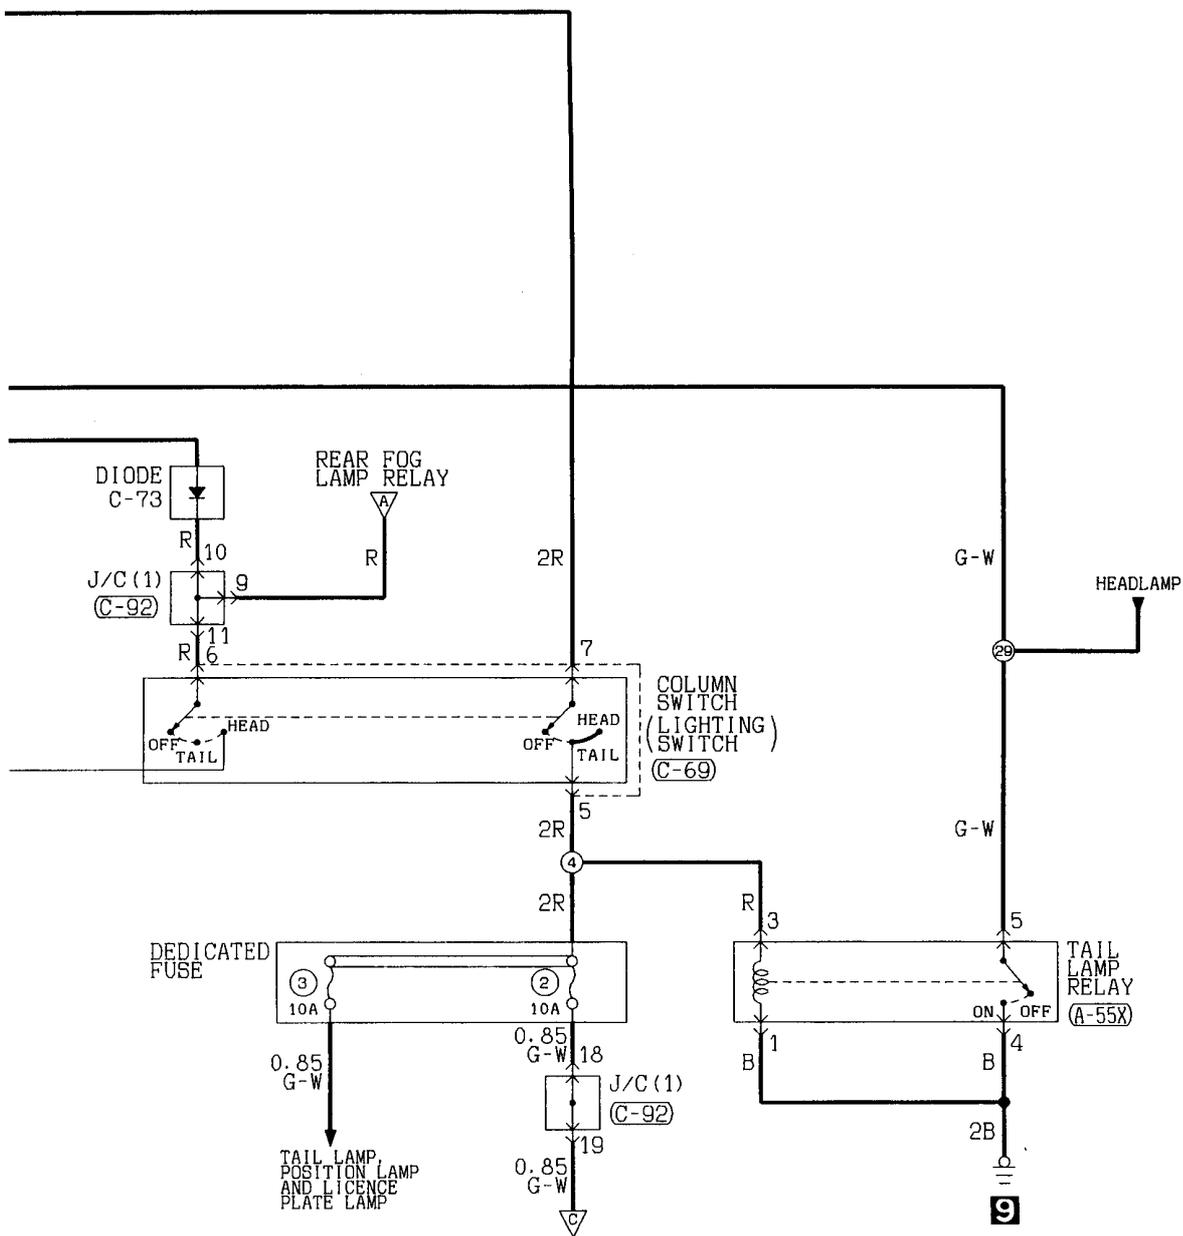

C-93

1	2	3	4	L	J	5	6	7	8
9	10	11	12	13	14	15	16	17	18,19

REAR FOG LAMP <R.H. drive vehicles (1997 Models)> (CONTINUED)

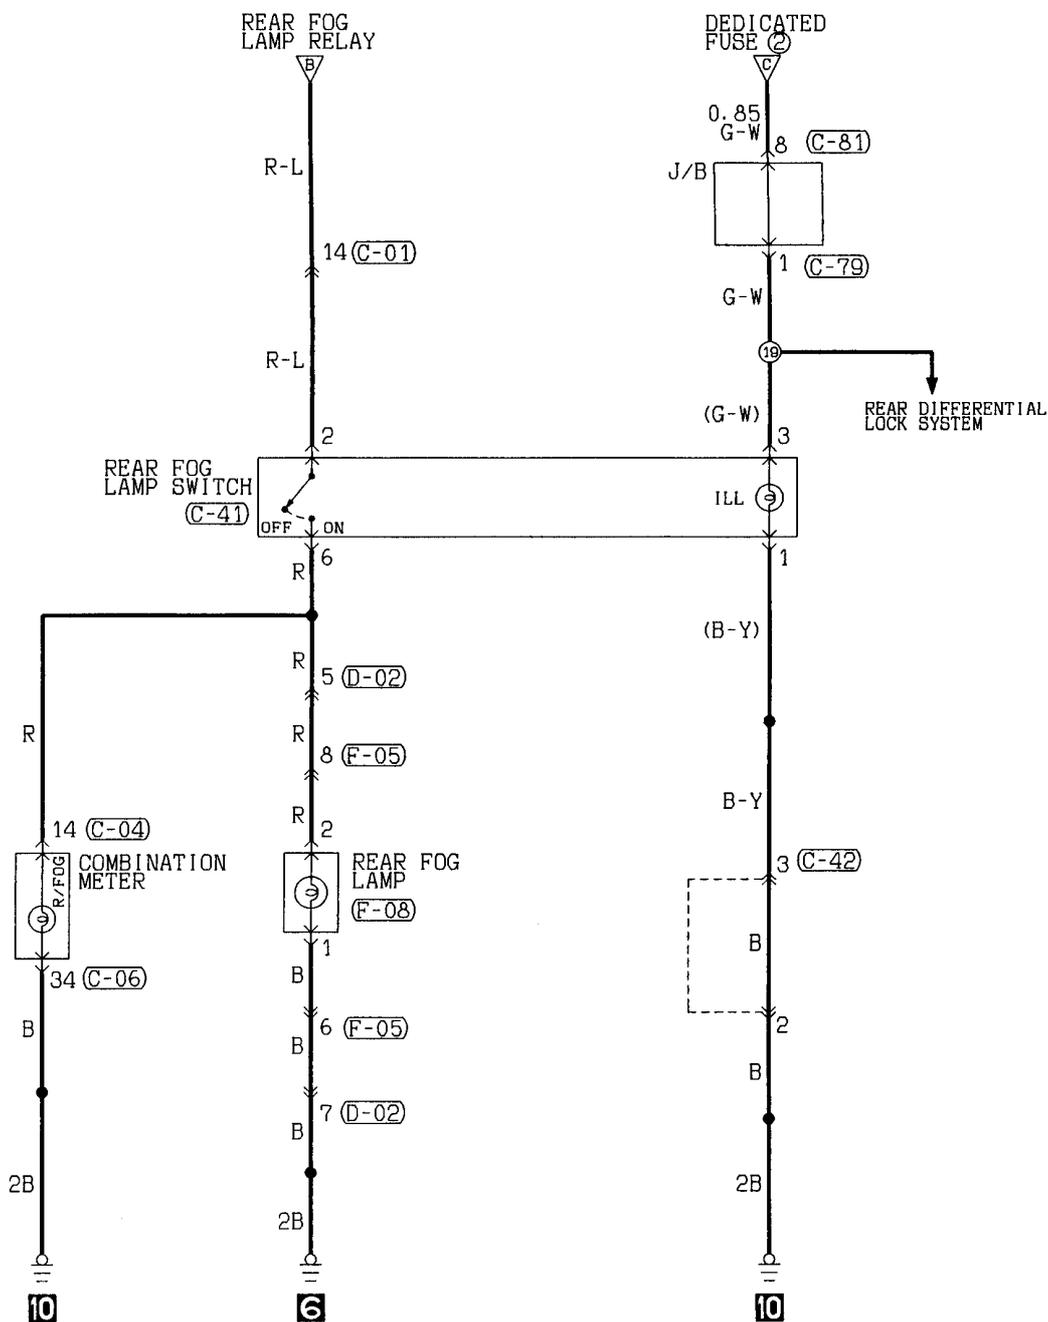

C-01

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

C-04

1	2	3	4	5	6	7	8	X	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	---	----	----	----	----	----

C-06

31	32	33	34	35	36	X	37	38	39	40	41	42	43	44
----	----	----	----	----	----	---	----	----	----	----	----	----	----	----

C-41

1	M	2	
3	4	5	6

C-42

1	2	3	4
---	---	---	---

C-79

1	2	3	O	4	5	6	7	
8	9	10	11	12	13	14	15	16

C-81

1	2	3	O	4	5	
6	7	8	9	10	11	12

D-02

1	2	3	M	4	5	6	
7	8	9	10	11	12	13	14

F-05

1	2	3	4
5	6	7	8

F-08



O	2
---	---


NOTES

REAR FOG LAMP

90101200372

R.H. drive vehicles <1998 Models>

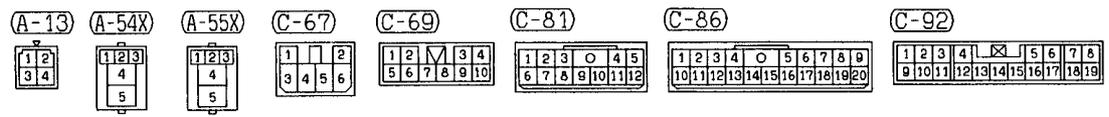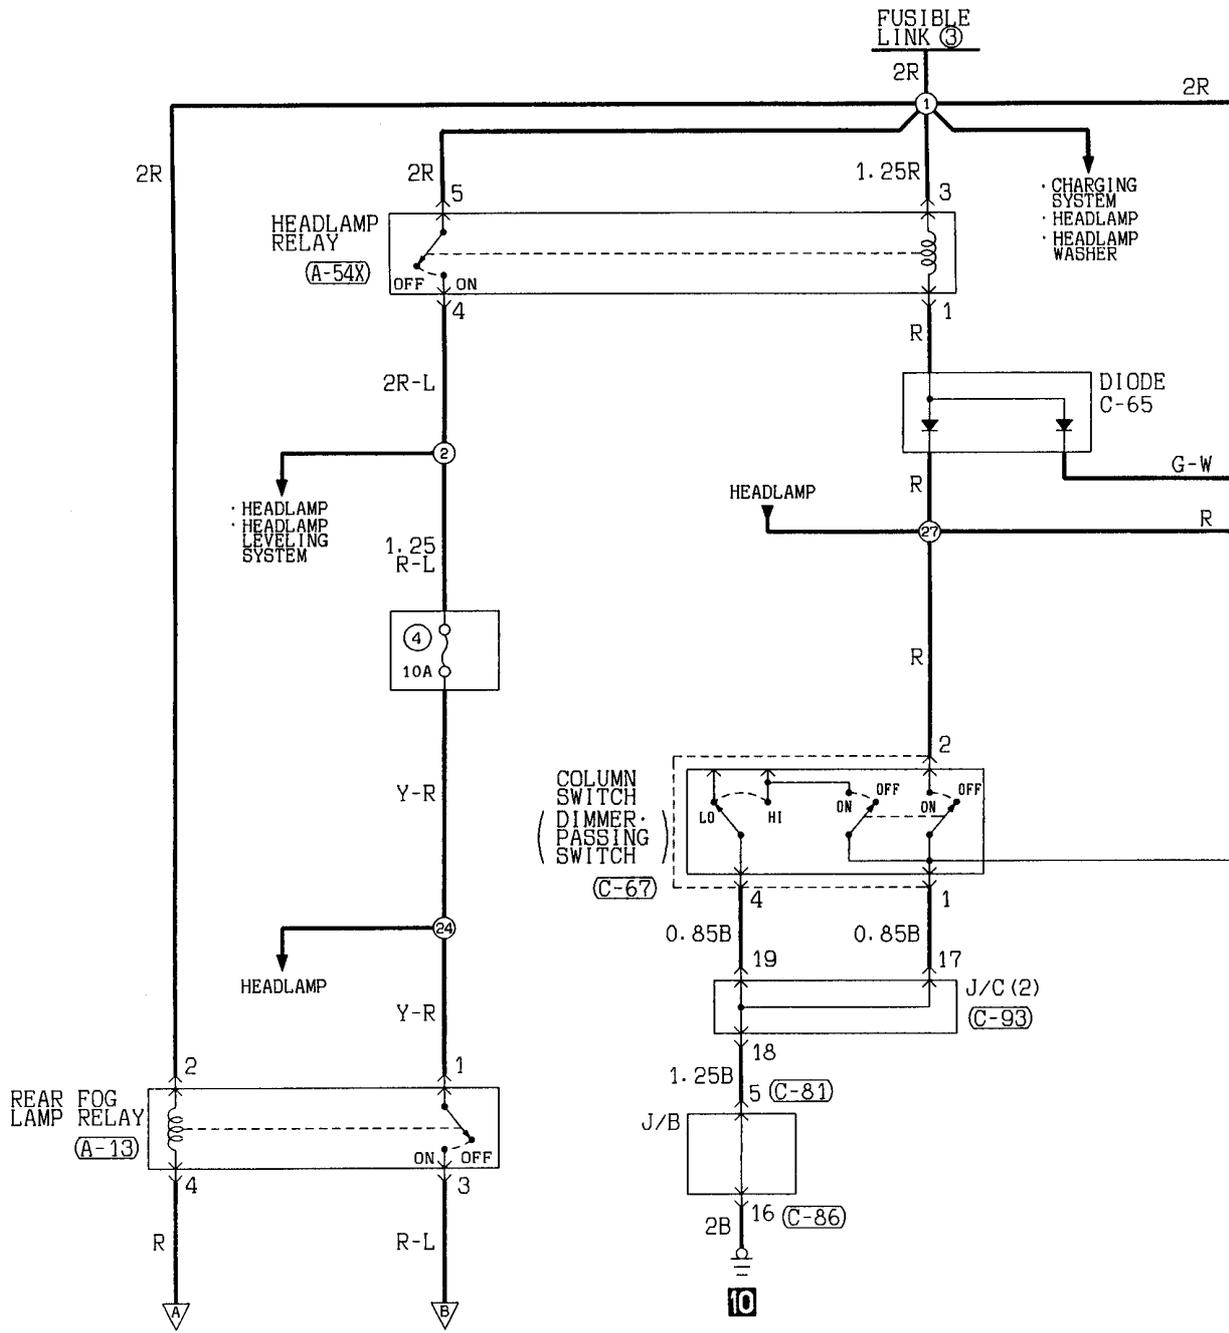


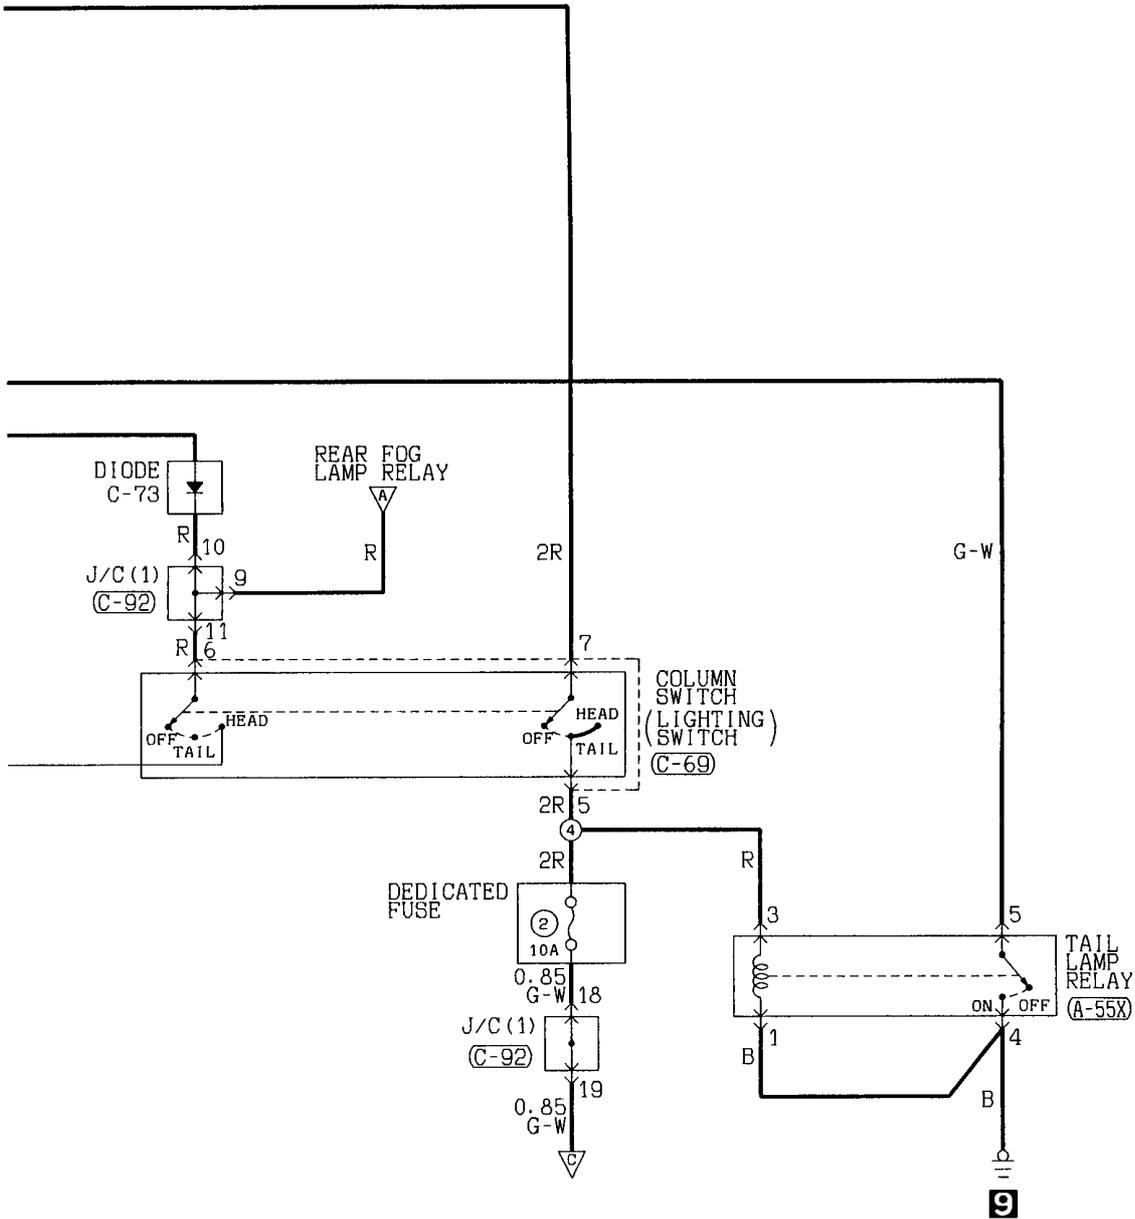

(C-93)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					

REAR FOG LAMP <R.H. drive vehicles (1998 Models)> (CONTINUED)

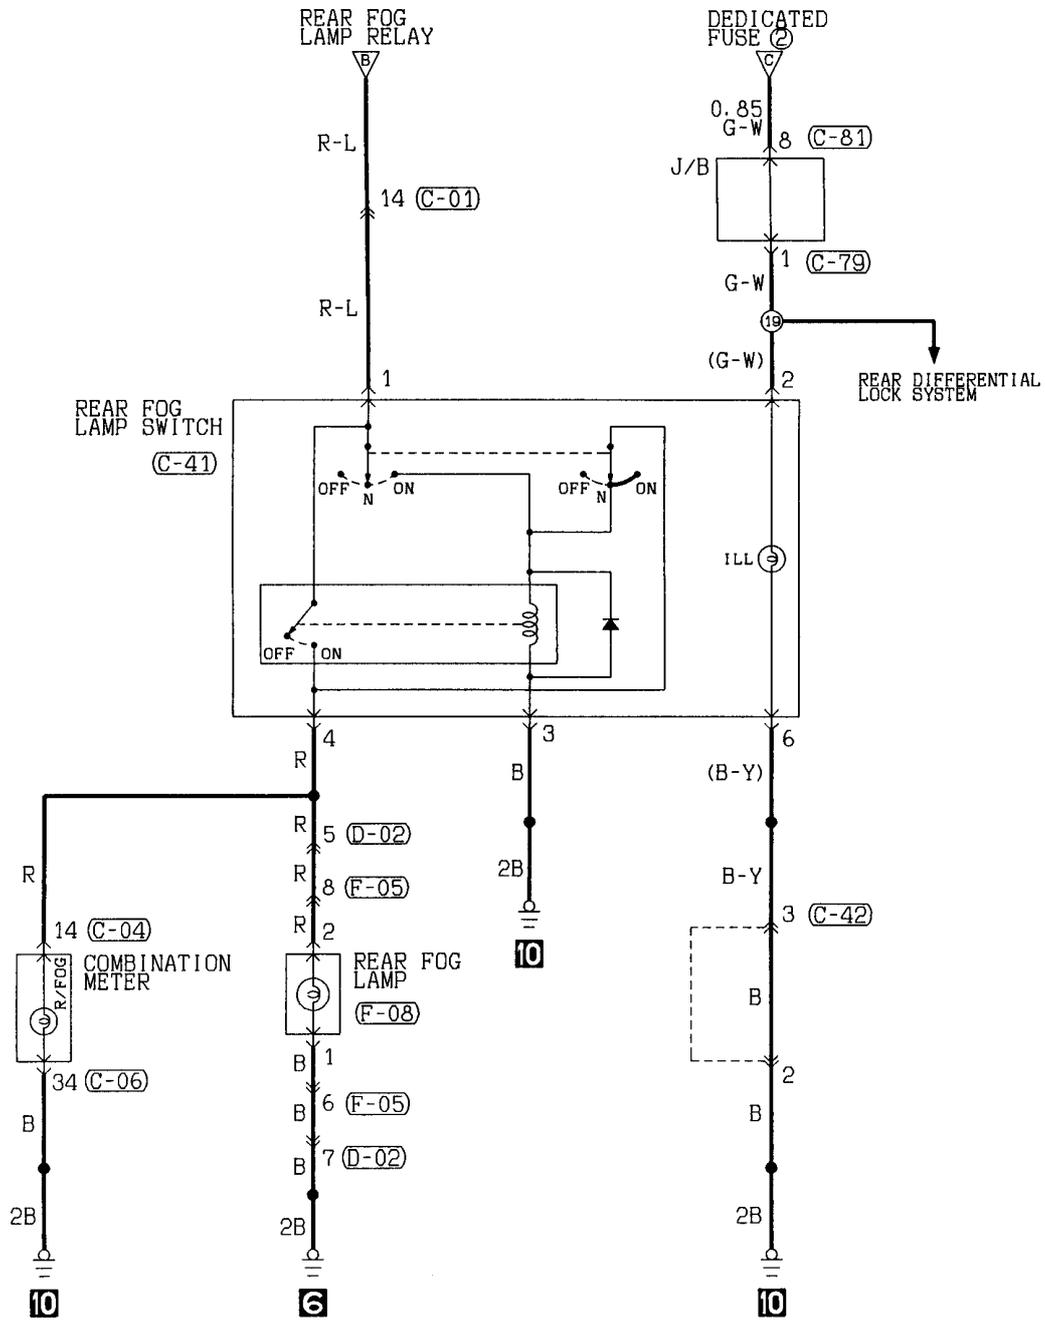

C-01	C-04	C-06	C-41	C-42	C-79
1 2 3 4 5 M 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	1 2 3 4 5 6 7 8 X 9 10 11 12 13 14	31 32 33 34 35 36 X 37 38 39 40 41 42 43 44	1 M 2 3 4 5 6	1 2 3 4	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
C-81	D-02	F-05	F-08		
1 2 3 4 5 6 7 8 9 10 11 12	1 2 3 M 4 5 6 7 8 9 10 11 12 13 14	0 2 3 4 6 7 8 9	0 2		

HEADLAMP LEVELING SYSTEM (See P. 4-126, 128.)

90101250124

OPERATION**1. Headlamps angle-downward operation**

- When the lighting switch is set to the "HEAD" position, the headlamp relay is switched ON, and battery voltage is applied, to the headlamp leveling unit.
- When the headlamp leveling switch setting is changed from "0" to "1", the positive (+) input terminal voltage of the comparator OP AMP 1 (located within the headlamp leveling unit) becomes greater than the negative (-) input terminal standard reference voltage value, and OP AMP 1 outputs HIGH signals to OP AMP 2 and OP AMP 3.
- As a result of these HIGH signals, OP AMP 2 outputs LOW signals and OP AMP 3 outputs HIGH signals to the motor-control IC.
- when this happens, the motor-control IC is switched ON, current flows to the motor, and the motor rotates in the forward direction.
- The rotation of the motor, after passing through the gears and the output shaft, causes the headlamp reflectors to move to a downward angle, thus changing the angle of headlamp illumination.
- At this time, the position-detection sliding resistance is activated in the direction of the low resistance value, after which the OP AMP 1 negative (-) input terminal voltage value and positive (+) input terminal voltage value become equivalent, and OP AMP 2 and OP AMP 3 both output HIGH signals.
- When this happen, the motor-control IC is switched OFF and the motor stops.

NOTE

- (1) The some operation occurs if the headlamp leveling switch is set to another positon.
- (2) The input open protection circuit functions to stop the operation of the motor if there is an abnormal condition, such as damaged or disconnected wiring within the headlamp leveling unit or of the wiring herness.

2. Headlamps angle-upward operation

- The headlamp angle-upward operation is the opposite logic of the downward operation, the motor operates in the reverse direction and then stops.






TROUBLESHOOTING HINTS


1. Absolutely no change of the headlamp angle
 - Check the headlamp leveling switch.
 - Check the headlamp leveling unit.
2. There is one setting of the headlamp leveling switch at which the headlamp angle does not change.
 - Check the headlamp leveling switch.

HEADLAMP LEVELING SYSTEM

90101250131

1997 Models

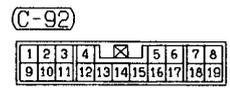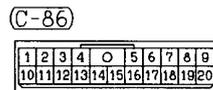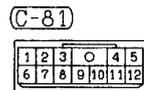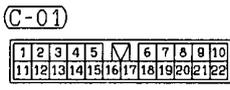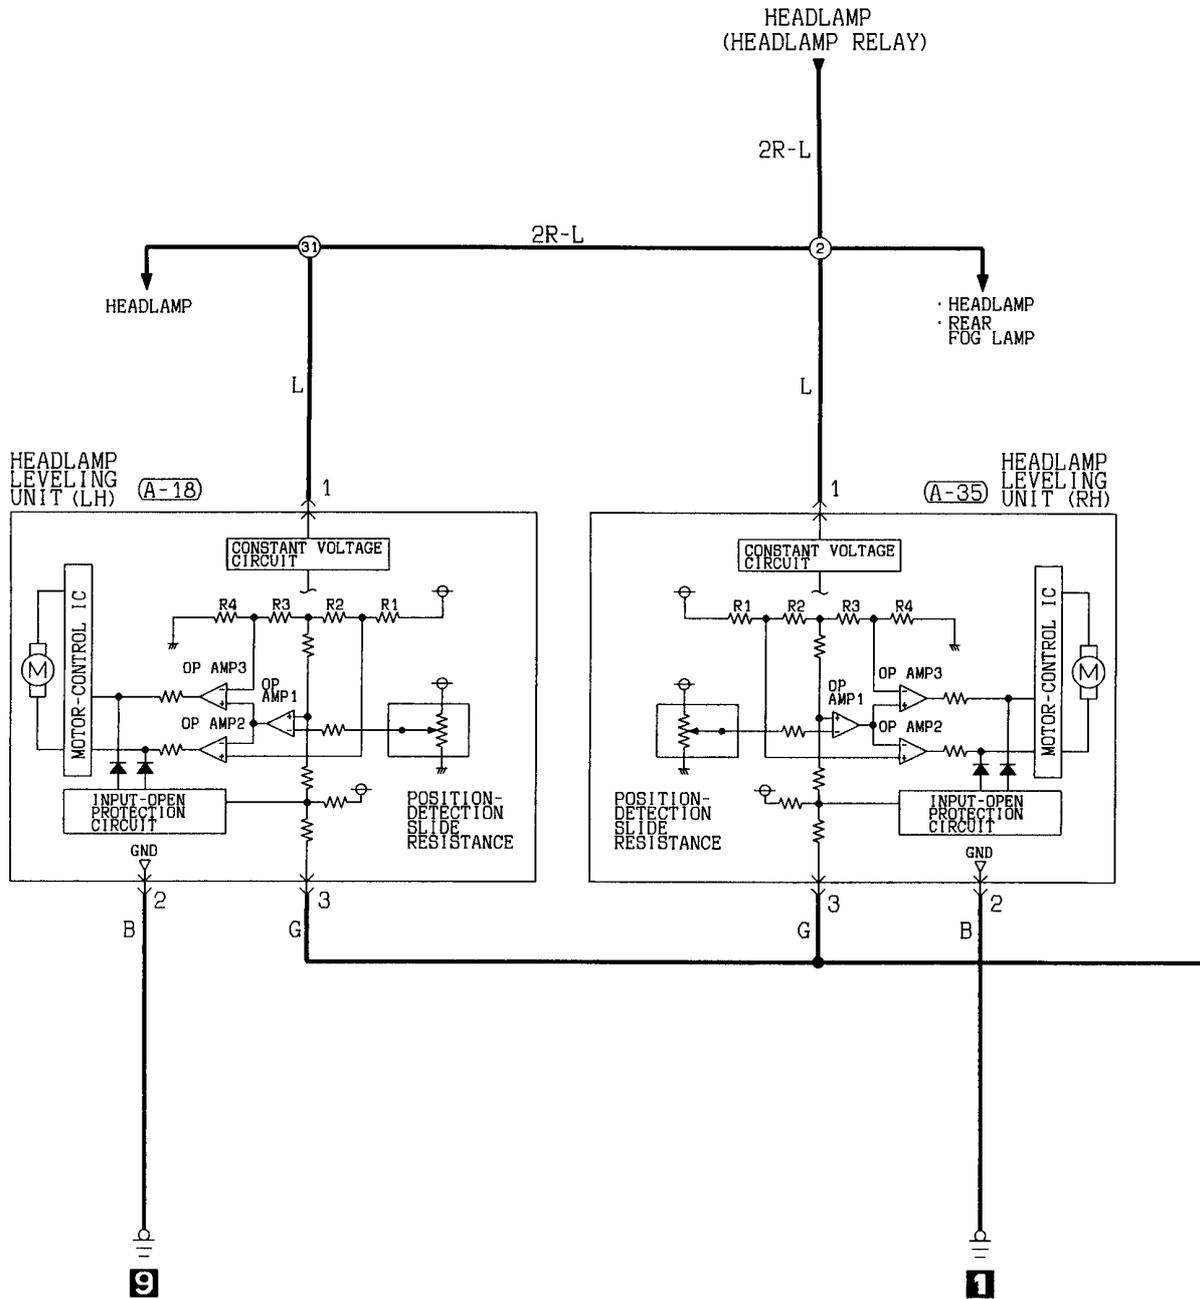

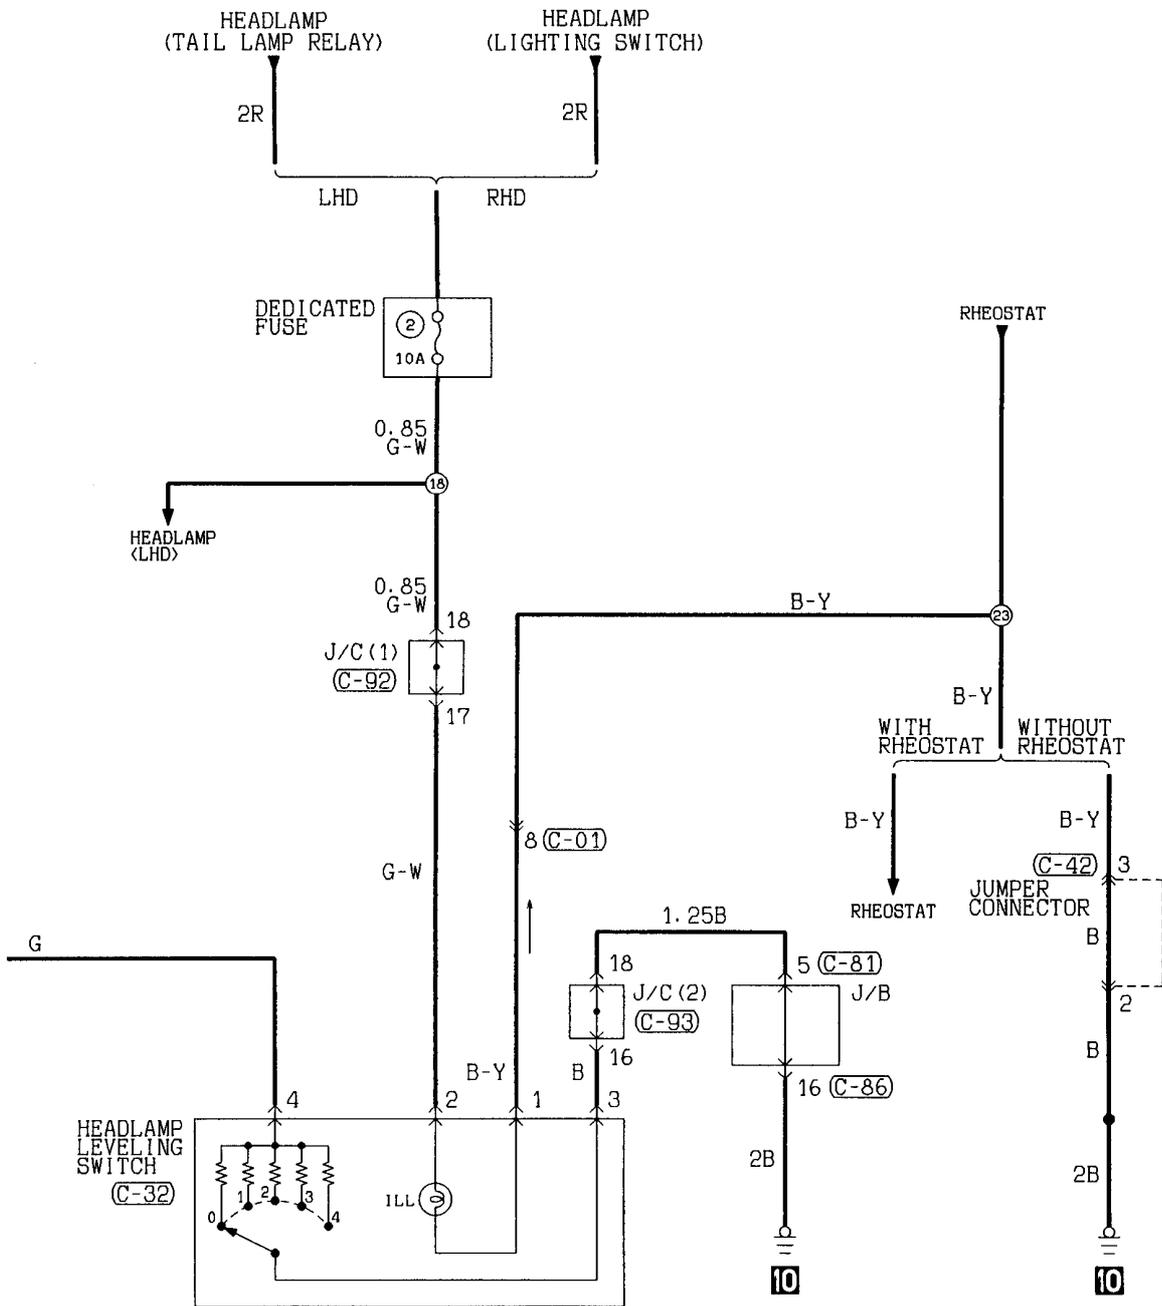



C-93


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					

HEADLAMP LEVELING SYSTEM

90101250223

1998 Models

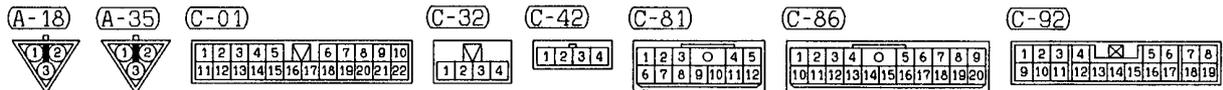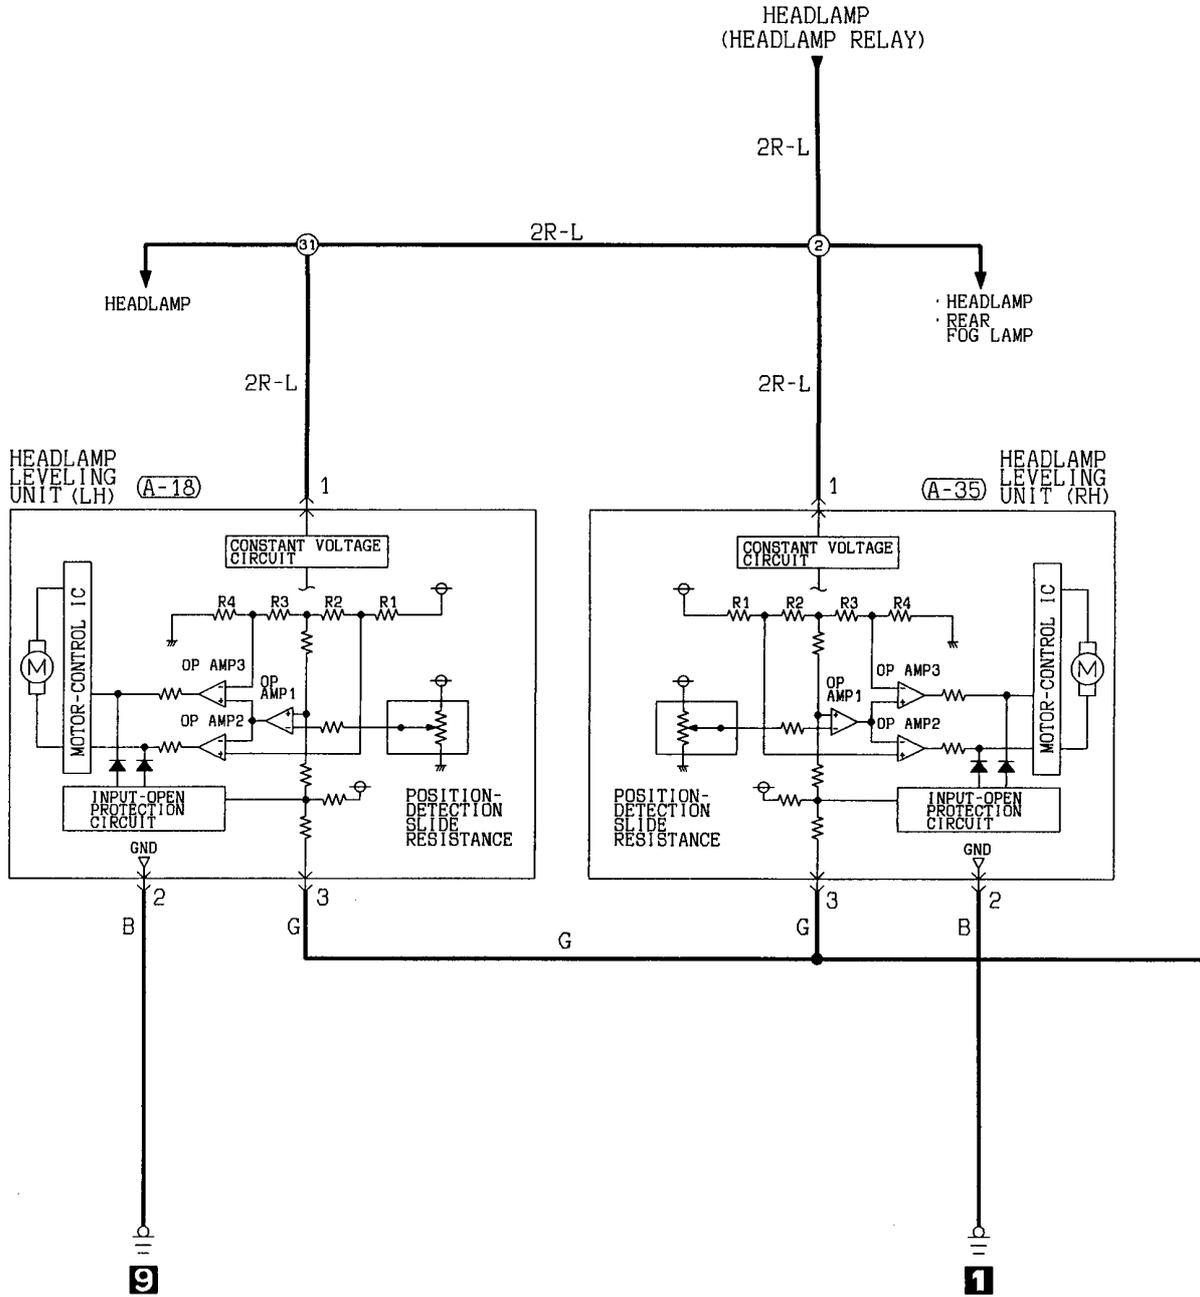

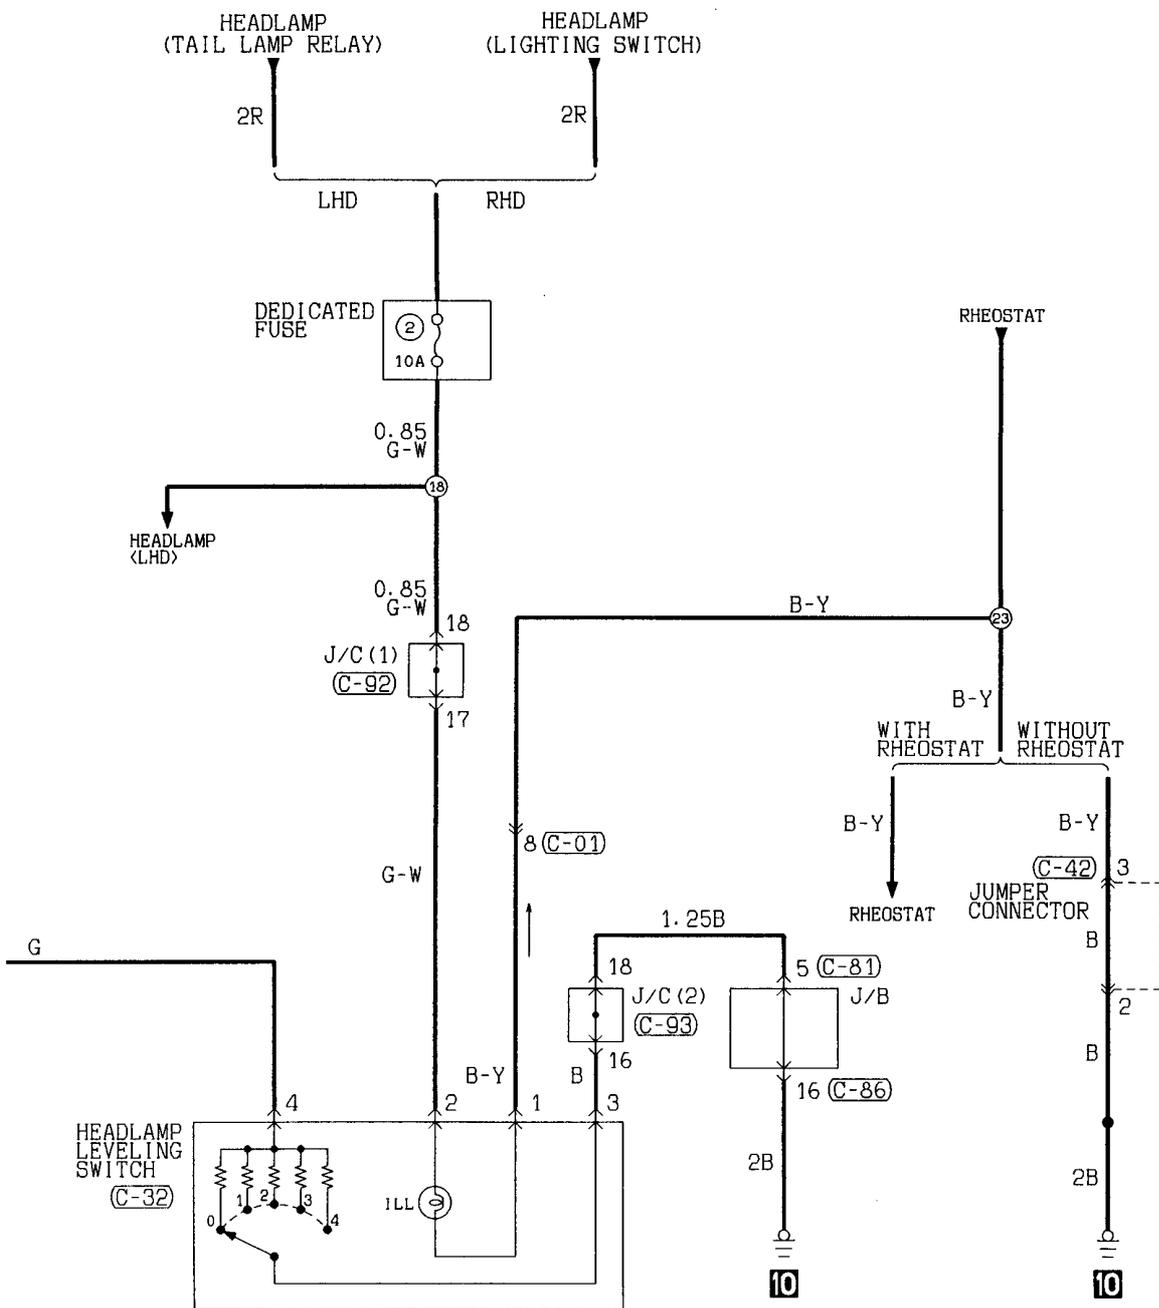



(C-93)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

ROOM LAMP

90100210109


Except double cab

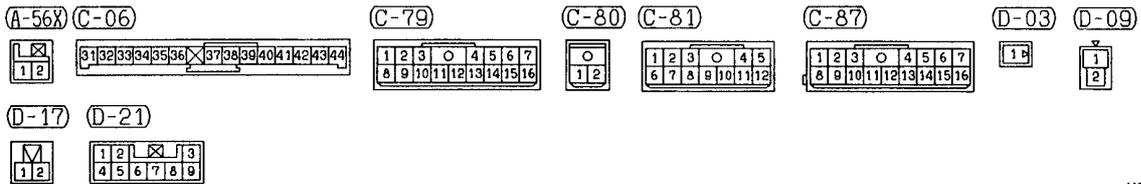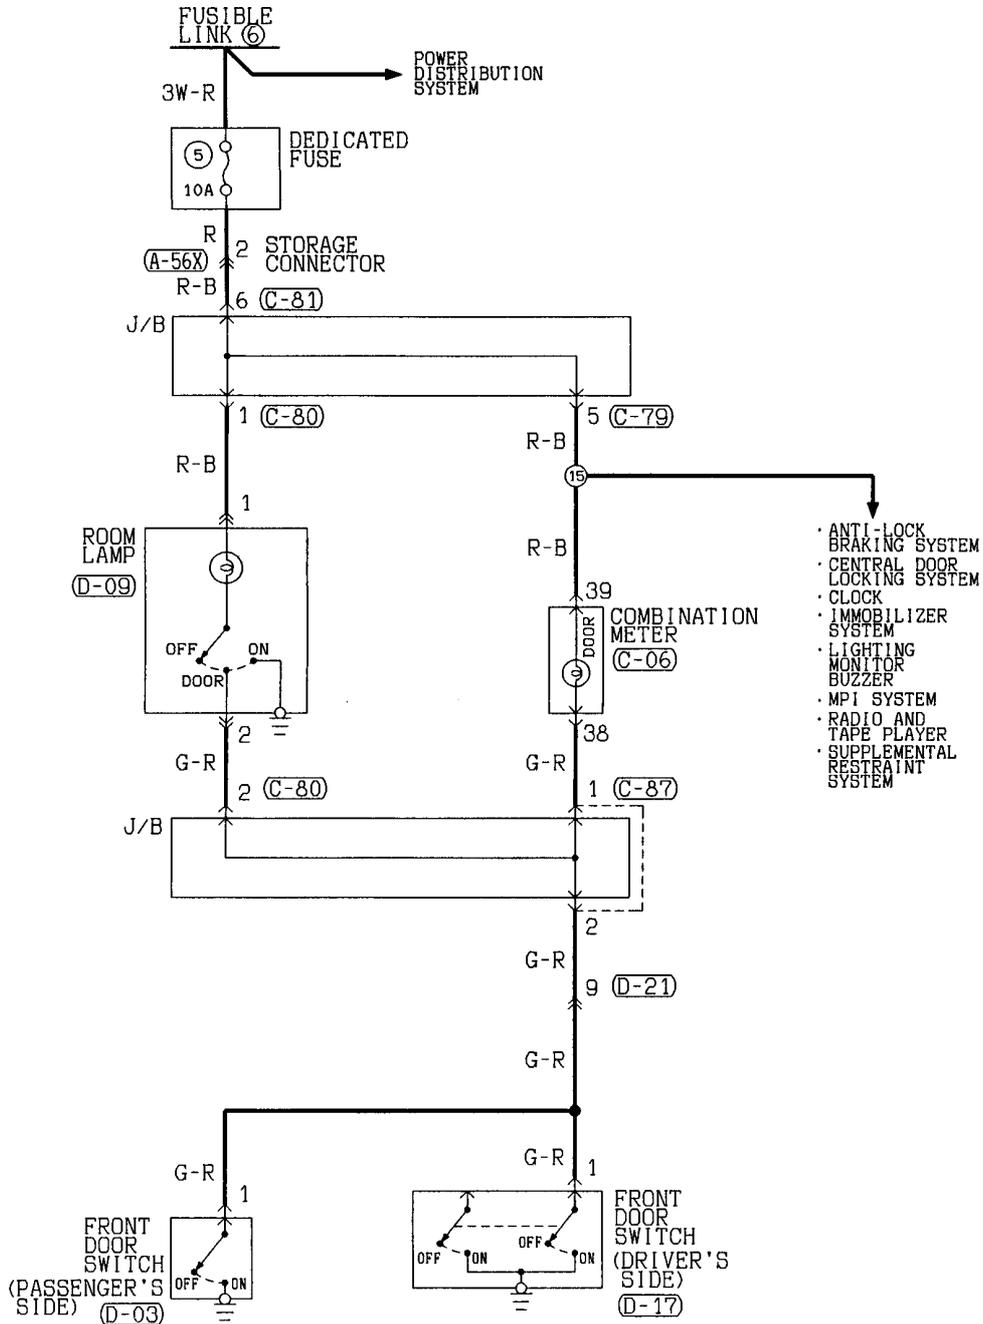

ROOM LAMP

90100210116

Double cab

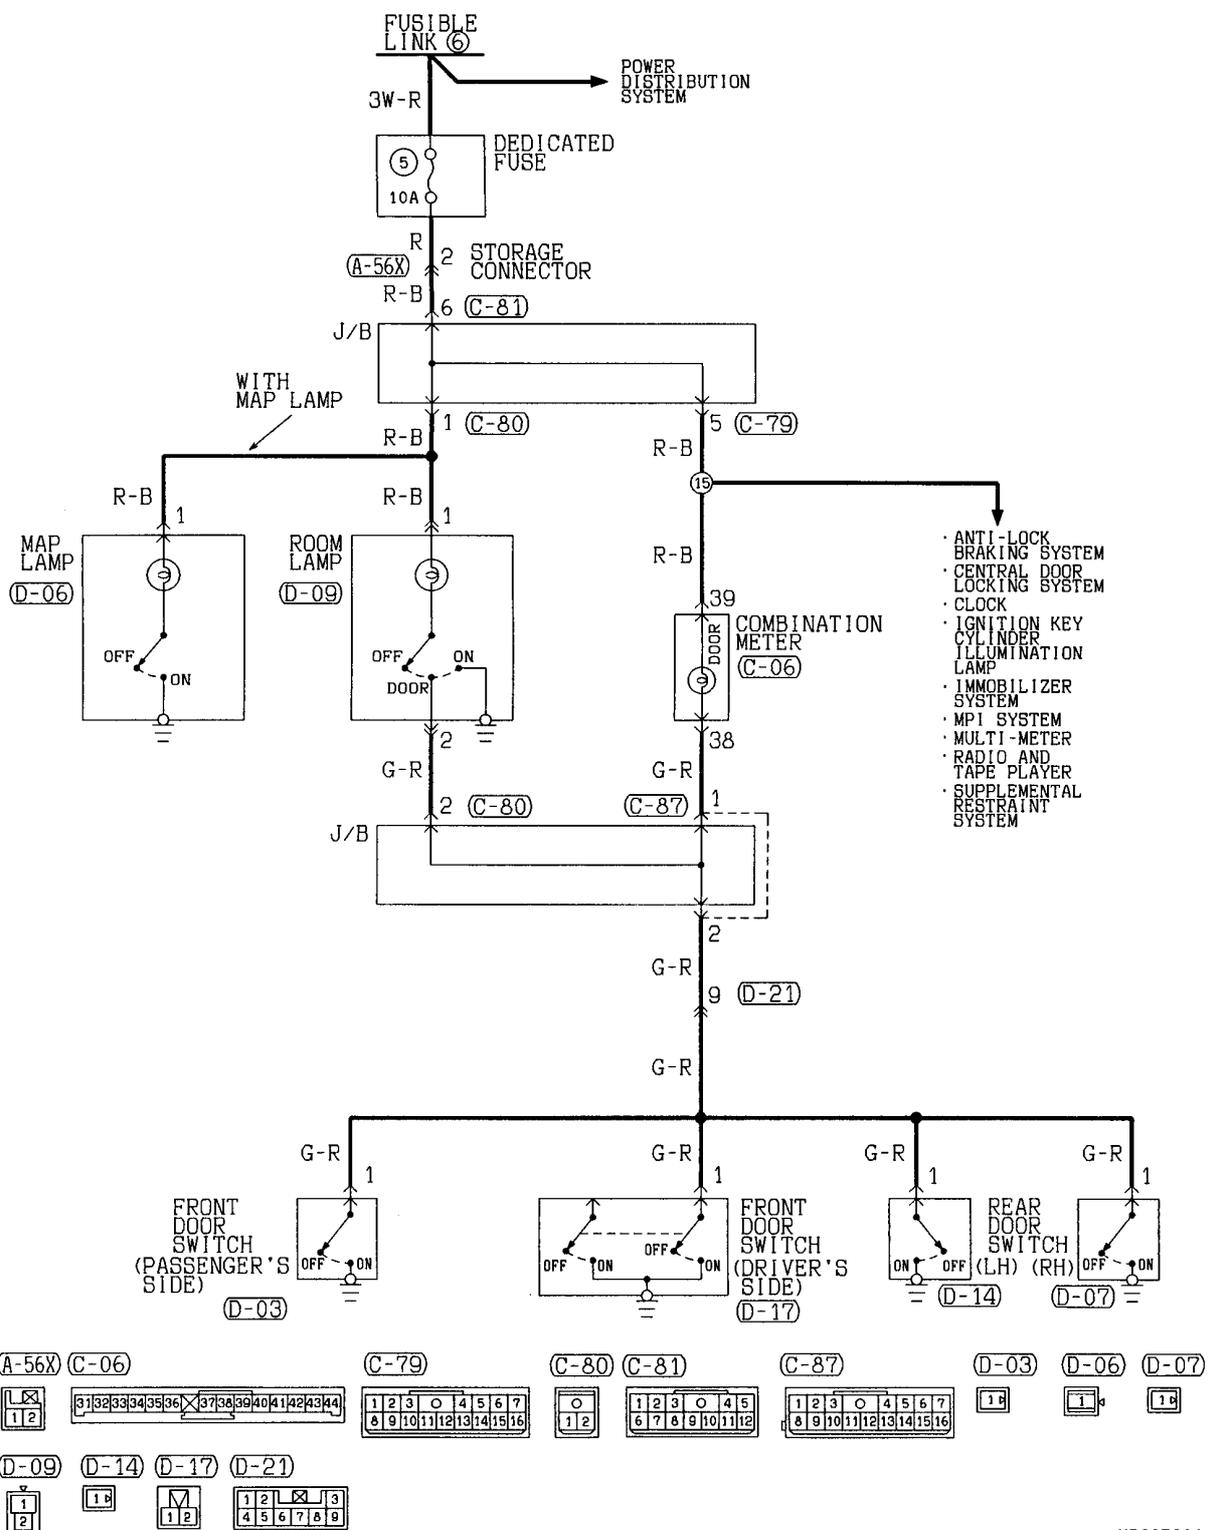

ROOM LAMP (See P. 4-130, 131.)

90100210123

OPERATION



- Placing the room lamp switch in the ON position causes the room lamp to illuminate at all times.
- Opening any one of the doors with the room lamp switch in the DOOR position causes the room lamp to illuminate.
- Closing all doors causes the room lamp to switch off.

TROUBLESHOOTING HINTS

1. Room lamp does not illuminate.
 - (1) Clock is not operating, either.
 - Check dedicated fuse No. (5).
 - (2) Room lamp does not illuminate when any door is opened with the room lamp switch in the DOOR position.
 - Check bulb
 - Check room lamp switch
 - (3) Room lamp does not illuminate when a door is opened with the room lamp switch in the DOOR position.
 - Check door switch (of the suspected door).

IGNITION KEY CYLINDER ILLUMINATION LAMP



90100260135

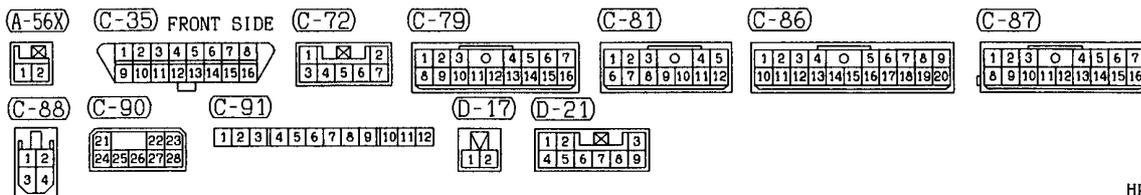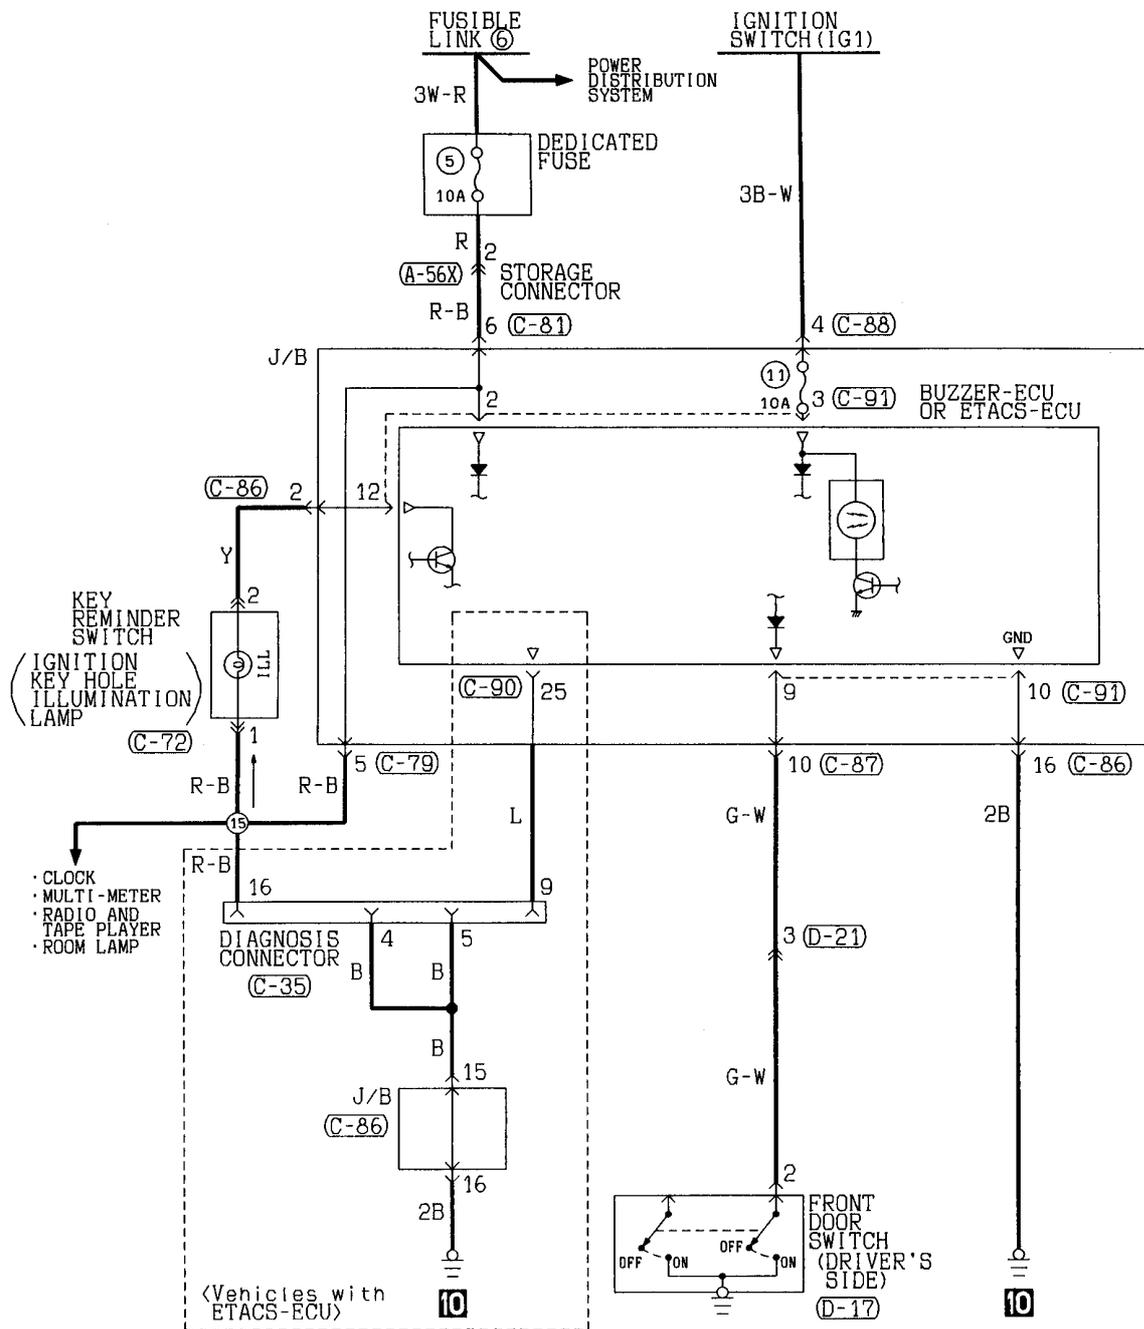


TURN-SIGNAL LAMP AND HAZARD WARNING LAMP

90100290165

1997 Models

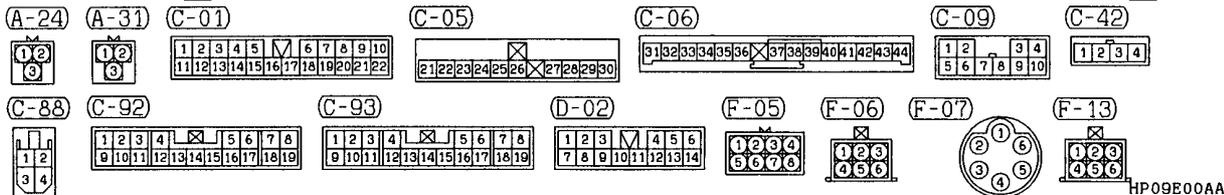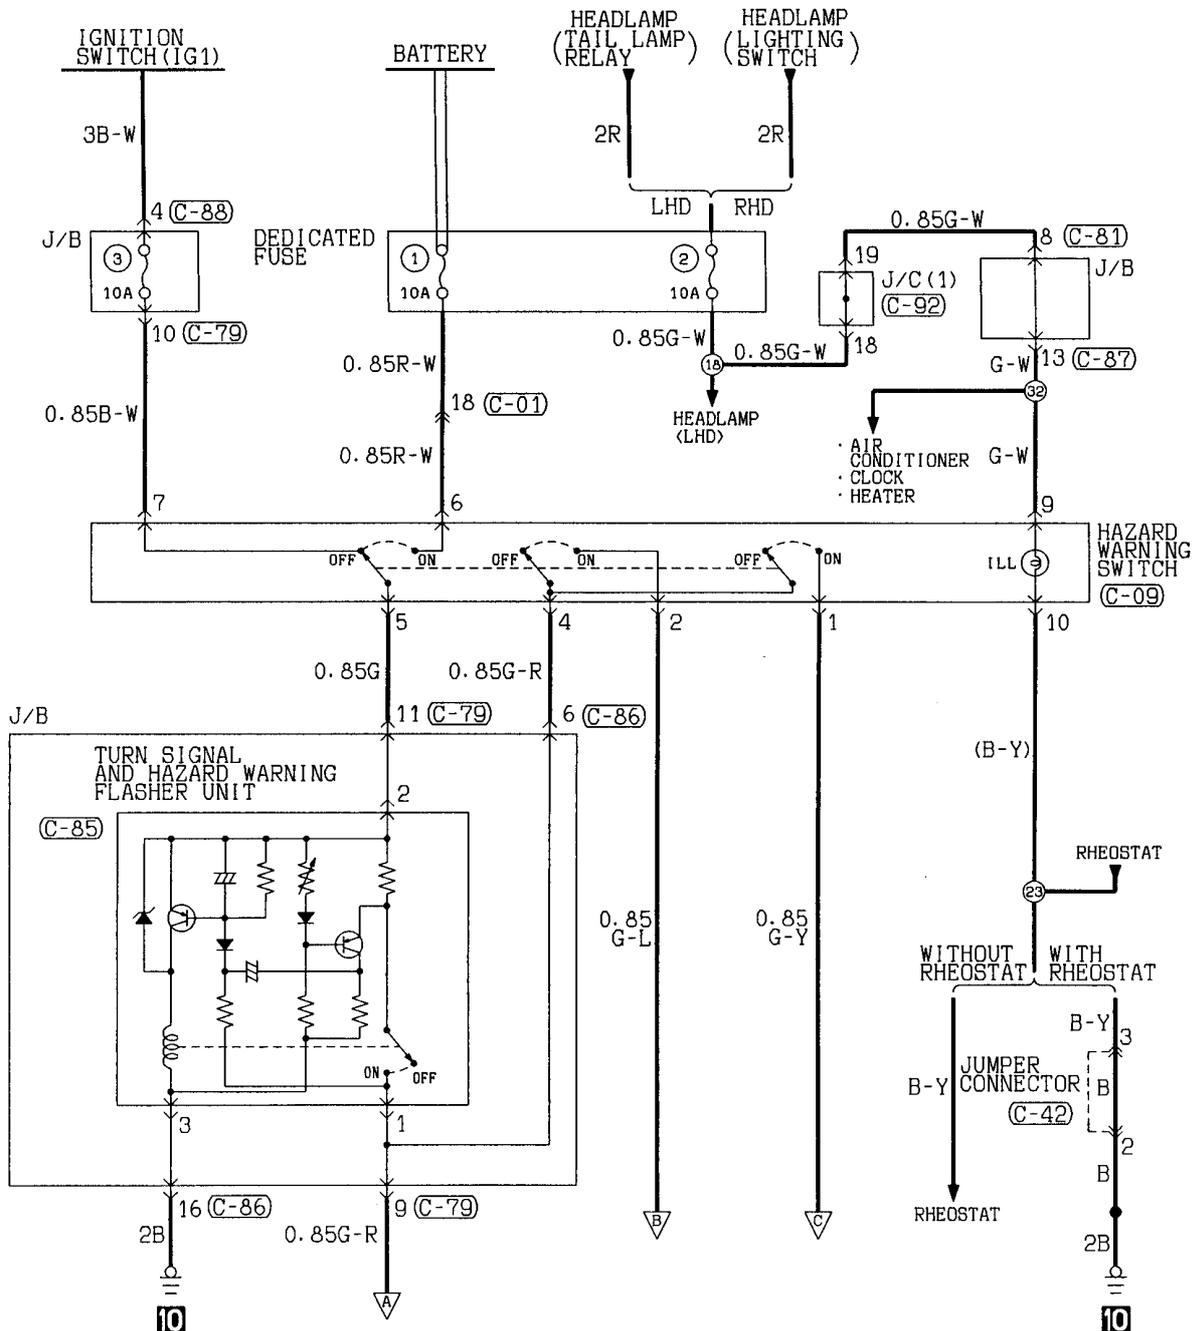

HP09E00AA

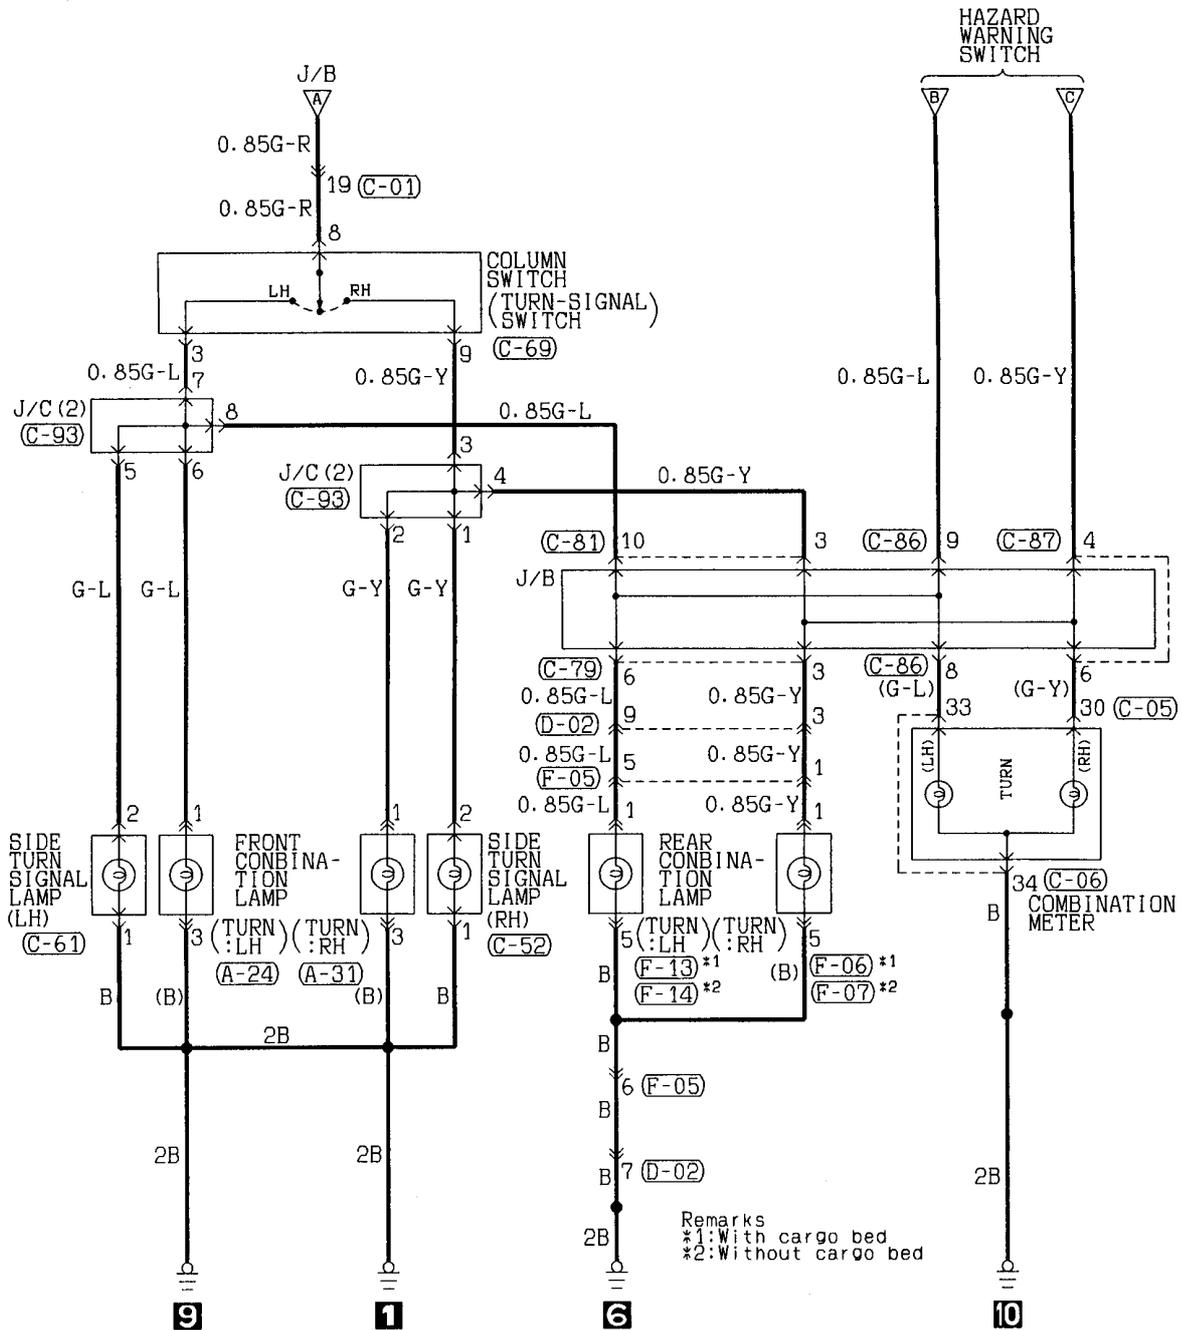

C-52

C-61

C-69

C-79

C-81

C-85

C-86

C-87



F-14




TURN-SIGNAL LAMP AND HAZARD WARNING LAMP

90100290486



1998 Models

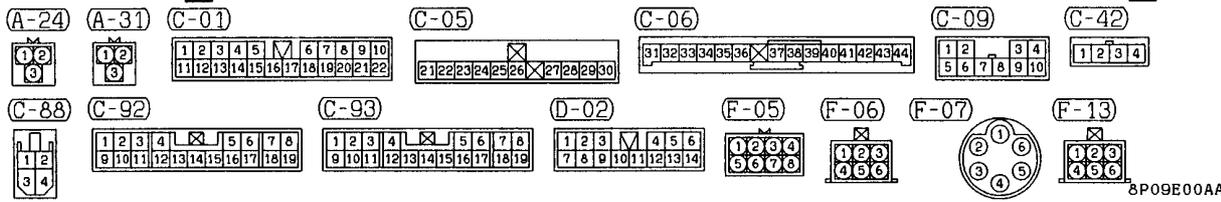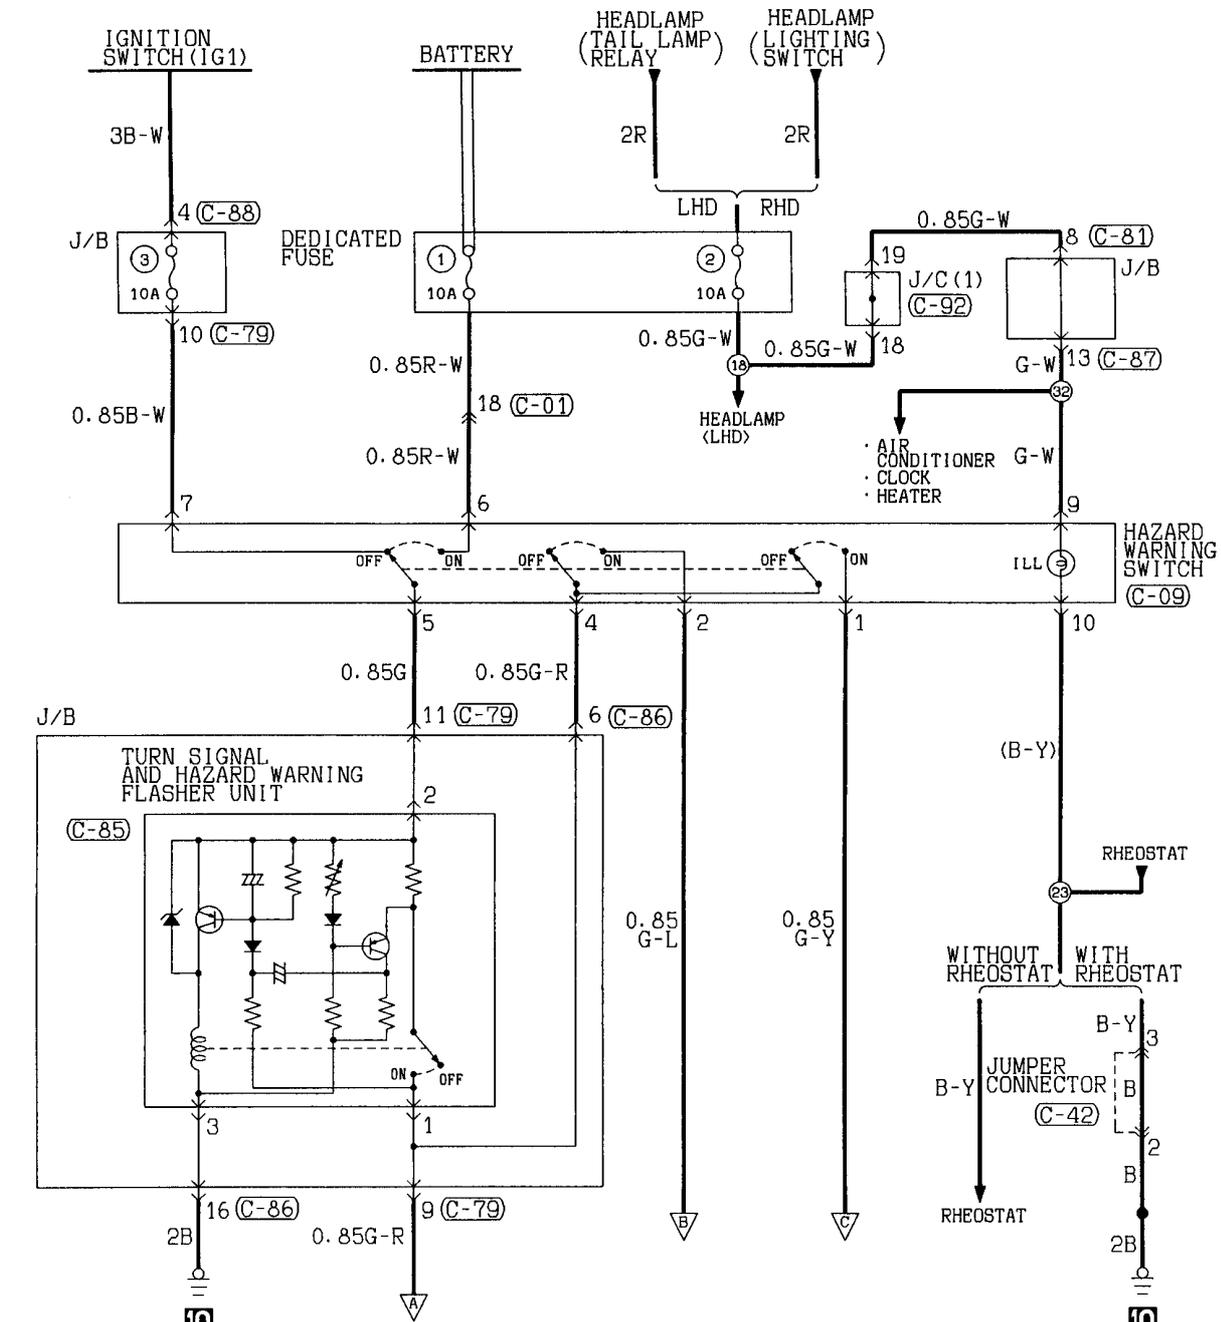

8P09E00AA

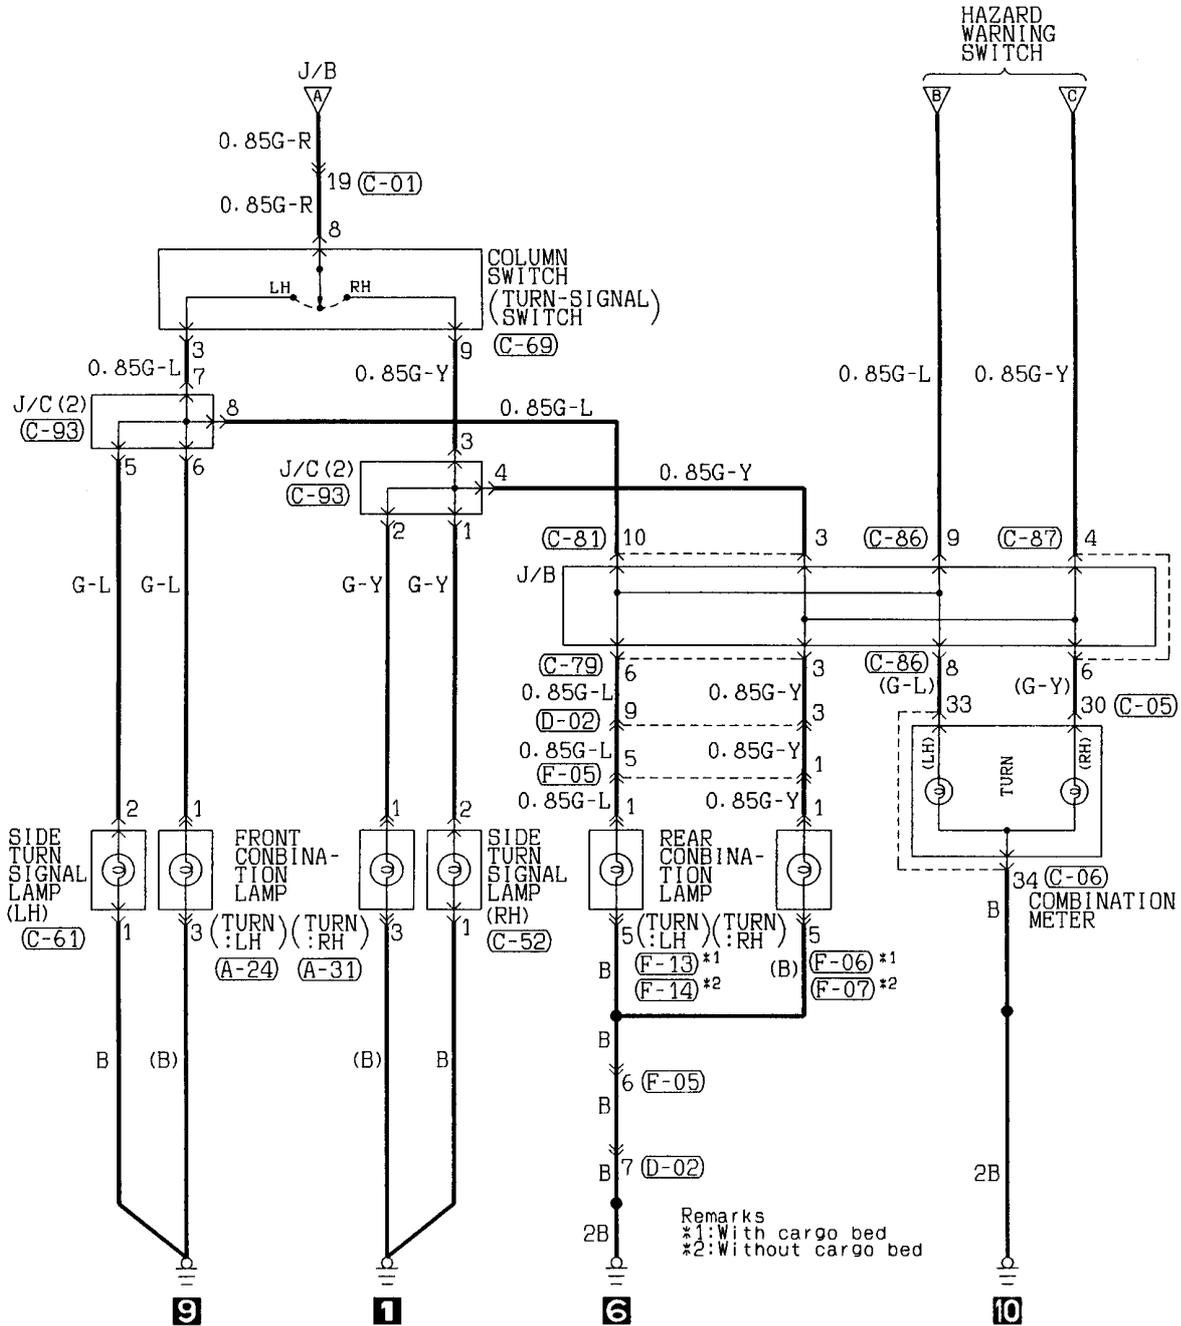

Remarks
 *1: With cargo bed
 *2: Without cargo bed

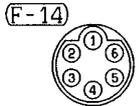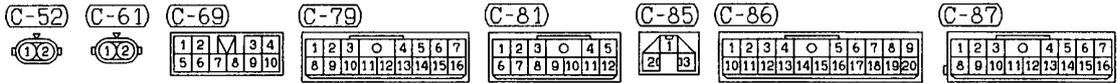

TURN-SIGNAL LAMP AND HAZARD WARNING LAMP (See P. 4-134, 136.) 90100290172**OPERATION****<Turn-signal lamp>****1. In standard operating condition**

- When the ignition switch is placed in the ON position, battery voltage is applied through the hazard warning switch to the turn-signal and hazard warning flasher unit.
- When the turn signal switch is turned to the "LH" or "RH" position, the relay contact turns "ON" and "OFF" repeatedly due to the switching operation of the capacitor and transistor inside the flasher unit, and the turn signal lamp and the "LH" and "RH" of the turn signal indicator lamp flash.

2. When one bulb is burnt

- When either one of the turn signal lamp is burnt, the resistance of the entire lamp circuit increases, so that the time required for charging and discharging of the capacitor is shortened, causing the "ON" "OFF" cycle of the relay to become faster than standard and the number of flashes to increase.

<Hazard warning lamp>

- When the hazard warning switch is turned to the "ON" position, current flows via dedicated fuse No. (1) to the flasher unit, the flasher unit relay contacts repeatedly close and open, which results in the RH and LH turn-signal lamps, turn-signal indicator lamps, and hazard warning indicator lamps flashing on and off at the same time.

Remark



- The number of times the hazard warning lamps flash on and off does not change even when one bulb is out.

TROUBLESHOOTING HINTS

1. Neither the turn-signal lamp nor hazard warning lamps operate.
 - Check hazard warning switch contacts (on power source end).
 - Check flasher unit.
2. All LH or RH turn-signal lamps do not operate.
 - (1) Hazard warning lamp is fully operational.
 - Check turn-signal switch.
3. Flashing cycle of turn signal lamps is shorter.
 - Check the lamp bulb.
 - Check flasher unit.
4. Hazard warning lamp does not operate. Turn-signal lamps are operational.
 - Check dedicated fuse No. (1).
 - Check hazard warning switch contacts (on hazard lamp end).


STOP LAMP

90100300172

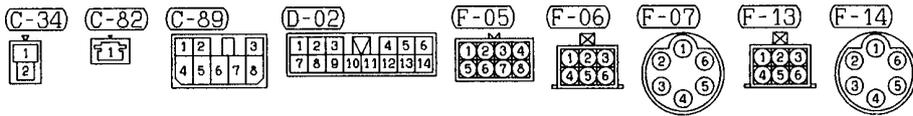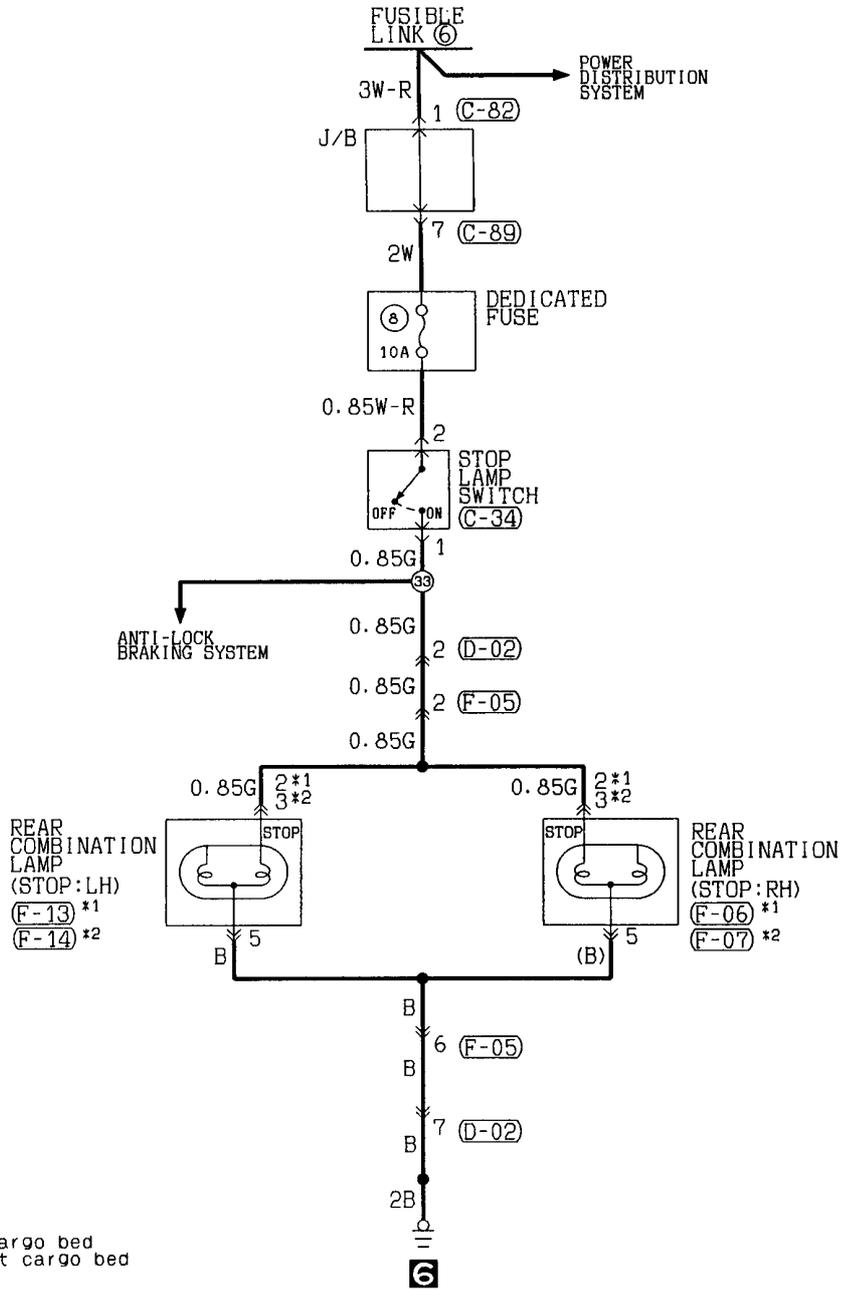

BACK-UP LAMP

90100310182


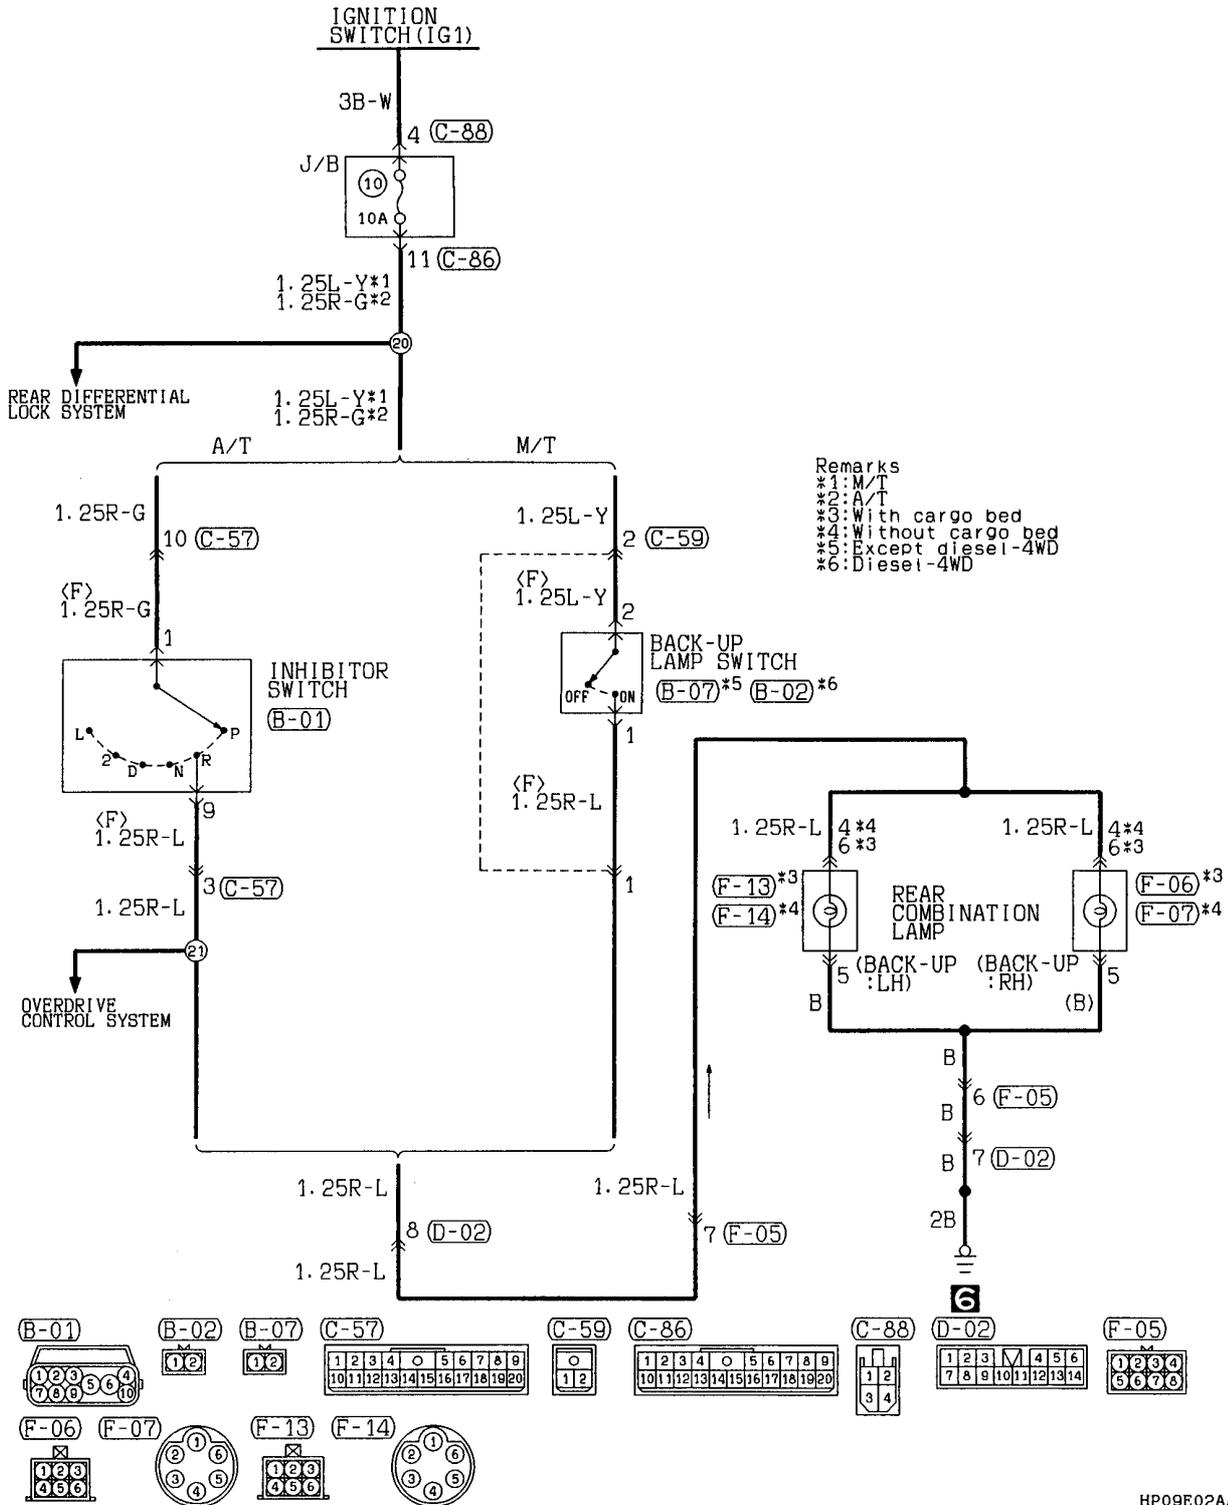


NOTES

HORN

90100330171



Vehicles with SRS

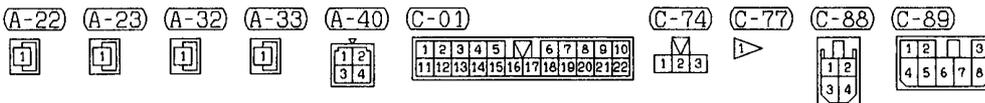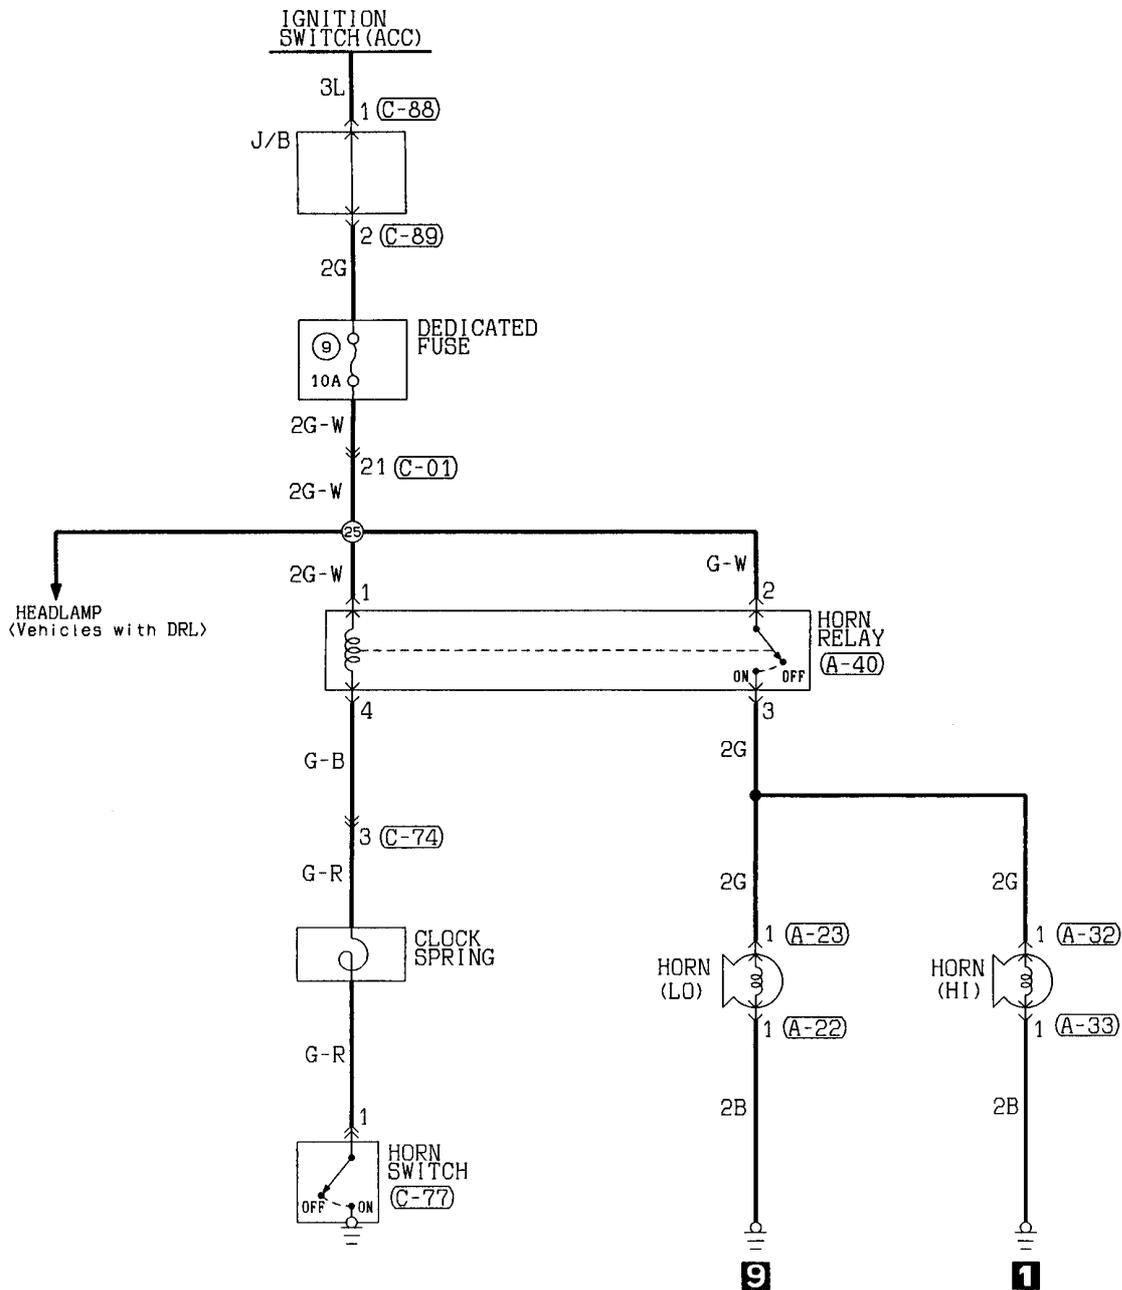

HORN



90100330188


Vehicles without SRS

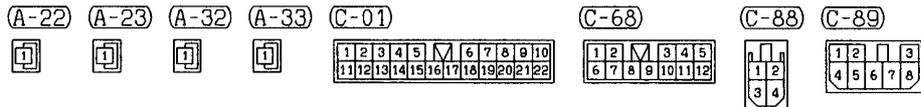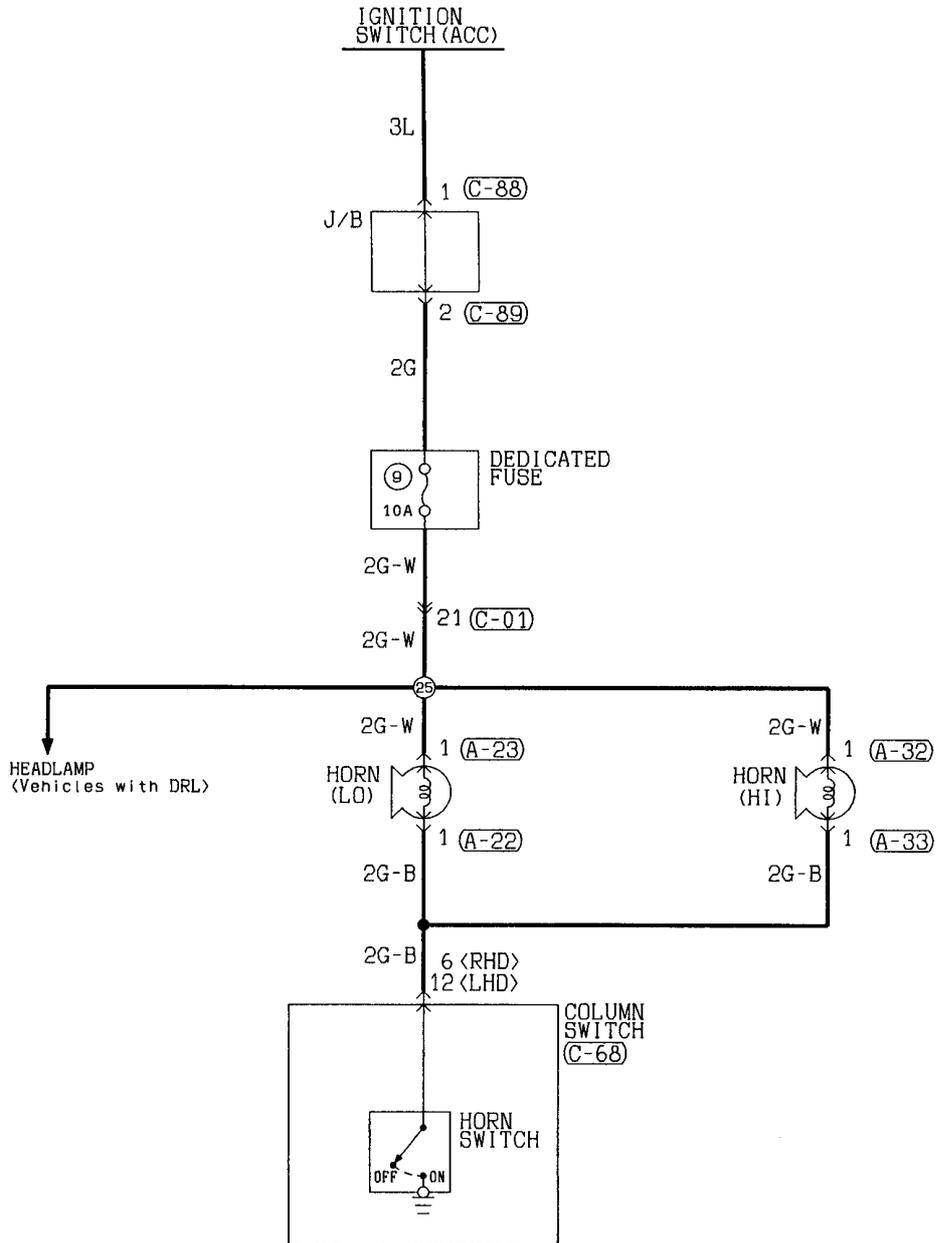


METER AND GAUGE

90100350207

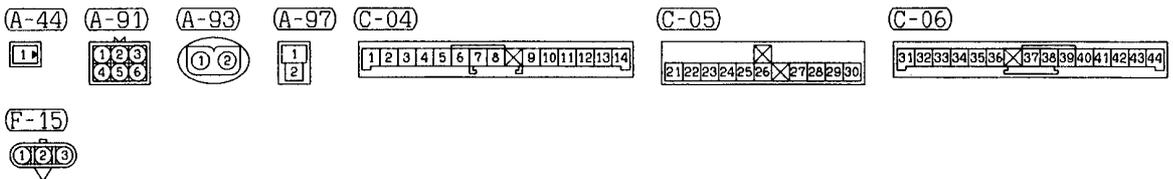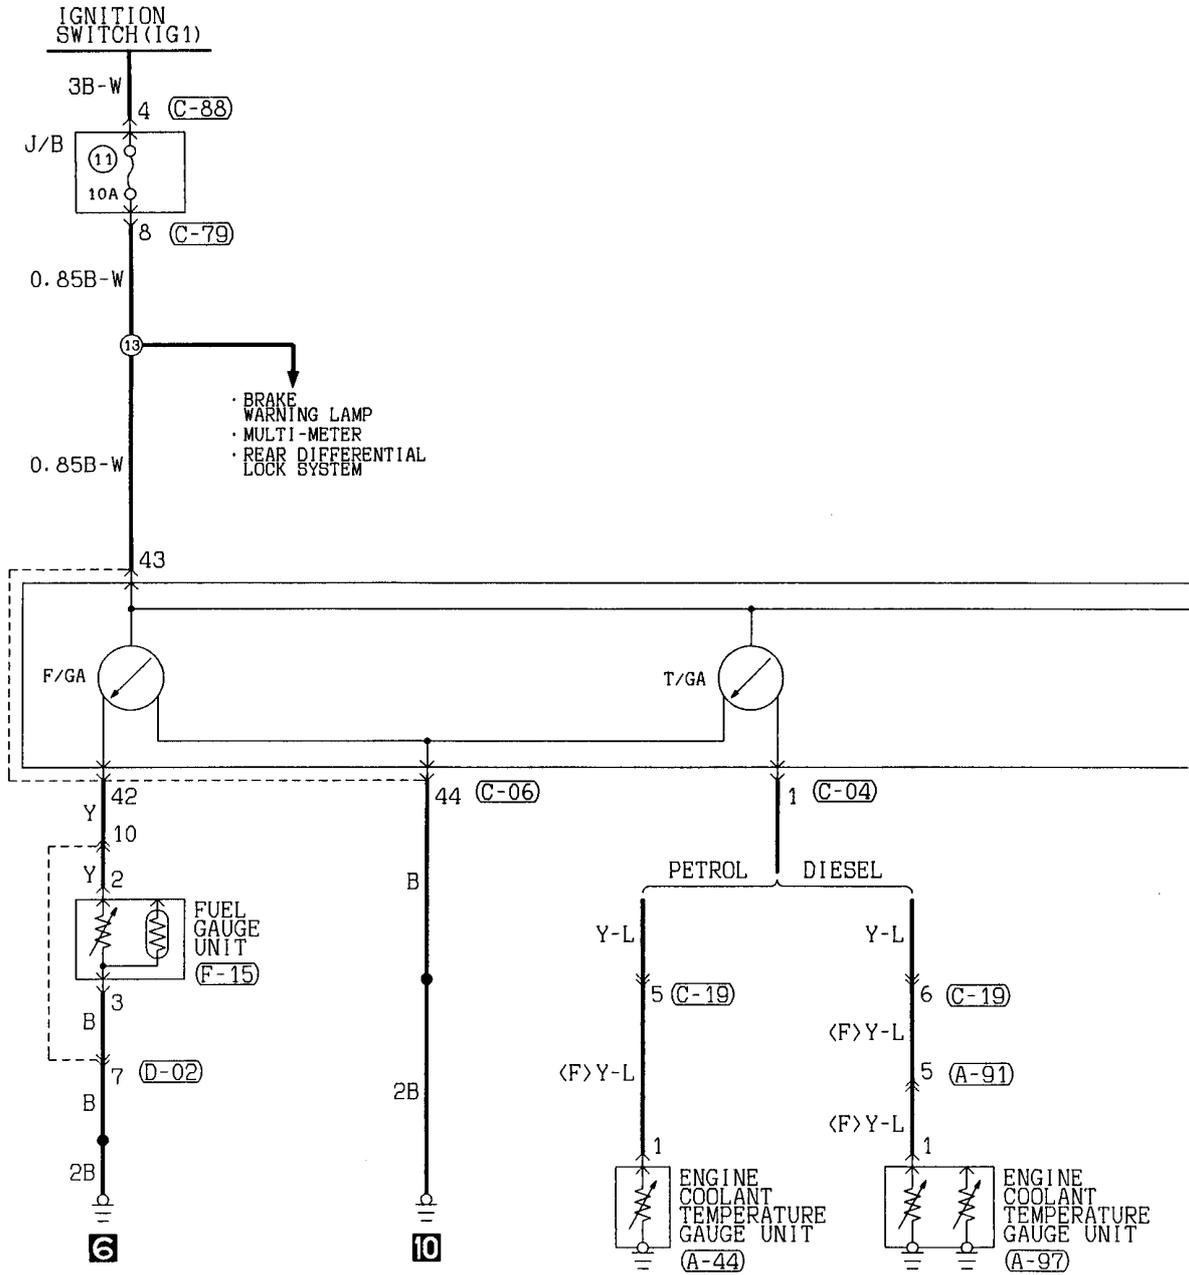

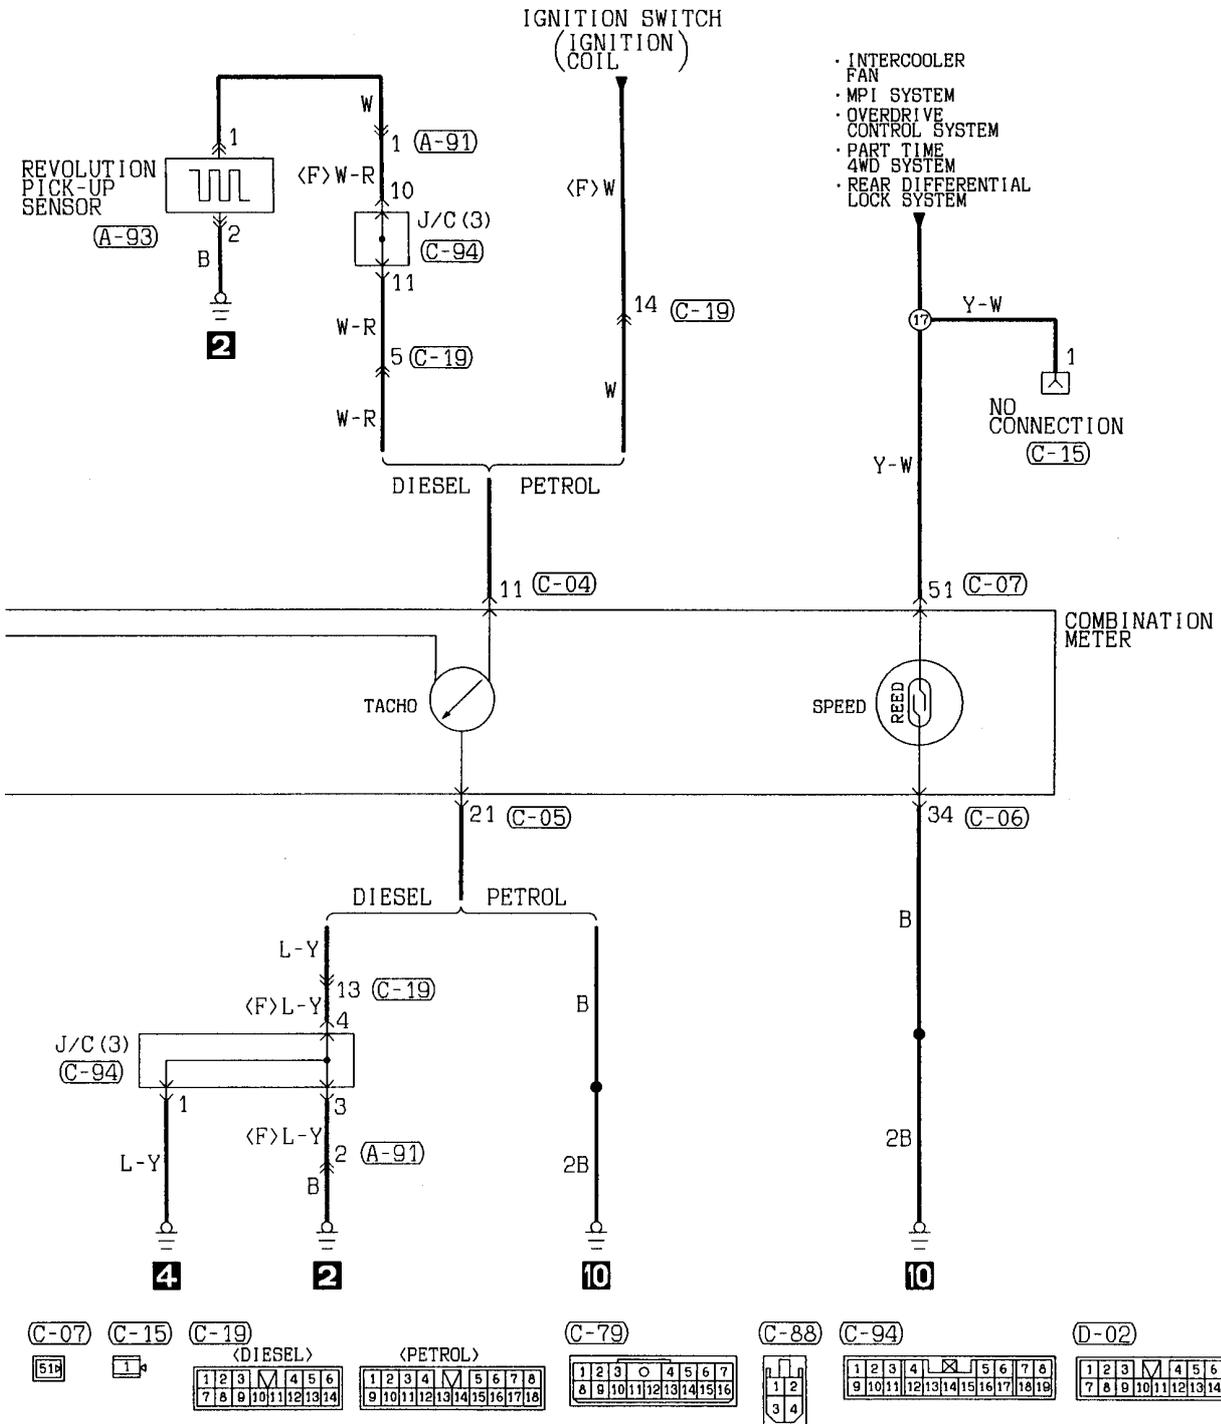

METER AND GAUGE (CONTINUED)

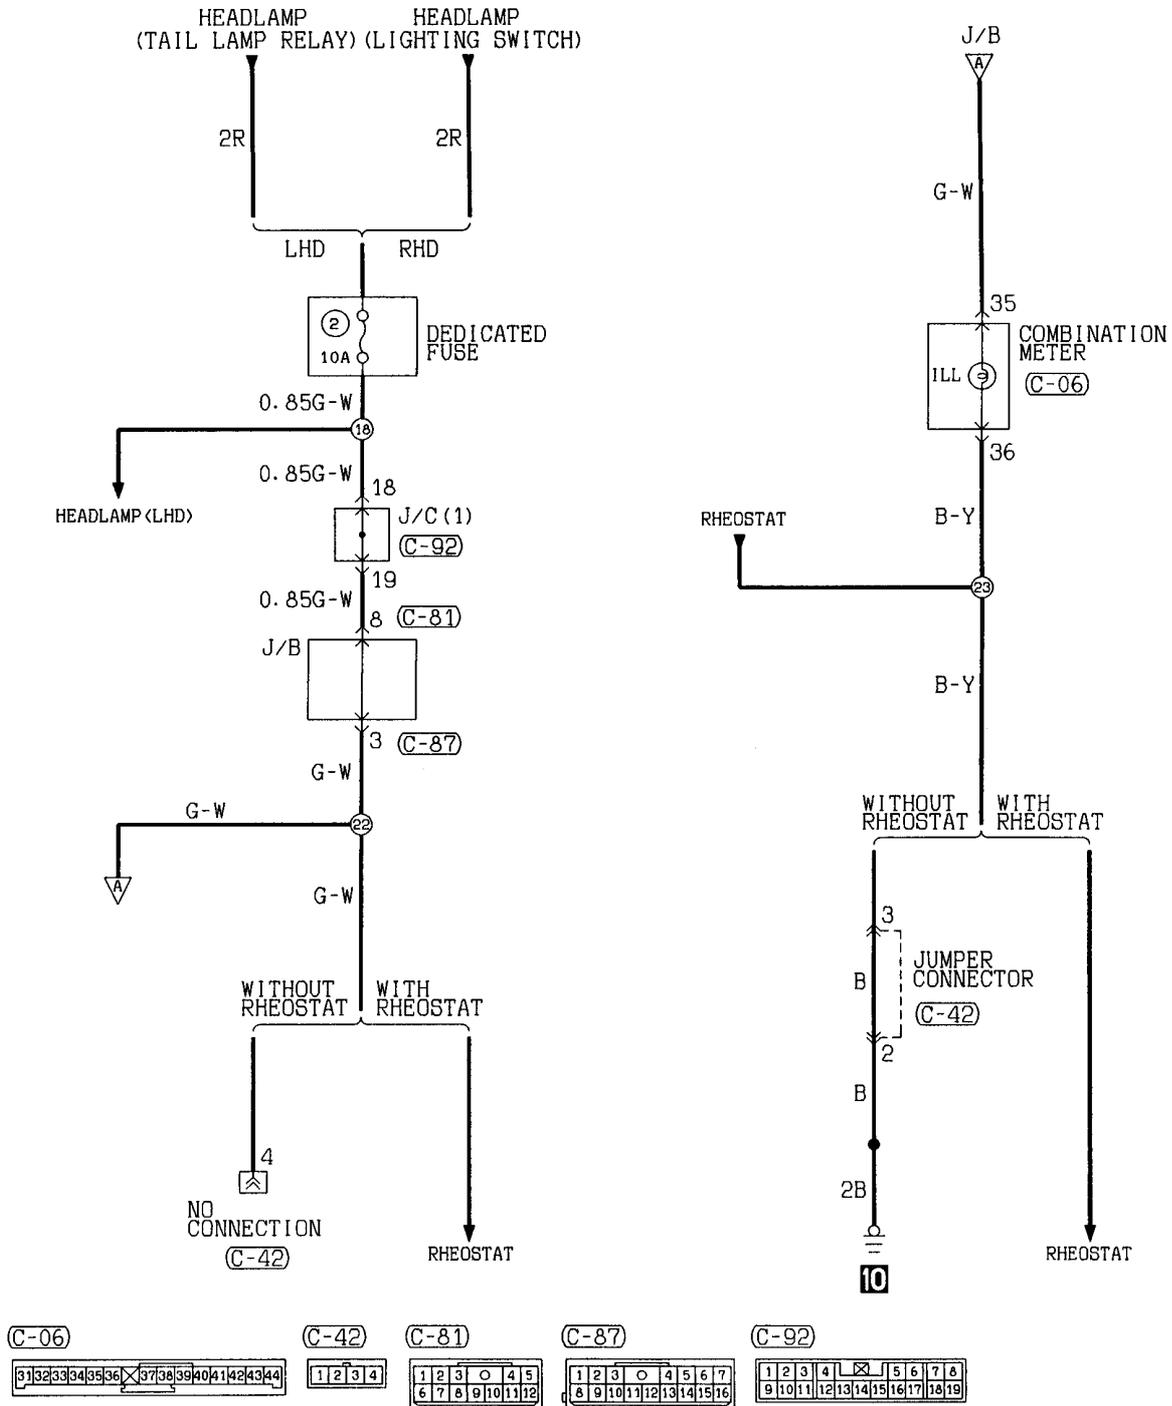

METER AND GAUGE (See P. 4-144.)

90100350214

OPERATION**<Fuel gauge>**

- When the ignition switch is at the "ON" position, the fuel gauge is activated.
- When there is much fuel, the unit's resistance is small and the current flowing in the circuit is great, so the gauge's indicator indicates in the "F" area.
- When there is little fuel, the unit's resistance is high and the current flowing in the circuit is small, so the gauge's indicator indicates in the "E" area.

<Engine coolant temperature gauge>

- When the ignition switch is at the "ON" position, the engine coolant temperature gauge is activated.
- When the engine coolant temperature is high, the unit's resistance is low and there is a great flow of current in the circuit, so the gauge's indicator indicates in the "H" area.
- When the engine coolant temperature is low, the unit's resistance is high and there is a small flow of current in the circuit, so the gauge's indicator indicates in the "C" area.


TROUBLESHOOTING HINTS

1. Fuel gauge does not operate, or registers incorrectly.
 - (1) The fuel gauge indicates "F" when the fuel gauge unit connector is disconnected and the "2" terminal is earthed.
 - Check fuel gauge.
2. Engine coolant temperature gauge does not operate, or registers incorrectly.
 - (1) When the engine coolant temperature gauge is earthed with its connector unplugged, it registers "H".
 - Check engine coolant temperature gauge unit.
3. Meter illumination lamp does not illuminate.
 - (1) Tail lamps illuminate.
 - Check rheostat.
 - Check earth.

**BRAKE WARNING LAMP
FUEL WARNING LAMP**

90101180102


Vehicles without SRS

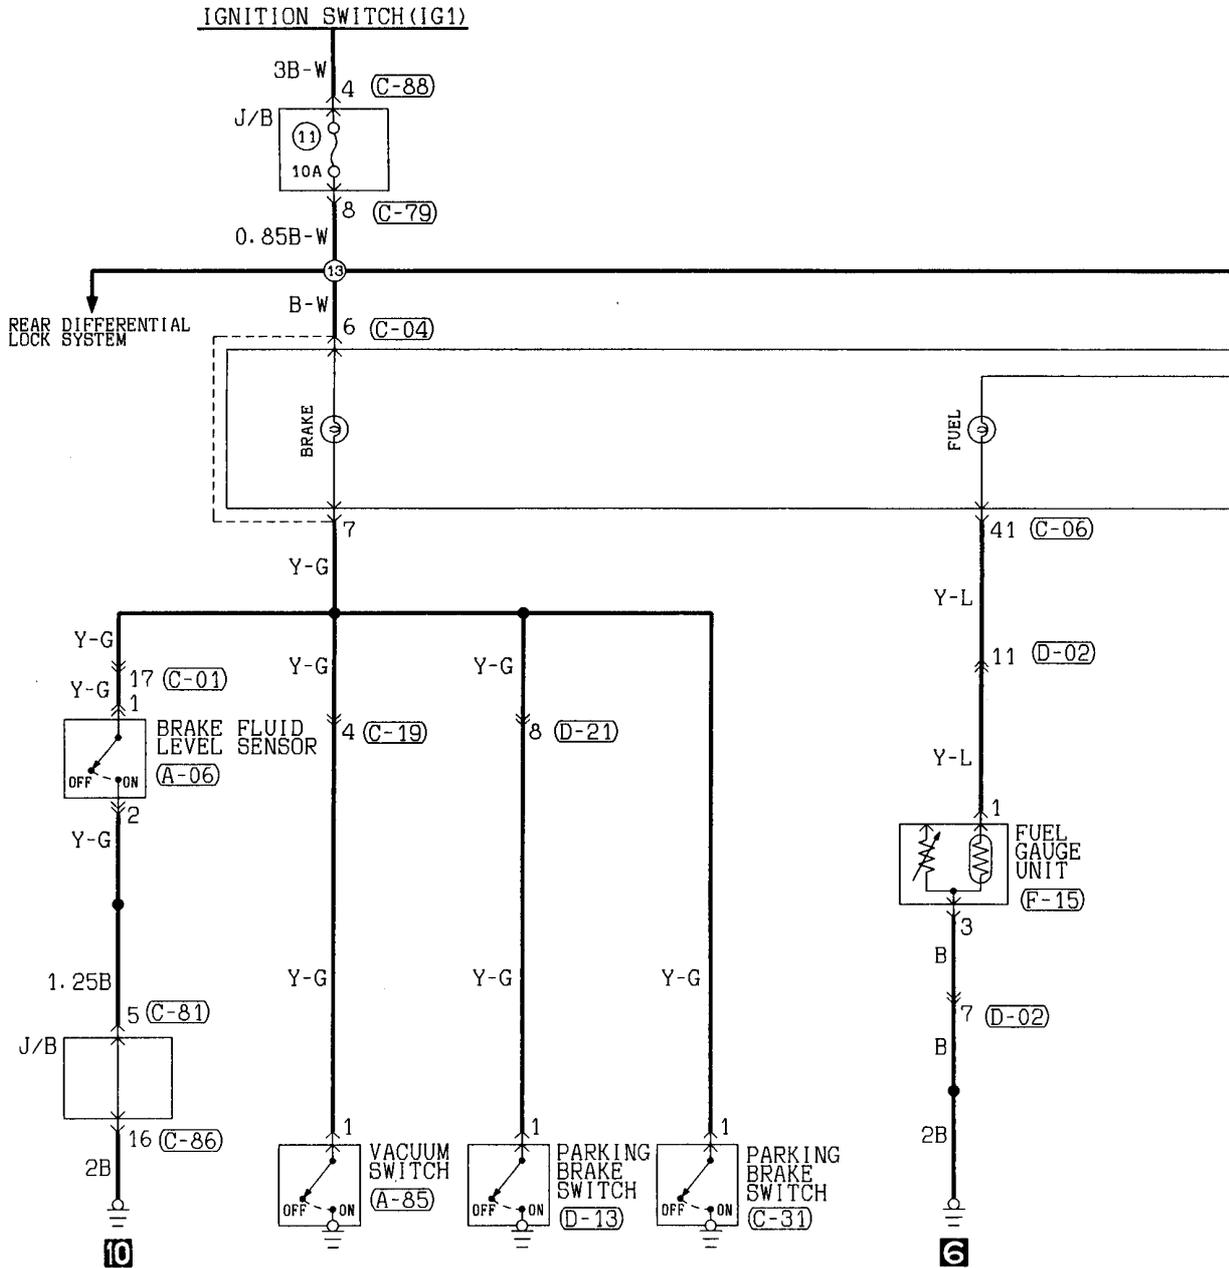

A-06	A-17	A-73	A-83	A-85	C-01	C-04	C-06
1 2	1 2 3	1	1 2	5	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	1 2 3 4 5 6 7 8 9 10 11 12 13 14	31 32 33 34 35 36 37 38 39 40 41 42 43 44
C-94	D-02	D-13	D-21	F-15			
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	1 2 3 4 5 6 7 8 9 10 11 12 13 14	1	1 2 3 4 5 6 7 8 9	1 2 3			

**OIL PRESSURE WARNING LAMP
FUEL FILTER WARNING LAMP**

Diesel-powered vehicles

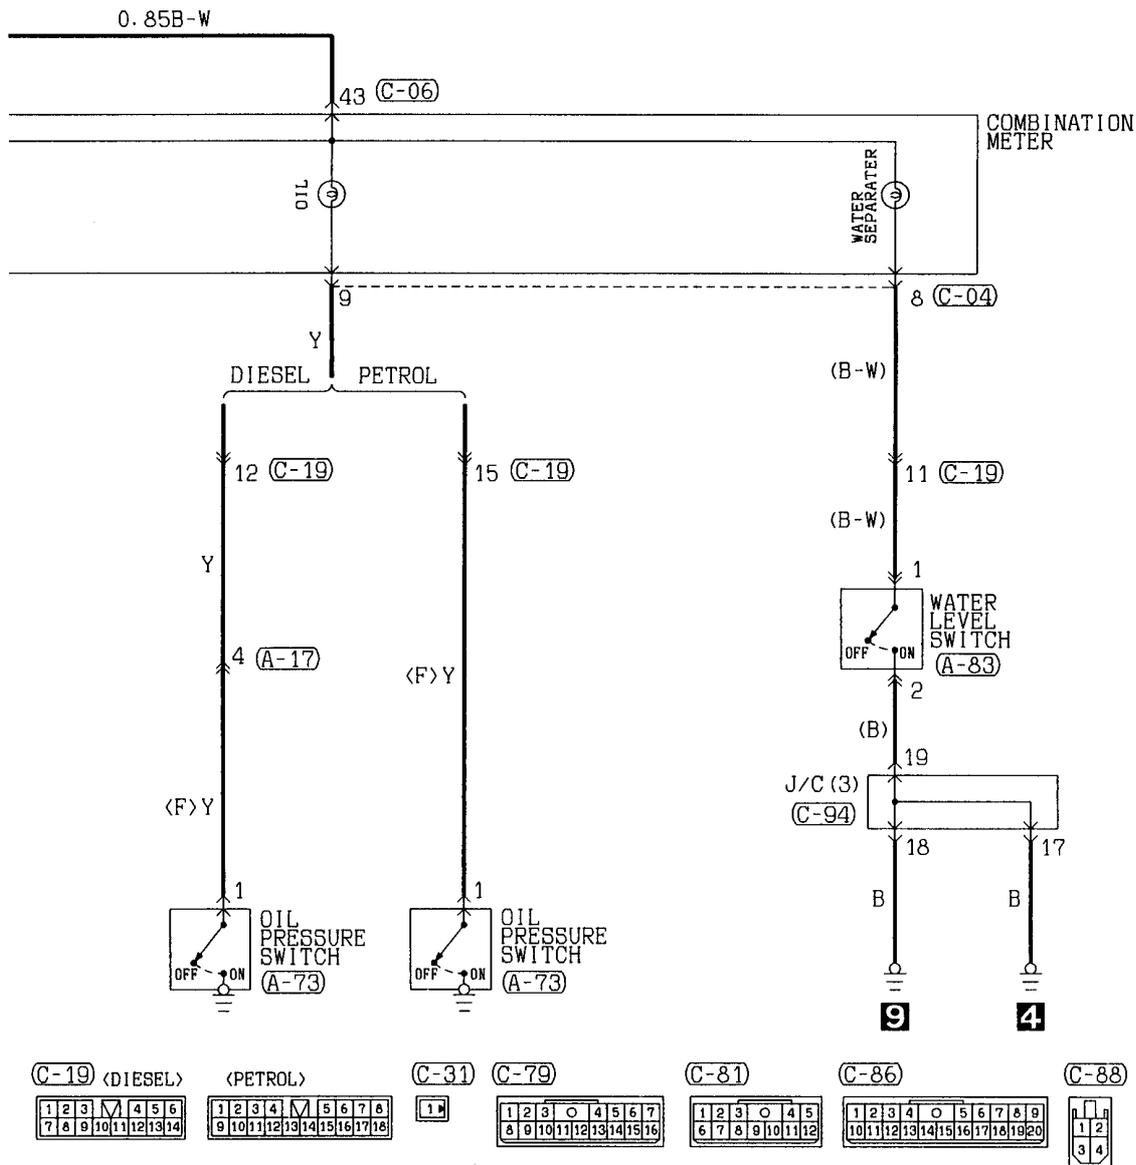

BRAKE WARNING LAMP (See P. 4-148.)

90101180119

FUEL WARNING LAMP (See P. 4-148.)

OIL PRESSURE WARNING LAMP (See P. 4-149.)

FUEL FILTER WARNING LAMP (See P. 4-149.)

OPERATION

<Brake warning lamp>

- When the brake fluid level goes down below a predetermined level with the ignition switch in the ON position, the brake fluid level switch is activated or the parking brake switch is turned on, causing the brake warning lamp to illuminate.
- On diesel-powered vehicles, when the brake booster vacuum line fails, the vacuum switch is turned on causing the brake warning lamp to illuminate.

<Fuel warning lamp>

- When the fuel level goes down causing the level sensor to be exposed, with the ignition switch in the ON position, the resistance of level sensor becomes small. When this resistance goes down below the predetermined level, the fuel warning lamp illuminates to warn the driver that the amount of fuel still available for use is small.

<Oil pressure warning lamp>


- When the lubrication system fails after engine starting, resulting in the oil pressure failing to build up, the oil pressure switch turns on causing the oil pressure warning lamp to illuminate.

<Fuel filter warning lamp> (Diesel)

- When the ignition switch is turned to the ON position (with the engine stopped), the fuel filter warning lamp illuminates and the lamp switches off when the engine is started. This feature can be used to check for a failure of the lamp's bulb.
- When condensate has accumulated in the fuel filter, the water level switch turns on causing the fuel filter warning lamp to illuminate.

MULTI-METER

90100430079

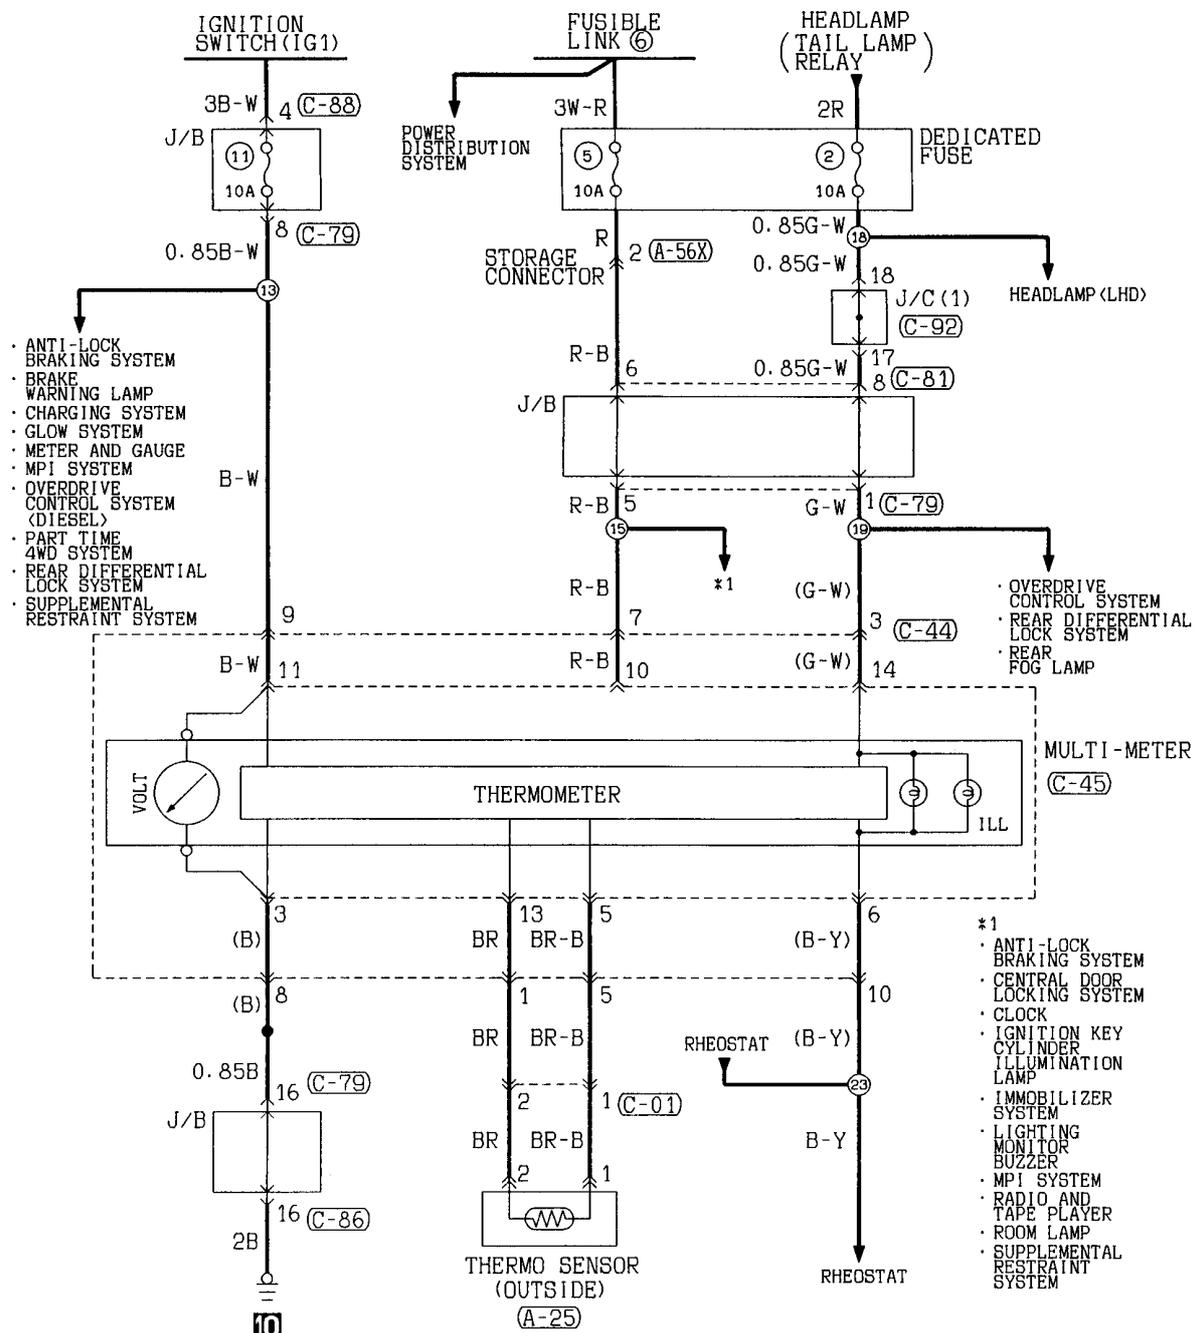








(A-25) (A-56X) (C-01)

(C-44)

(C-45)

(C-79)


(C-81)

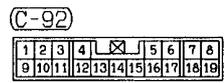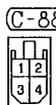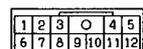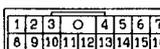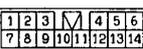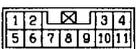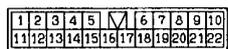


CENTRAL DOOR LOCKING SYSTEM


90100470323

Except double cab


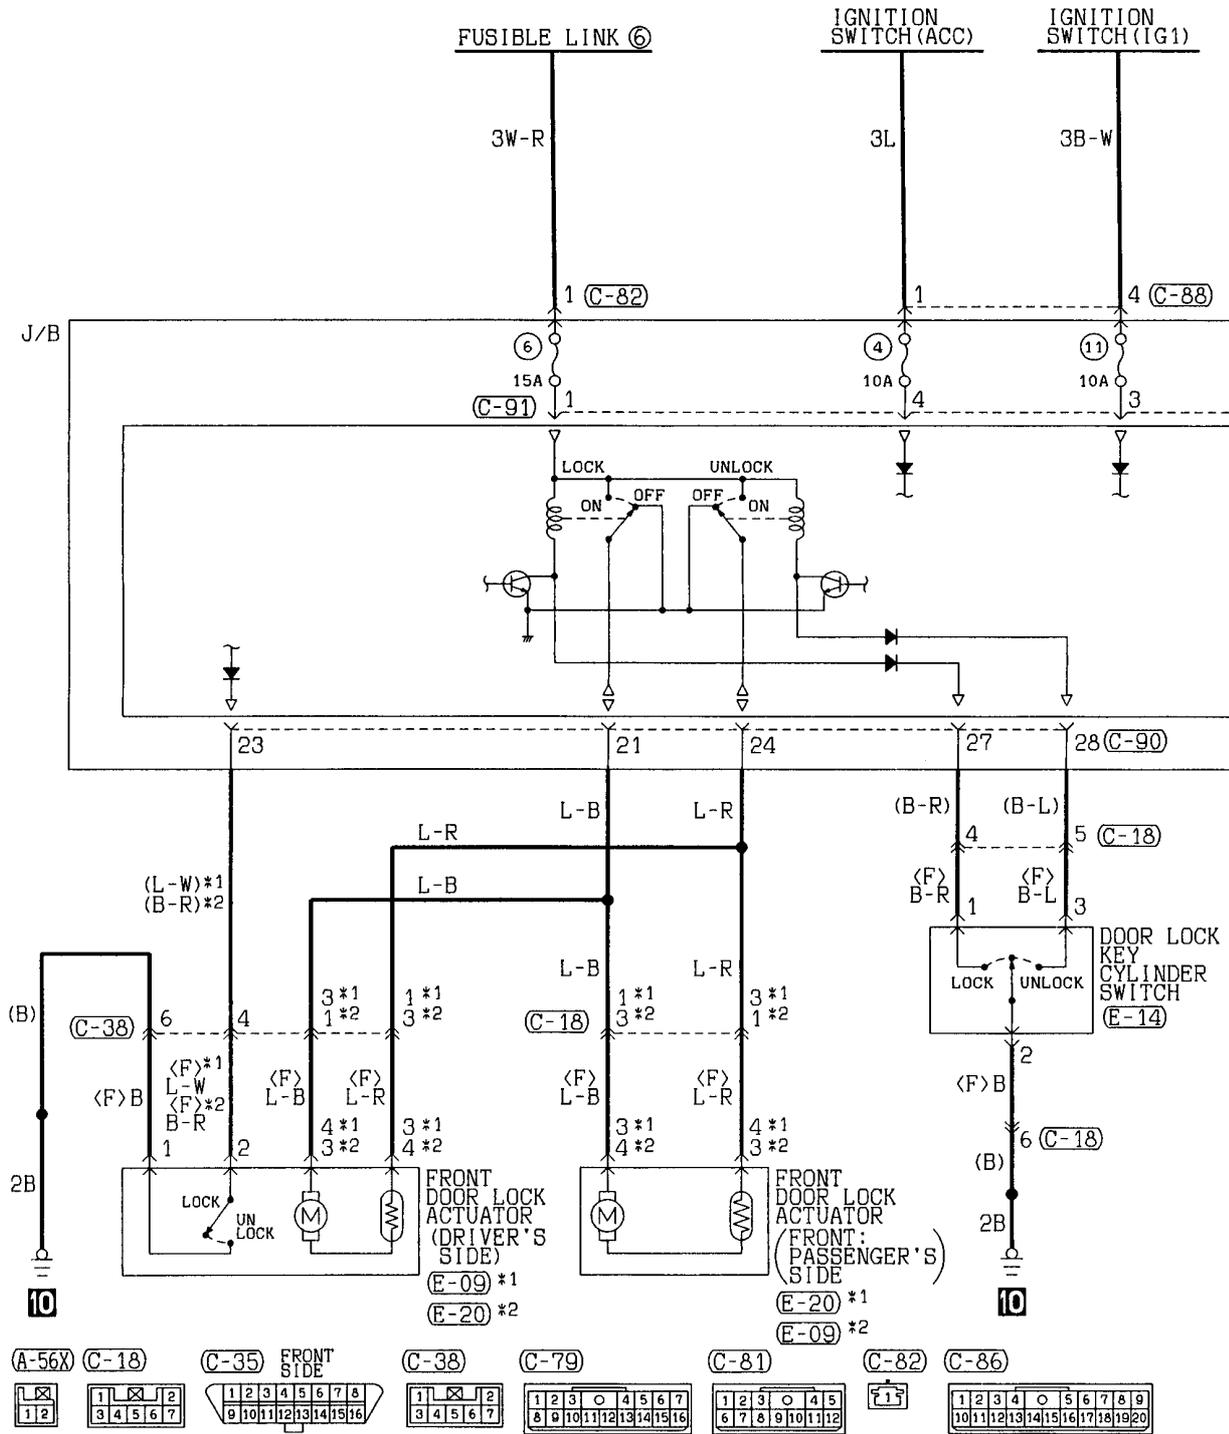


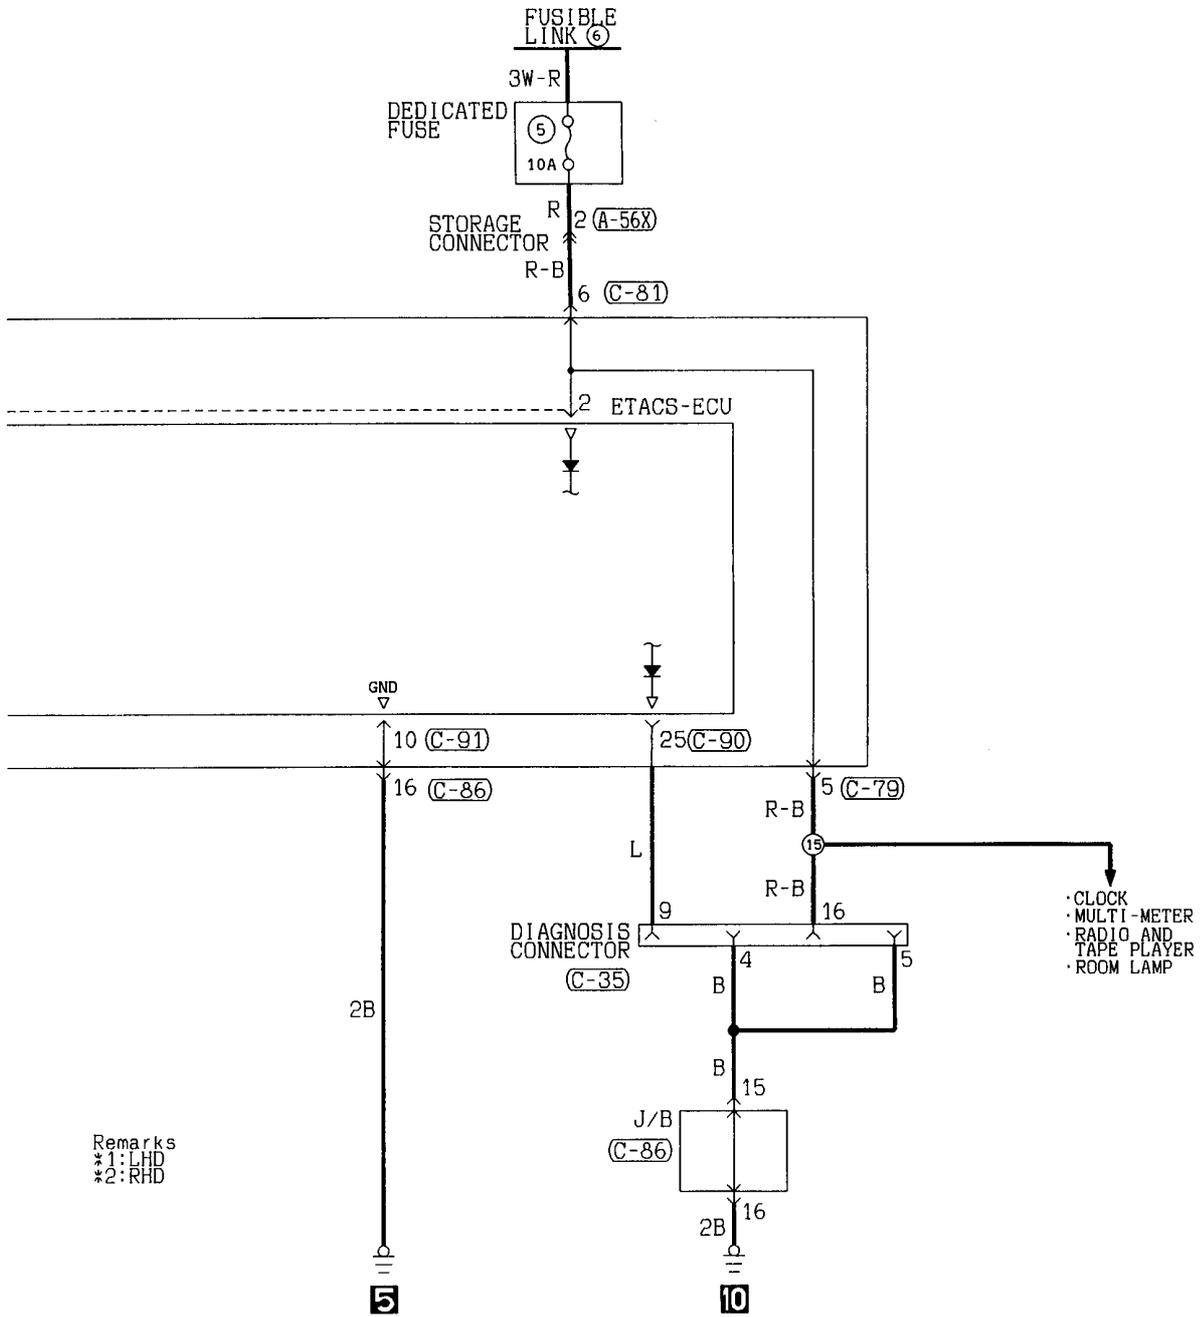

Remarks
 **1: LHD
 **2: RHD

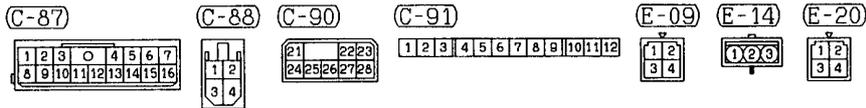

CENTRAL DOOR LOCKING SYSTEM <Except double cab> (CONTINUED)

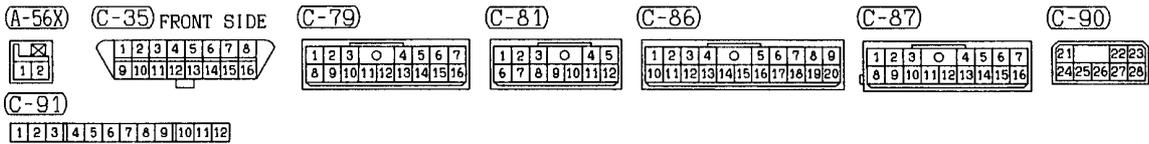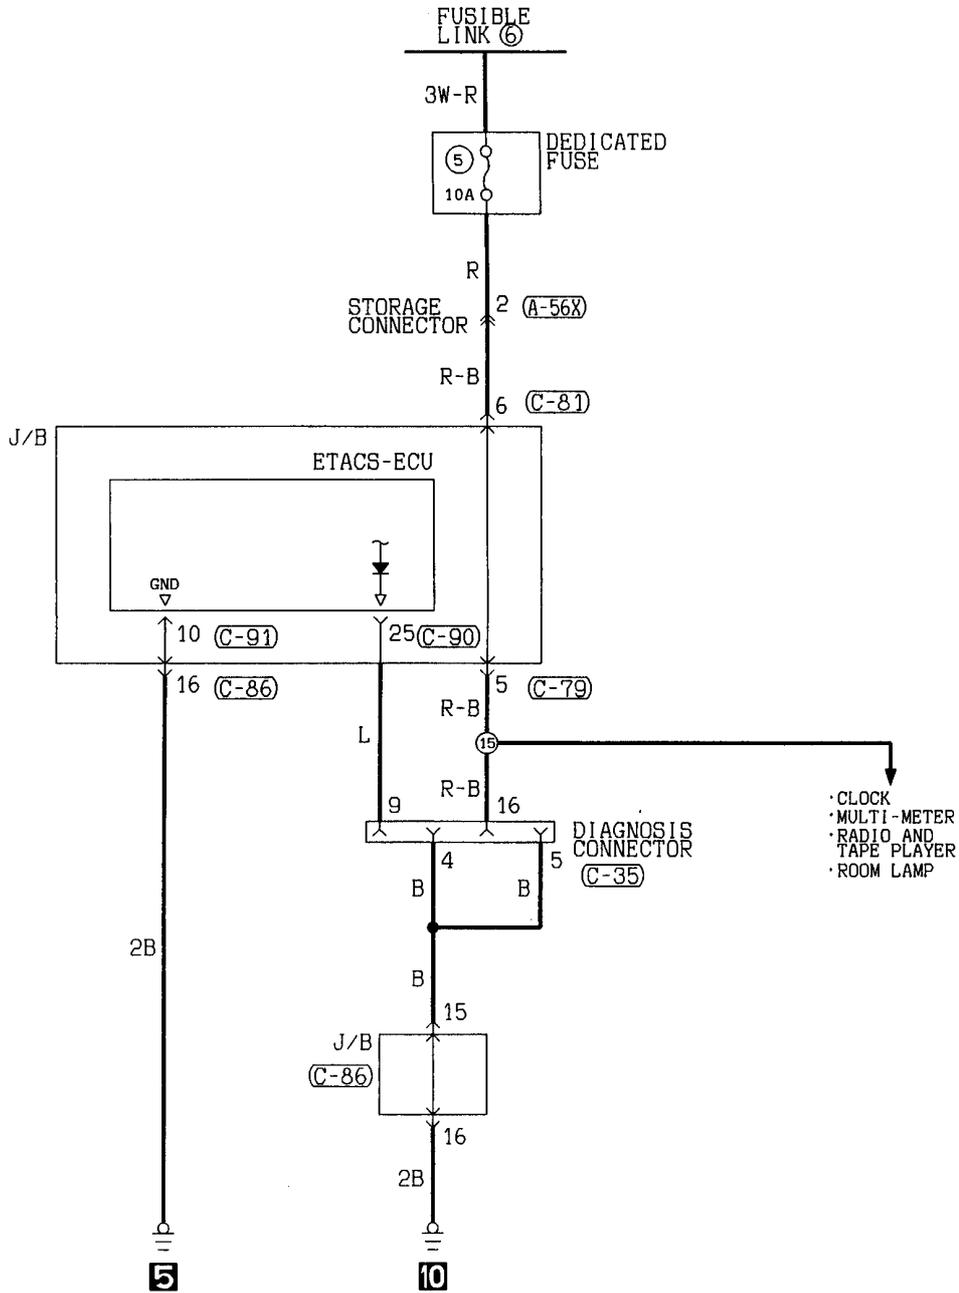




NOTES

CENTRAL DOOR LOCKING SYSTEM


90100470385

Double cab

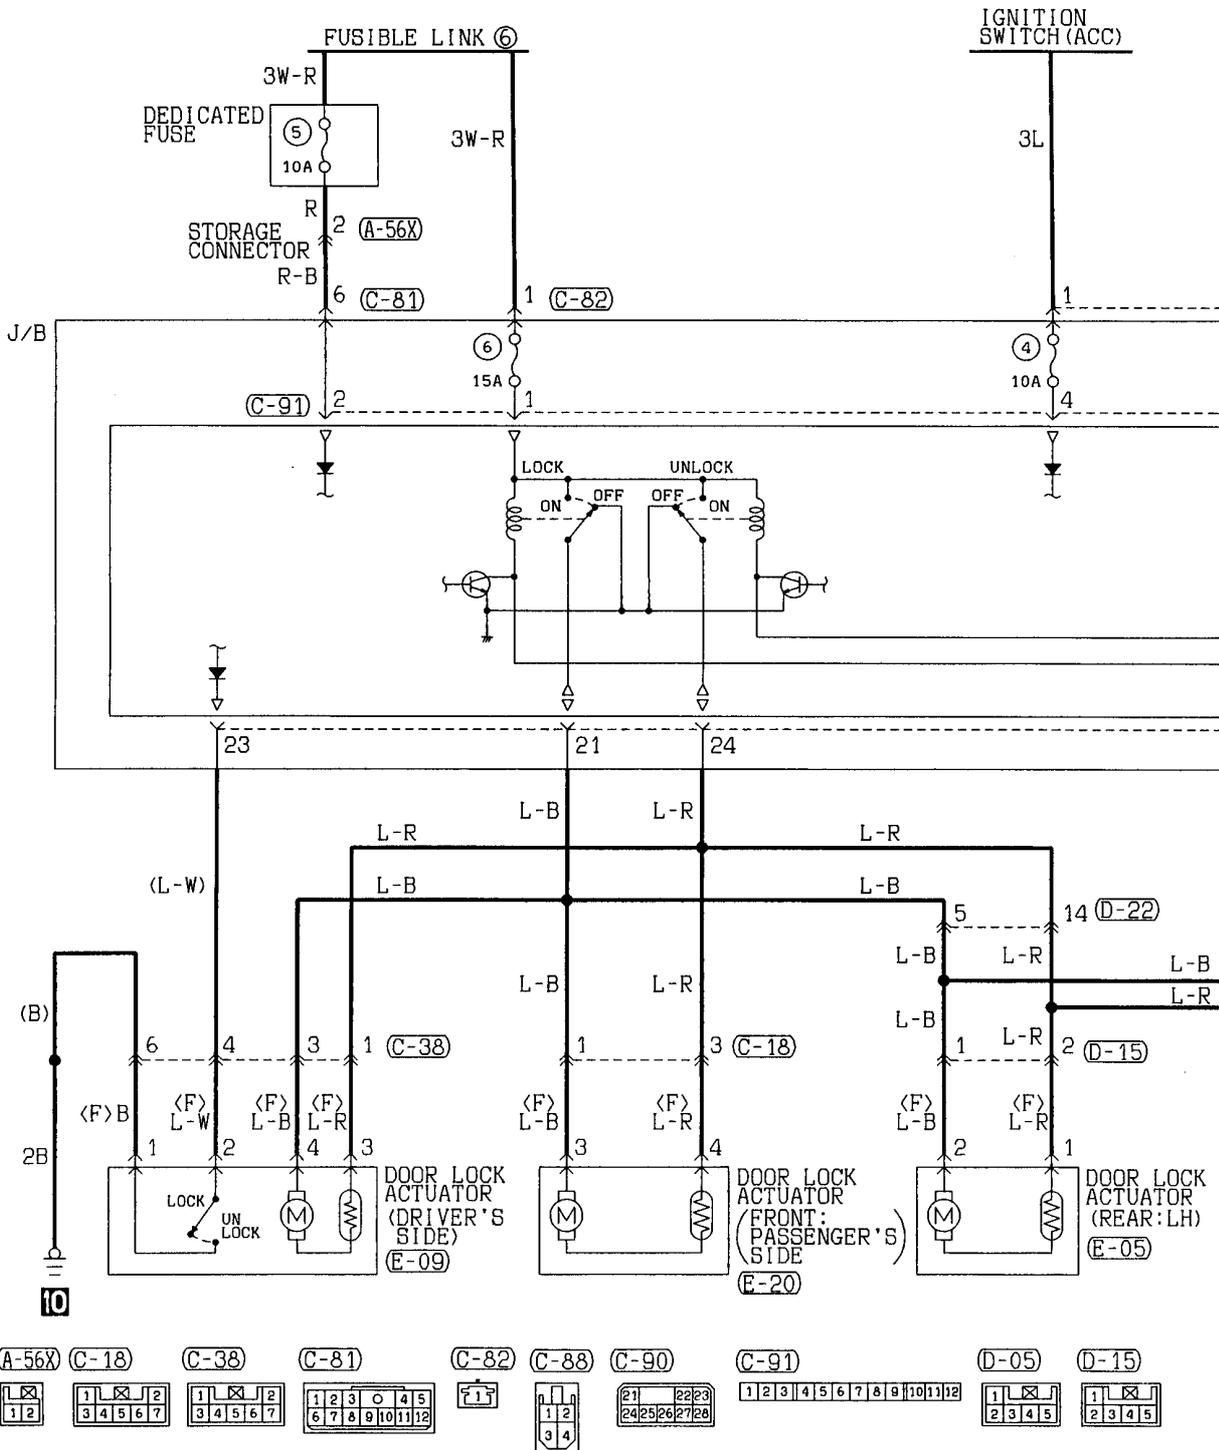

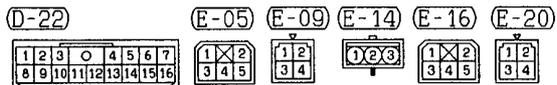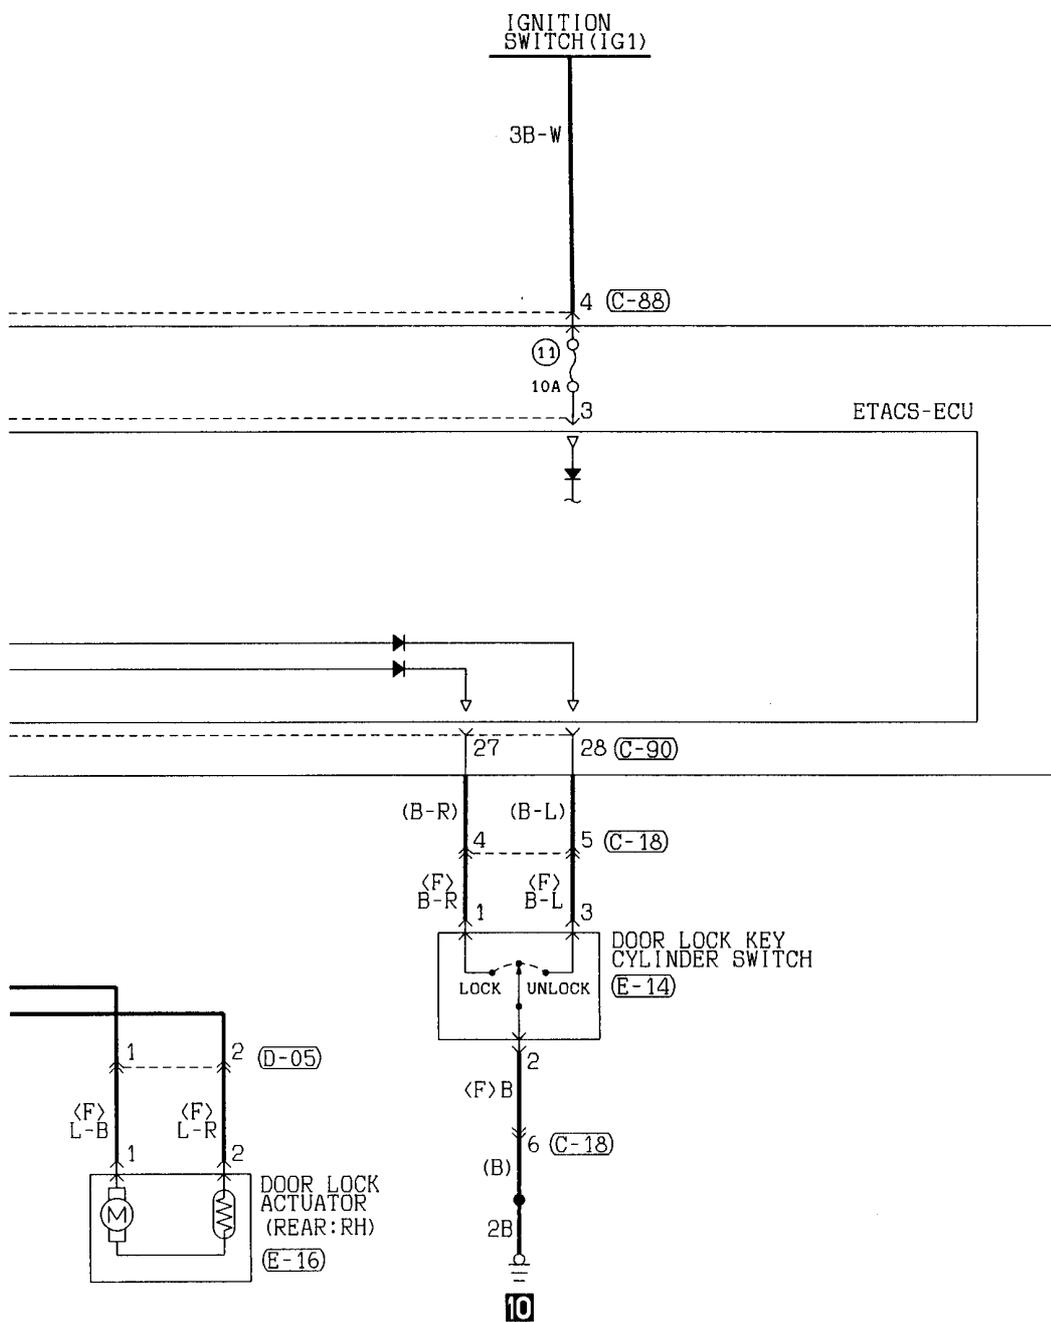

CENTRAL DOOR LOCKING SYSTEM <Double cab> (CONTINUED)

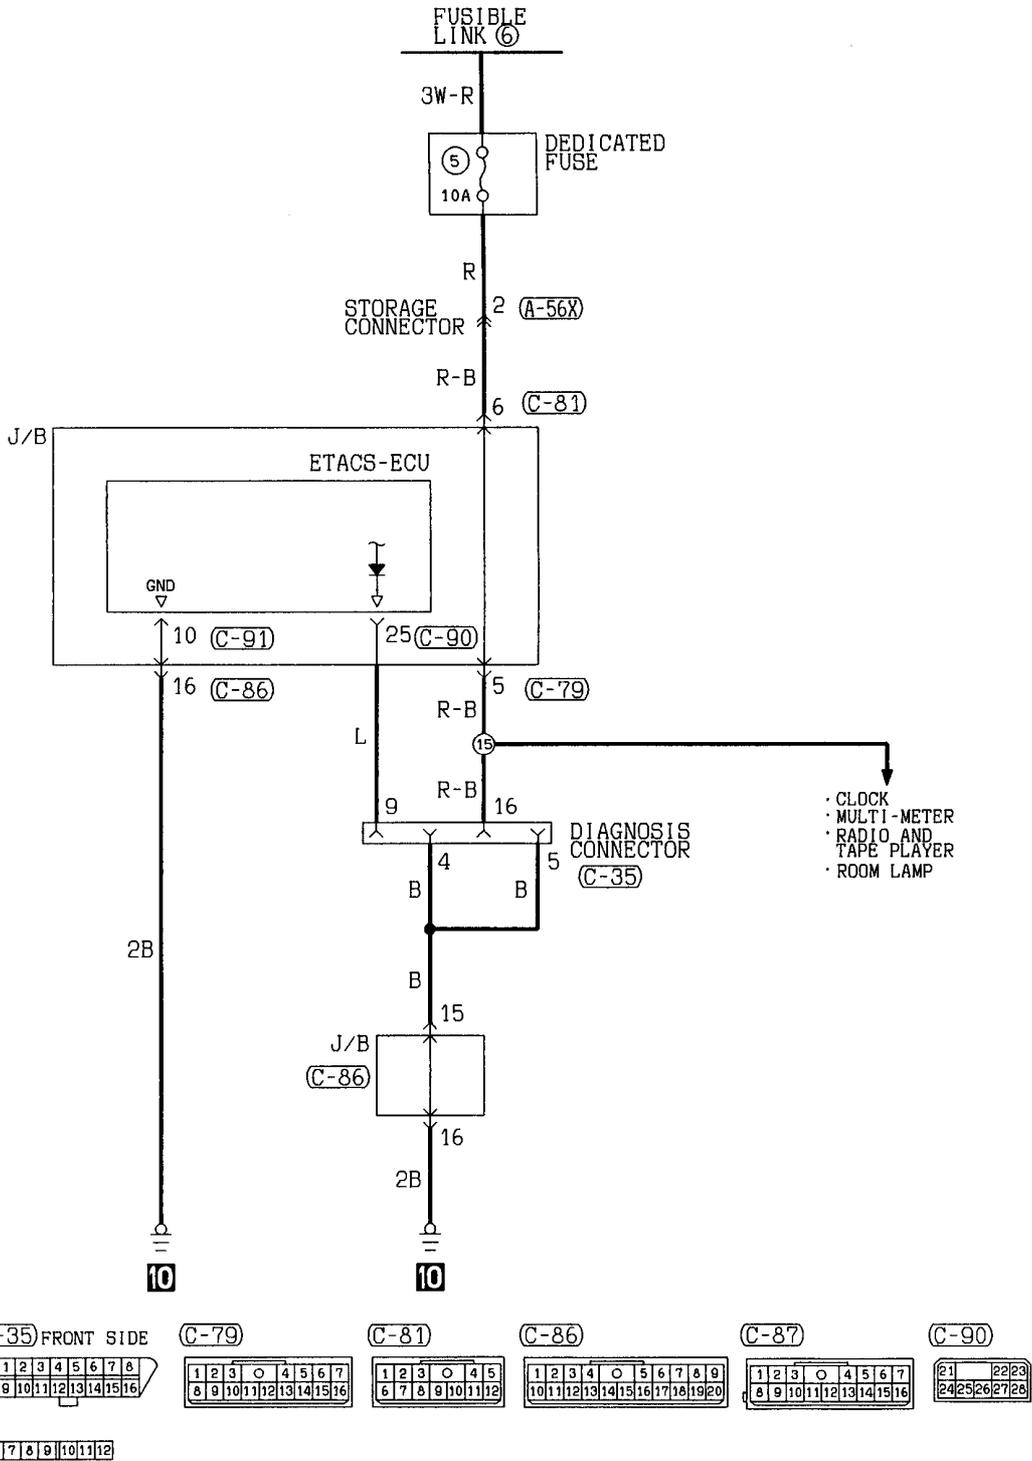



NOTES

POWER WINDOWS

90100460207

Except double cab


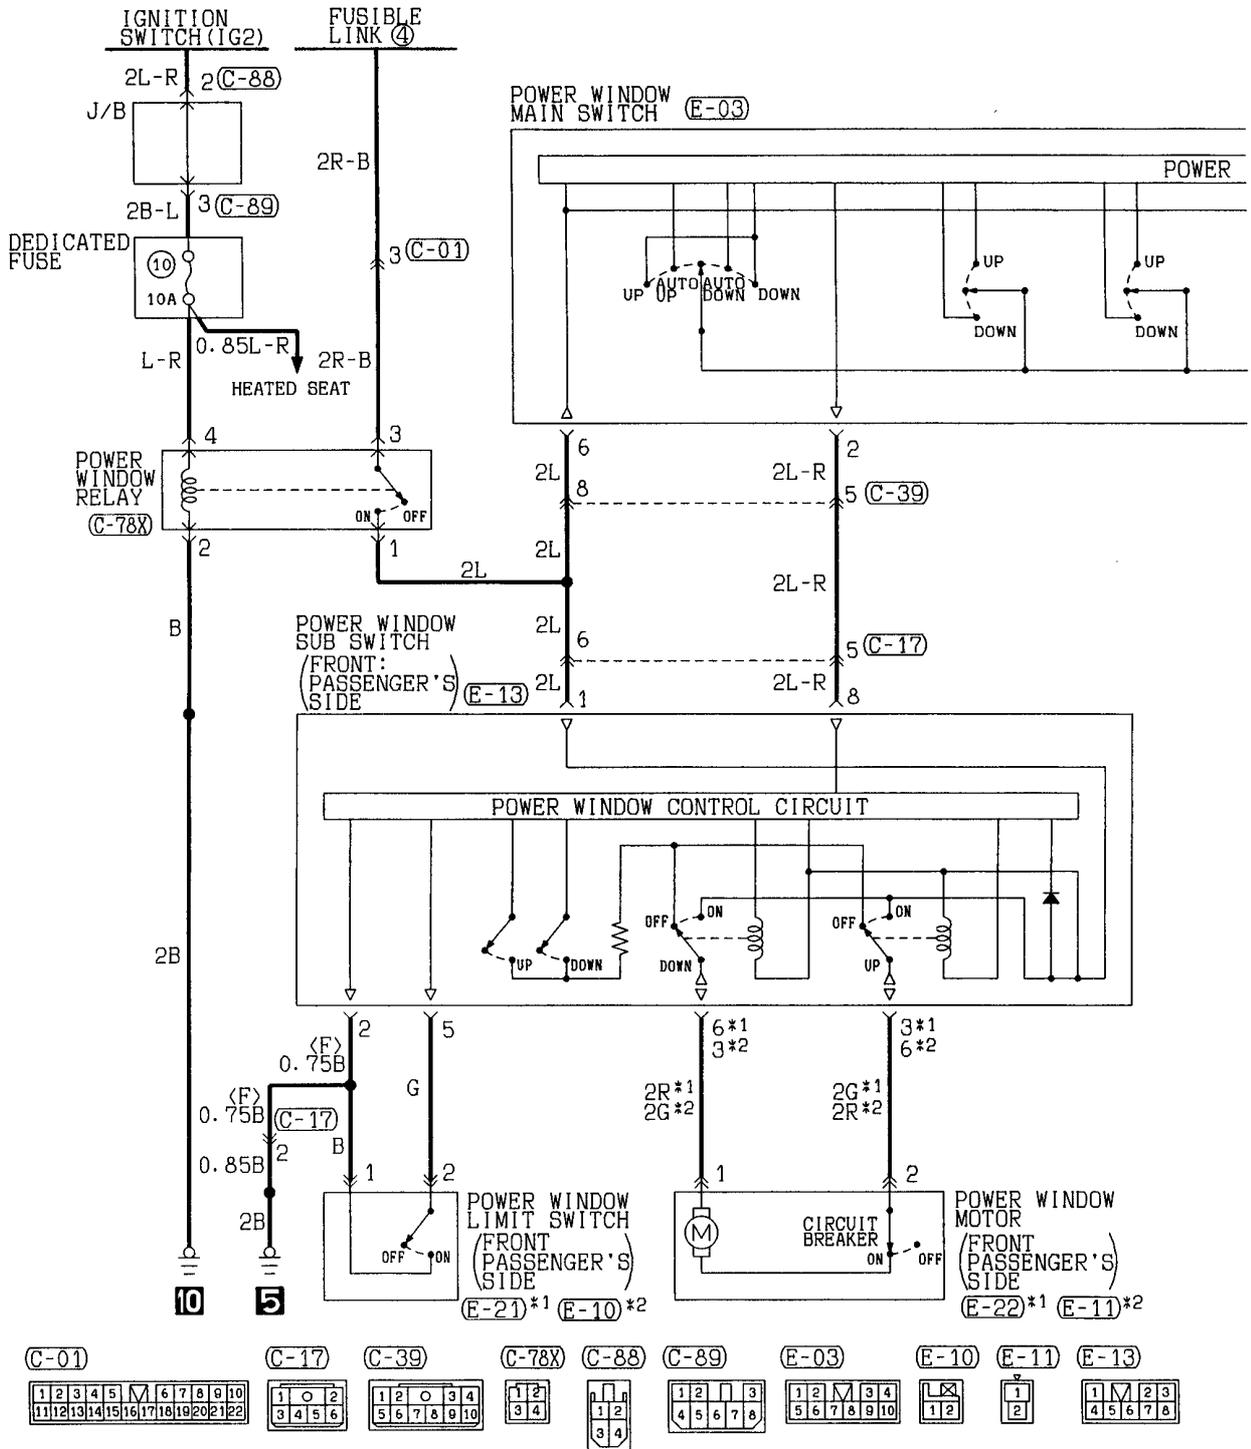


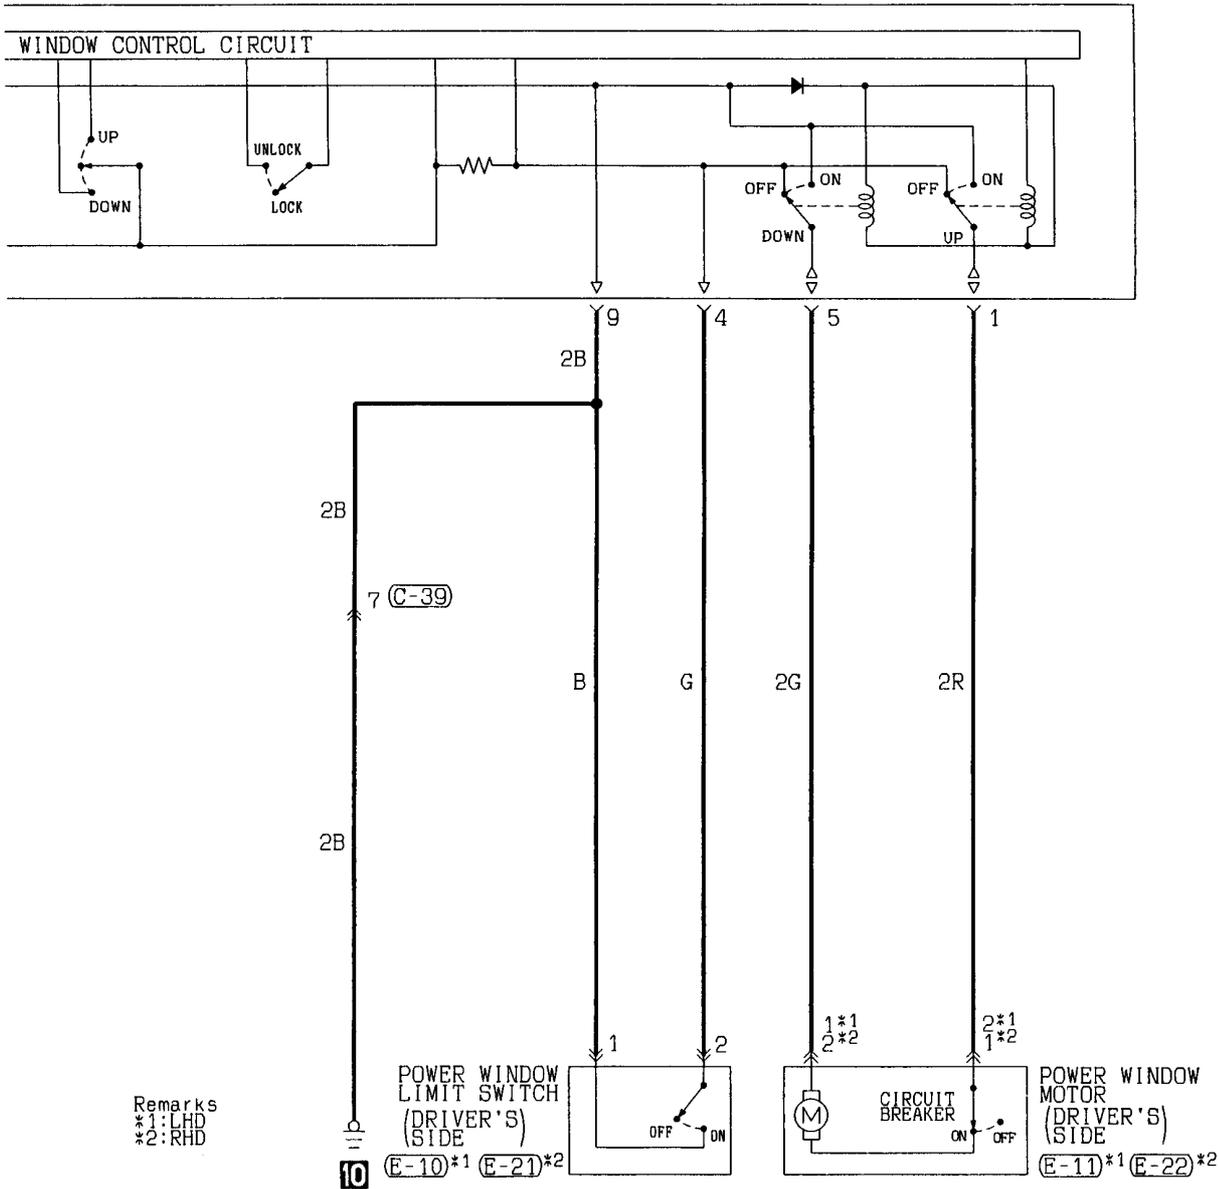


POWER WINDOWS

90100460214

Double cab <1997 Models>

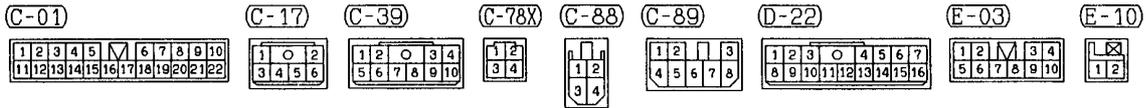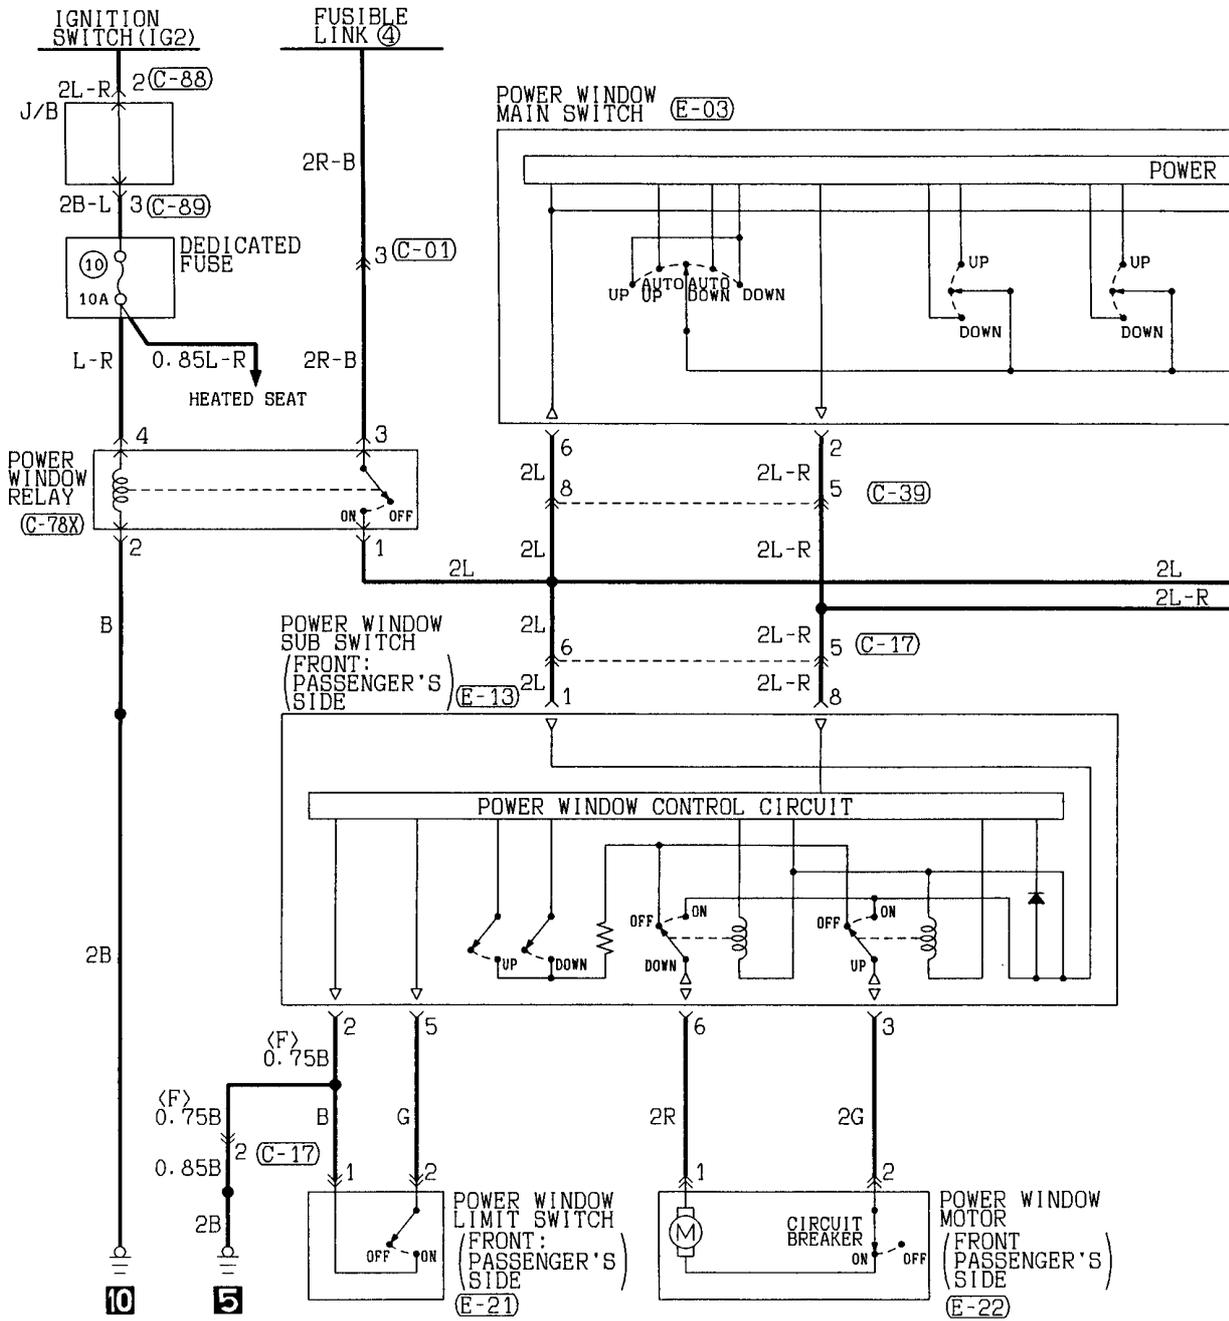

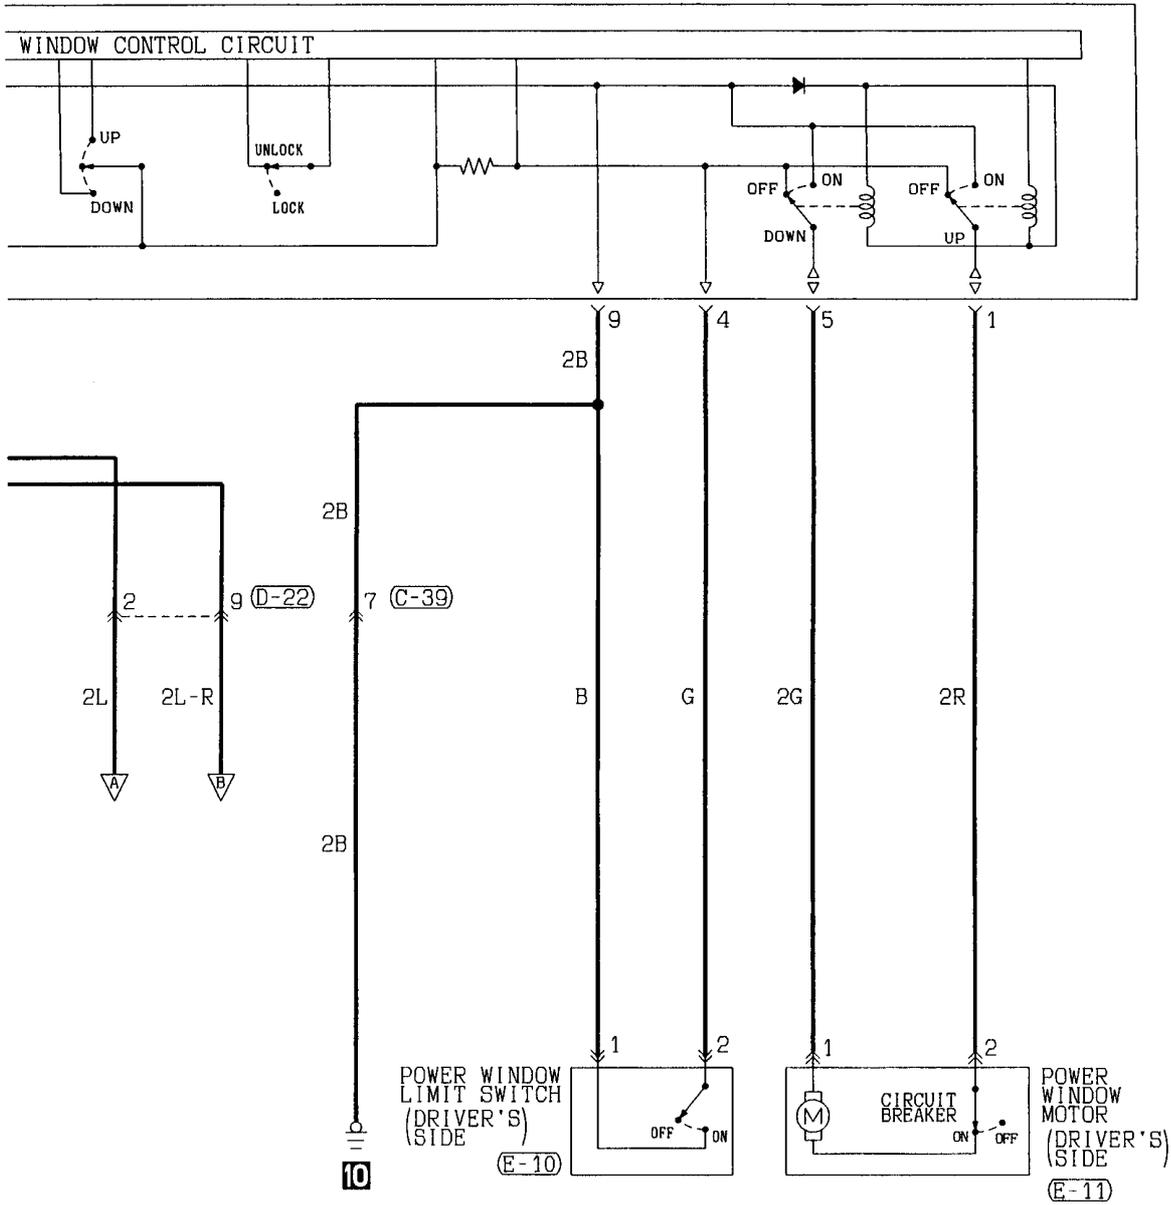



- (E-11) (E-13) (E-21) (E-22)
- | |
|---|
| 1 |
| 2 |

1	2	3		
4	5	6	7	8

L	R
1	2

1
2

POWER WINDOWS <Double cab (1997 Models)> (CONTINUED)

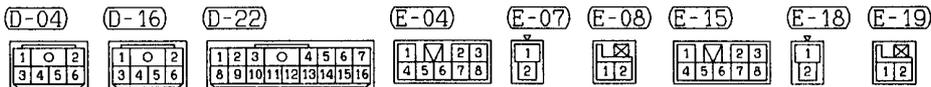
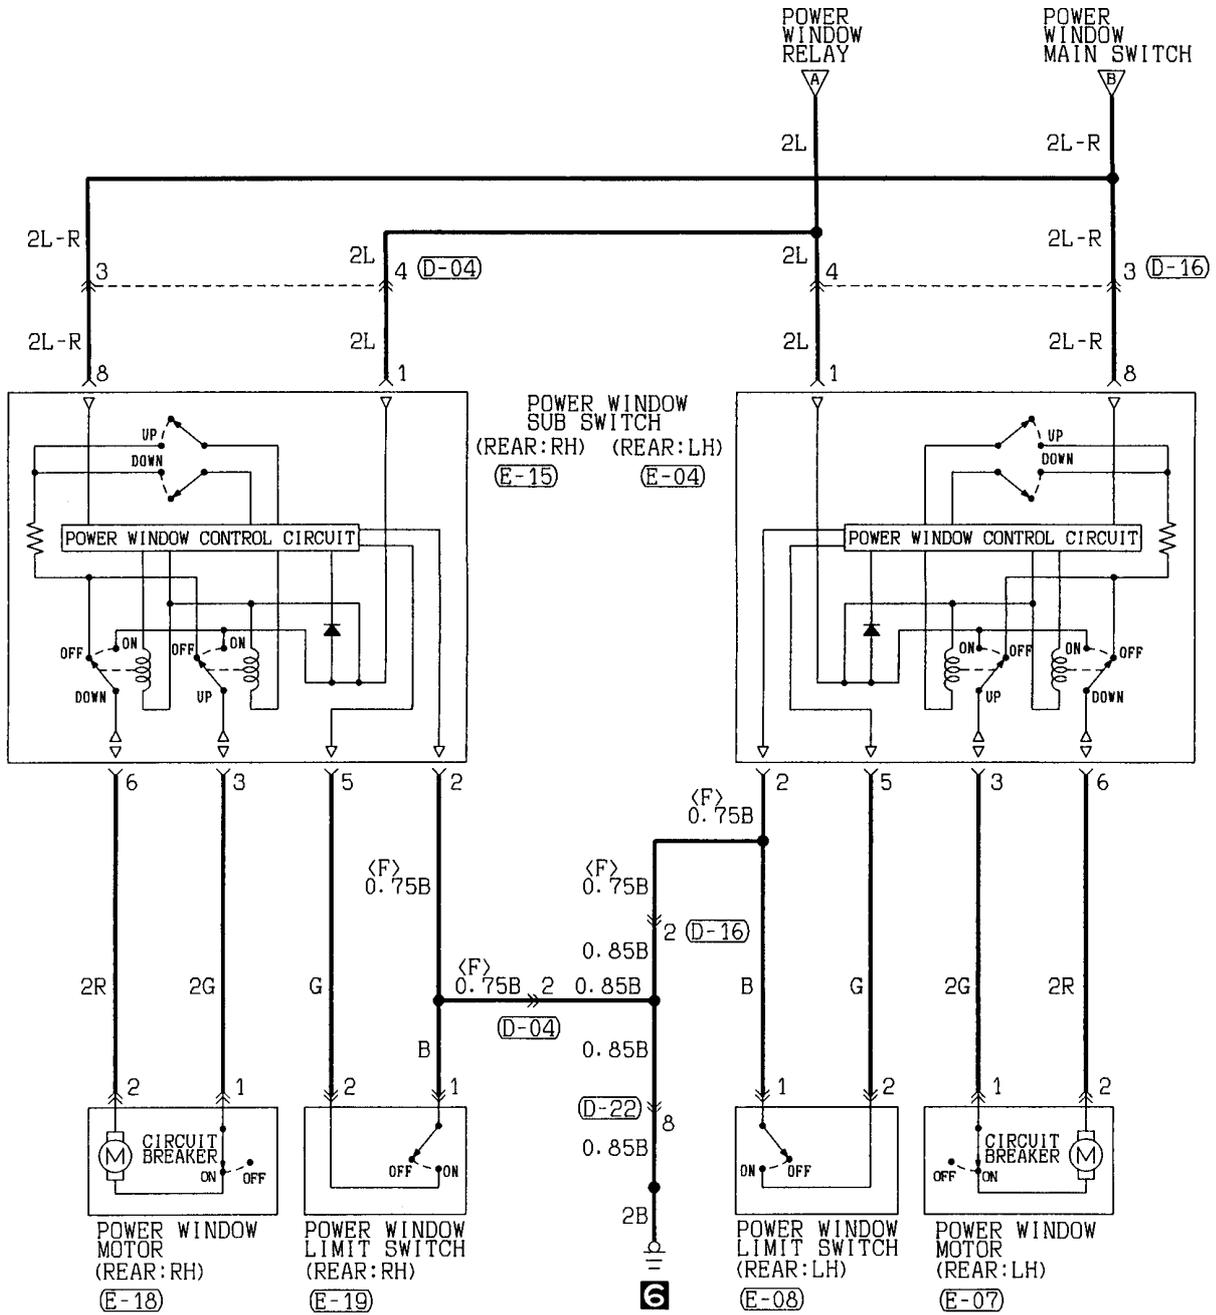




NOTES

POWER WINDOWS


90100460566

Double cab <1998 Models>

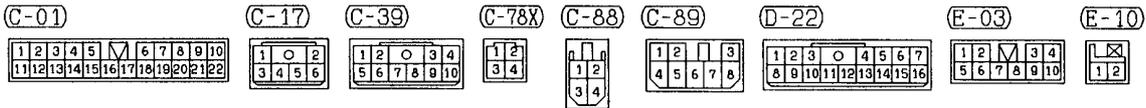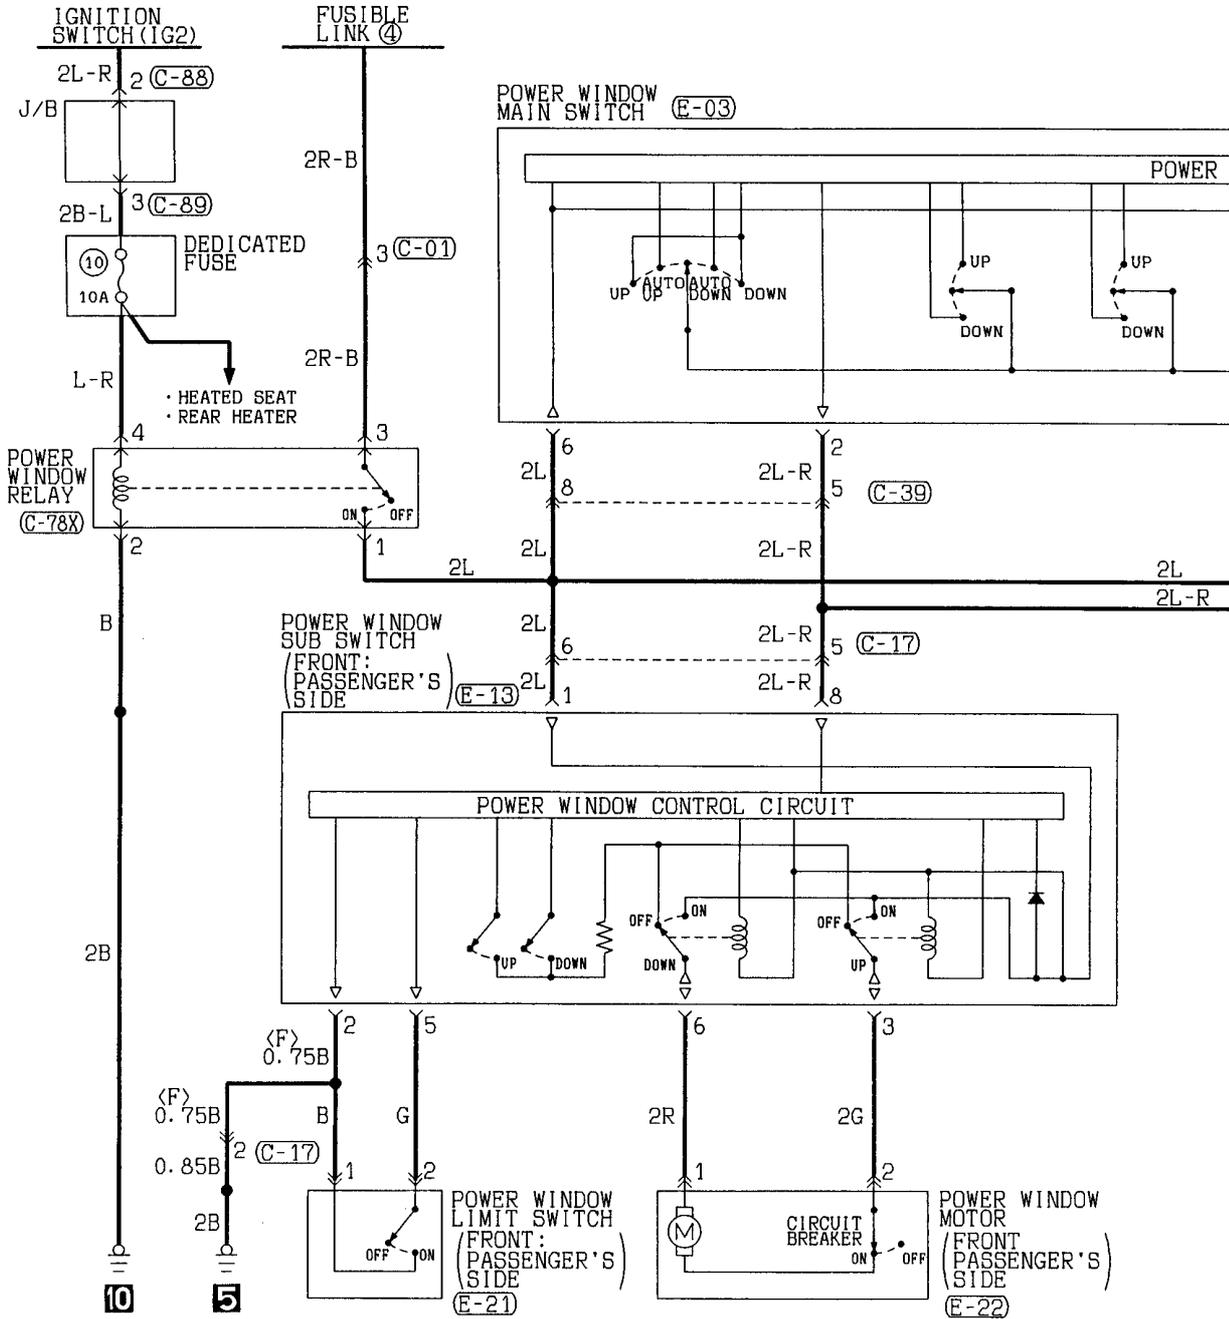

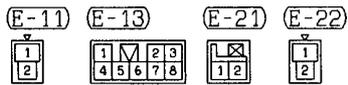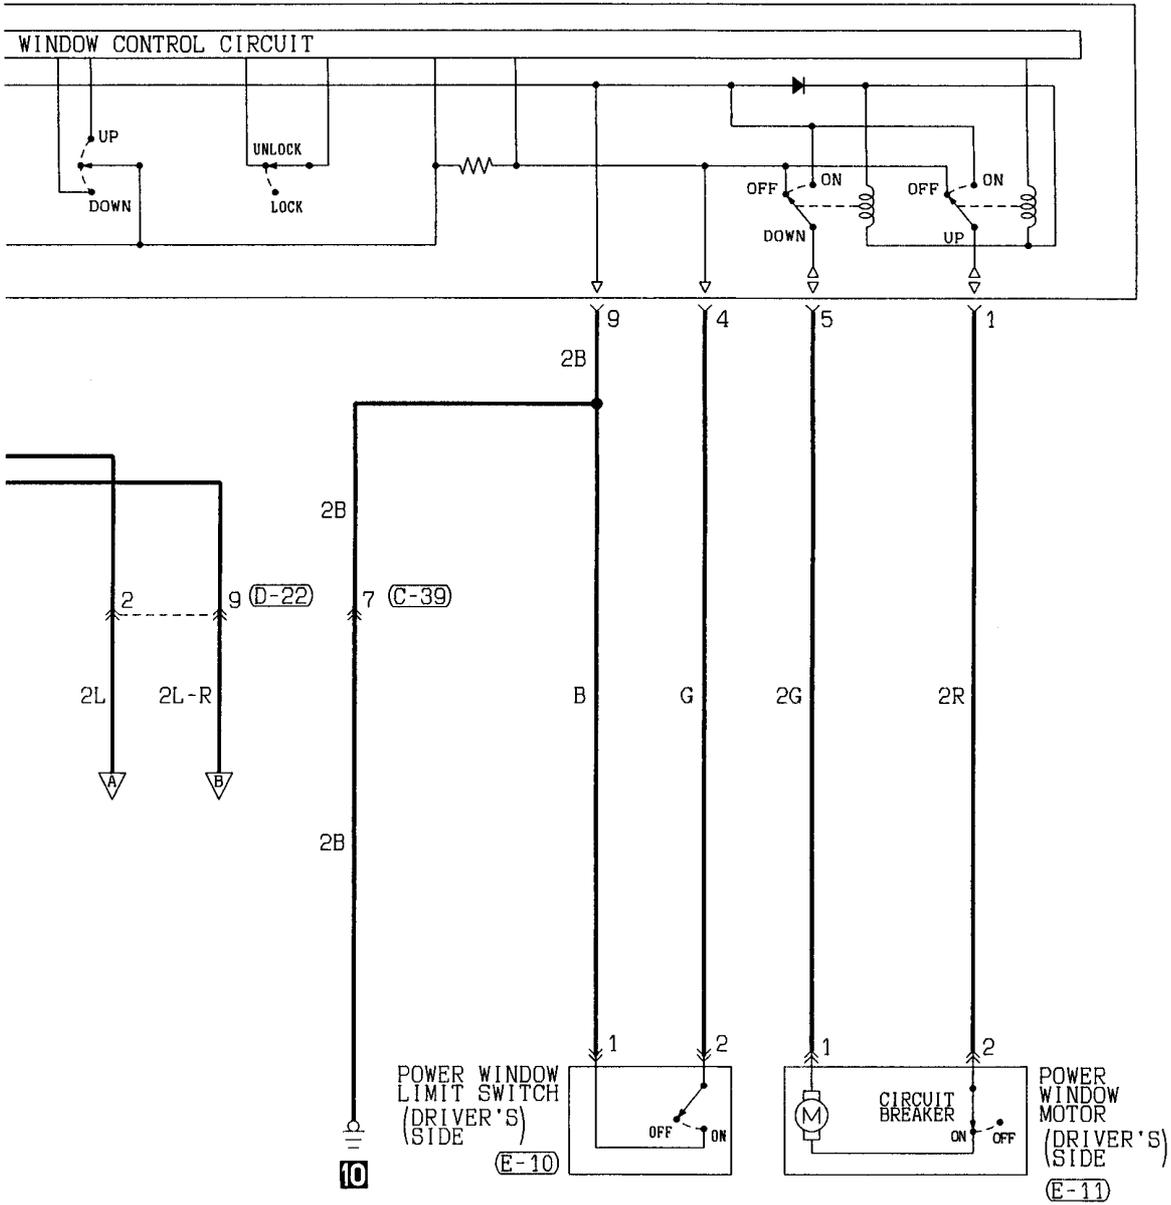

POWER WINDOWS <Double cab (1998 Models)> (CONTINUED)

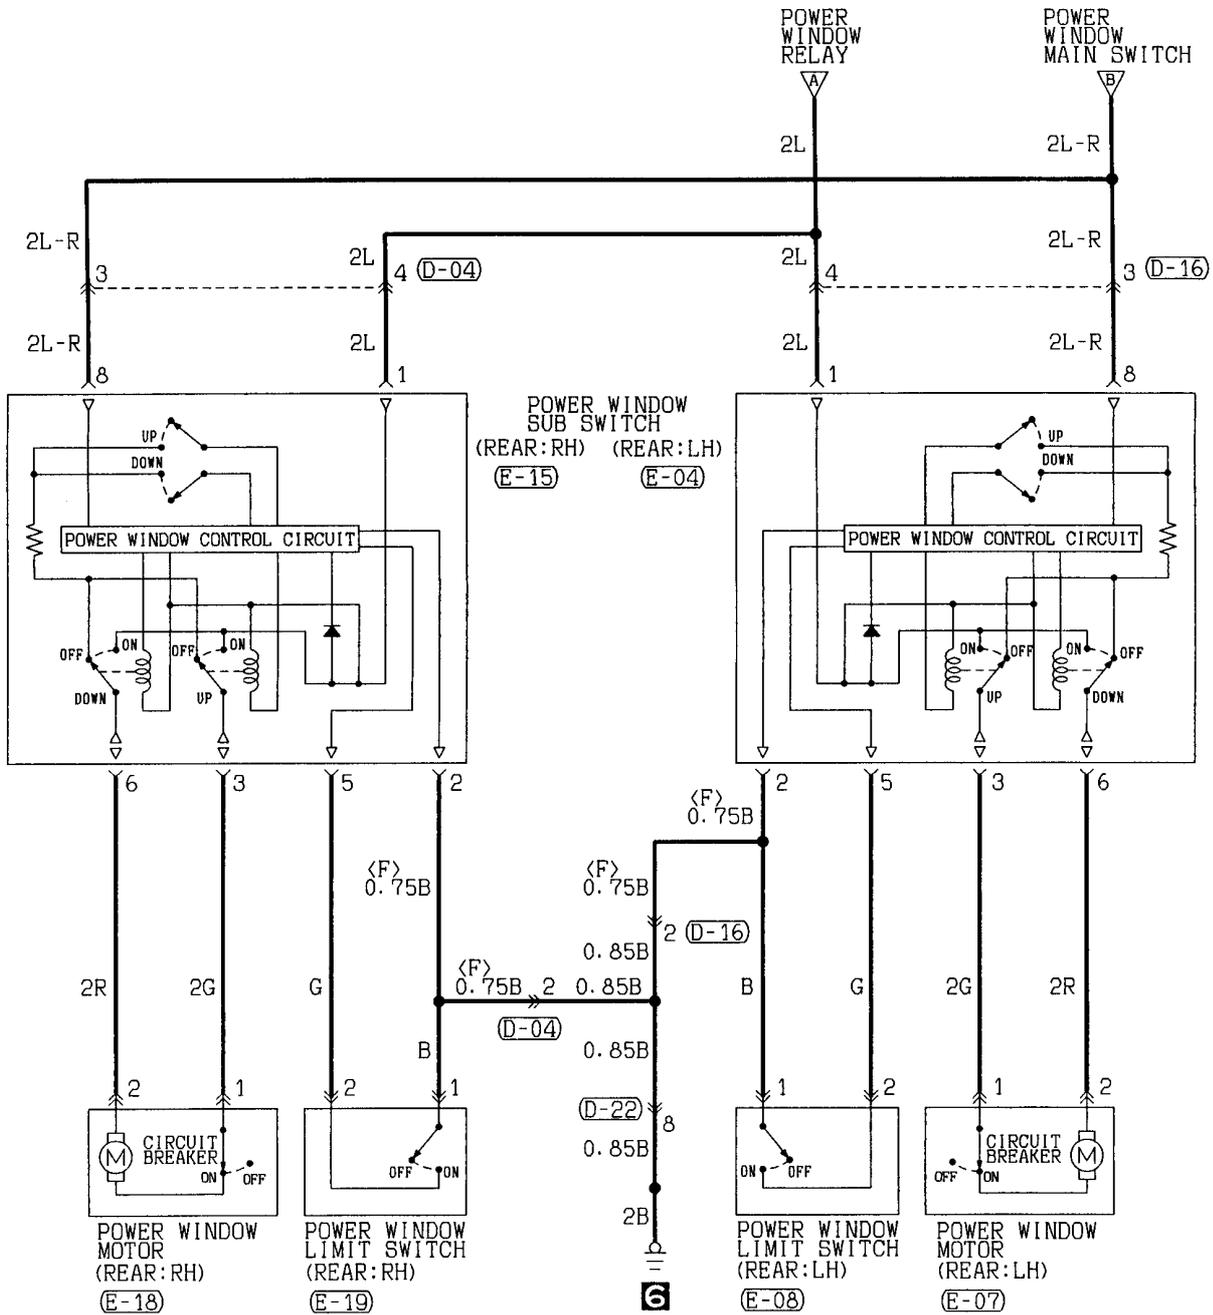

- (D-04)

1	0	2	
3	4	5	6
- (D-16)

1	0	2	
3	4	5	6
- (D-22)

1	2	3	0	4	5	6	7	
8	9	10	11	12	13	14	15	16
- (E-04)

1	M	2	3	
4	5	6	7	8
- (E-07)

1

- (E-08)

1	2
---	---
- (E-15)

1	M	2	3	
4	5	6	7	8
- (E-18)



1

- (E-19)

1	2
---	---

HEATER


90101330088

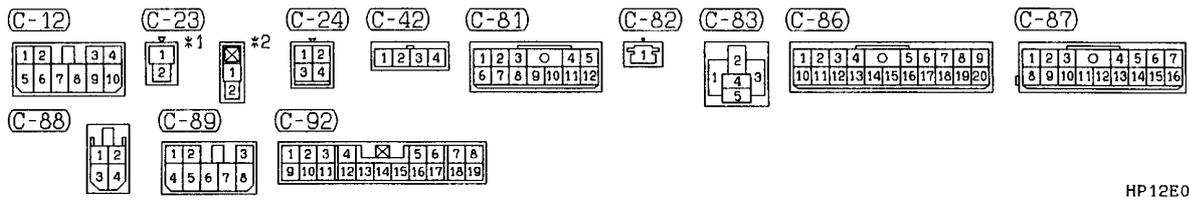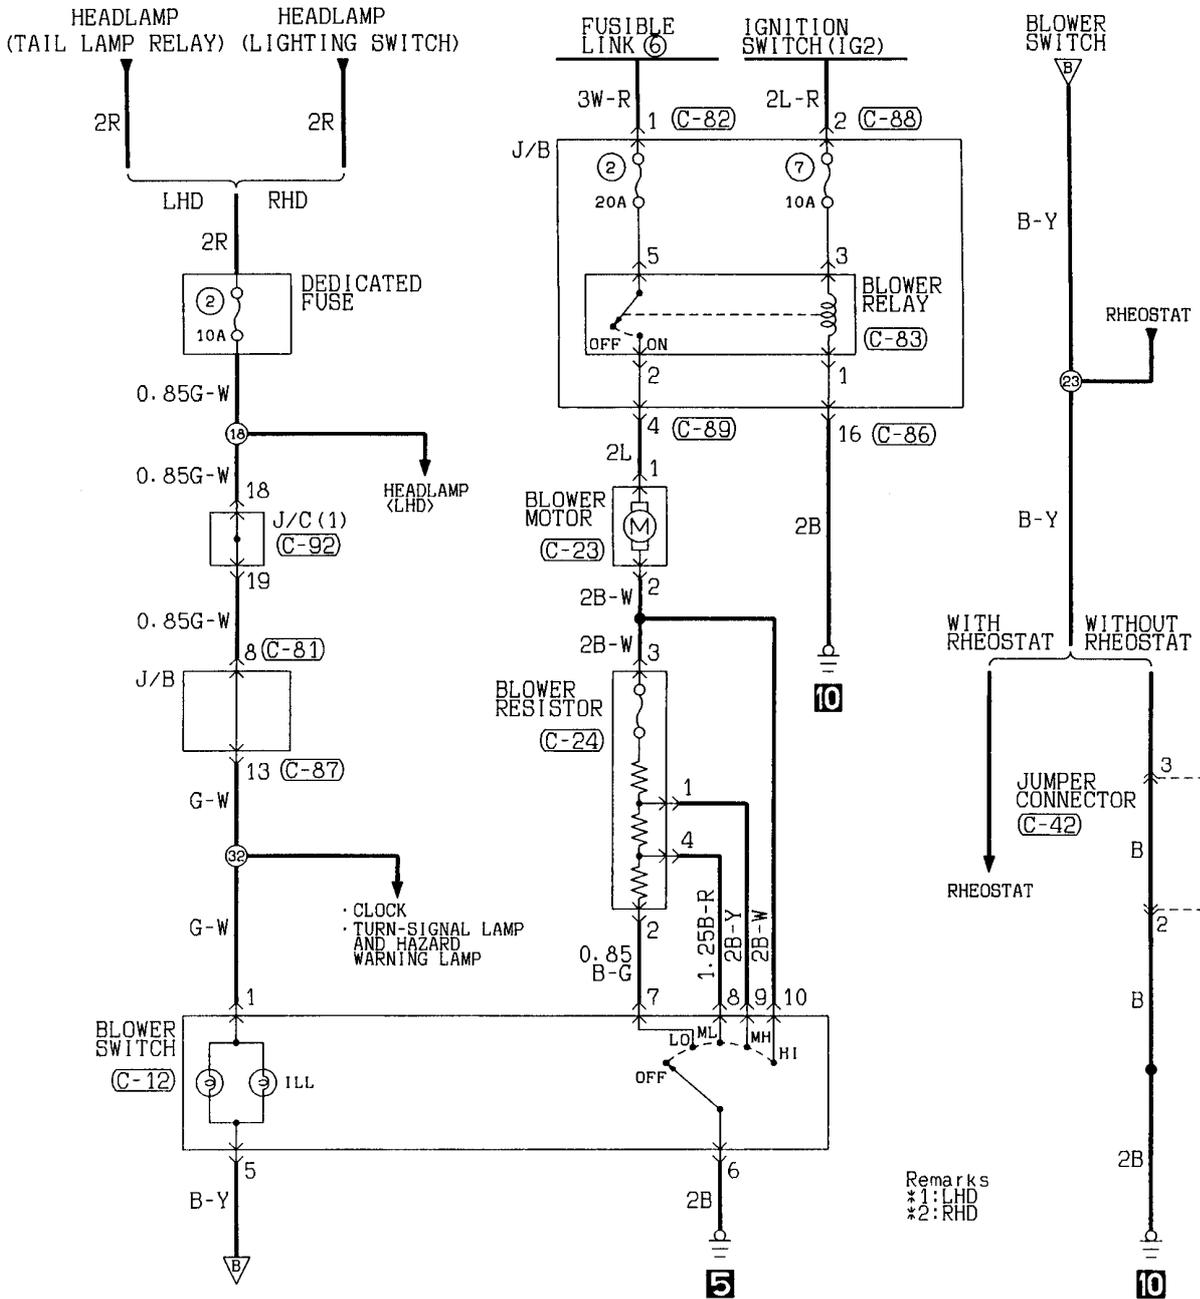

AIR CONDITIONER

90101280208

Petrol-powered vehicles

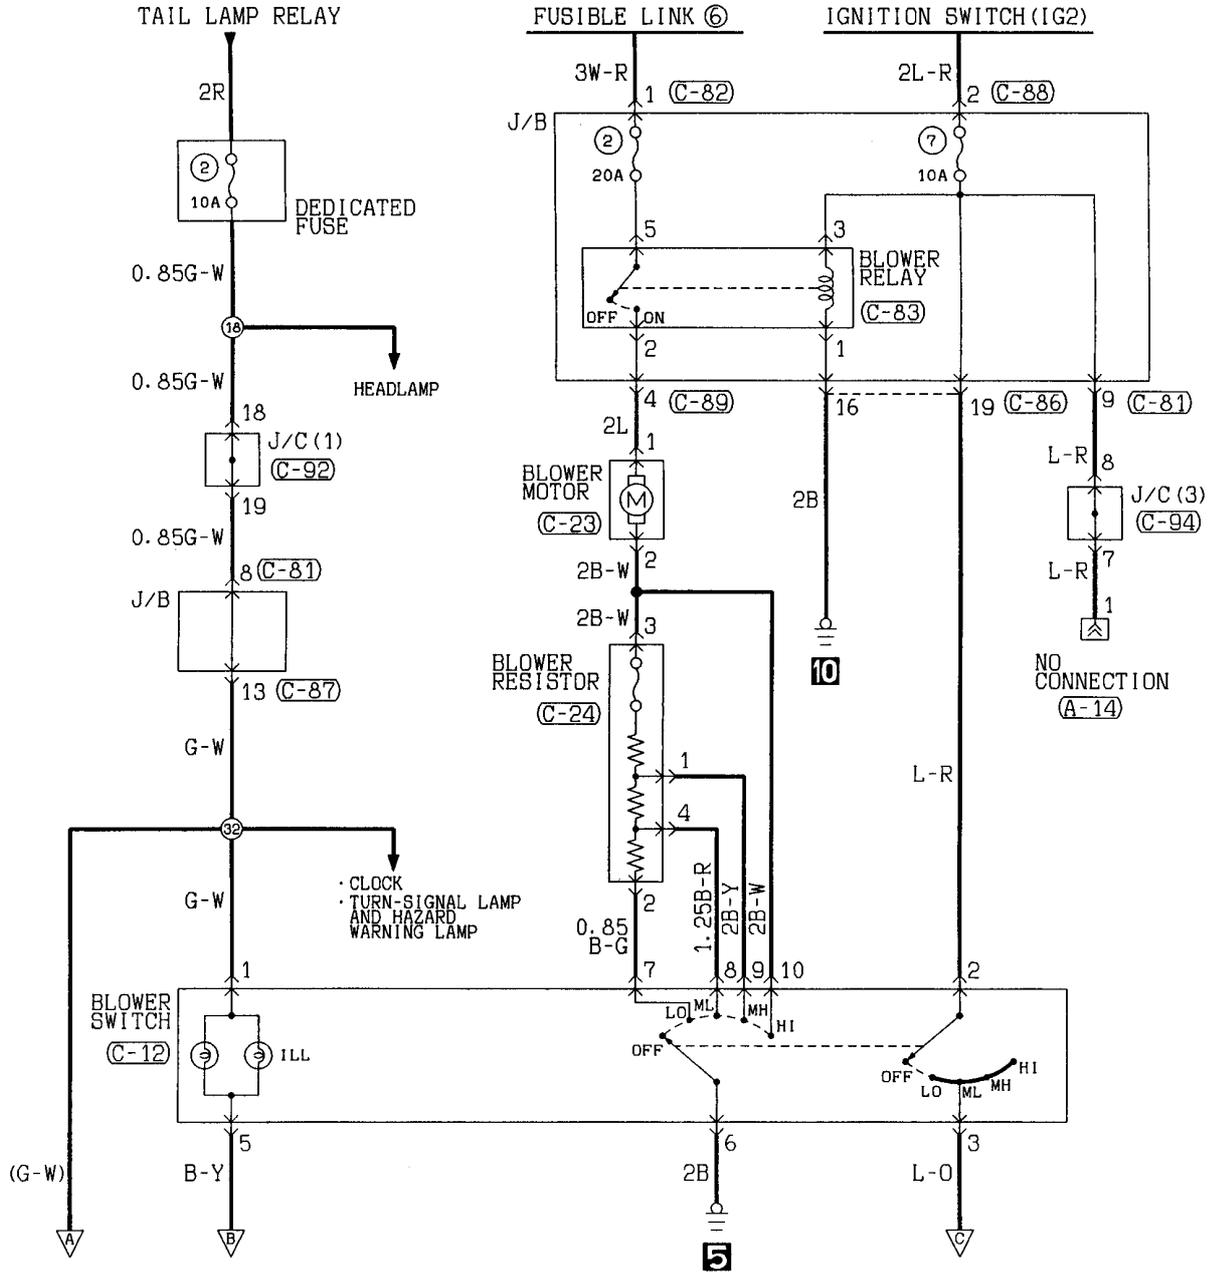

- (A-14)

1	2	3
4	5	6
- (C-10)

1	2
3	4
- (C-12)

1	2	3	4
5	6	7	8
9	10		
- (C-23)

1

- (C-24)

1	2
3	4
- (C-42)

1	2	3	4
---	---	---	---
- (C-46)

1	2	3
---	---	---
- (C-56)


1	2	3	4	5
6	7	8	9	10
11	12			
- (C-81)

1	2	3	4	5
6	7	8	9	10
11	12			
- (C-82)


1

- (C-83)

1	2	3
4	5	

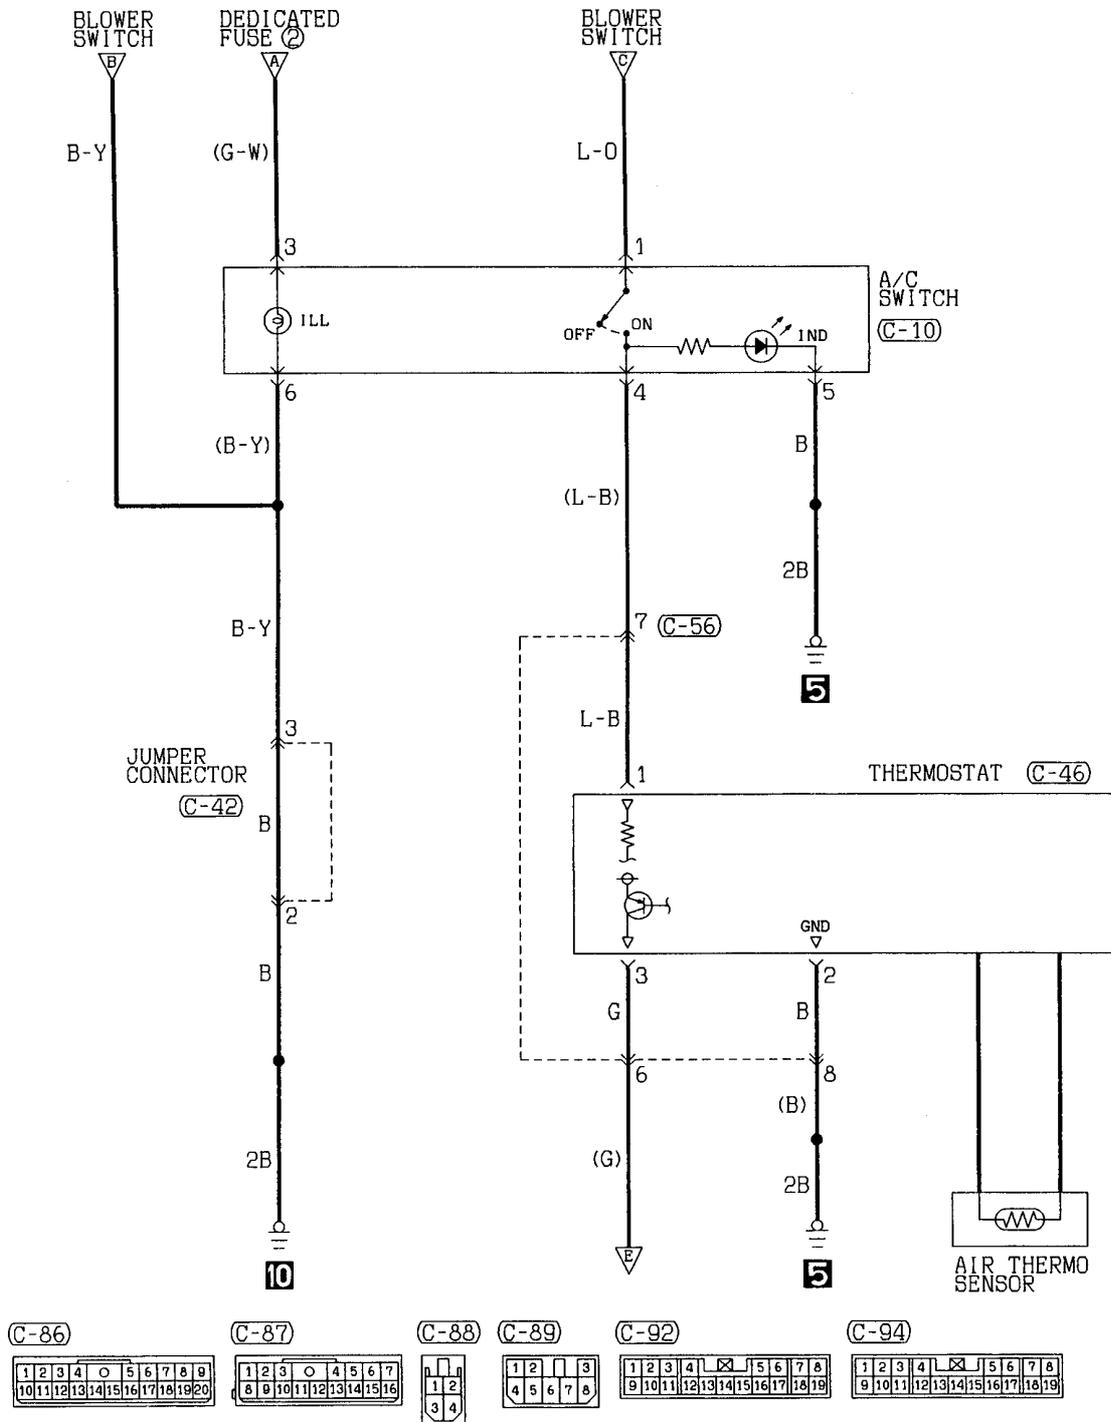

AIR CONDITIONER <Petrol-powered vehicles> (CONTINUED)


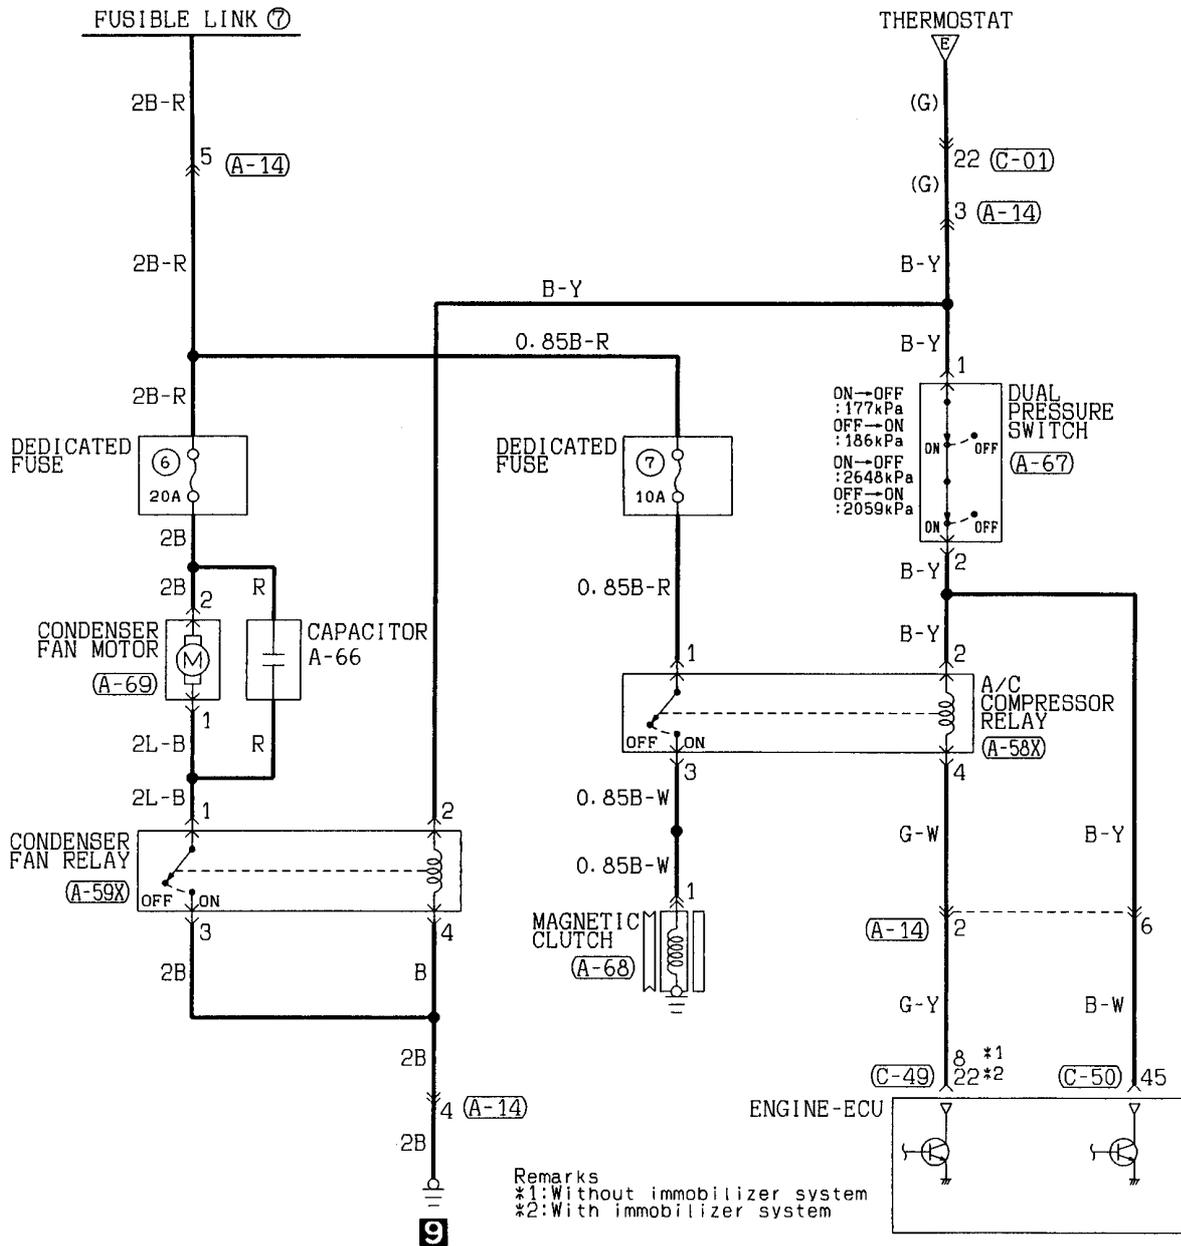



(A-14)	(A-58X)	(A-59X)	(A-67)	(A-68)	(A-69)	(C-01)	(C-49)	(C-50)
1 2 3 4 5 6	1 2 3 4	1 2 3 4	⑦	▷	⑦	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26	31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46

NOTES


AIR CONDITIONER

Diesel-powered vehicles with M/T

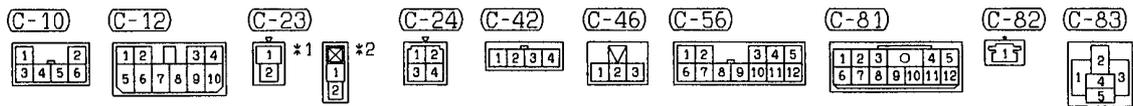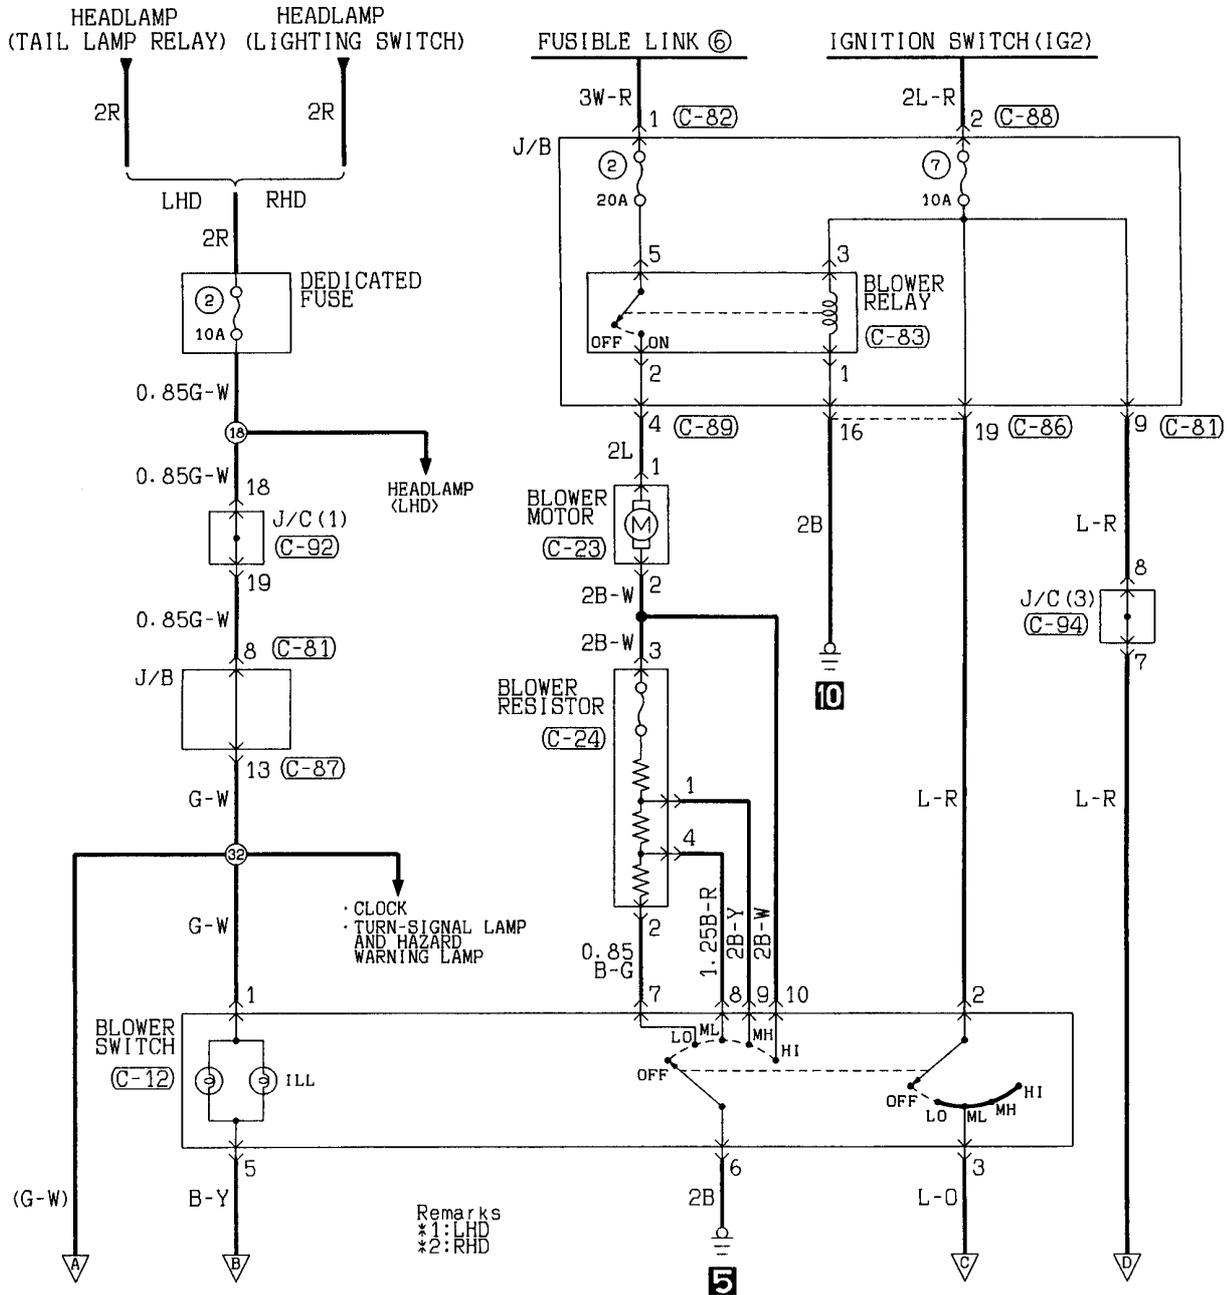

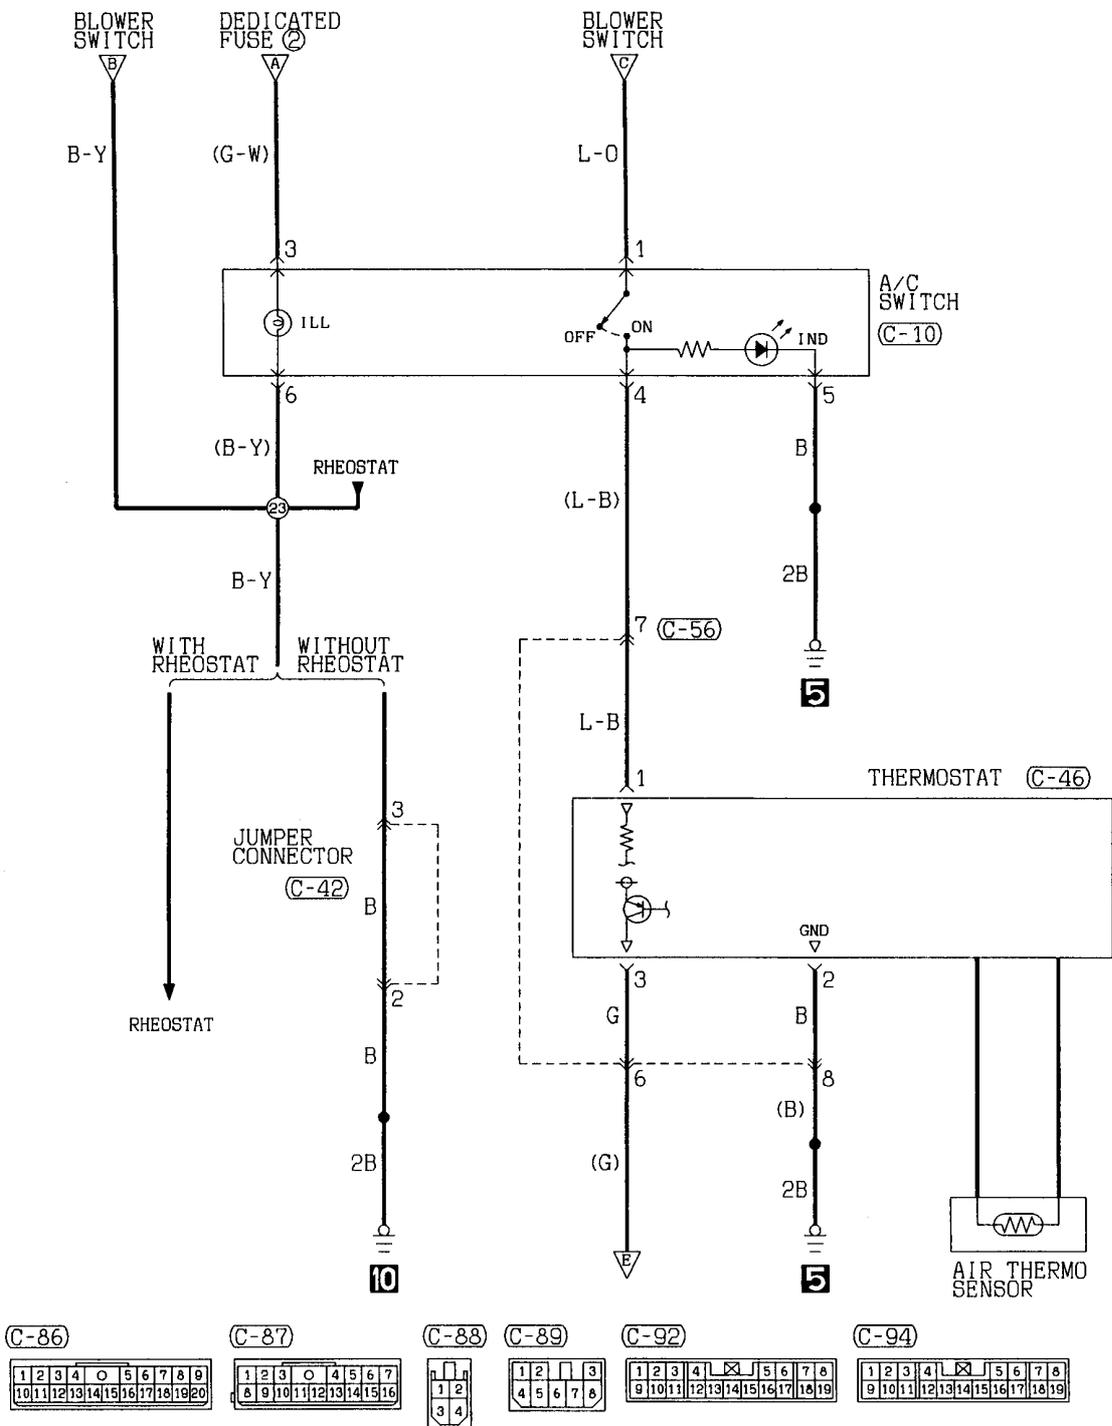

AIR CONDITIONER <Diesel-powered vehicles with M/T> (CONTINUED)

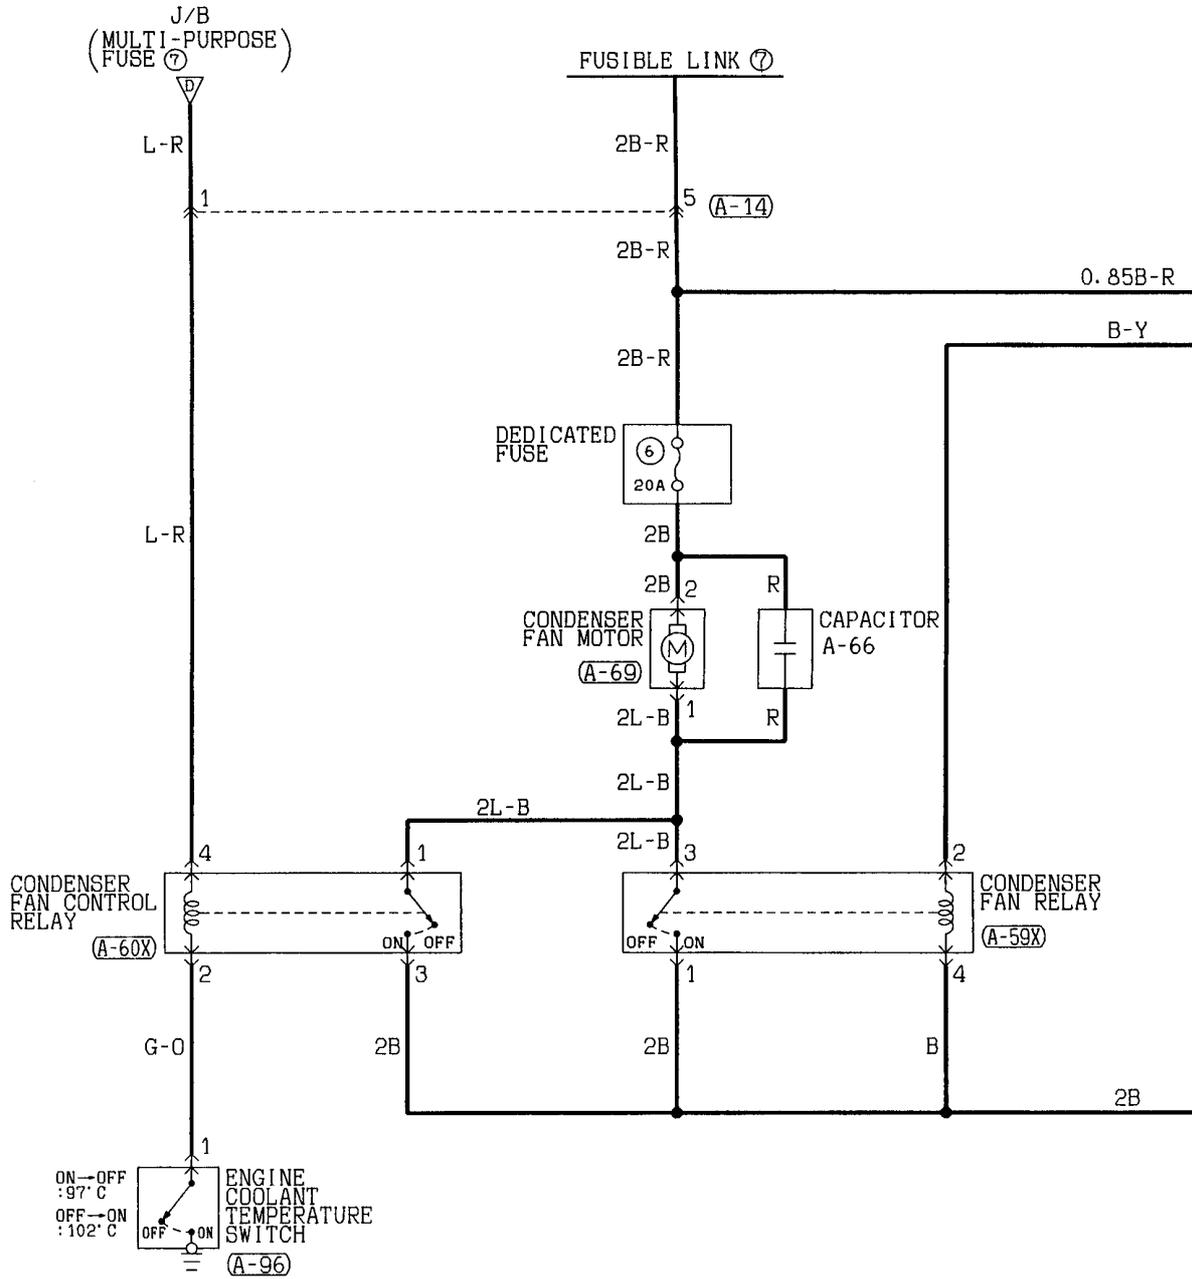

- (A-14)

1	2	3
4	5	6
- (A-58X)

1	2
3	4
- (A-59X)

1	2
3	4
- (A-60X)

1	2
3	4
- (A-67) <LHD> <RHD>

1	2
---	---
- (A-68)

1	2
---	---
- (A-69)

1	2
---	---
- (A-84)


1	2
---	---
- (A-95)

1	2
---	---
- (A-96)

1

- (C-01)



1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

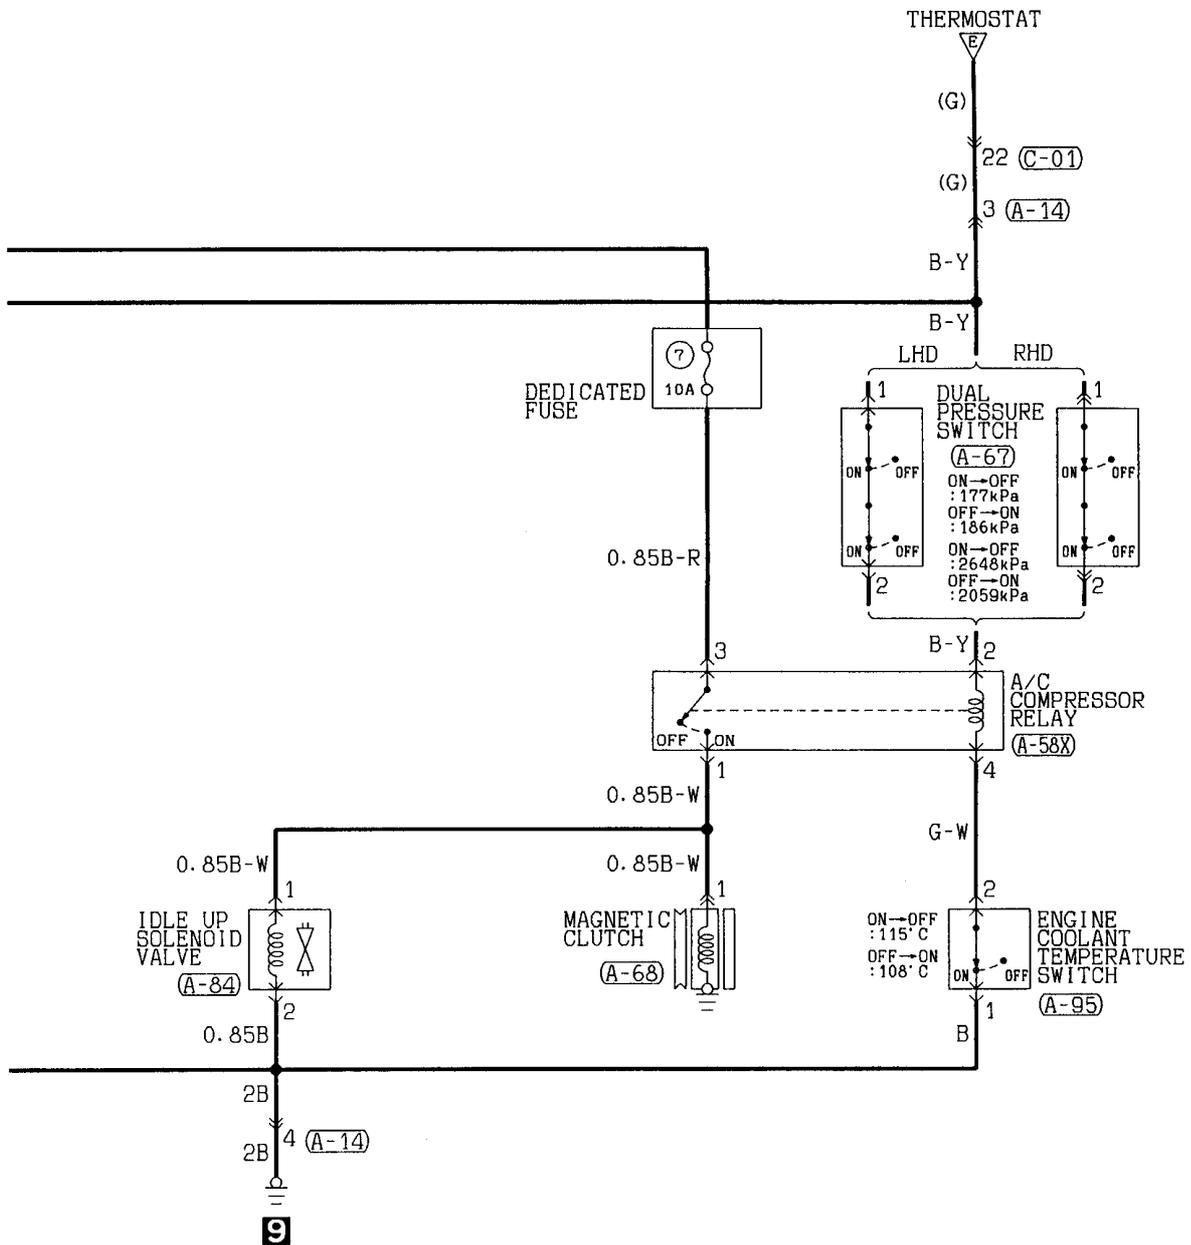


AIR CONDITIONER


90101280222

Diesel-powered vehicles with A/T

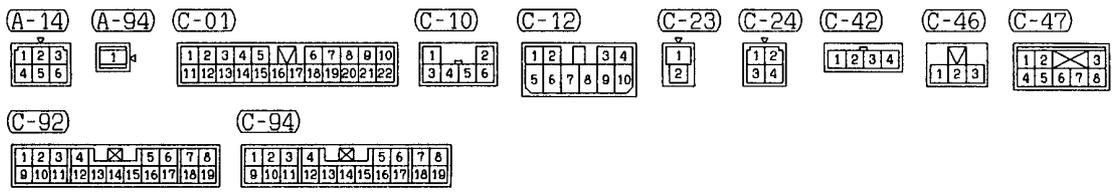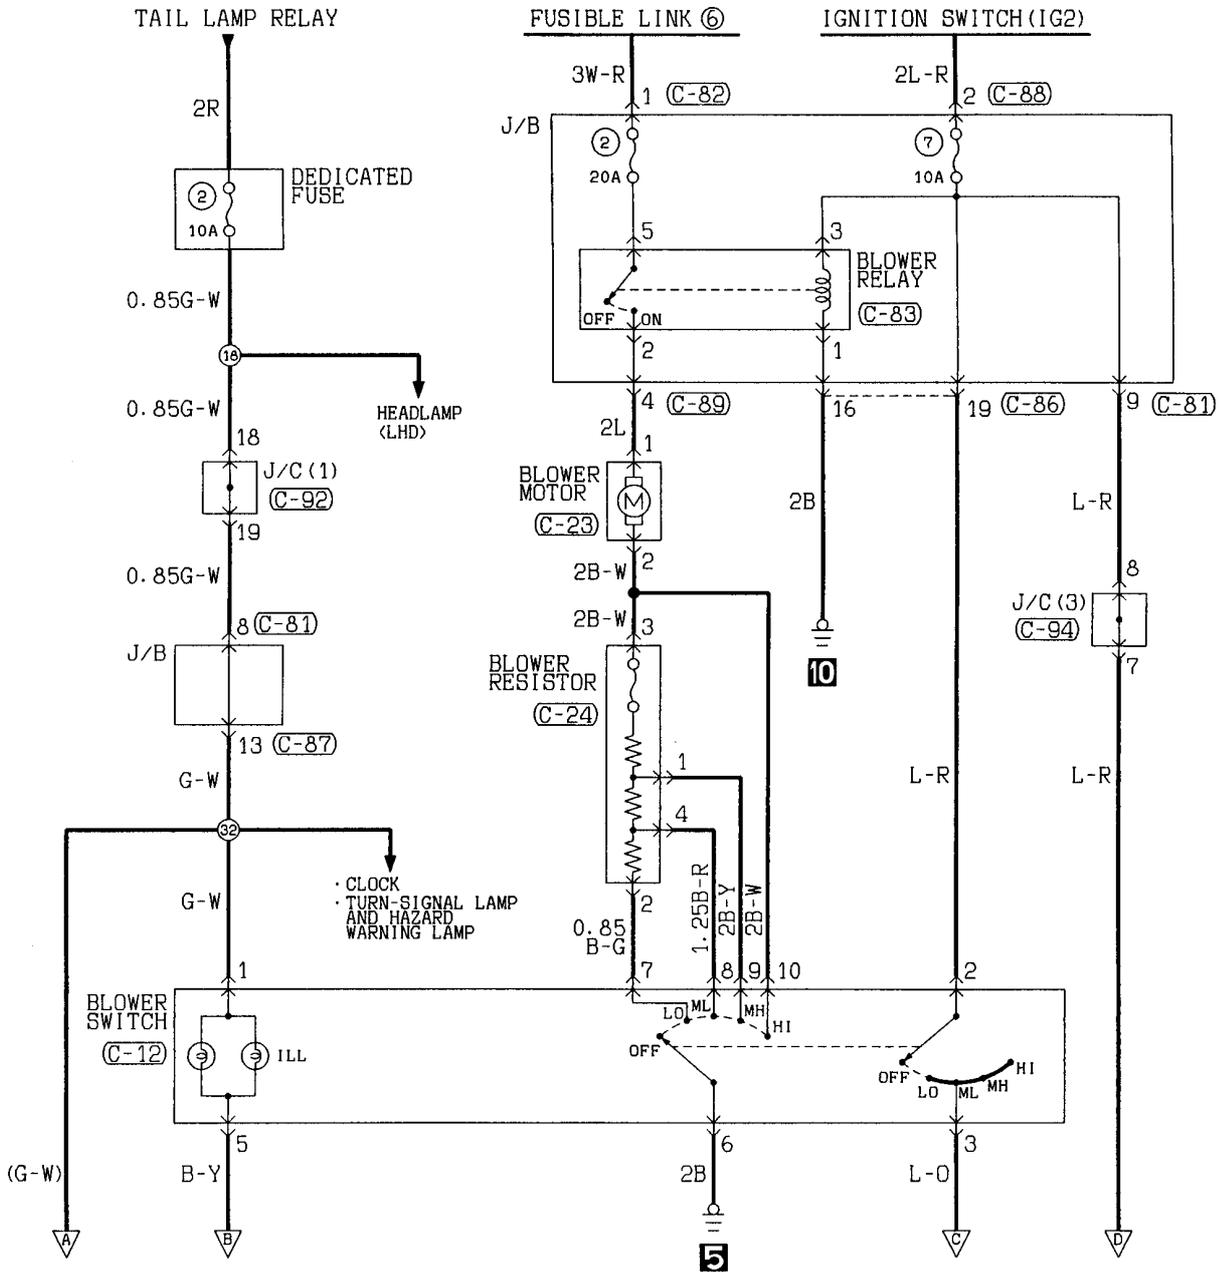

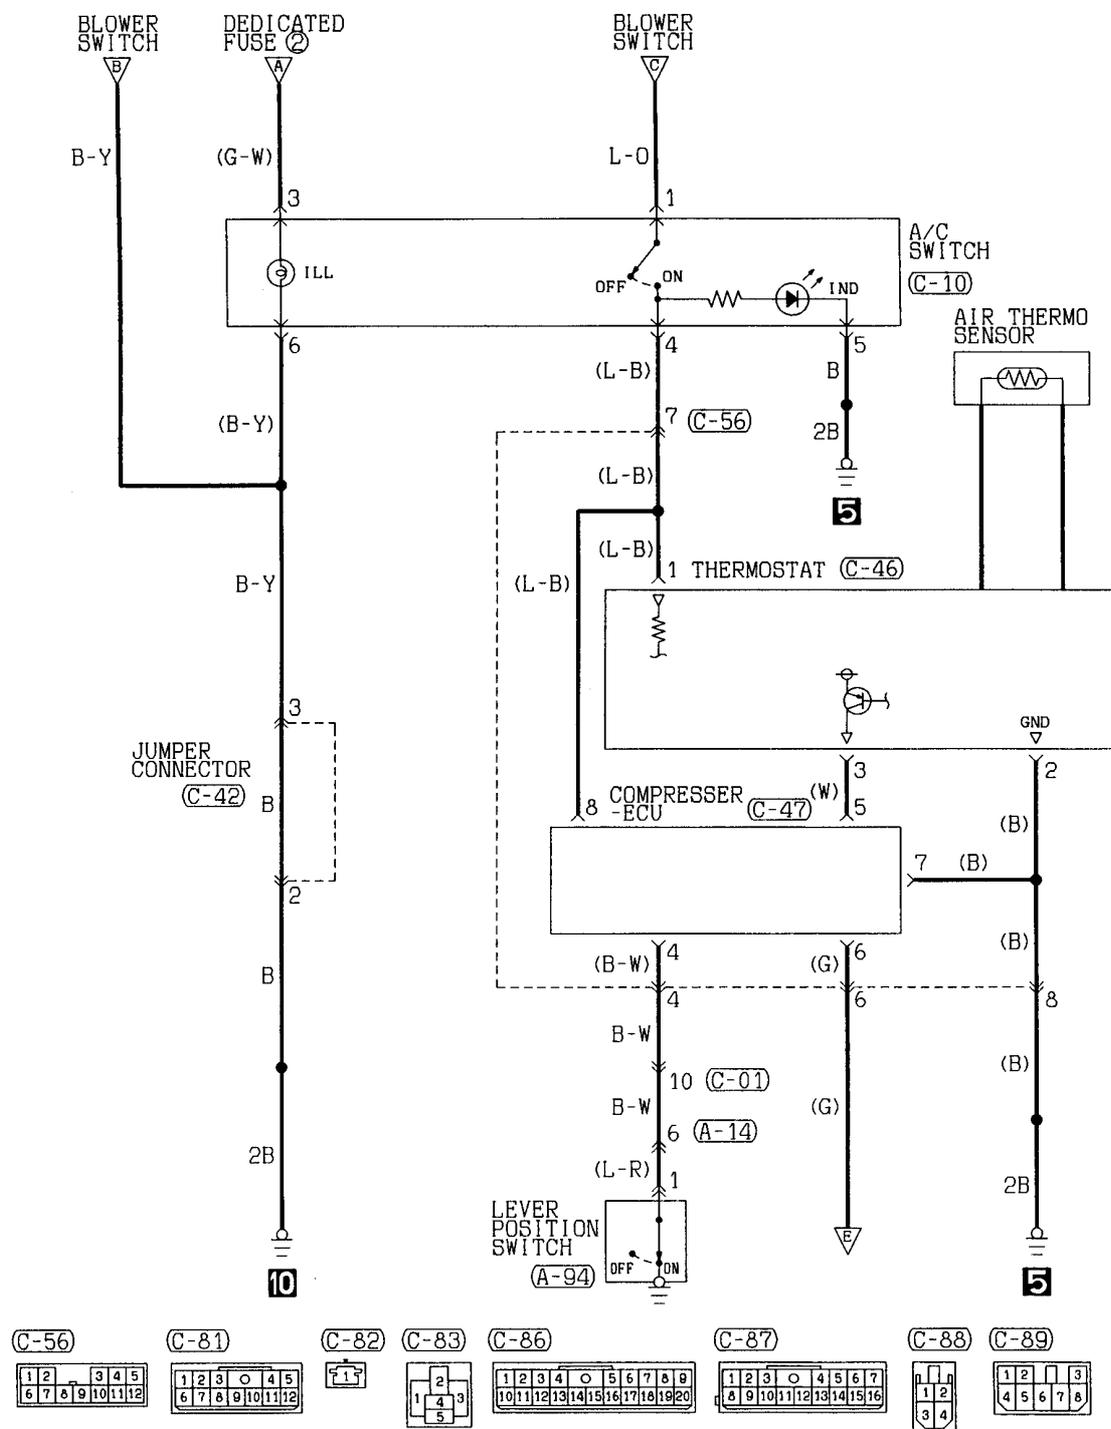

AIR CONDITIONER <Diesel-powered vehicles with A/T> (CONTINUED)

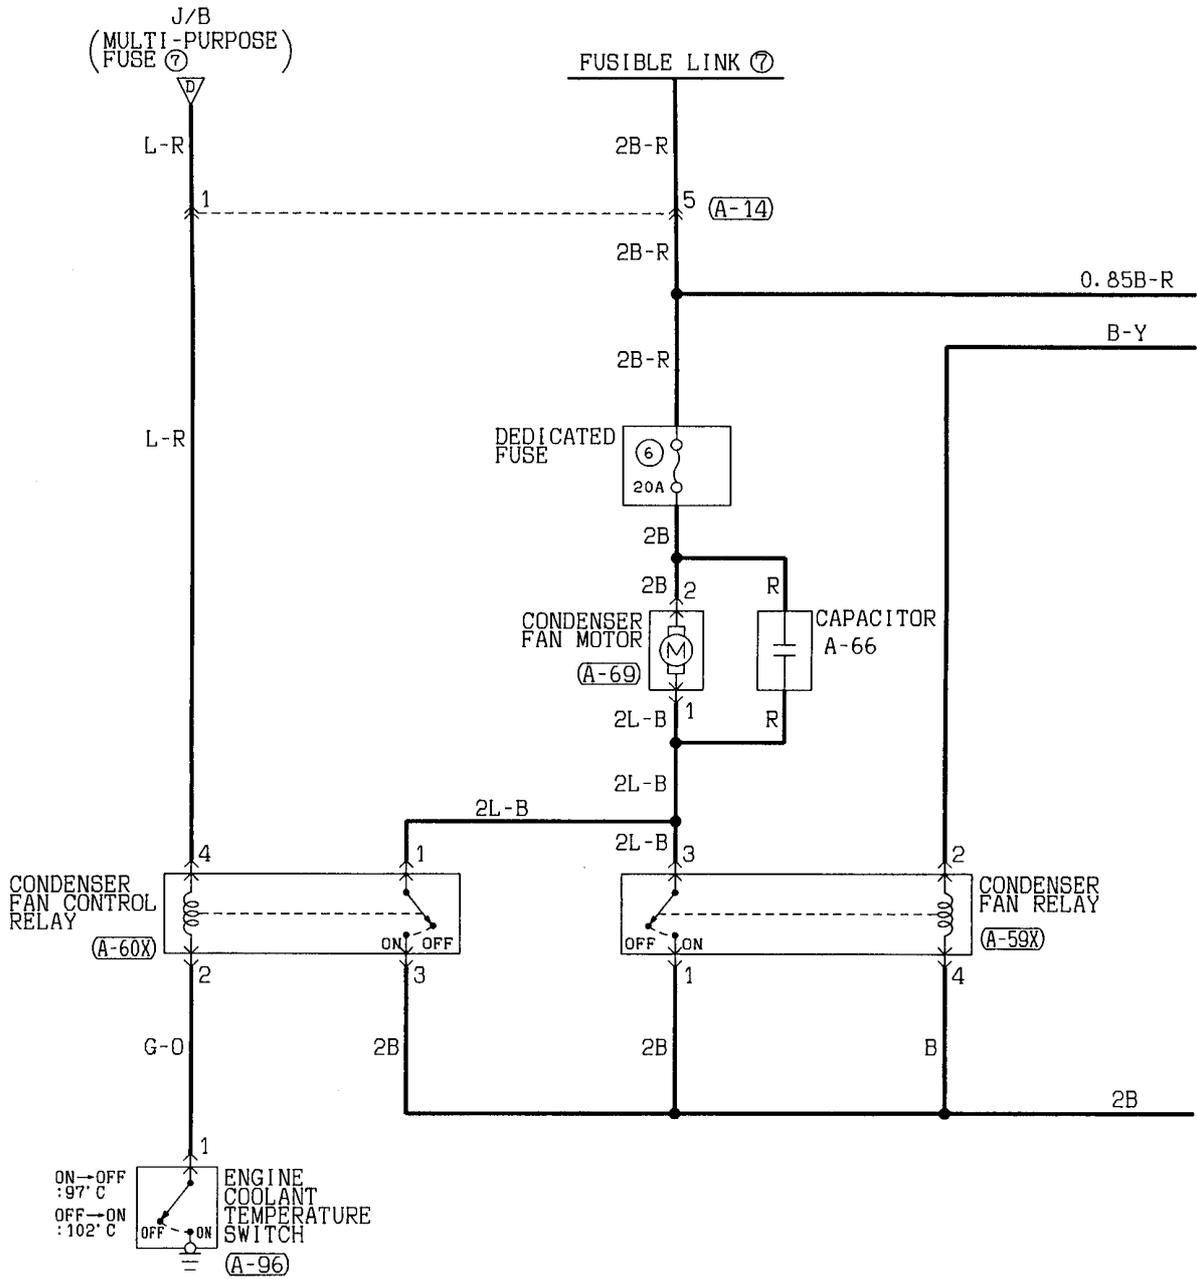

- (A-14)

1	2	3
4	5	6
- (A-58X)

1	2
3	4
- (A-59X)

1	2
3	4
- (A-60X)

1	2
3	4
- (A-67)

1	2
---	---
- (A-68)

▶

- (A-69)

1	2
---	---
- (A-84)


1	2
---	---
- (A-95)

1	2
---	---
- (A-96)

1

- (C-01)



1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22

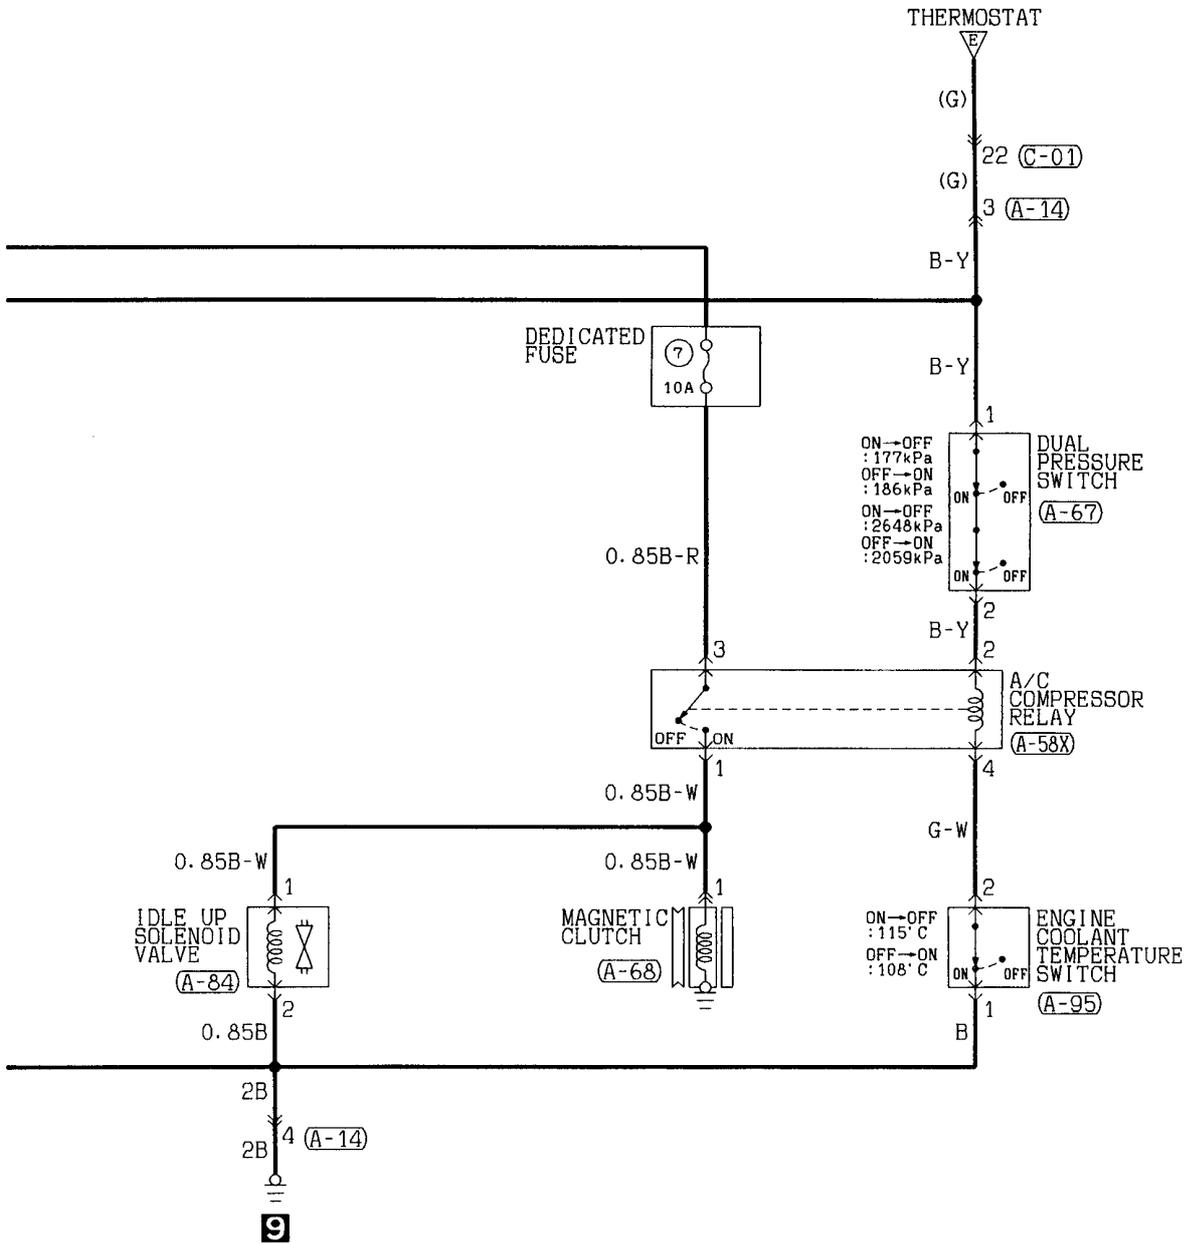


REAR HEATER

90101530037

1998 Models

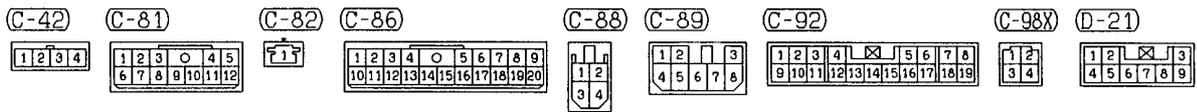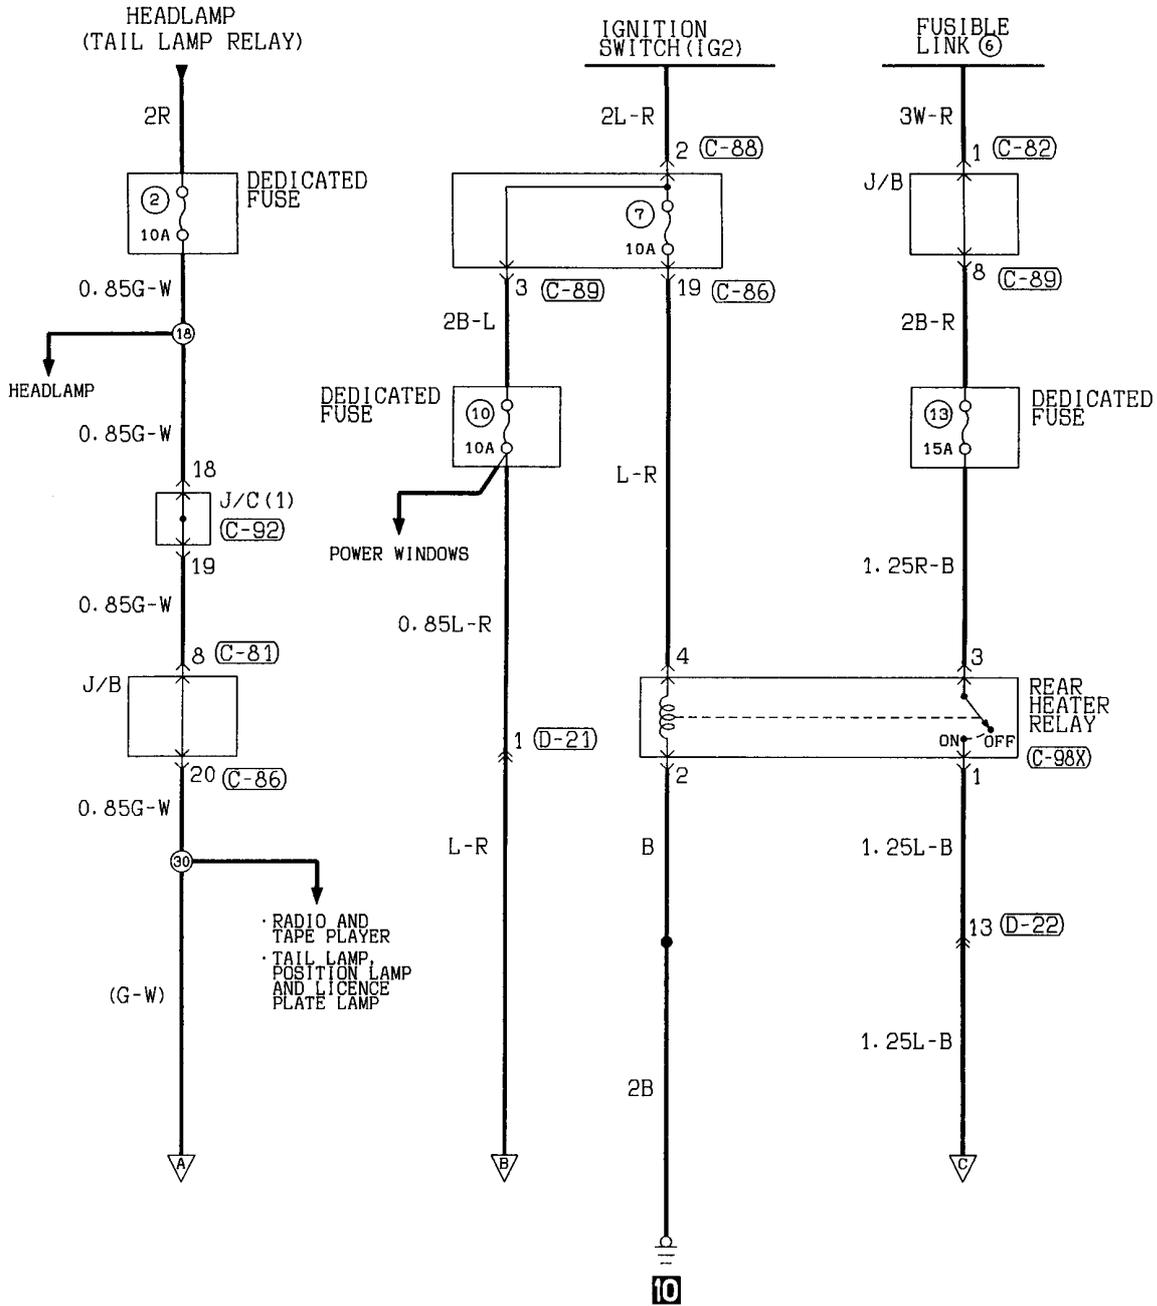

<VEHICLES WITHOUT HEATED SEAT>

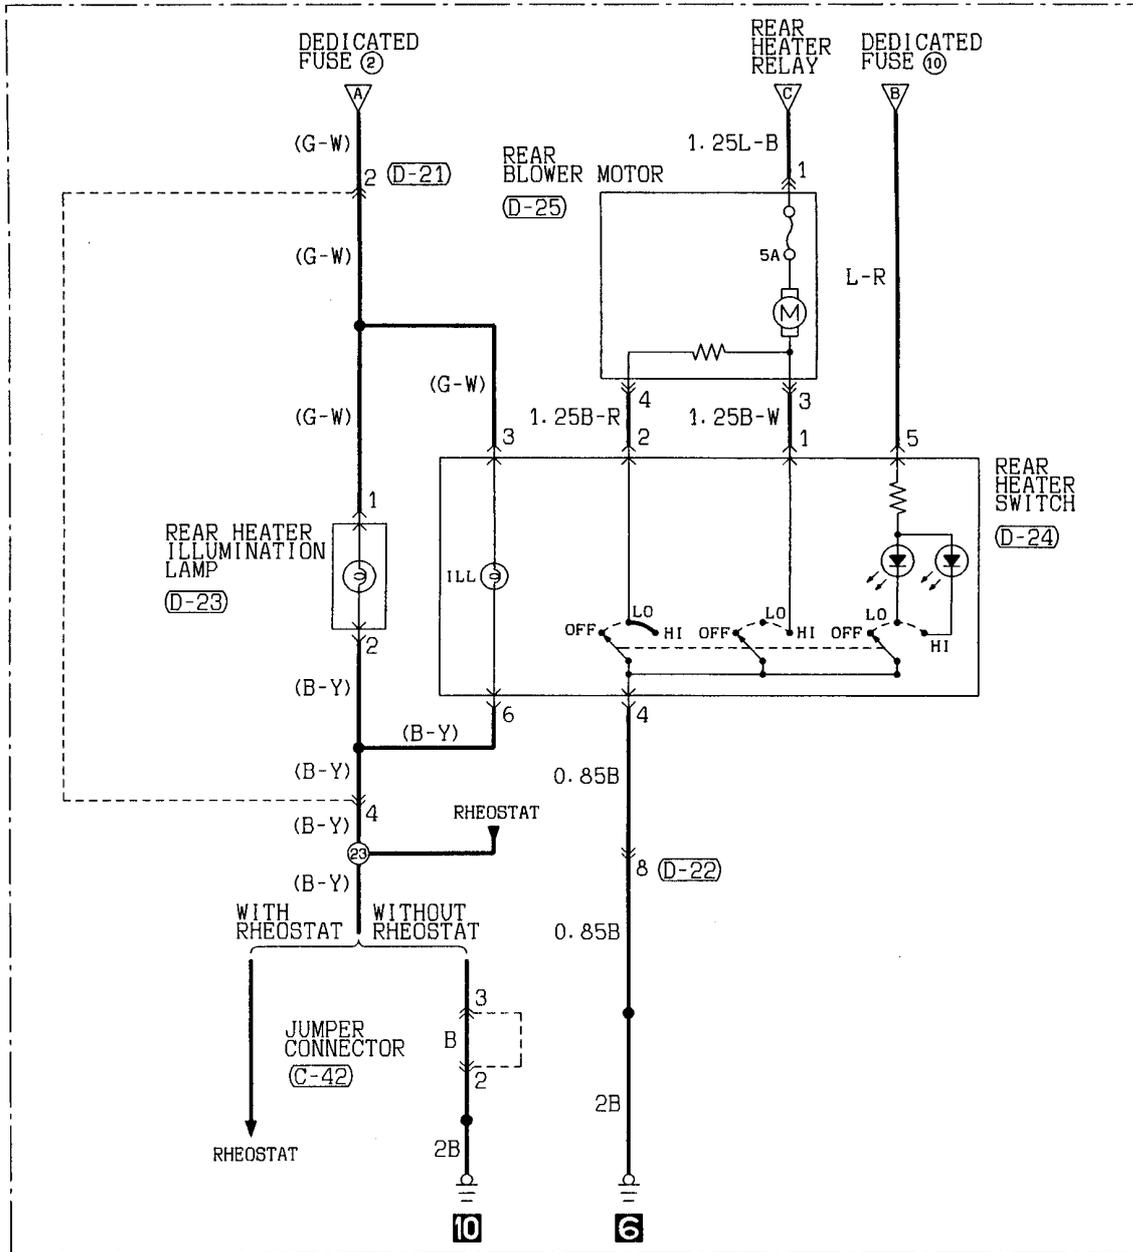

D-22

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

D-23

1
2

D-24


1	M	2	
3	4	5	6

D-25

1	M	2
3	4	

REAR HEATER <1998 Models> (CONTINUED)

<VEHICLES WITH HEATED SEAT>

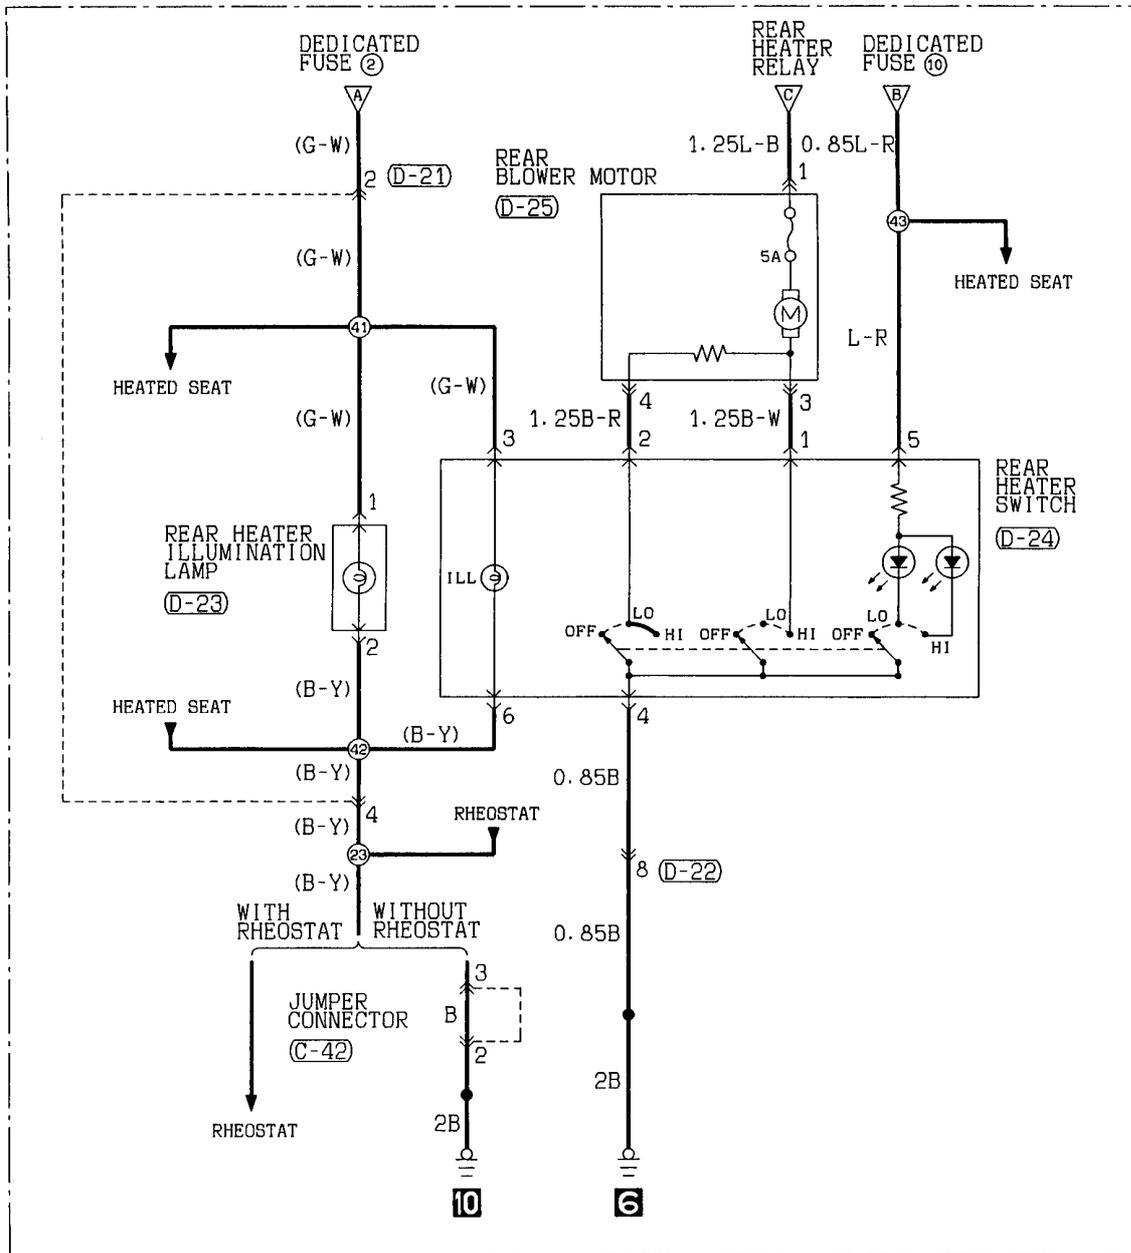


NOTES

WINDSHIELD WIPER AND WASHER

90100610220

L.H. drive vehicles

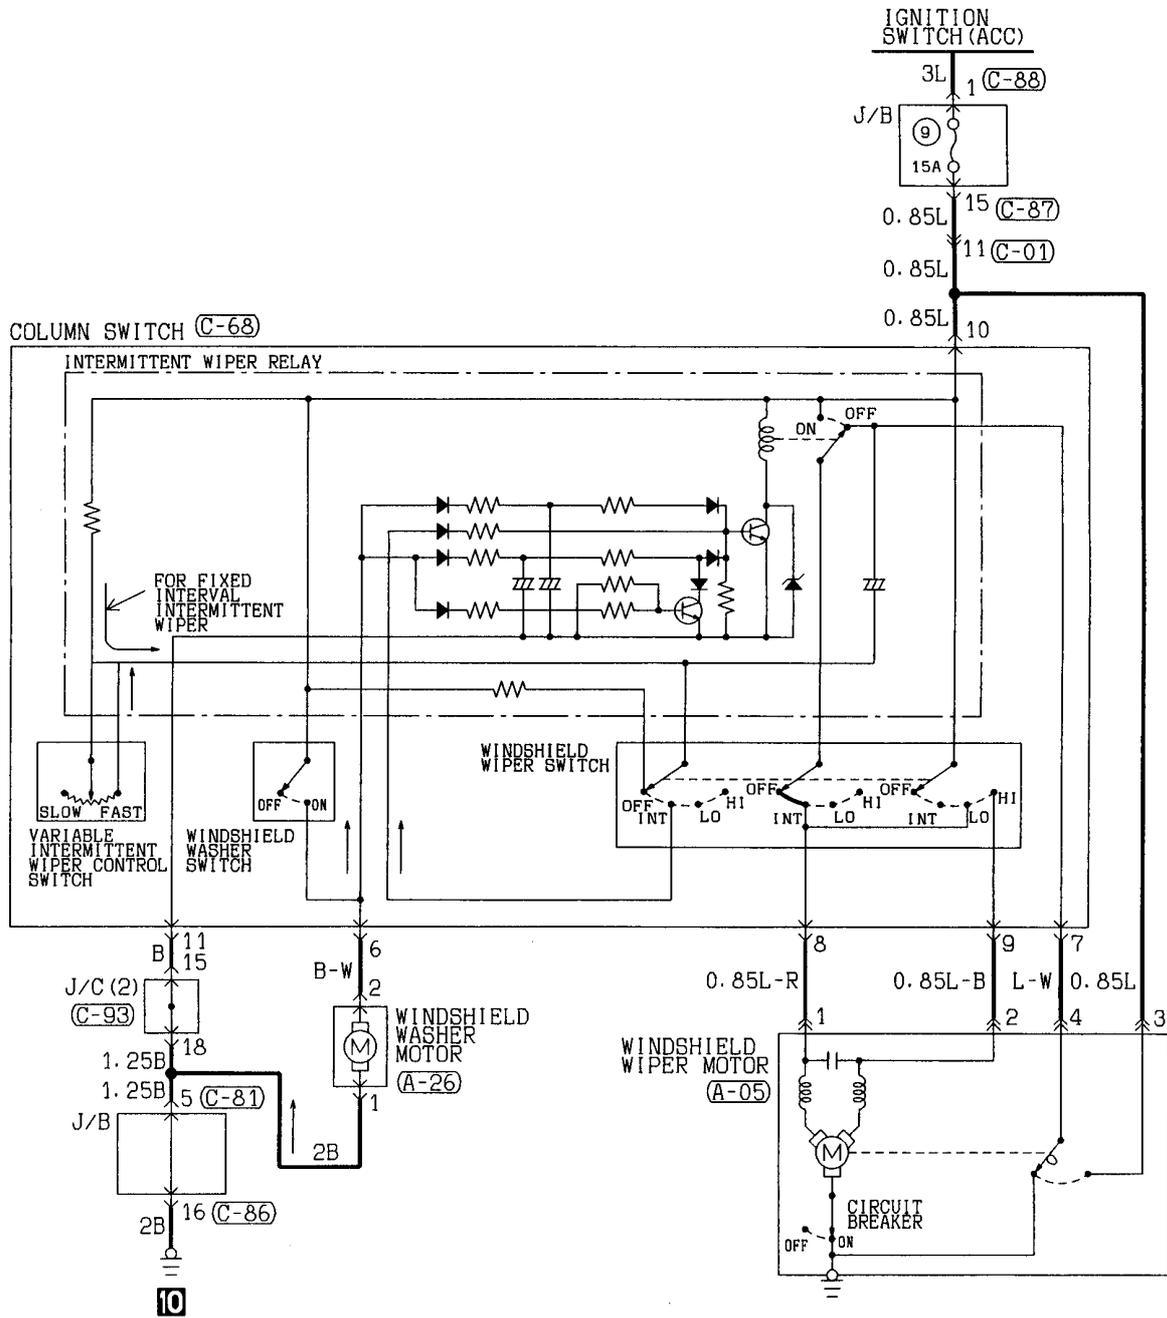

- (A-05)

1	2
3	4
- (A-26)

1
2
- (C-01)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22
- (C-68)

1	2	3	4	5		
6	7	8	9	10	11	12
- (C-81)

1	2	3	4	5		
6	7	8	9	10	11	12
- (C-86)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20
- (C-87)

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16
- (C-88)


1	2
3	4
- (C-93)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

WINDSHIELD WIPER AND WASHER

90100610237

R.H. drive vehicles

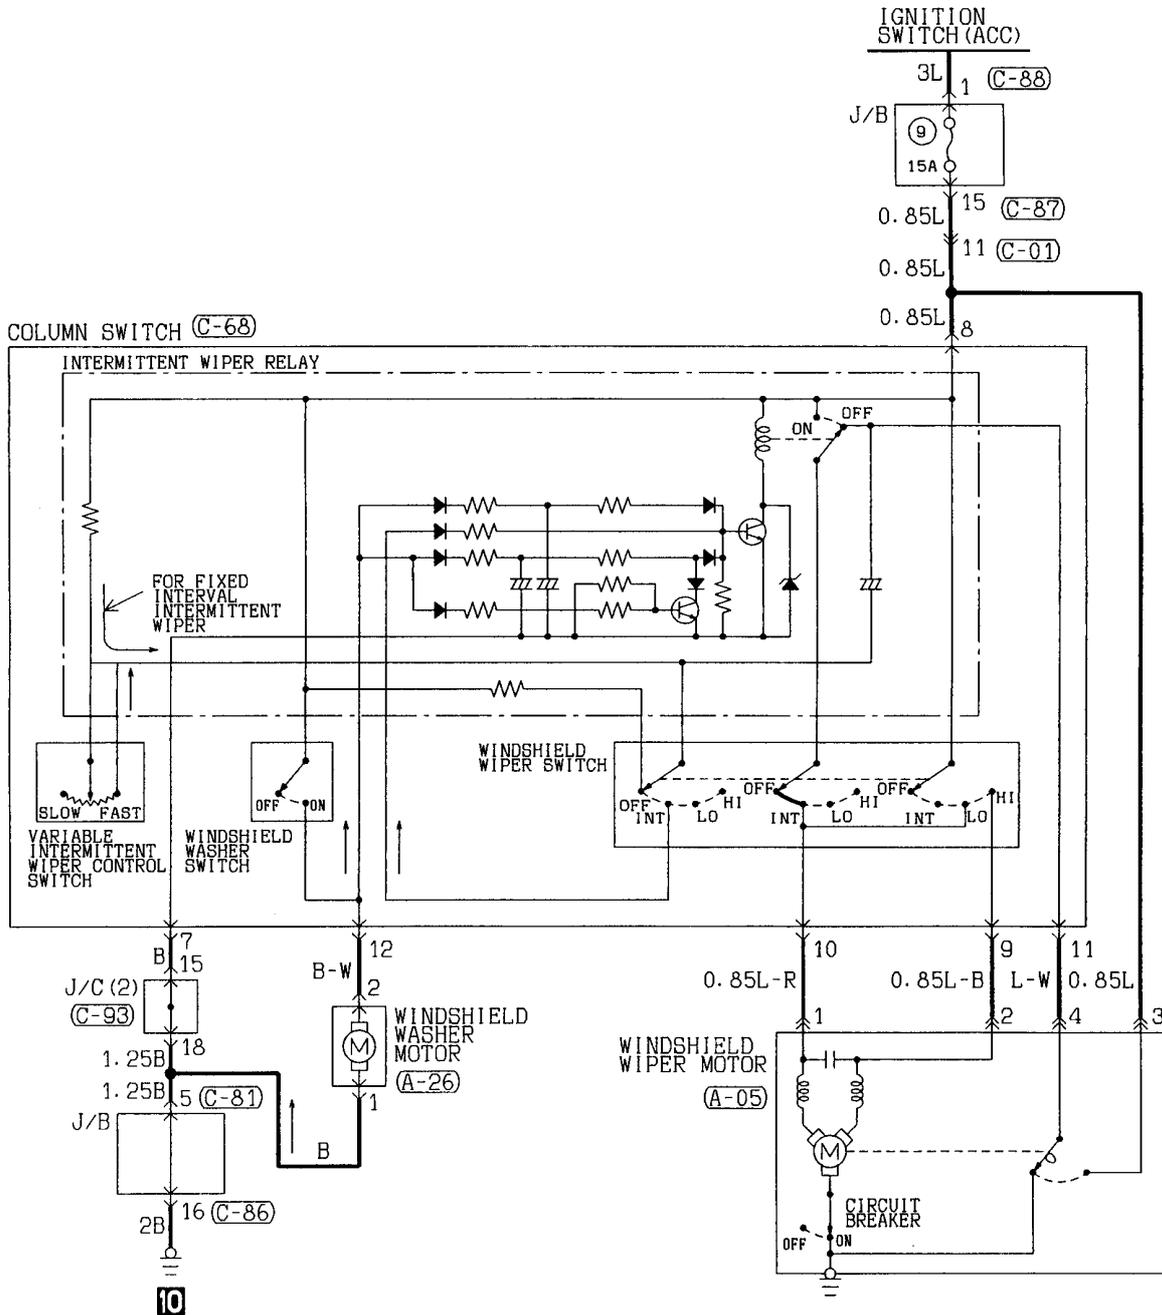

- (A-05)

1	2
3	4
- (A-26)

1
2
- (C-01)

1	2	3	4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19	20	21	22
- (C-68)

1	2	3	4	5		
6	7	8	9	10	11	12
- (C-81)

1	2	3	4	5		
6	7	8	9	10	11	12
- (C-86)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20
- (C-87)

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16
- (C-88)

1	
2	
3	4
- (C-93)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

WINDSHIELD WIPER AND WASHER (See P. 4-186.)

90100610244

OPERATION

<Low-speed (and high-speed) wiper operation>

- When the wiper switch is placed in the LO position with the ignition switch in the ACC or ON position, wipers operate continuously at low speed.
- Placing the wiper switch in the HI position causes the wipers to operate at high speed.

<Automatic wiper stopping operation>

- When the wiper switch is placed in the OFF position, the cam contacts of wiper motor caused current to flow through the automatic wiper stopping circuit, allowing the wiper blades to cycle before they reach to the stop positions.

<Intermittent wiper operation>

- When the wiper switch is placed in the INT position with the ignition switch in ACC or ON position, the intermittent wiper relay is energized causing the intermittent wiper relay contacts to close and open repeatedly.
- When the contacts are closed, the wiper motor is energized.
- When the wiper motor is energized, the relay contacts open, however, the cam contacts keep the wiper motor energized until the wiper blades return to their stop position.

<Washer-activated wiper operation>

- When the washer switch is turned on, the intermittent wiper relay contacts close causing wipers to cycle two to three times.



TROUBLESHOOTING HINTS

1. Wipers do not operate.
 - (1) Washer is not operative, either.
 - Check multi-purpose fuse No. (9).
 - Check earth.
2. Low-speed (or high-speed) wiper operation only is inoperative.
 - Check wiper switch.
3. Wipers do not stop.
 - Check wiper motor.
 - Check intermittent wiper relay.
 - Check wiper switch.
4. Intermittent wiper operation is inoperative.
 - Check terminal voltage of steering-column switch (with a built-in intermittent wiper relay) with the intermittent wiper relay energized. (see below)
5. The length of pause for intermittent operation cannot be varied.
 - Check variable intermittent wiper control switch.
 - Check intermittent wiper relay.
6. Washer is inoperative.
 - (1) Wiper is operative on washer-activated wiper operation.
 - Check washer motor.
 - (2) Washer-activated wiper operation is inoperative also.
 - Check washer switch.
7. Washer-activated wiper operation is inoperative.
 - Check intermittent wiper relay.

Terminal No.	Voltage	Check
8 <LHD> 10 <RHD>	0V	Intermittent wiper relay or wiper switch
	System voltage	Intermittent wiper relay
	0V↔System voltage (alternating)	- (Normal)

HEADLAMP WASHER



90100630097

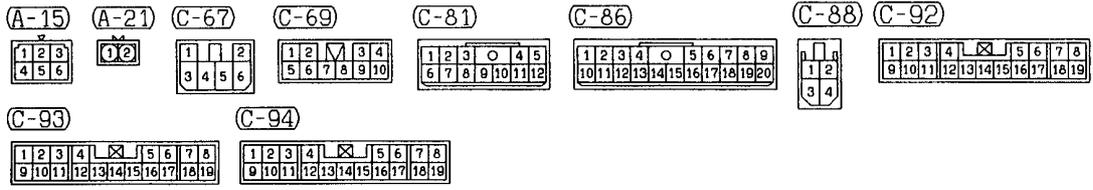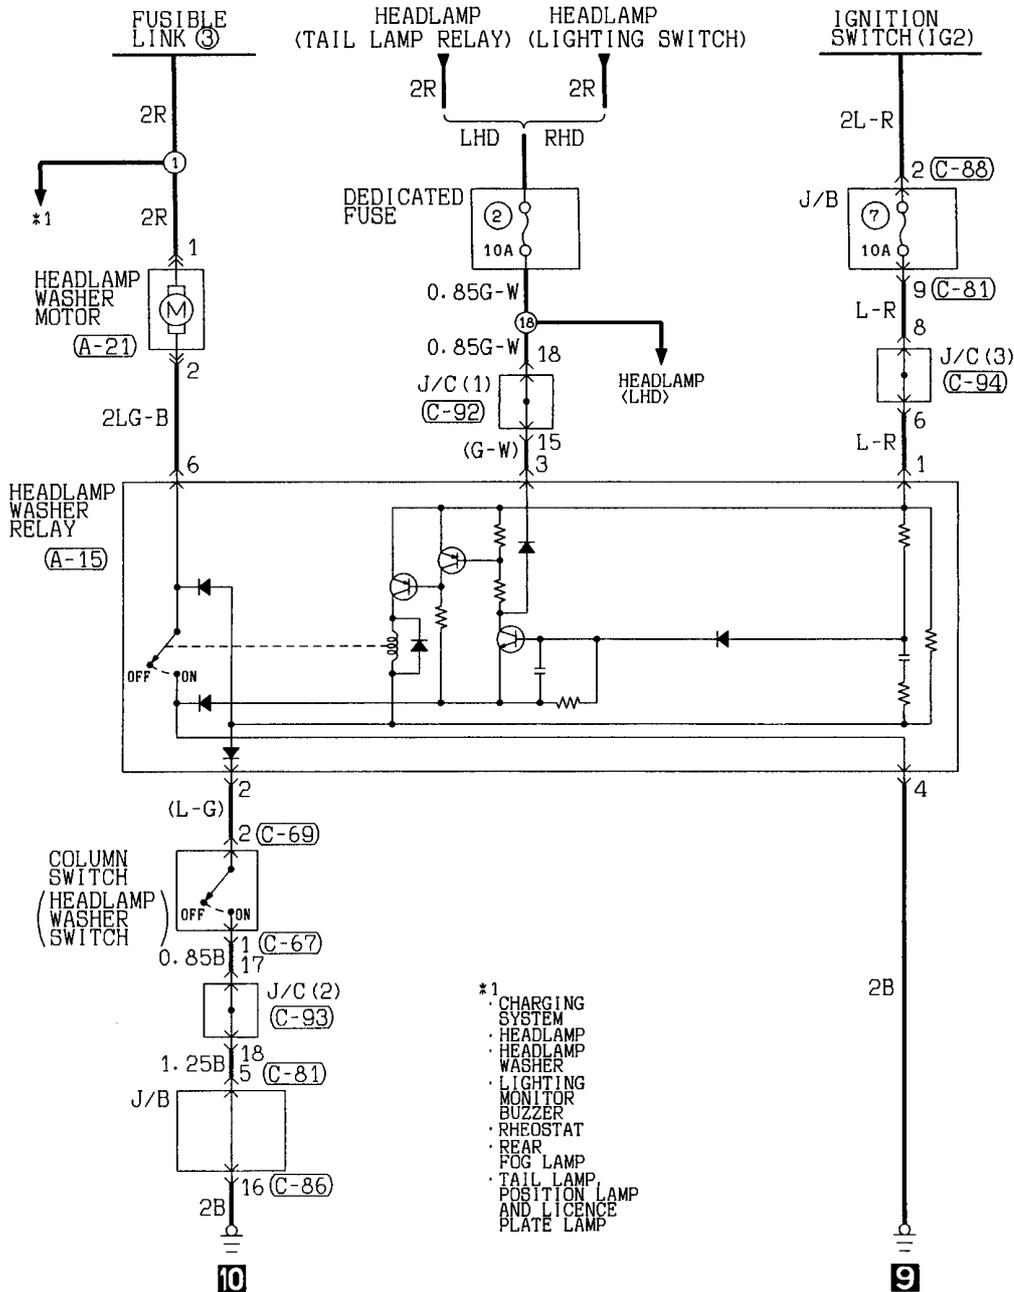

DEFOGGER

90100640151

1997 Models

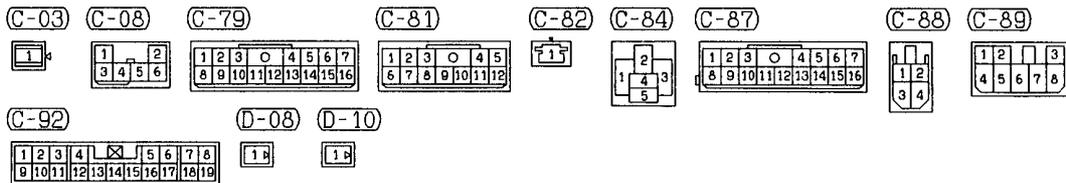
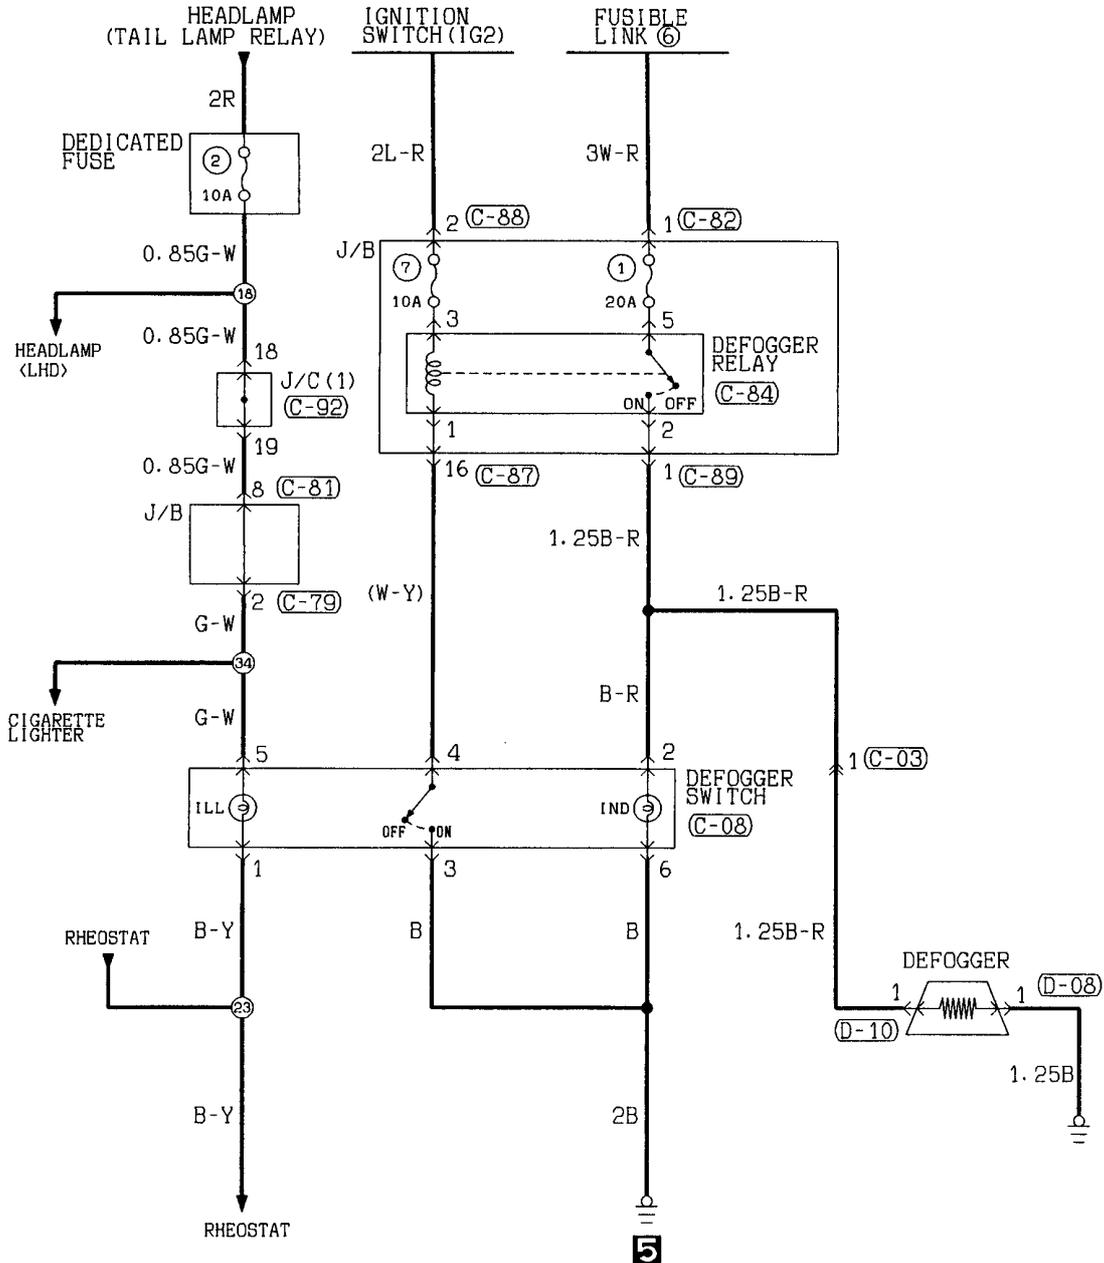



NOTES

DEFOGGER AND DOOR MIRROR HEATER

90100640458

Vehicles with Defogger timer <1998 Models>

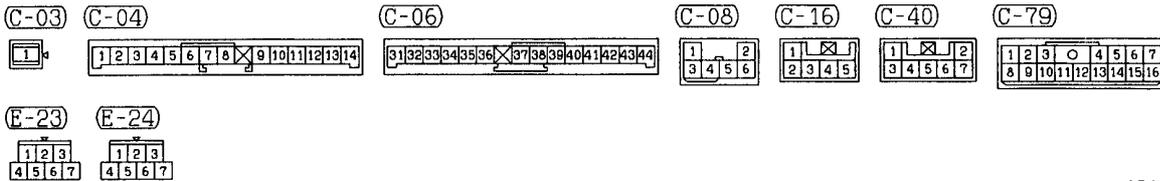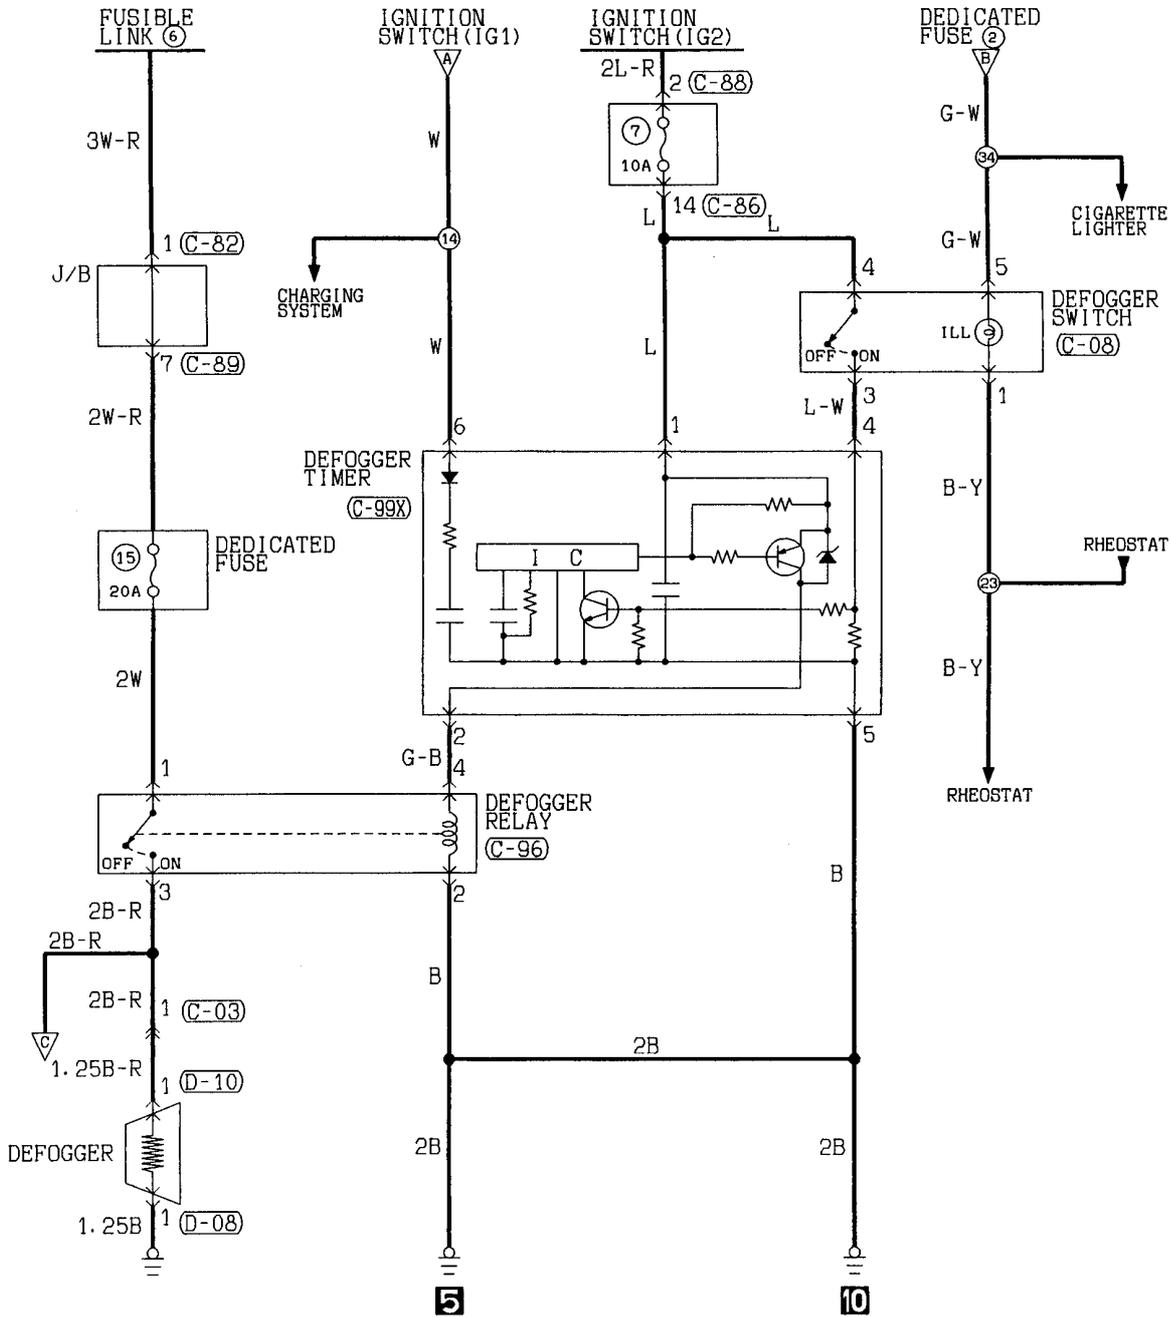

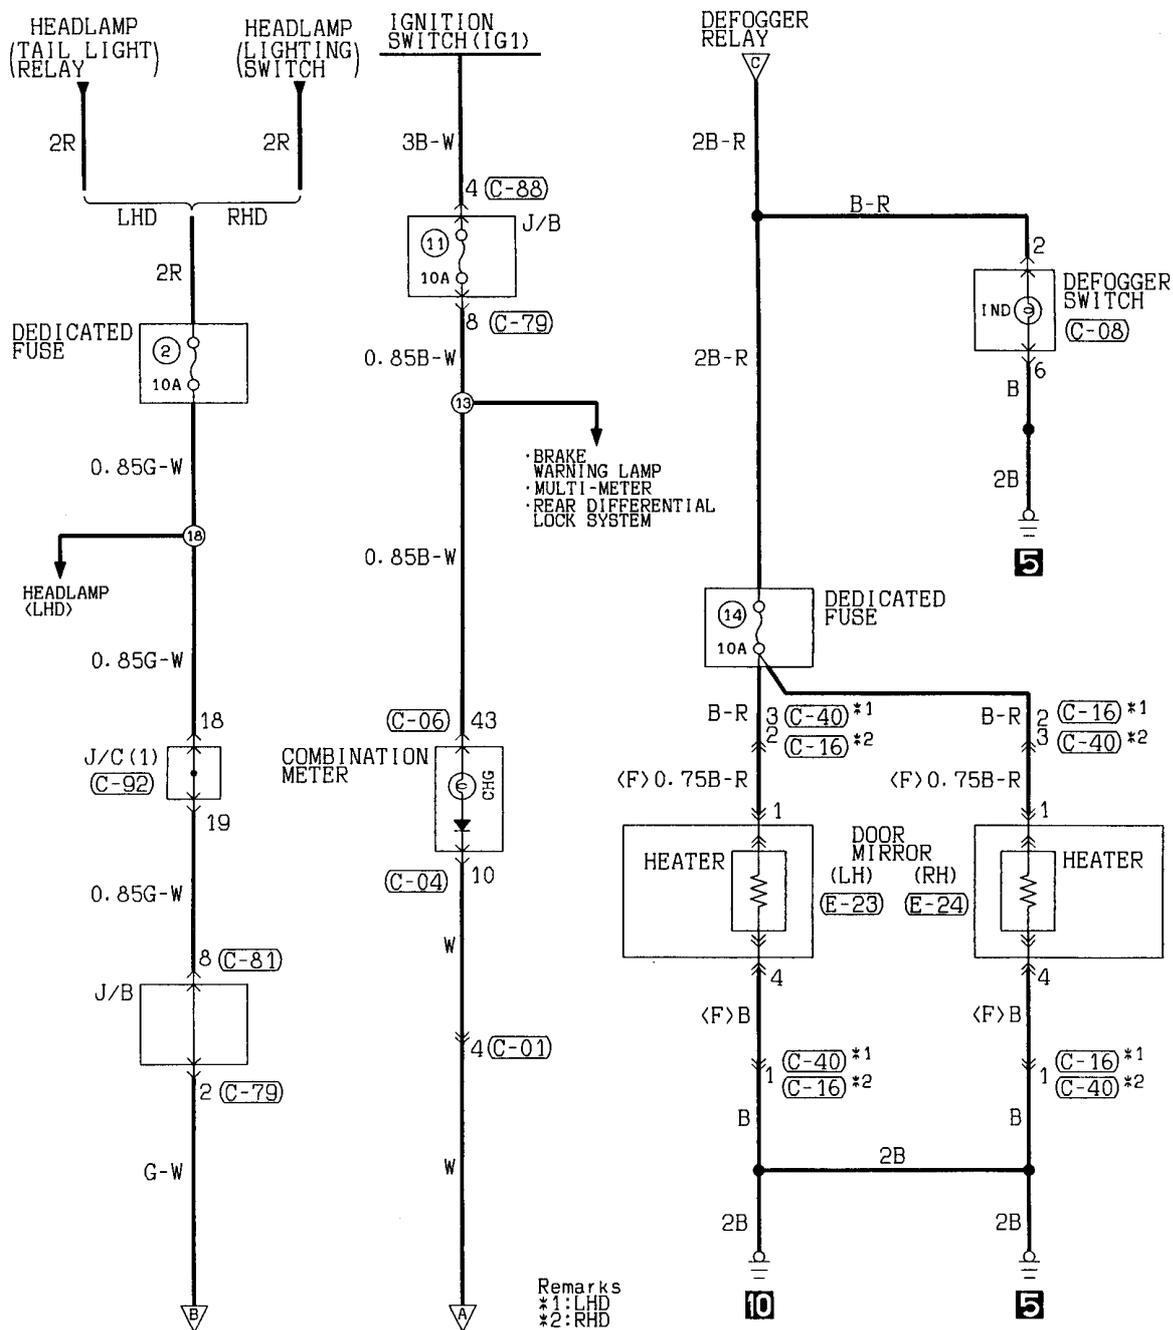



Remarks
*1: LHD
*2: RHD


C-81	C-82	C-86	C-88	C-89	C-92	C-96	C-99X	D-08	D-10
1 2 3 4 5 6 7 8 9 10 11 12	1 2	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	1 2 3 4	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	1 2 3 4	1 2 3 4 5 6	1 2	1 2

DEFOGGER AND DOOR MIRROR HEATER

90100640465

Vehicles without Defogger timer <1998 Models>

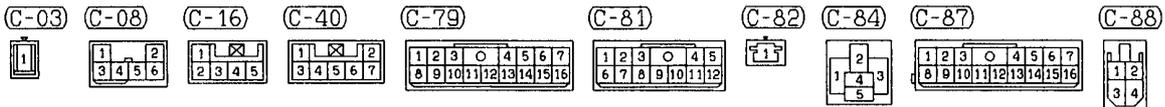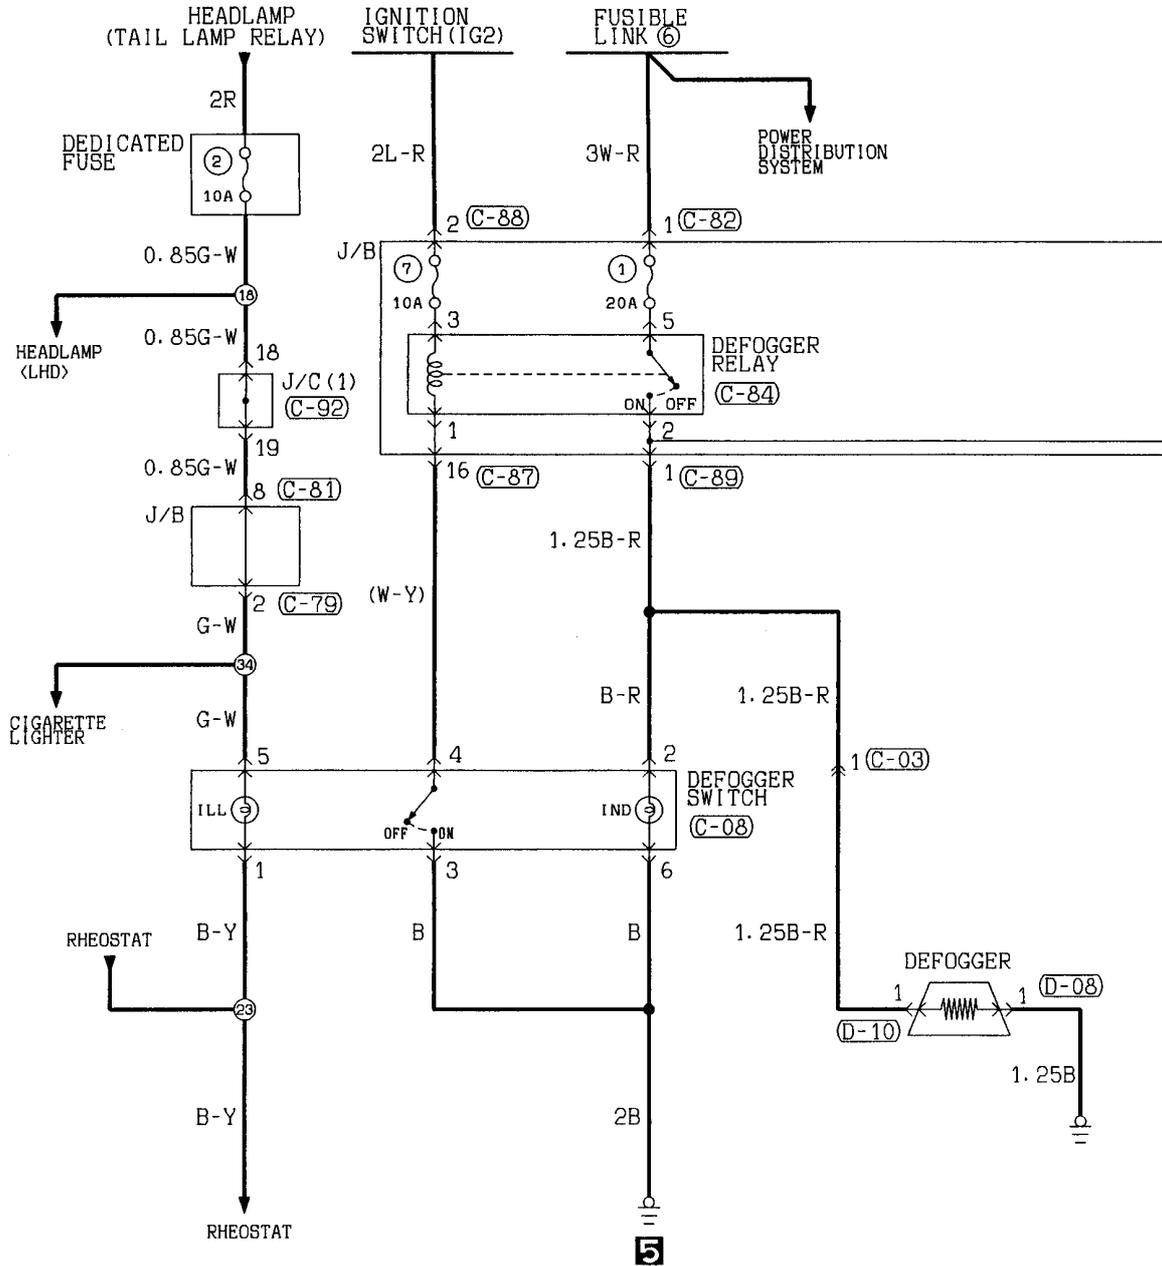

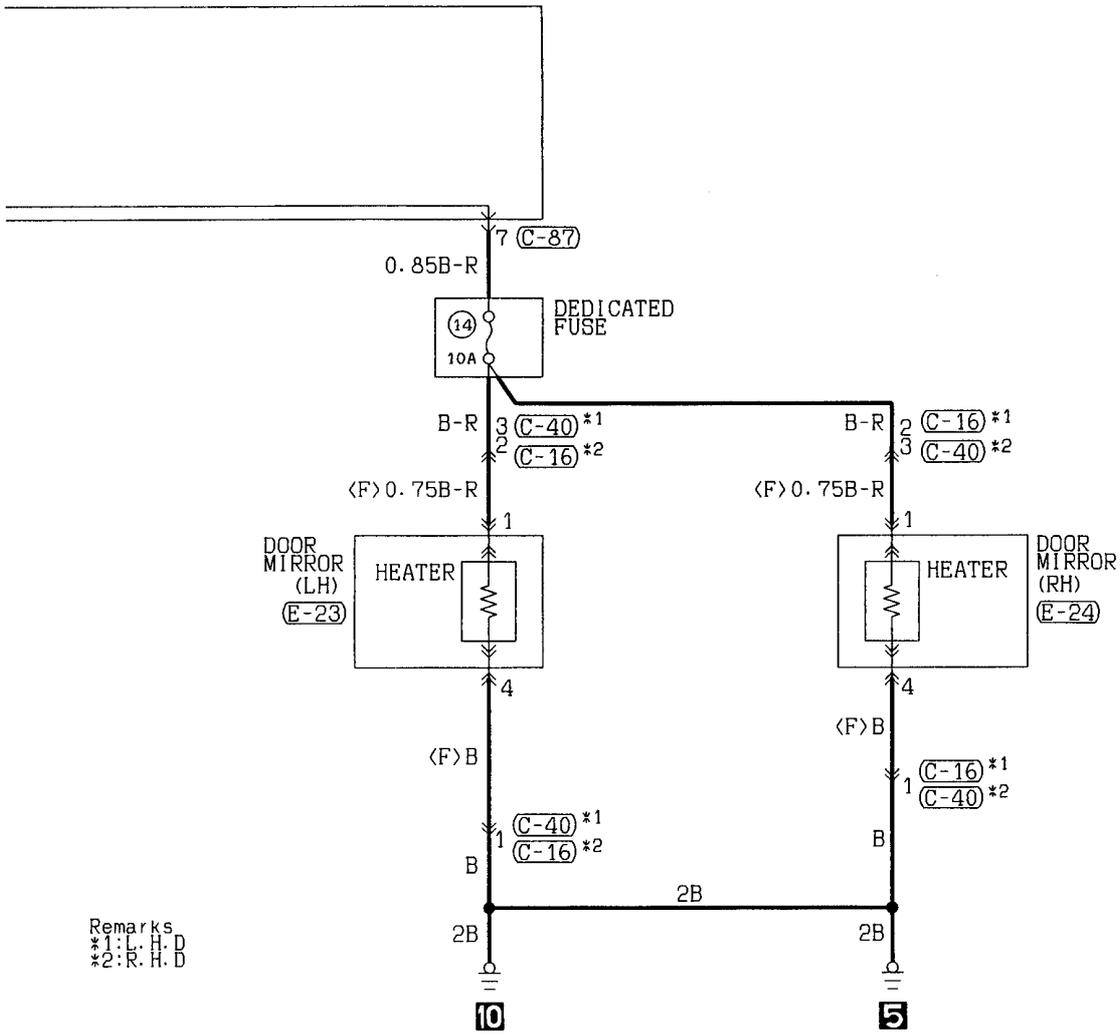



Remarks
 *1: L. H. D
 *2: R. H. D

- | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|-------------|-------------|-------------|-------------|-------------|----|--|----|----|----|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|---|---|---|---|--|---|---|---|---|---|---|---|--|---|---|---|---|---|---|---|
| C-89 | C-92 | D-08 | D-10 | E-23 | E-24 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <table border="1"><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td></tr></table> | 1 | 2 | 3 | 4 | 5 | 6 | <table border="1"><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr><tr><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td></tr></table> | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | <table border="1"><tr><td>1</td></tr></table> | 1 | <table border="1"><tr><td>1</td></tr></table> | 1 | <table border="1"><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td><td>7</td></tr></table> | 1 | 2 | 3 | 4 | 5 | 6 | 7 | <table border="1"><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td><td>7</td></tr></table> | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 1 | 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 5 | 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 5 | 6 | 7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | 5 | 6 | 7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

REMOTE CONTROLLED MIRROR

90100650185


L.H. drive vehicles <1997 Models>

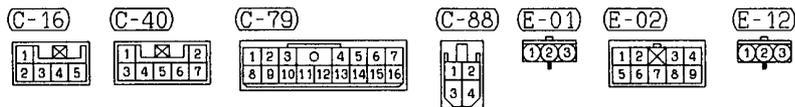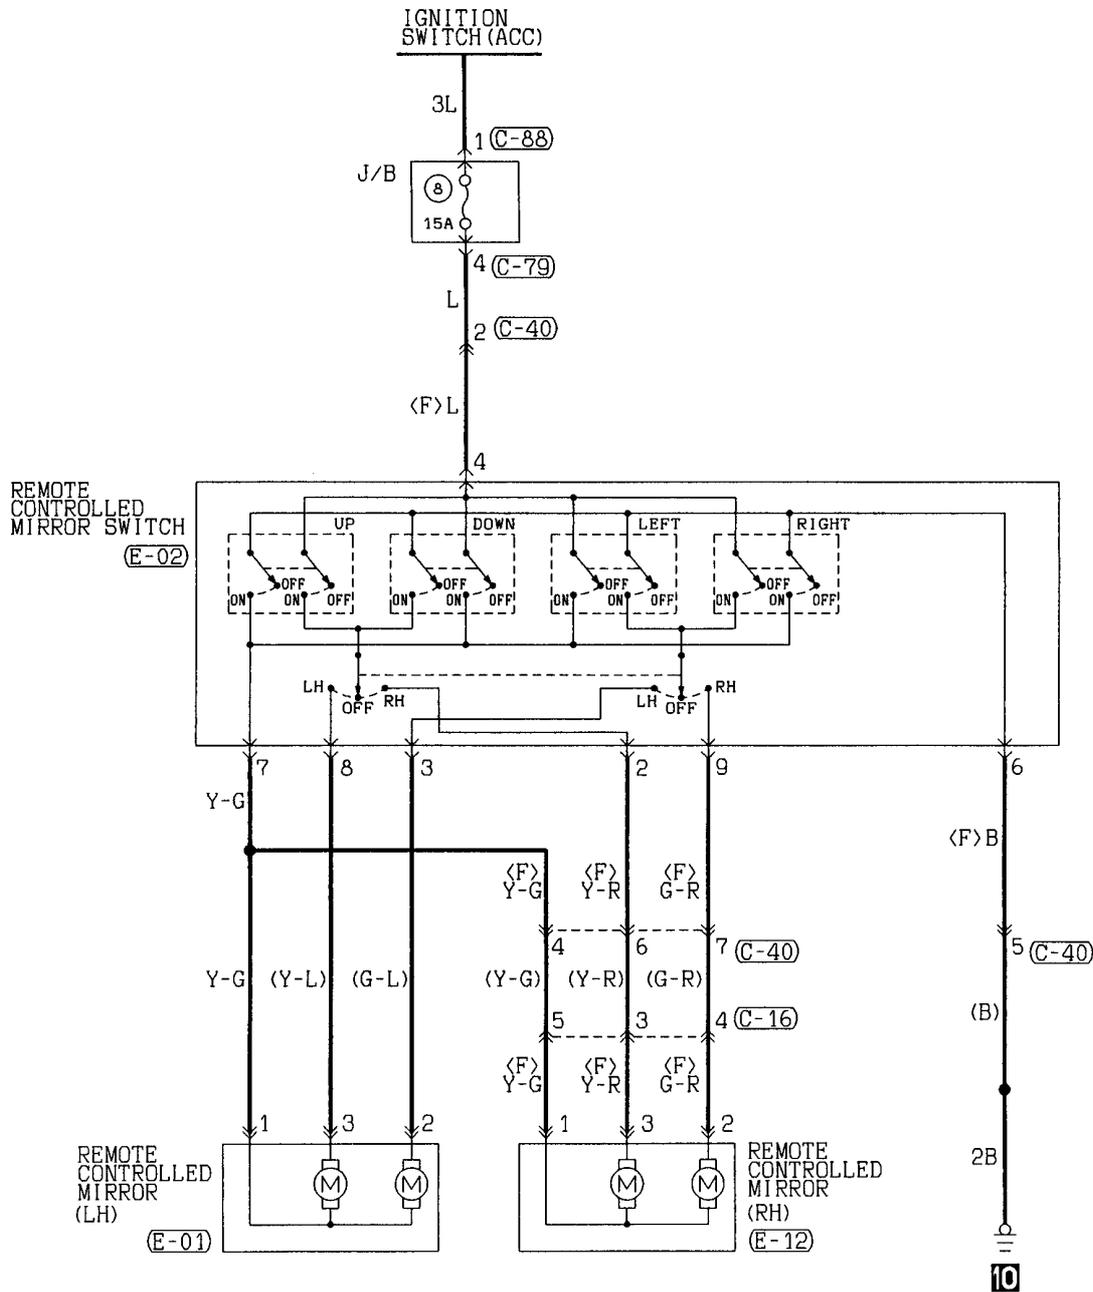


REMOTE CONTROLLED MIRROR

90100650437

L.H. drive vehicles <1998 Models>





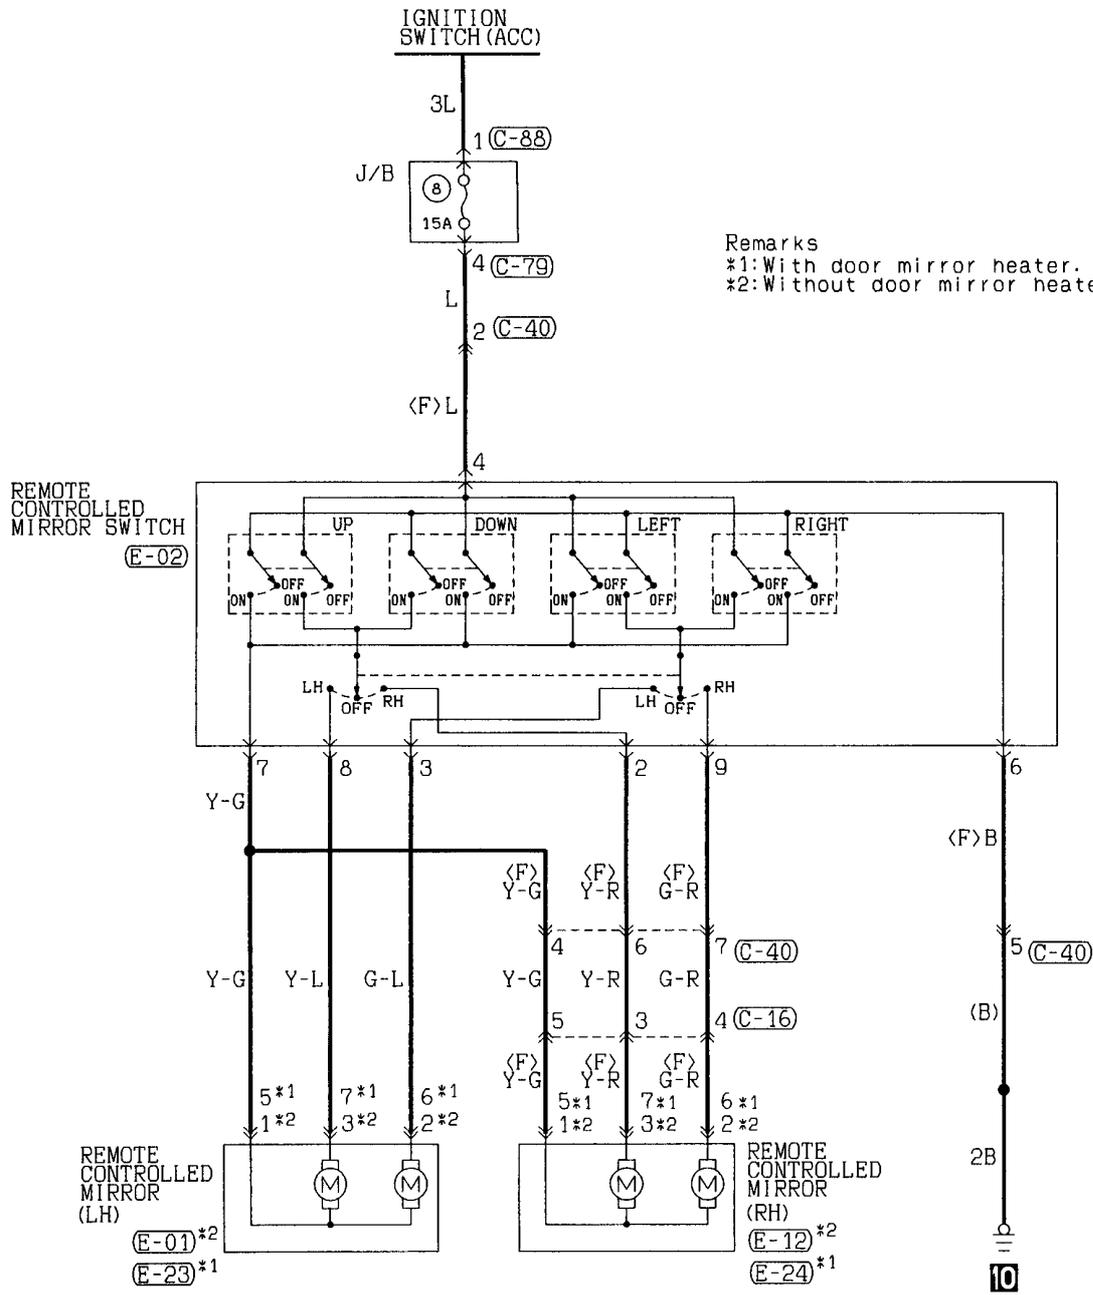


Remarks
 *1: With door mirror heater.
 *2: Without door mirror heater.

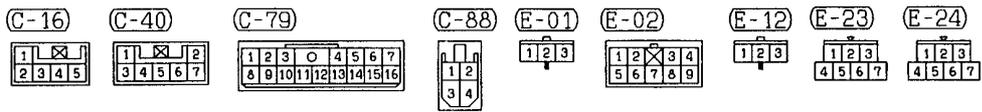

REMOTE CONTROLLED MIRROR


R.H. drive vehicles <1997 Models>

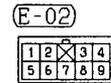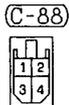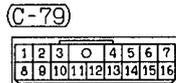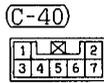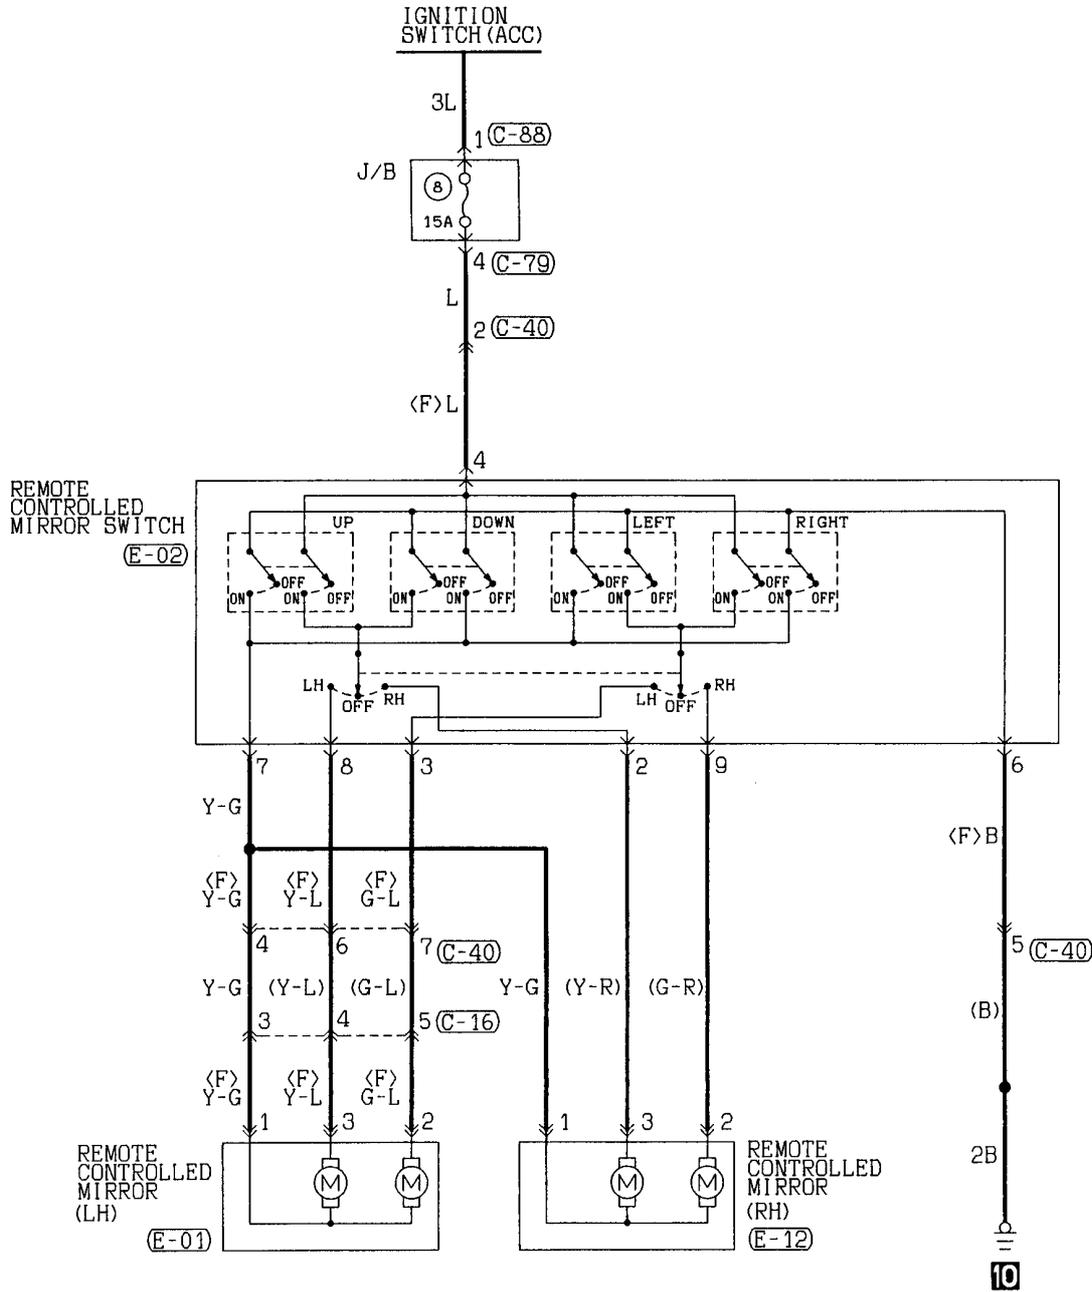

REMOTE CONTROLLED MIRROR

90100650444

R.H. drive vehicles <1998 Models>

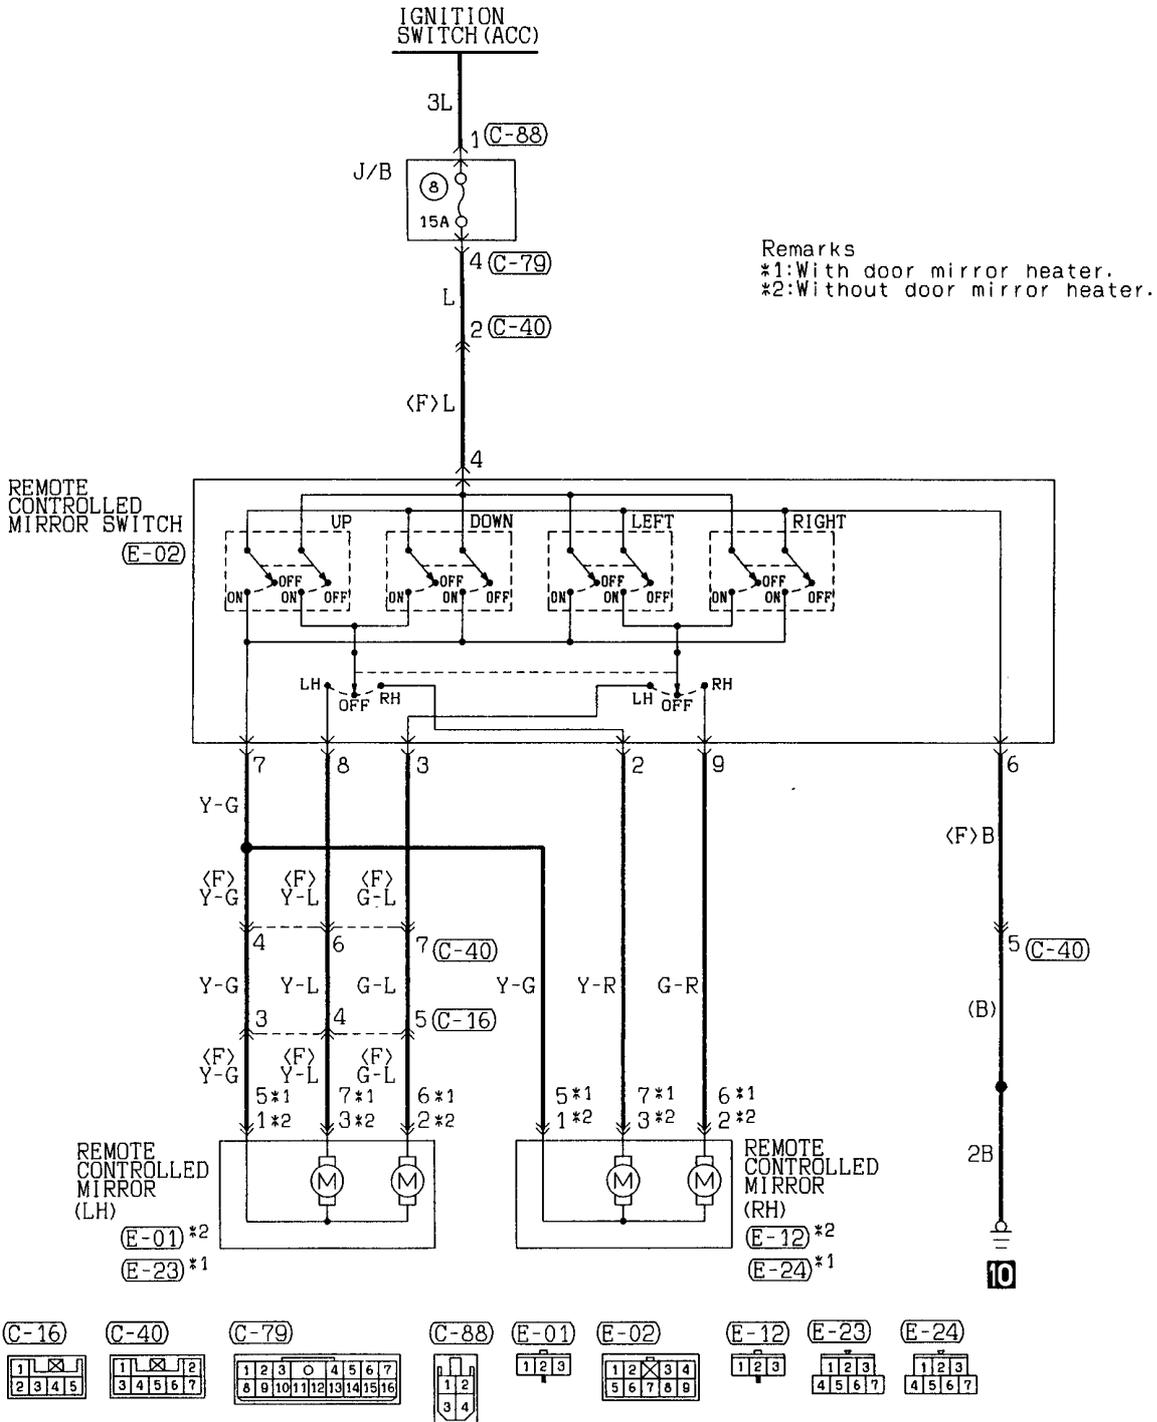

REMOTE CONTROLLED MIRROR (See P. 4-196, 197, 198, 199.)

90100650178

OPERATION

- When the remote controlled mirror switch is operated with the ignition switch in ACC or ON position, the motor is started allowing the driver to adjust the orientation of the mirror surface.

TROUBLESHOOTING HINTS



1. LH and RH mirrors do not move.
 - (1) Cigarette lighter is also inoperative.
 - Check multi-purpose fuse No. (8).
 - (2) Cigarette lighter is operative.
 - Check remote controlled mirror switch.

NOTES

RADIO AND TAPE PLAYER

90100720336


L.H. drive vehicles with single cab and club cab <1997 Models>

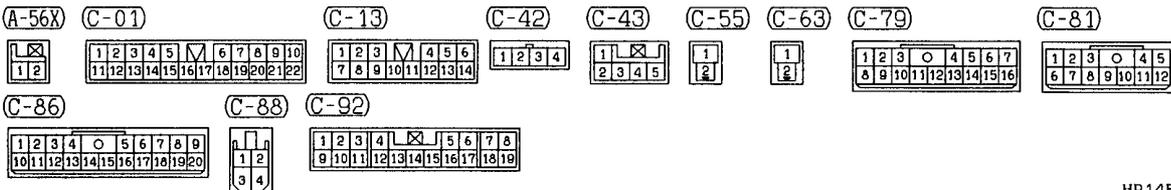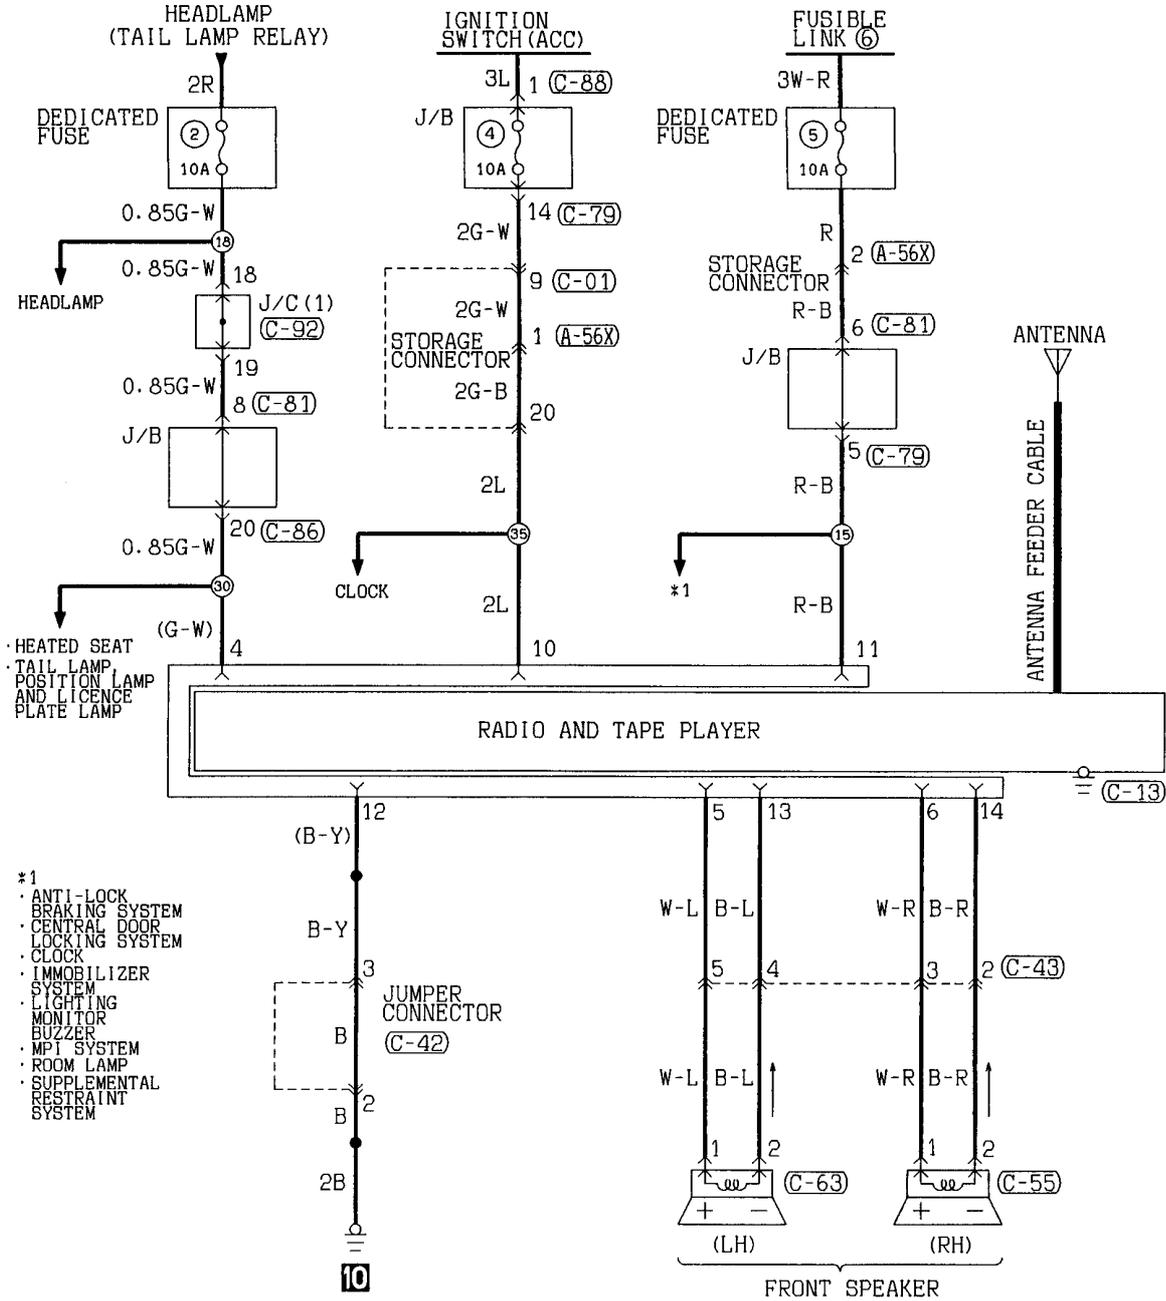

RADIO AND TAPE PLAYER

90100721016

L.H. drive vehicles with single cab and club cab <1998 Models>

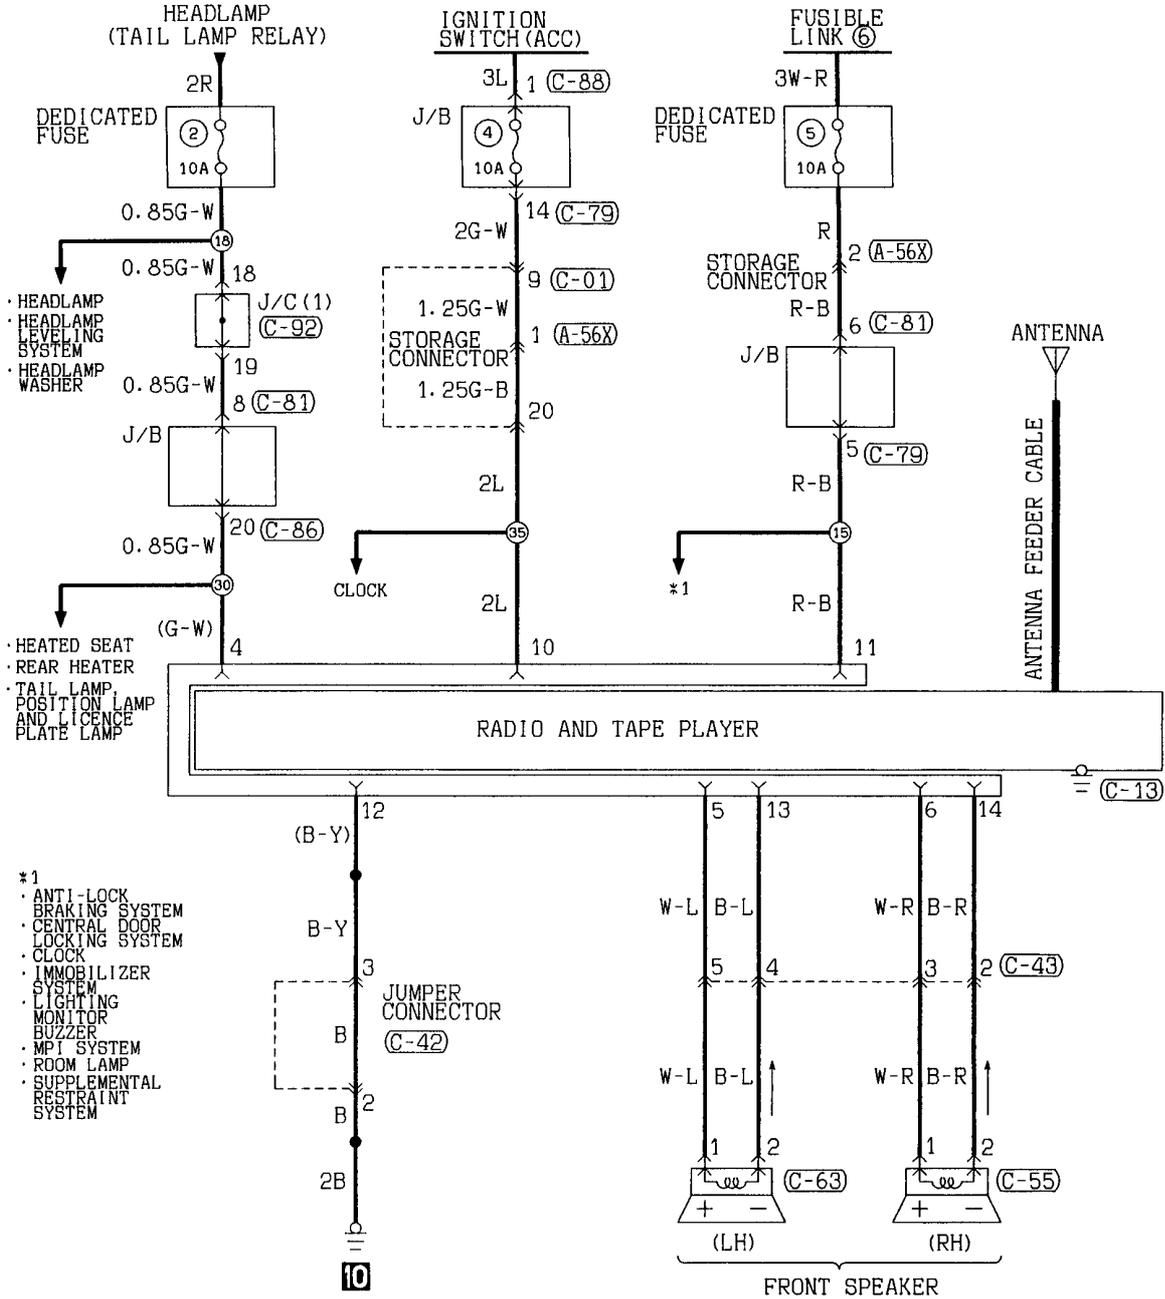


- *1
- ANTI-LOCK BRAKING SYSTEM
- CENTRAL DOOR LOCKING SYSTEM
- CLOCK
- IMMOBILIZER SYSTEM
- LIGHTING MONITOR BUZZER
- MPI SYSTEM
- ROOM LAMP
- SUPPLEMENTAL RESTRAINT SYSTEM

(A-56X)	(C-01)	(C-13)	(C-42)	(C-43)	(C-55)	(C-63)	(C-79)	(C-81)
(C-86)	(C-88)	(C-92)						


RADIO AND TAPE PLAYER


90100720343

L.H. drive vehicles with double cab <1997 Models>

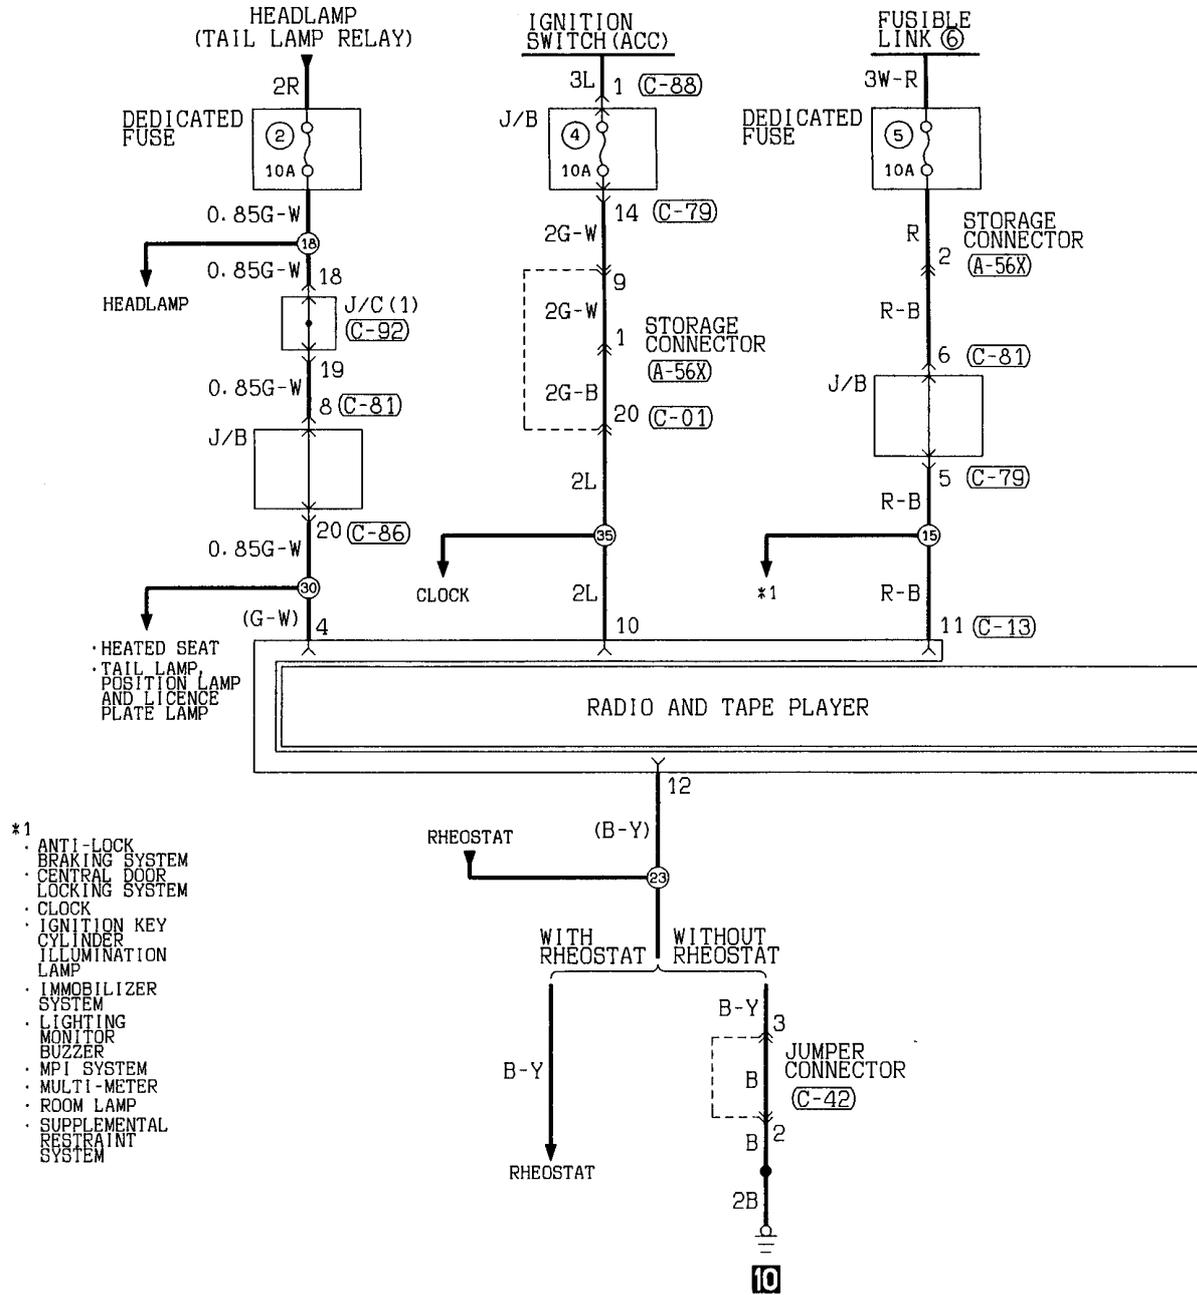

- *1
- ANTI-LOCK
- BRAKING SYSTEM
- CENTRAL DOOR
- LOCKING SYSTEM
- CLOCK
- IGNITION KEY
- CYLINDER
- ILLUMINATION
- LAMP
- IMMOBILIZER
- SYSTEM
- LIGHTING
- MONITOR
- BUZZER
- MPI SYSTEM
- MULTI-METER
- ROOM LAMP
- SUPPLEMENTAL
- RESTRAINT
- SYSTEM

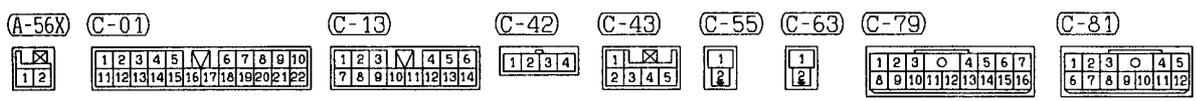


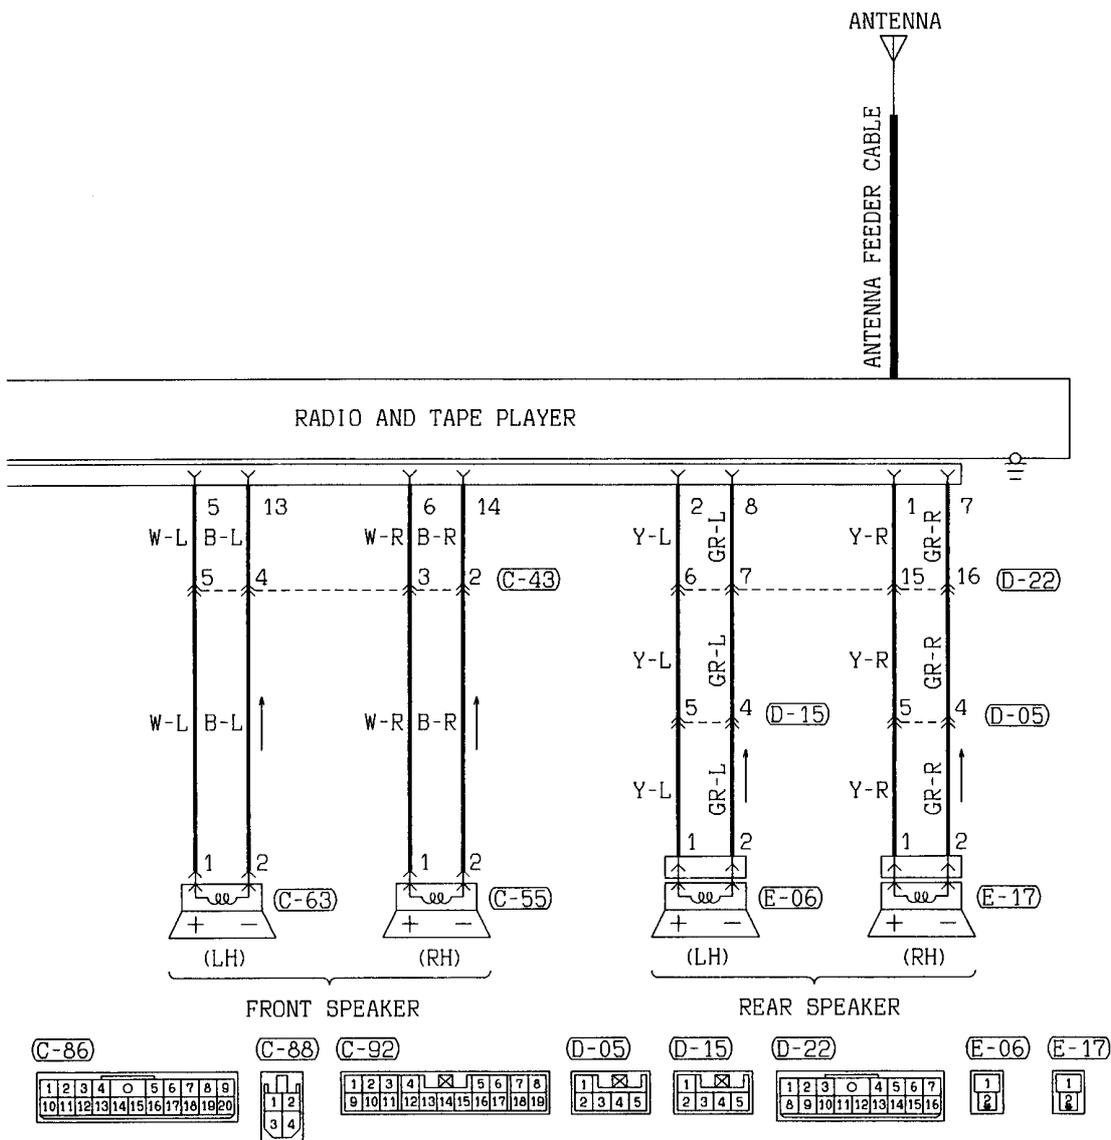


RADIO AND TAPE PLAYER


90100721023

L.H. drive vehicles with double cab <1998 Models>

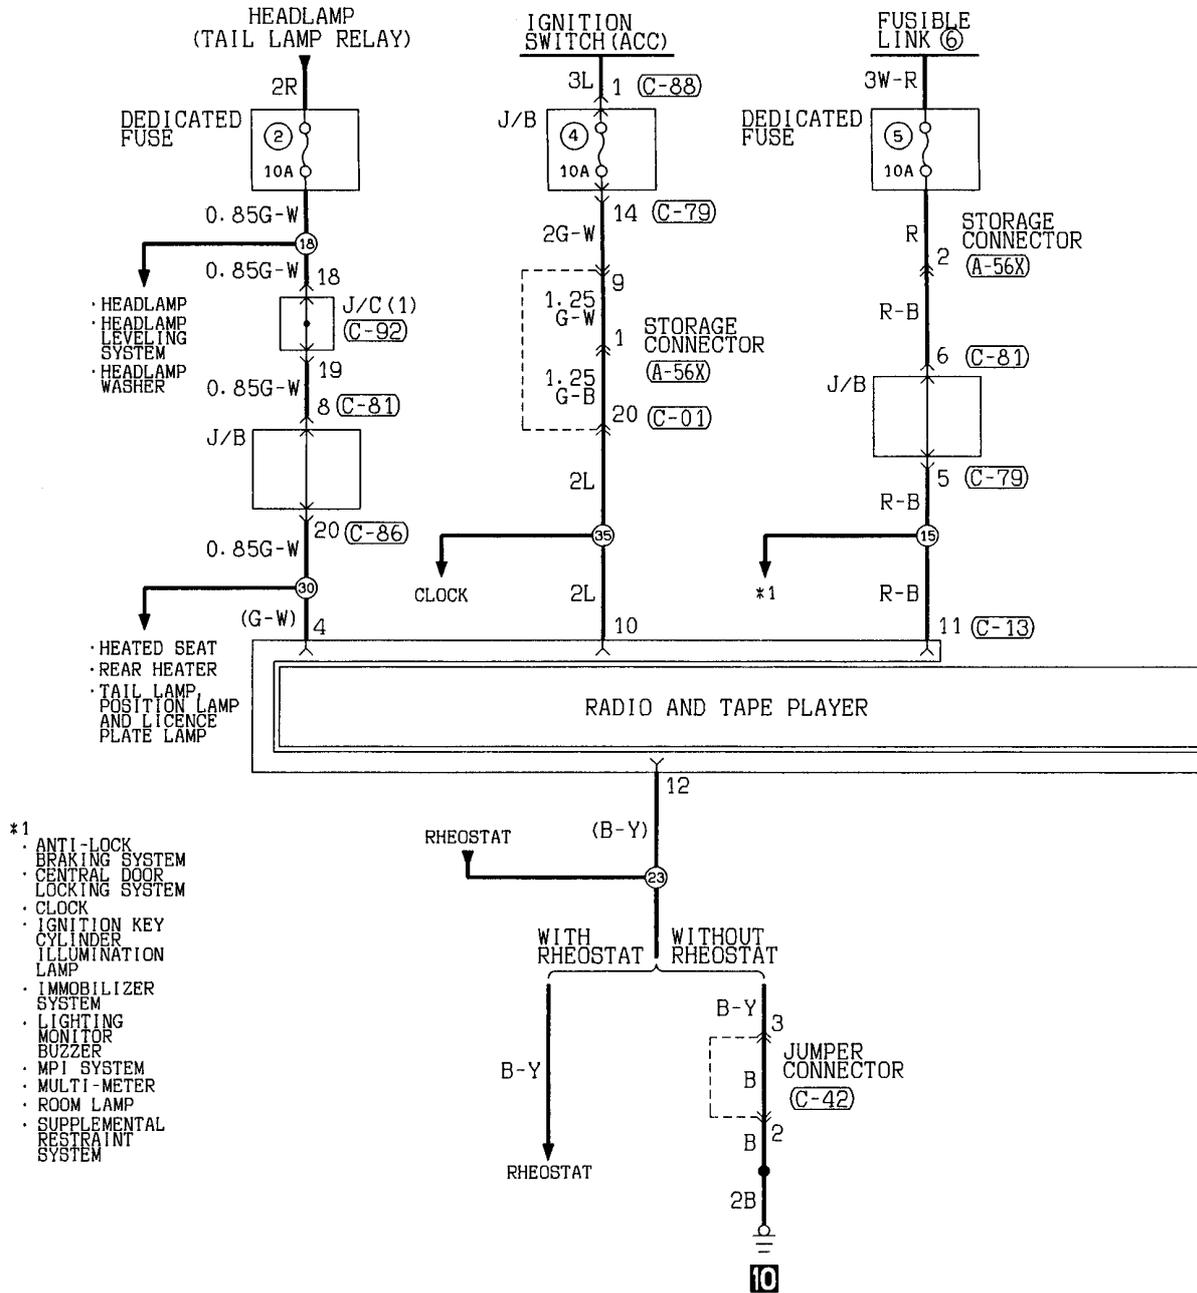


- *1
- ANTI-LOCK BRAKING SYSTEM
 - CENTRAL DOOR LOCKING SYSTEM
 - CLOCK
 - IGNITION KEY CYLINDER ILLUMINATION LAMP
 - IMMOBILIZER SYSTEM
 - LIGHTING MONITOR BUZZER
 - MPI SYSTEM
 - MULTI-METER
 - ROOM LAMP
 - SUPPLEMENTAL RESTRAINT SYSTEM

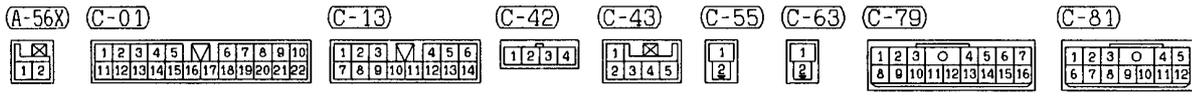

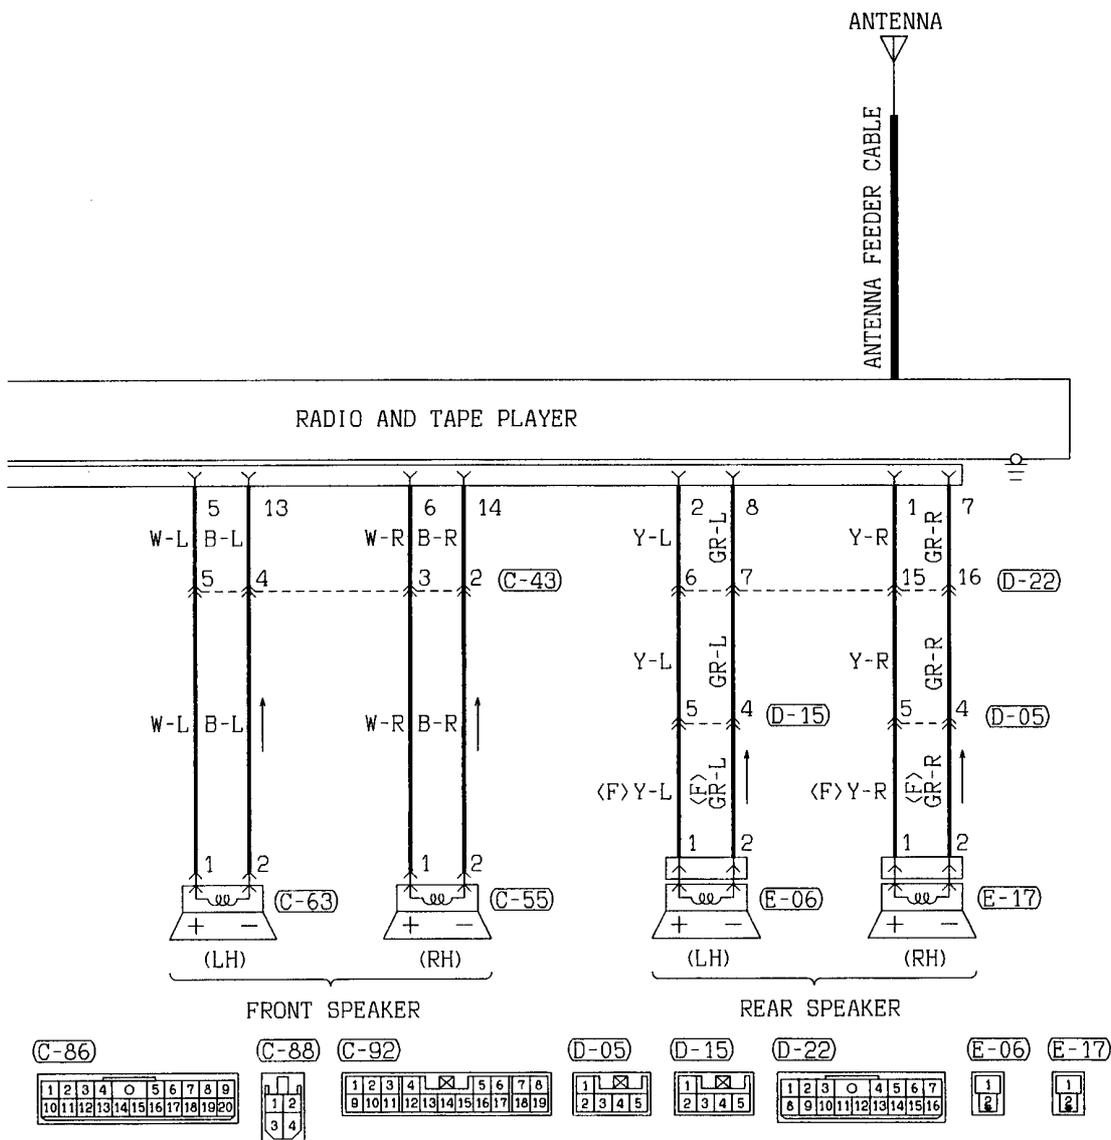

RADIO AND TAPE PLAYER

R.H. drive vehicles

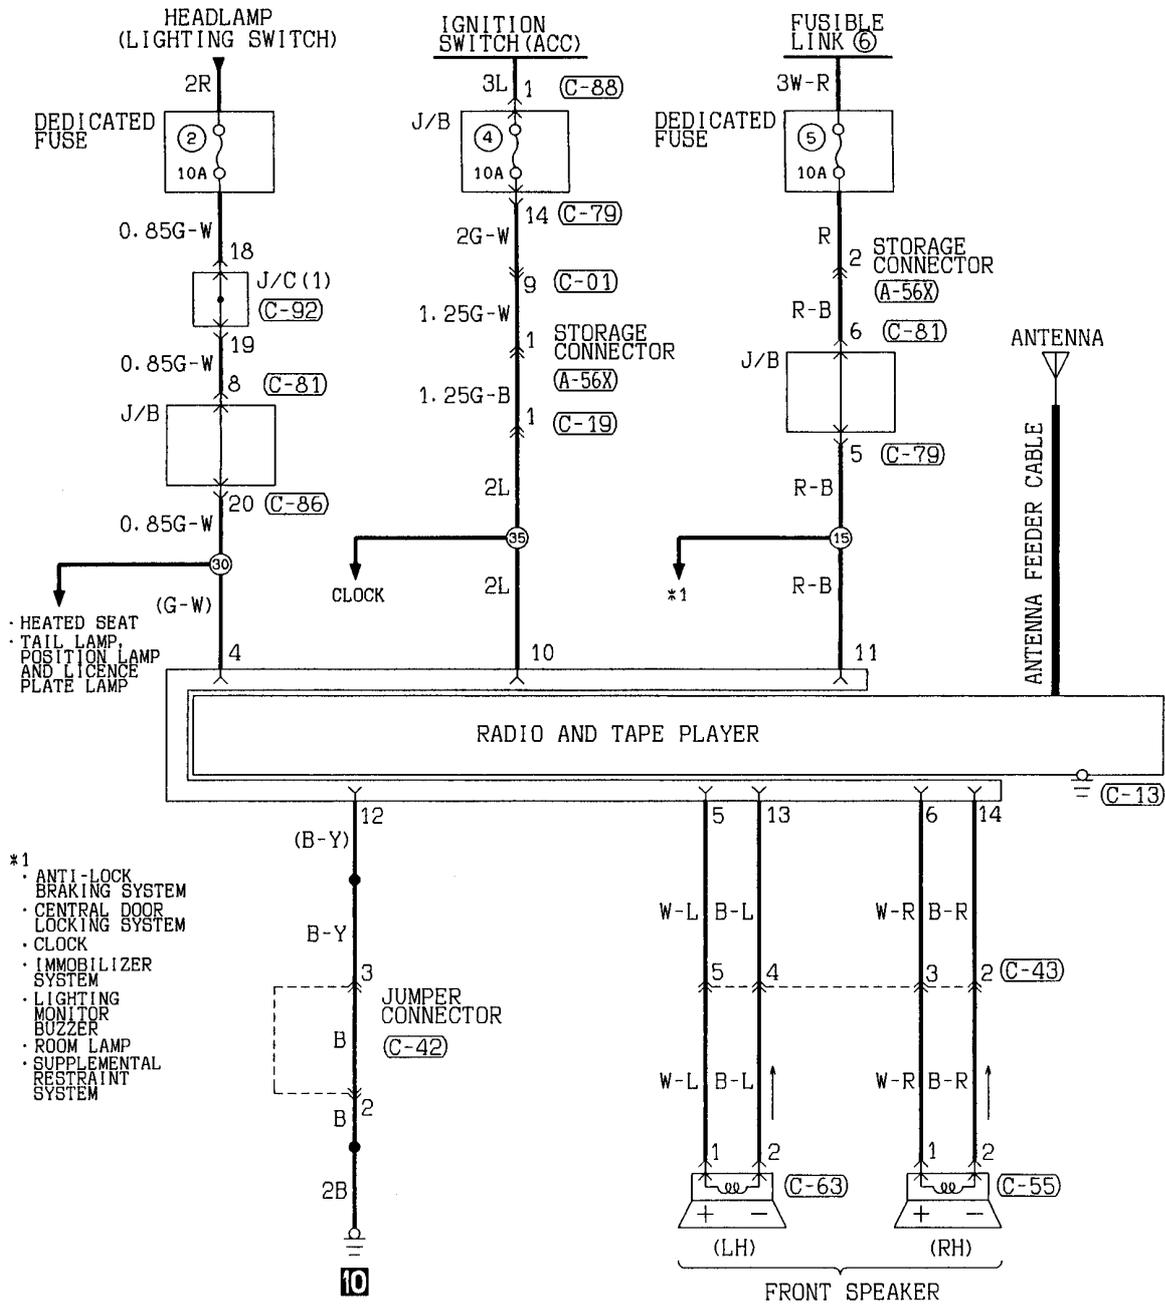


- *1
- ANTI-LOCK BRAKING SYSTEM
- CENTRAL DOOR LOCKING SYSTEM
- CLOCK
- IMMOBILIZER SYSTEM
- LIGHTING MONITOR BUZZER
- ROOM LAMP
- SUPPLEMENTAL RESTRAINT SYSTEM

(A-56X)	(C-01)	(C-13)	(C-19)	(C-42)	(C-43)	(C-55)	(C-63)	(C-79)
<input checked="" type="checkbox"/> 1 1 2	<input checked="" type="checkbox"/> 1 2 3 4 5 11 12 13 14 15 16 17 18 19 20 21 22	<input checked="" type="checkbox"/> 1 2 3 7 8 9 10 11 12 13 14	<input checked="" type="checkbox"/> 1 2 3 7 8 9 10 11 12 13 14	<input type="checkbox"/> 1 2 3 4	<input checked="" type="checkbox"/> 1 2 3 4 5	<input type="checkbox"/> 1 2	<input type="checkbox"/> 1 2	<input type="checkbox"/> 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
(C-81)	(C-86)	(C-88)	(C-92)					
<input type="checkbox"/> 1 2 3 4 5 6 7 8 9 10 11 12	<input type="checkbox"/> 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	<input type="checkbox"/> 1 3 4	<input checked="" type="checkbox"/> 1 2 3 4 9 10 11 12 13 14 15 16 17 18 19					



CLOCK

90100770133

L.H. drive vehicles

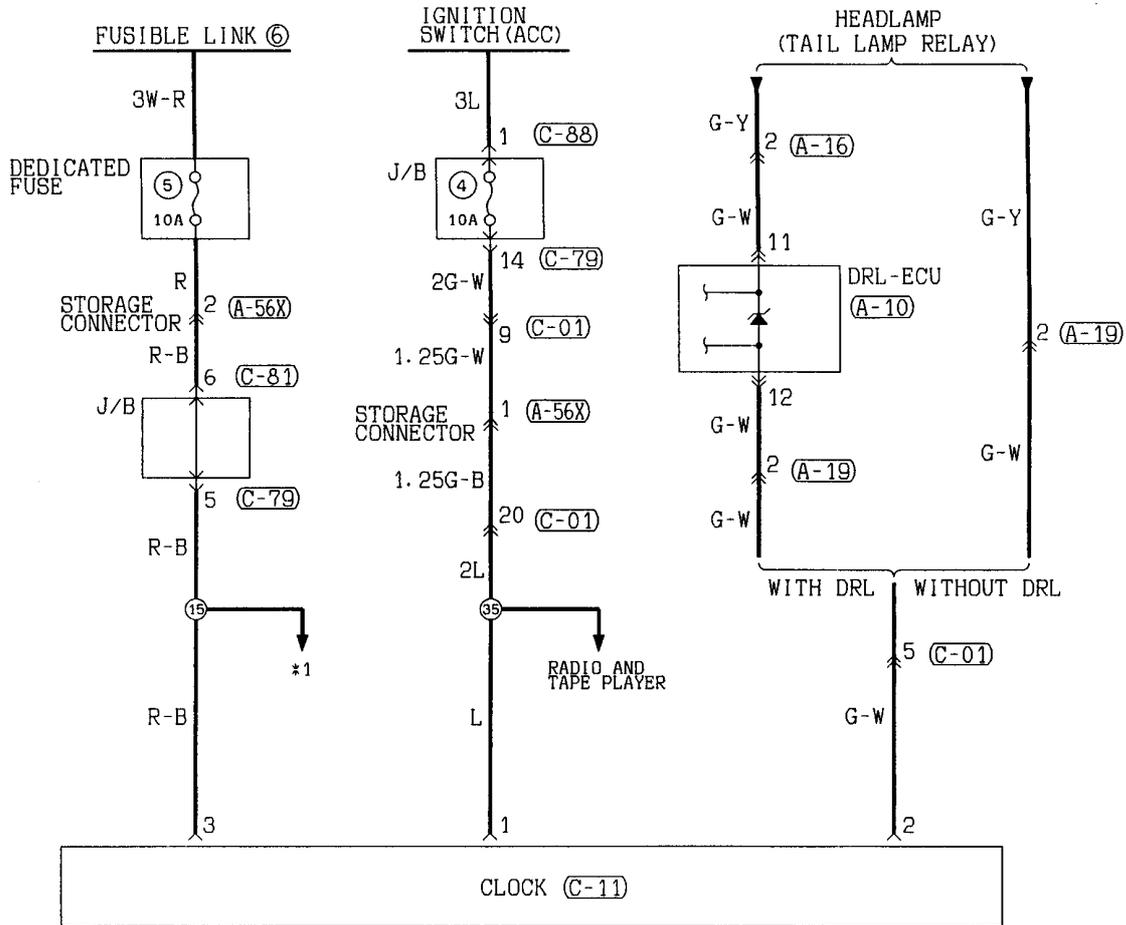


- *1
- ANTI-LOCK BRAKING SYSTEM
- CENTRAL DOOR LOCKING SYSTEM
- IGNITION KEY CYLINDER ILLUMINATION LAMP
- IMMOBILIZER SYSTEM
- LIGHTING MONITOR BUZZER
- MPI SYSTEM
- MULTI-METER
- RADIO AND TAPE PLAYER
- ROOM LAMP
- SUPPLEMENTAL RESTRAINT SYSTEM

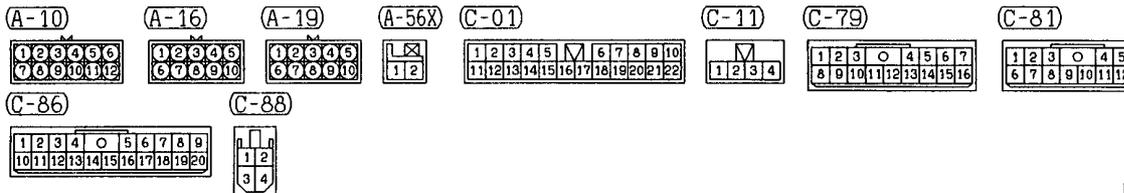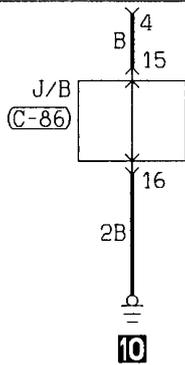



CLOCK

90100770140

R.H. drive vehicles

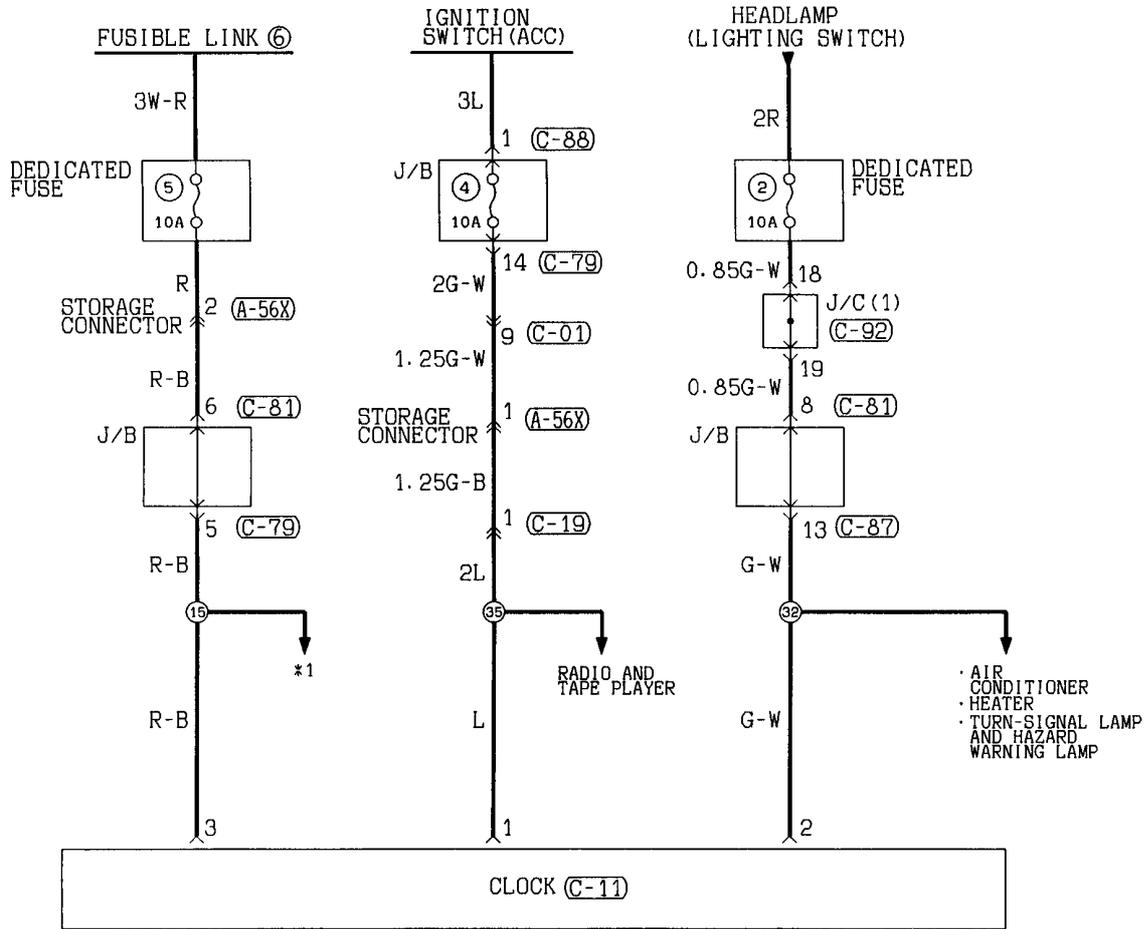


- *1
- ANTI-LOCK BRAKING SYSTEM
 - CENTRAL DOOR LOCKING SYSTEM
 - CLOCK
 - IMMOBILIZER SYSTEM
 - LIGHTING MONITOR BUZZER
 - RADIO AND TAPE PLAYER
 - ROOM LAMP
 - SUPPLEMENTAL RESTRAINT SYSTEM

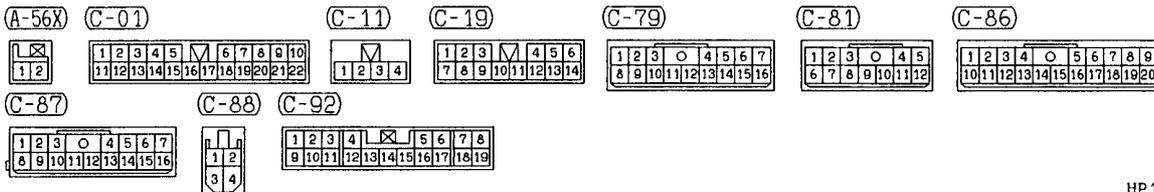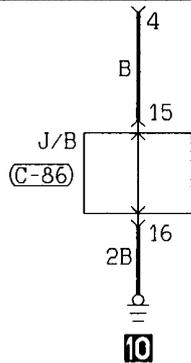

CIGARETTE LIGHTER

90100780150

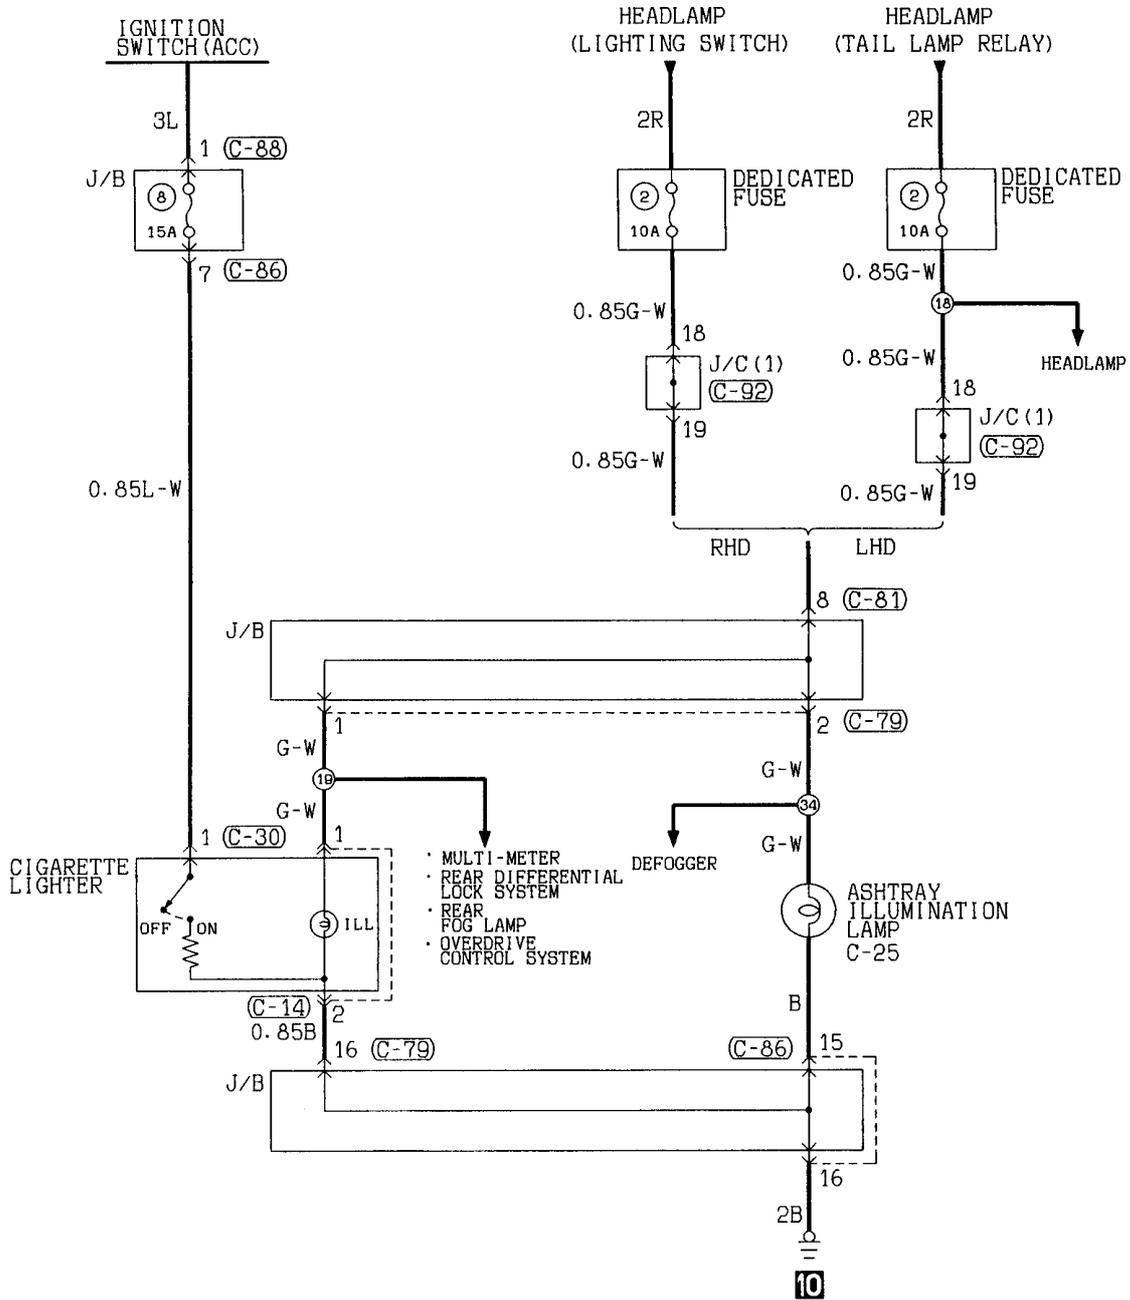

(C-14) (C-30) (C-79)

1	2
---	---

1

1	2	3	0	4	5	6	7	
8	9	10	11	12	13	14	15	16

(C-81)

1	2	3	0	4	5	
6	7	8	9	10	11	12

(C-86)

1	2	3	4	0	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

(C-88)

1	1	0
1	2	
3	4	


(C-92)

1	2	3	4	0	5	6	7	8		
9	10	11	12	13	14	15	16	17	18	19


ANTI-LOCK BRAKING SYSTEM (ABS)

90100840322

2WD

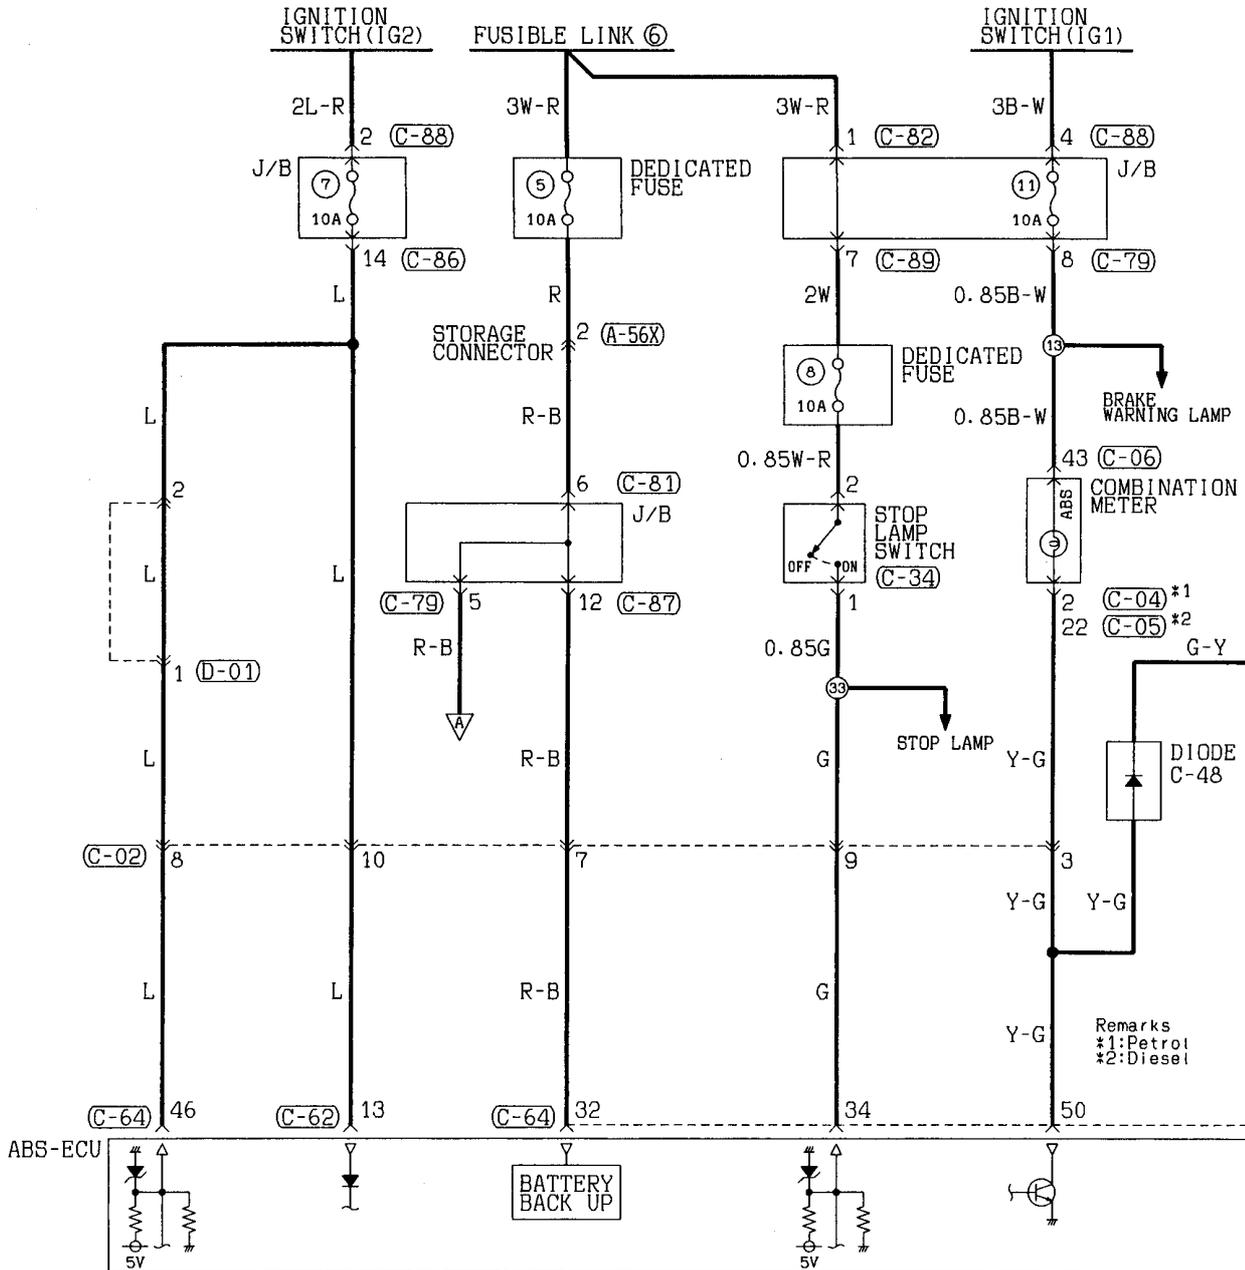

A-08	A-09	A-38	A-39	A-56X	C-02	C-04	C-05
1 2	1 2 3 4 5 6 7 8 9 10	1 2 3 4 5	1 2 3 4 5 6	L X 1 2	1 2 3 4 L X J 5 6 7 8 9 10 11 12 13 14 15 16 17	1 2 3 4 5 6 X 7 8 9 10 11 12 13 14	1 2 22 23 24 25 26 X 27 28 29 30
C-82	C-86	C-87	C-88	C-89	C-92	D-01	
1 1 7	1 2 3 4 O 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	1 2 3 O 4 5 6 7 8 9 10 11 12 13 14 15 16	1 1 1 2 3 4	1 2 3 4 5 6 7 8	1 2 3 4 L X J 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	1 O 2 3 4 5 6	

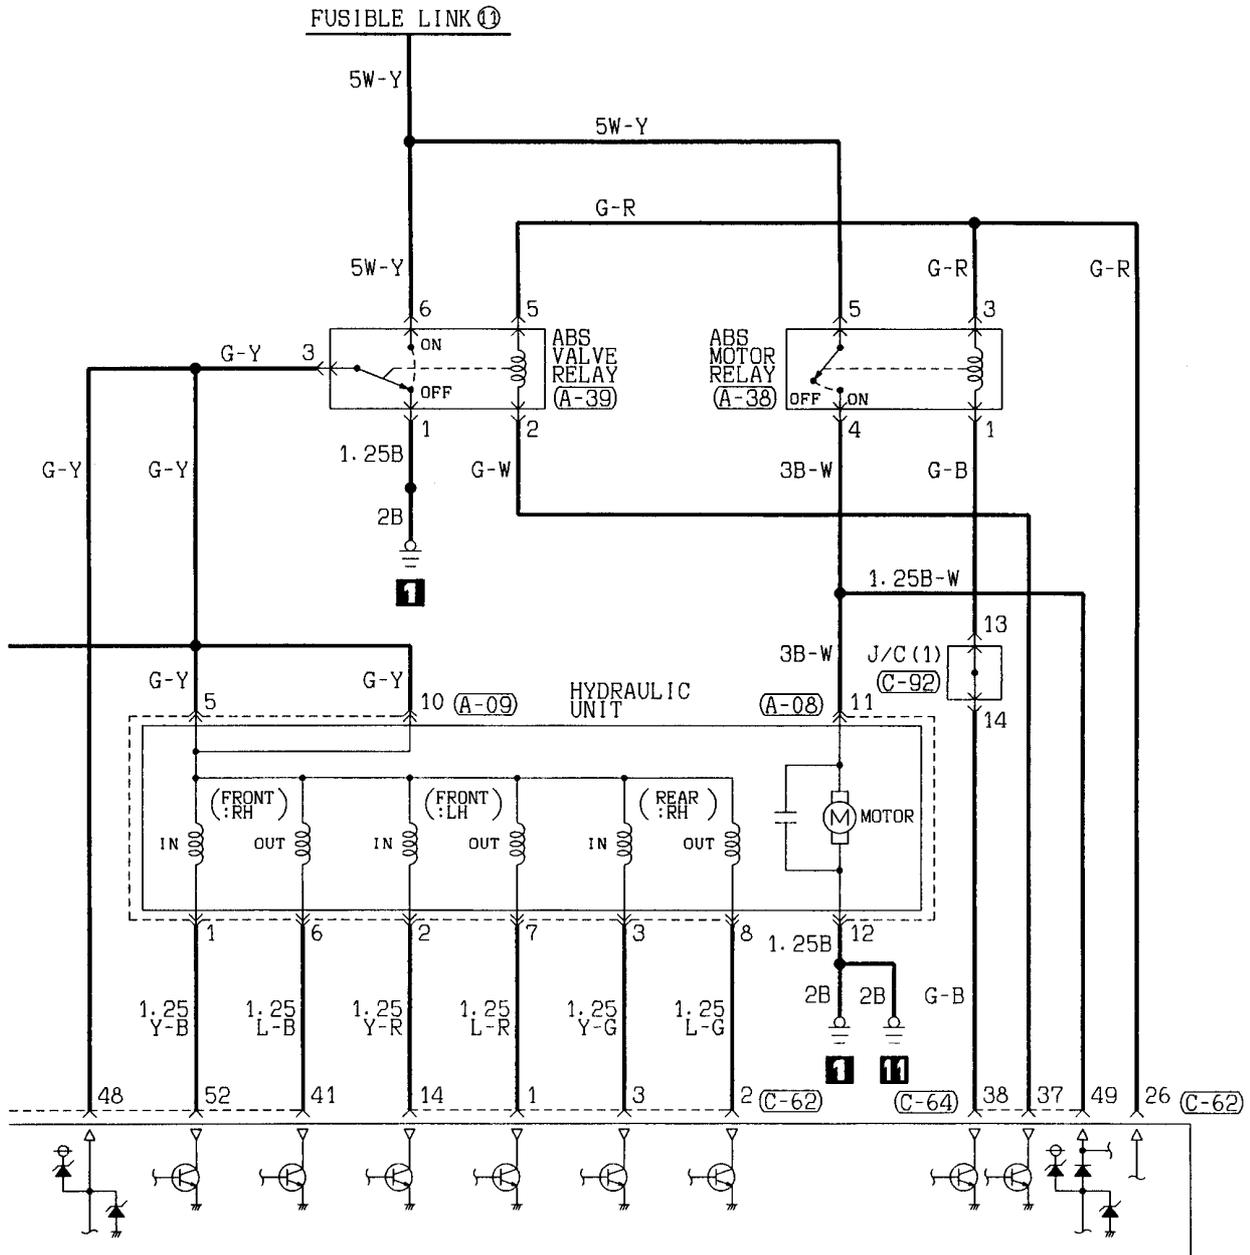

(C-06)

1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----

(C-34)

1	2
---	---

(C-62)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-64)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52


(C-79)

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16


(C-81)

1	2	3	4	5		
6	7	8	9	10	11	12

ANTI-LOCK BRAKING SYSTEM <2WD> (CONTINUED)

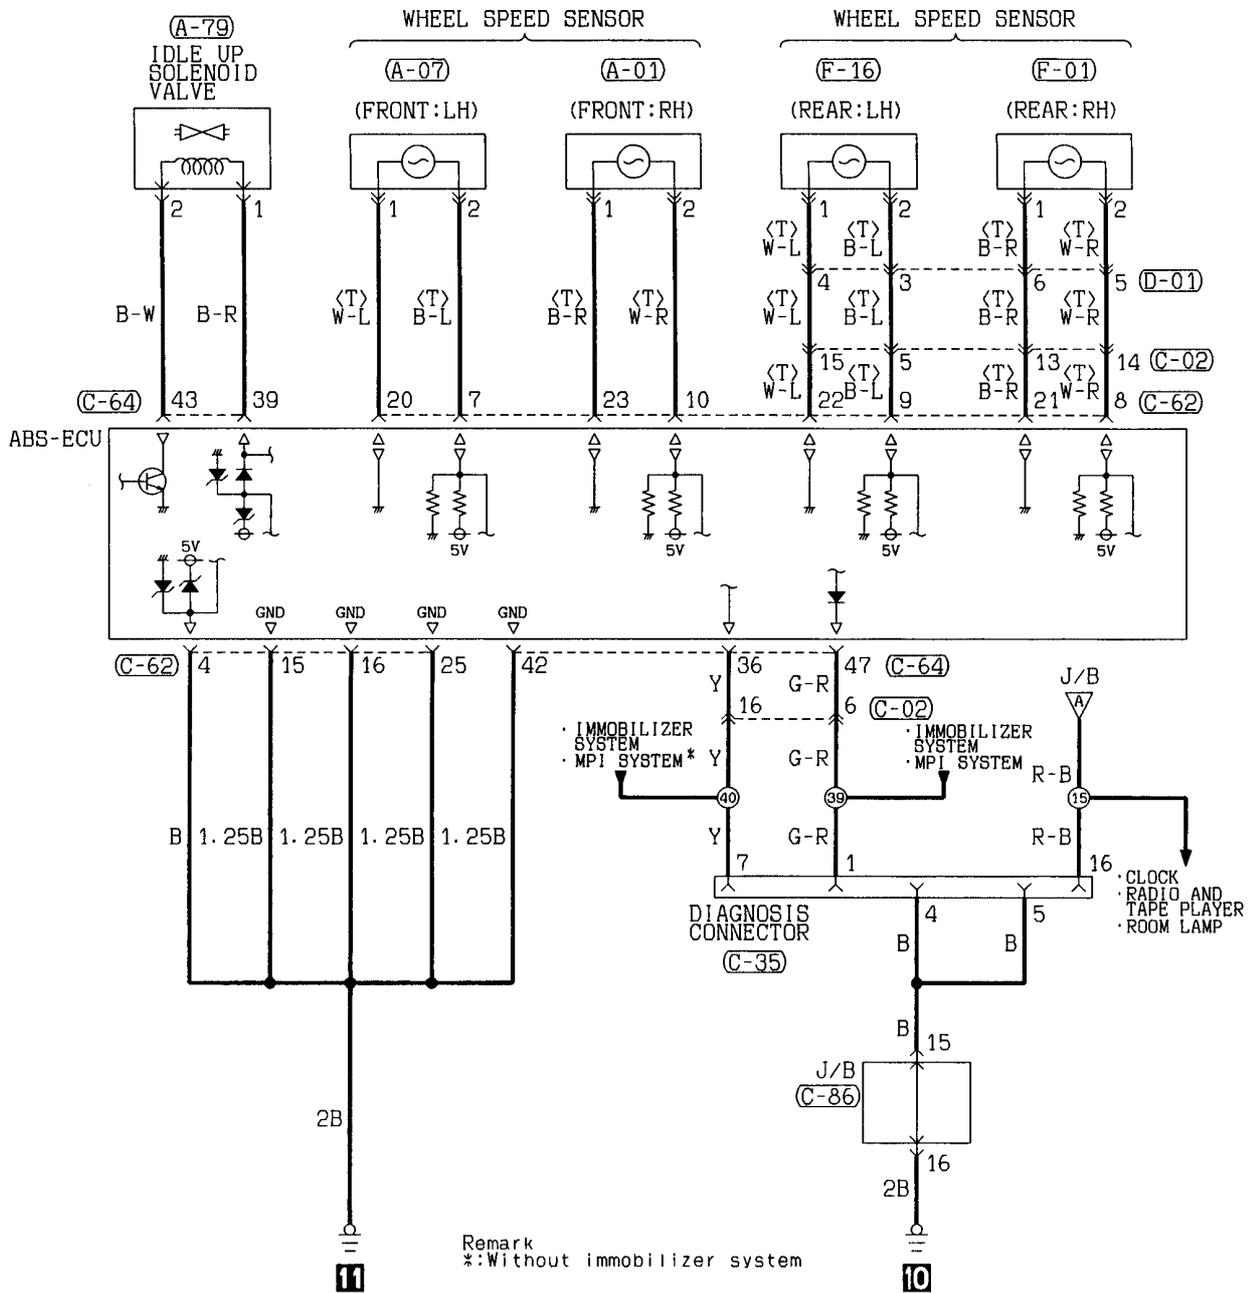

Remark
*: Without immobilizer system

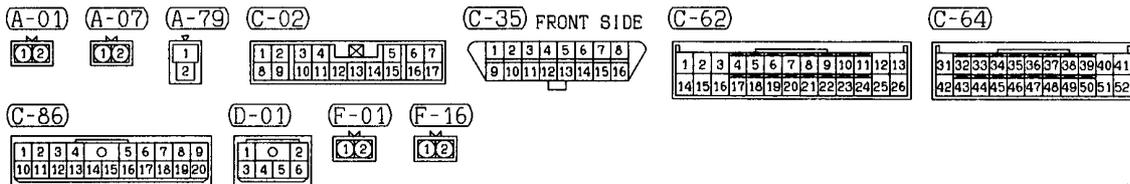


ANTI-LOCK BRAKING SYSTEM (ABS)

90100840339

4WD

<Vehicles with rear differential lock system> <Vehicles without rear differential lock system>

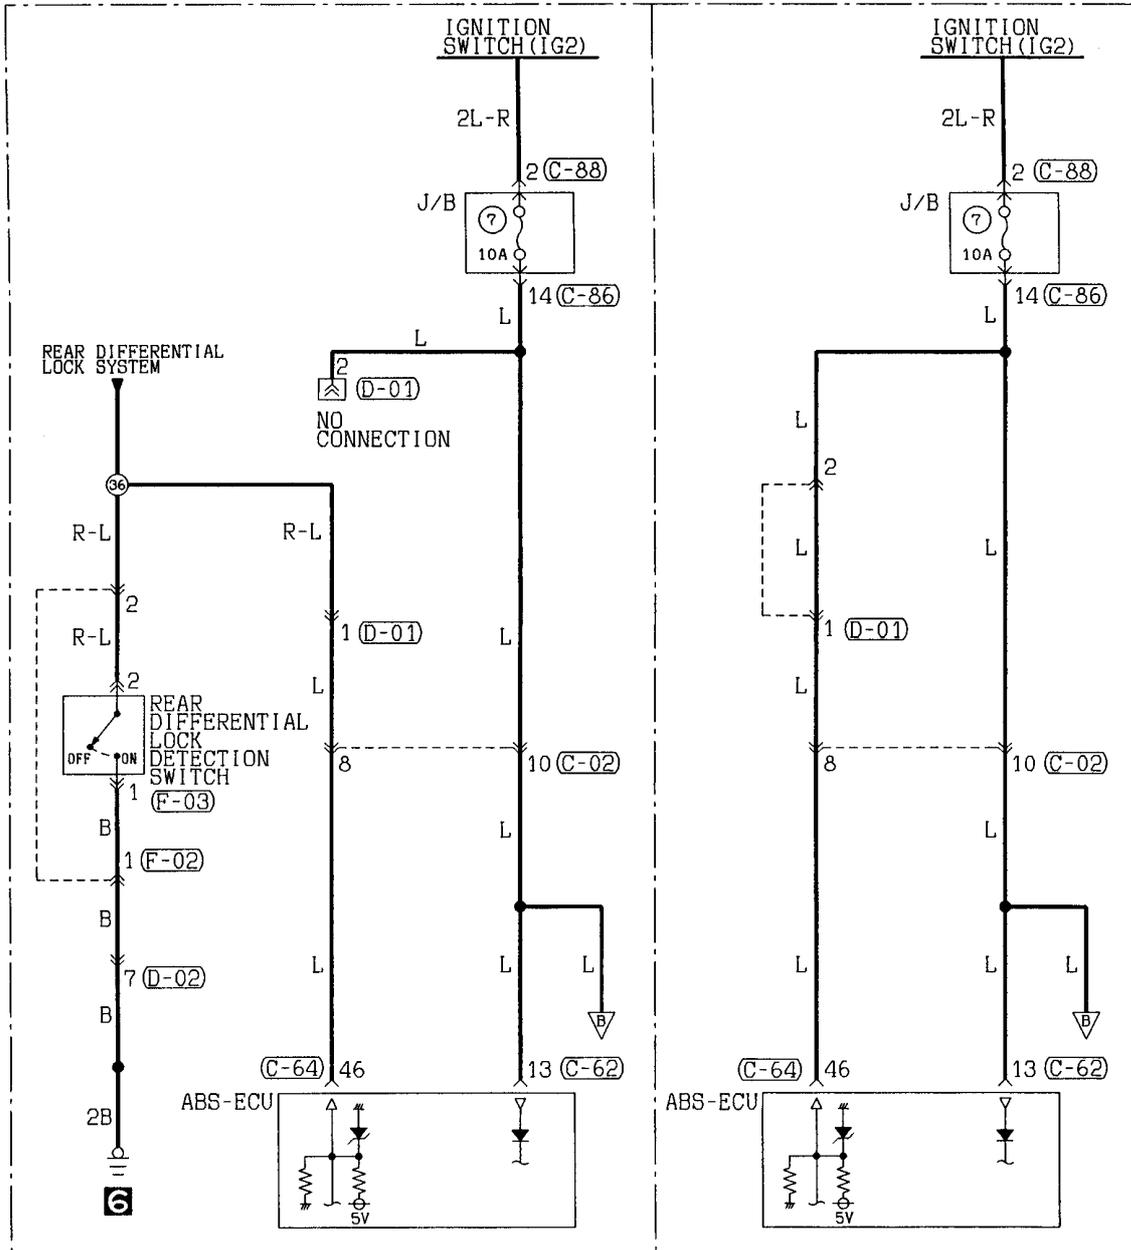

C-02

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17				

C-62

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

C-64

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52

C-86

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

C-88

1	2
3	4

D-01

1	2
3	4
5	6

D-02

1	2	3	4	5	6
7	8	9	10	11	12
13	14				


F-02

1	2
---	---


F-03

1	2
---	---

ANTI-LOCK BRAKING SYSTEM <4WD> (CONTINUED)

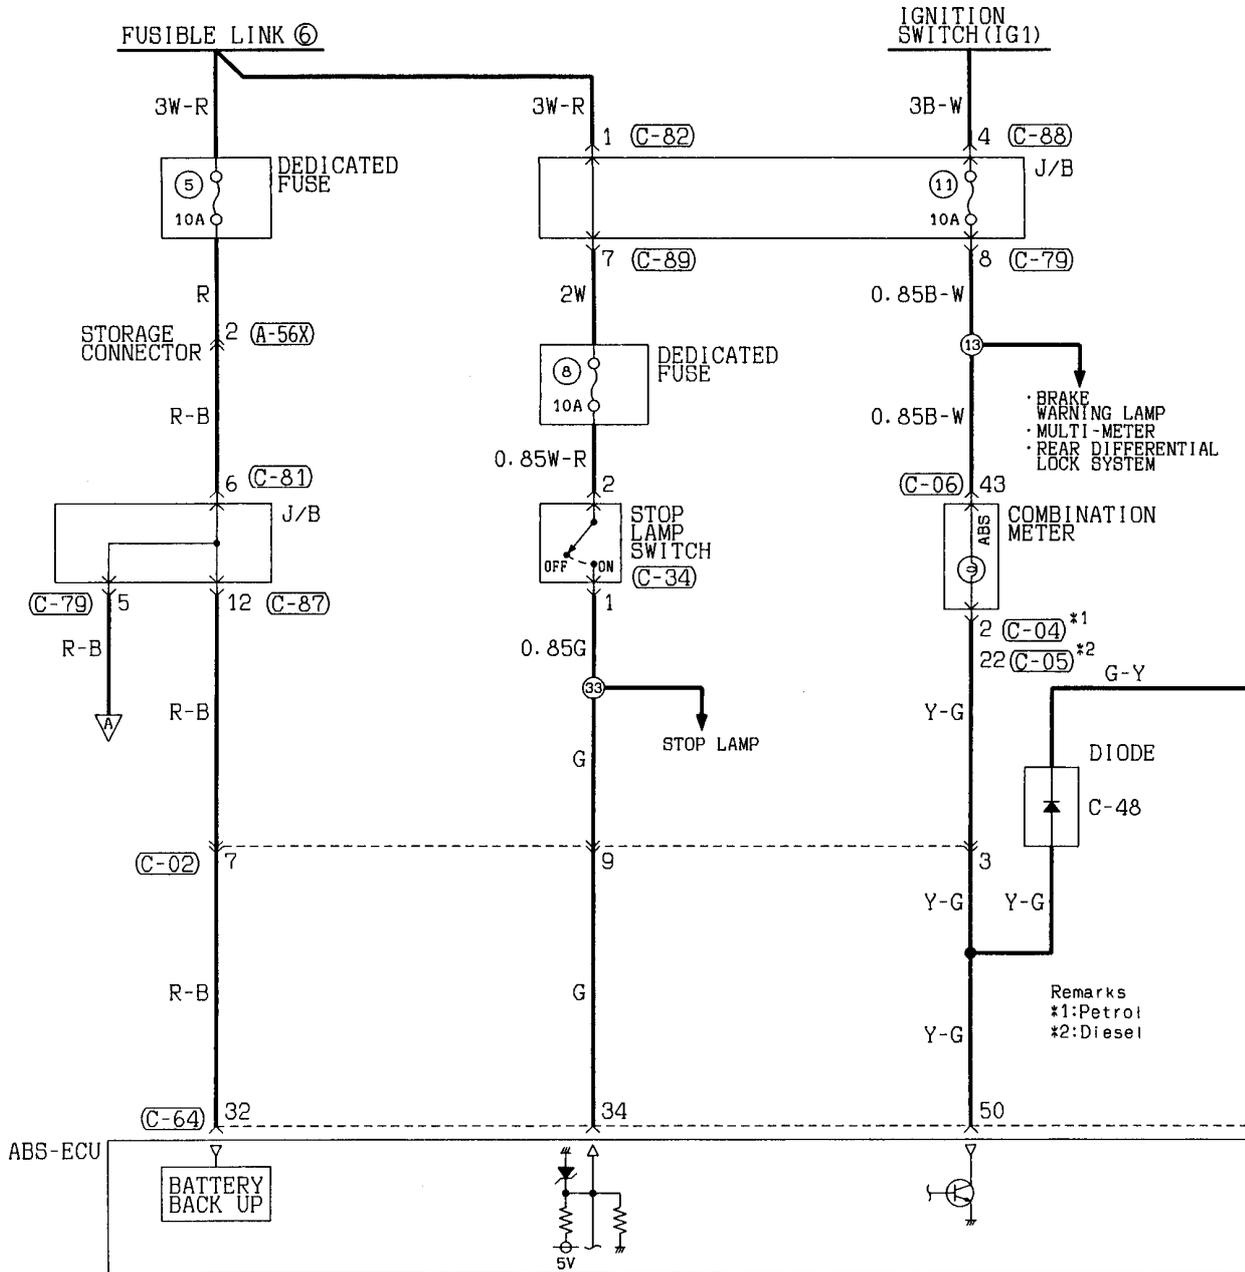

(A-08)	(A-09)	(A-38)	(A-39)	(A-56X)	(C-02)	(C-04)	(C-05)
1 2	1 2 3 4 5 6 7 8 9 10	1 2 3 4 5	1 2 3 4 5 6	1 2	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	1 2 3 4 5 6 7 8 9 10 11 12 13 14	1 2 2 2 3 2 4 2 5 2 6 2 7 2 8 2 9 3 0
(C-82)	(C-87)	(C-88)	(C-89)	(C-92)			
1 2	1 2 3 0 4 5 6 7 8 9 10 11 12 13 14 15 16	1 2 3 4	1 2 3 4 5 6 7 8	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19			

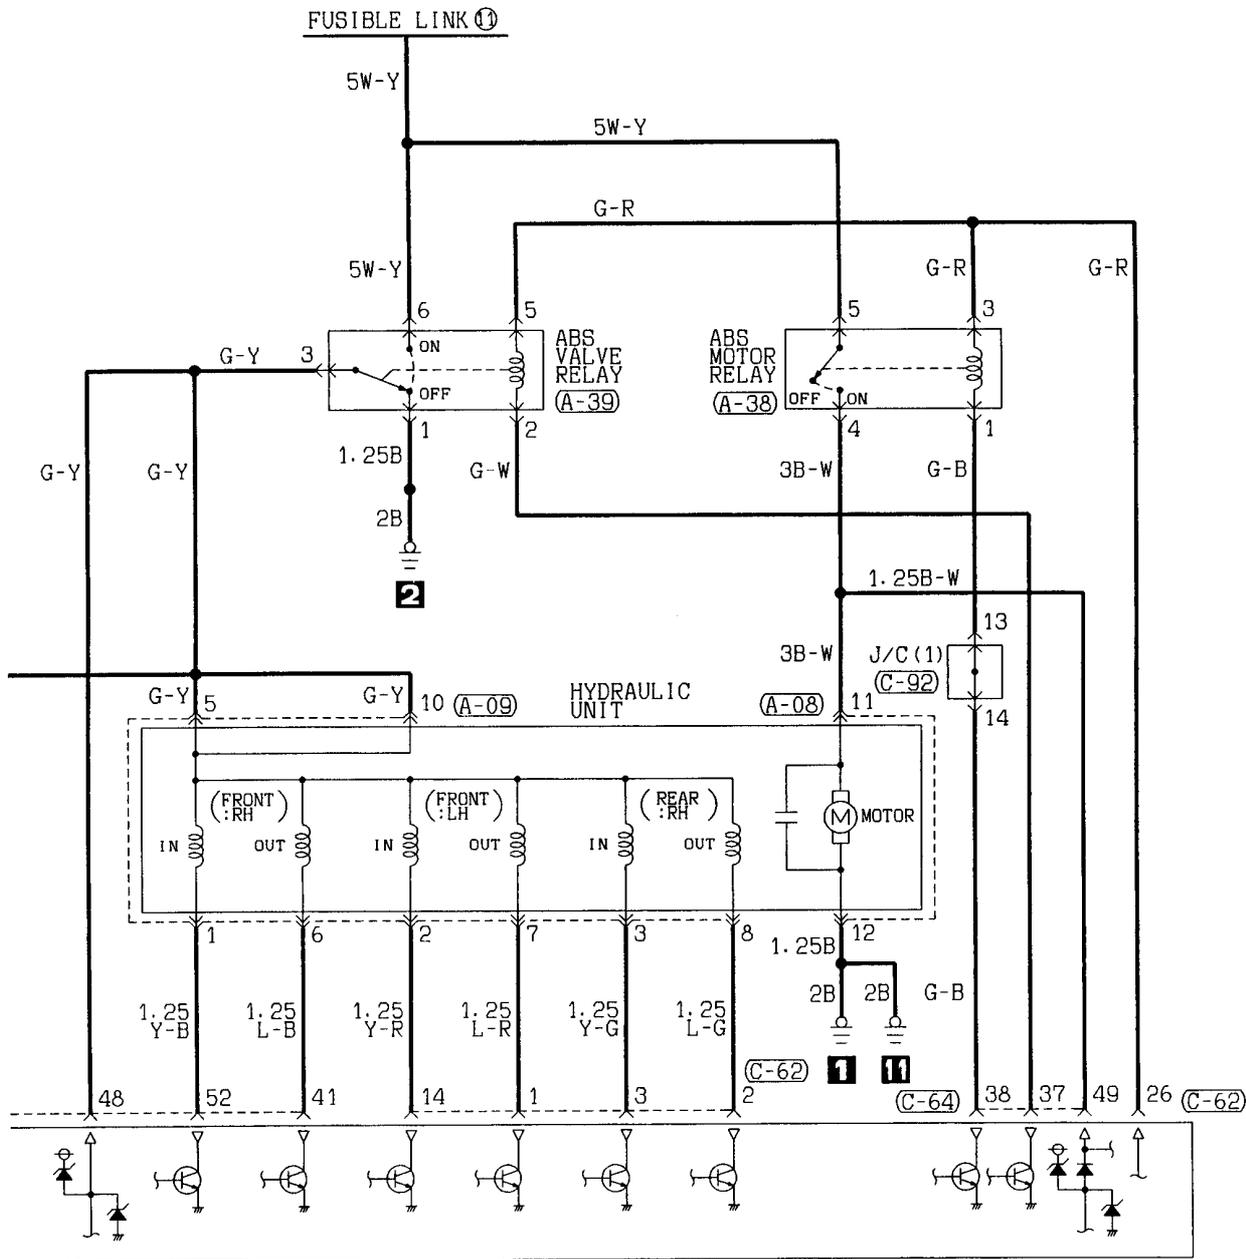

(C-06)

31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----

(C-34)

1
2

(C-62)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-64)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52



(C-79)


1	2	3	0	4	5	6	7	
8	9	10	11	12	13	14	15	16

(C-81)

1	2	3	0	4	5	
6	7	8	9	10	11	12

ANTI-LOCK BRAKING SYSTEM <4WD> (CONTINUED)

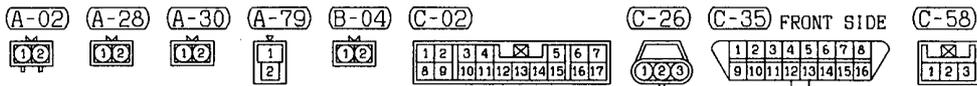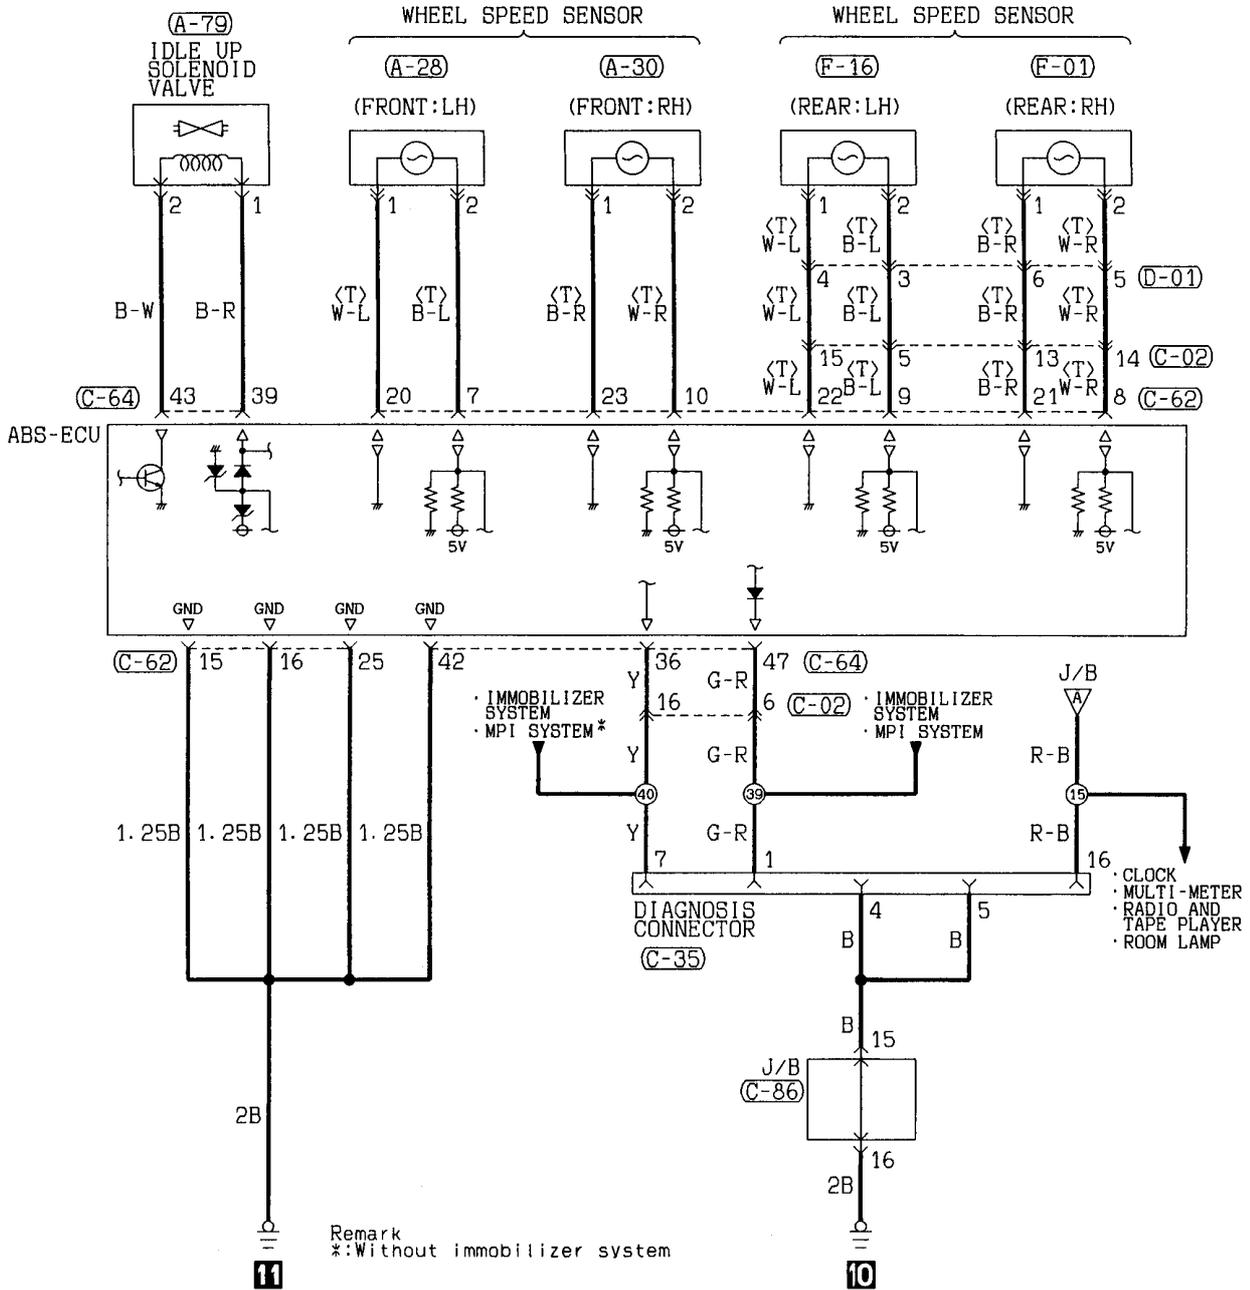

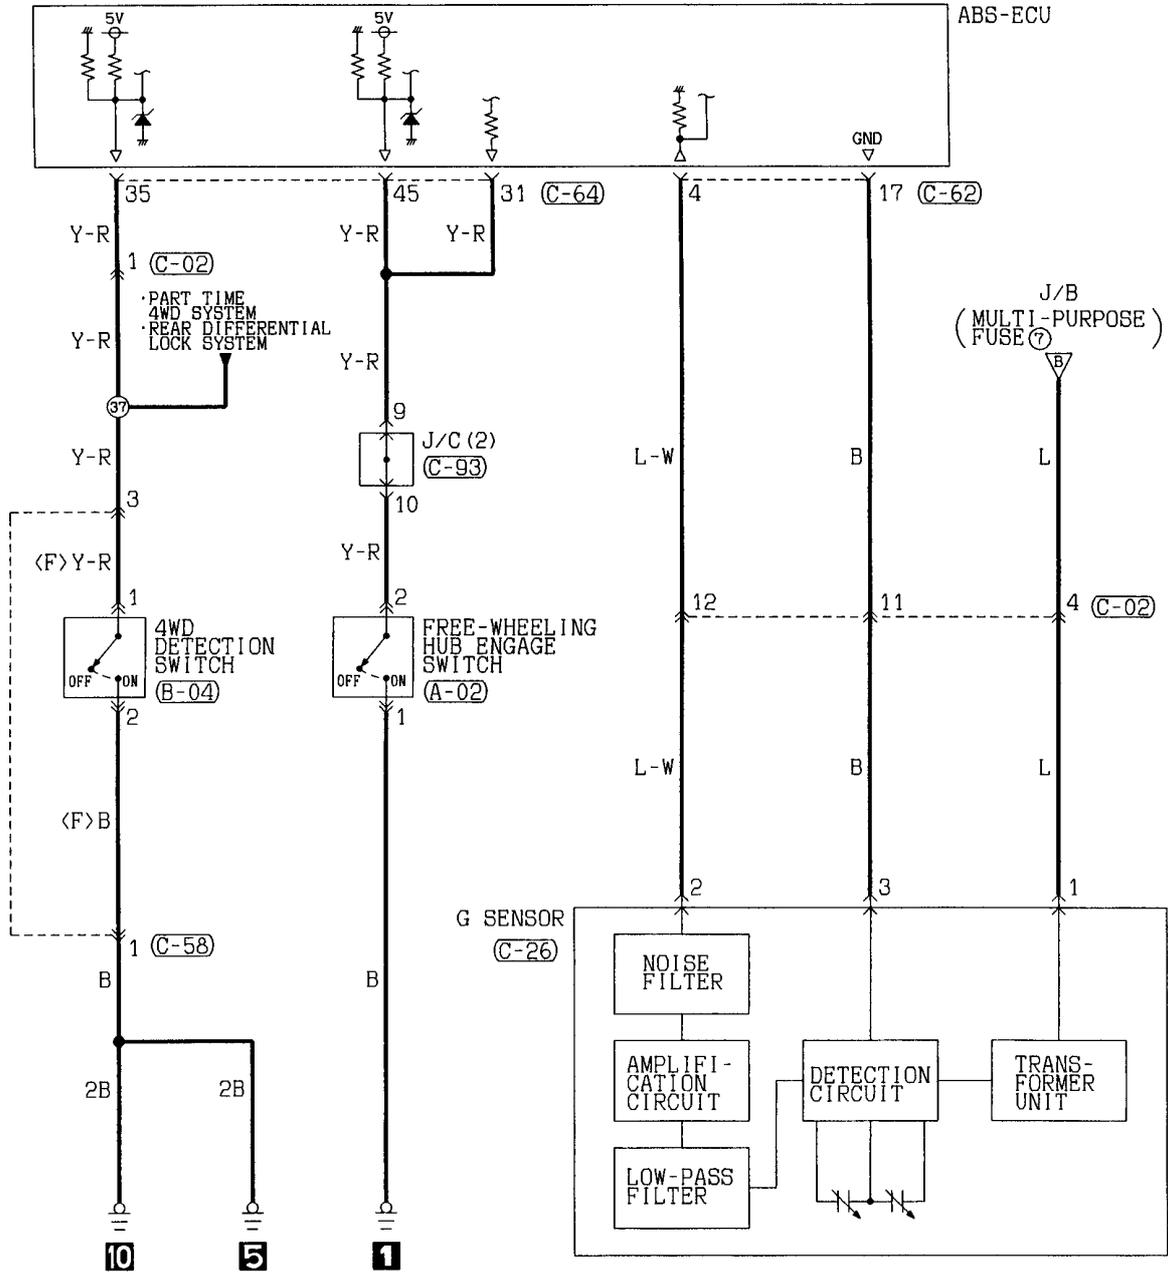

(C-62)

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26

(C-64)

31	32	33	34	35	36	37	38	39	40	41
42	43	44	45	46	47	48	49	50	51	52

(C-86)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20

(C-93)

1	2	3	4	5	6	7	8			
9	10	11	12	13	14	15	16	17	18	19

(D-01)

1	2		
3	4	5	6

(F-01)

1	2		
3	4	5	6



(F-16)


1	2		
3	4	5	6

REAR DIFFERENTIAL LOCK SYSTEM

90101430047

L.H. drive vehicles

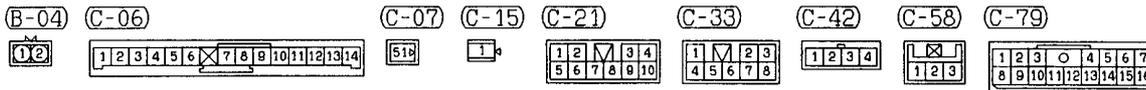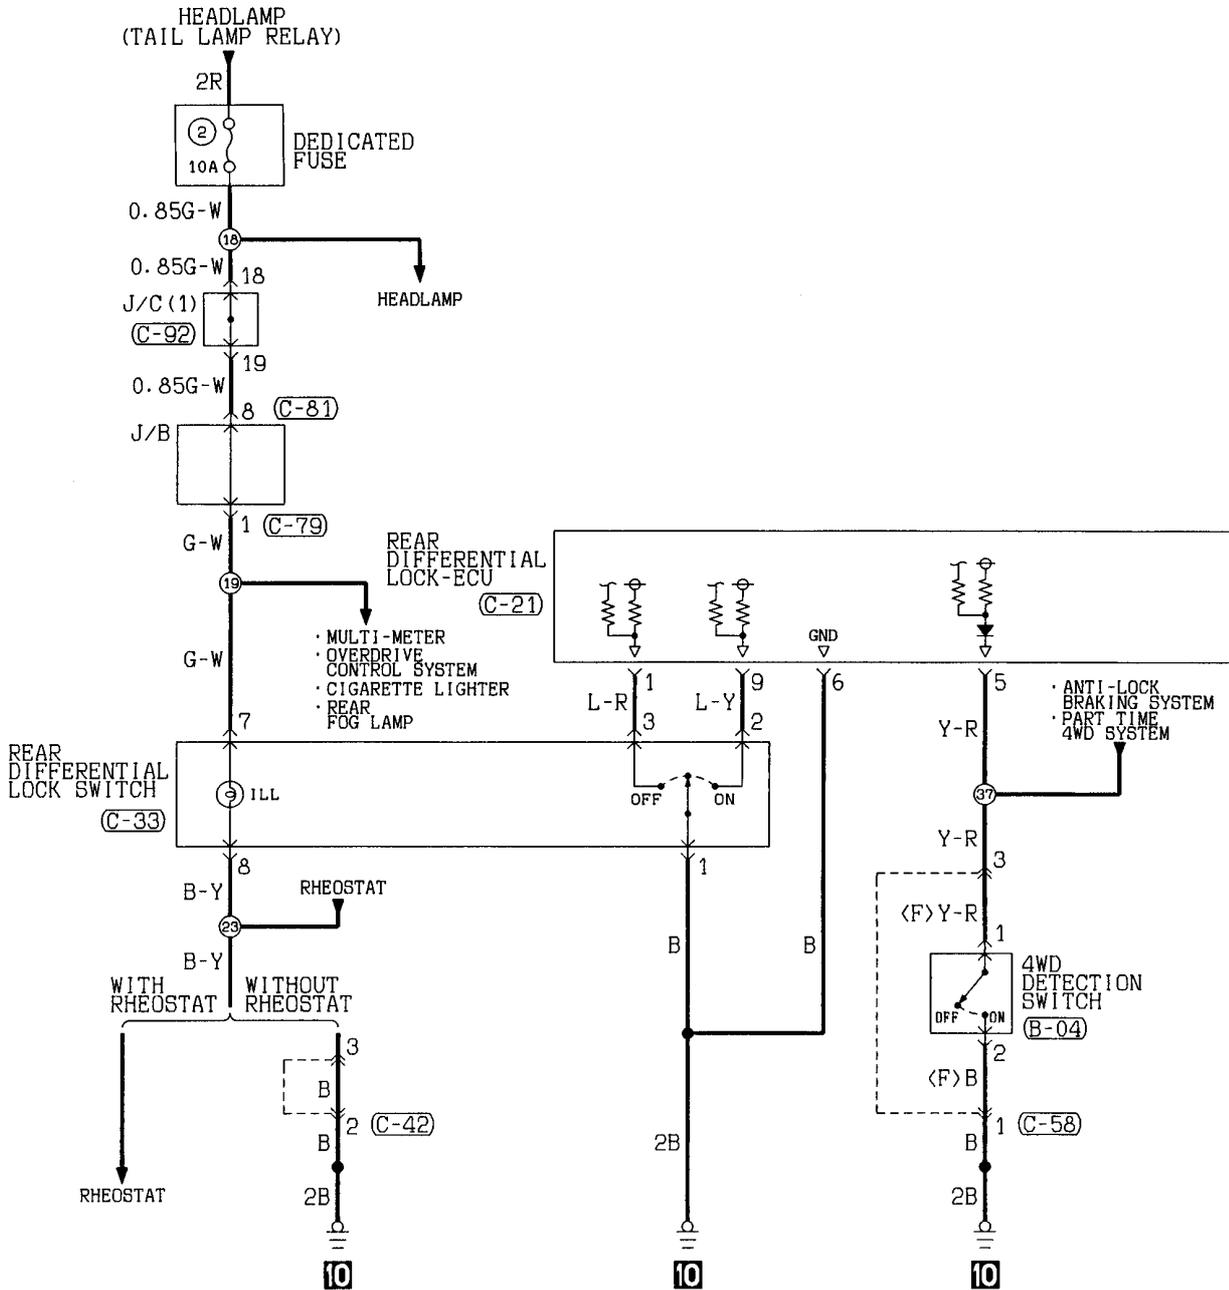

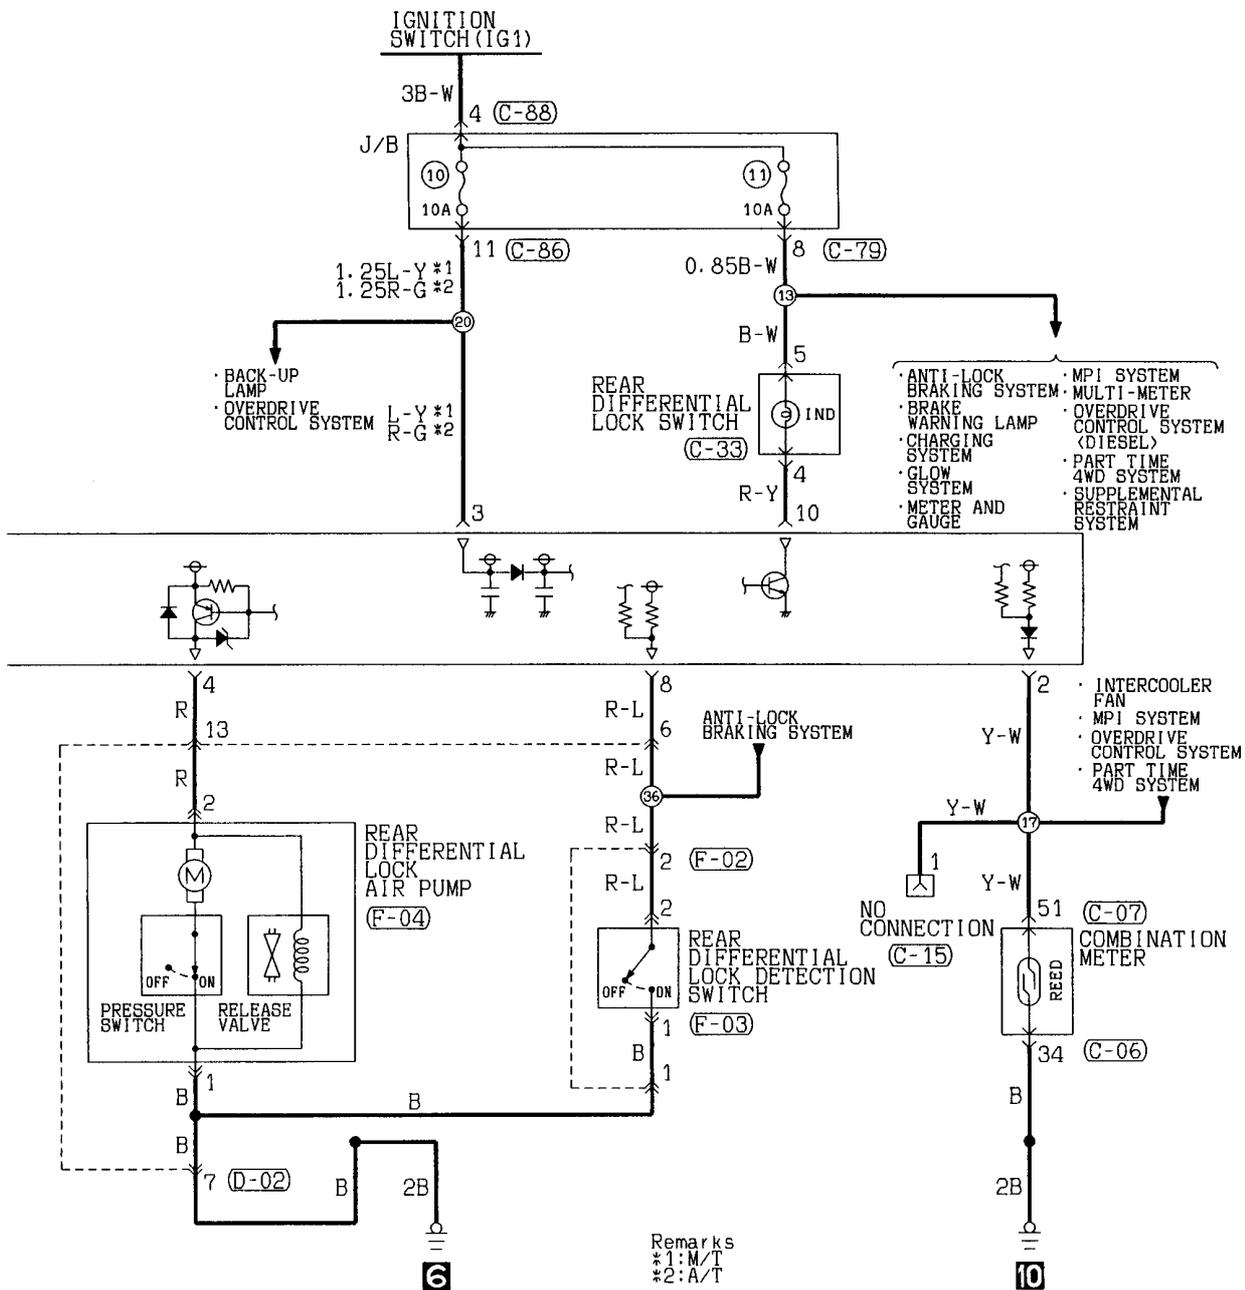


C-81	C-86	C-88	C-92	D-02	F-02	F-03	F-04
1 2 3 4 5 6 7 8 9 10 11 12	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	1 2 3 4	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	1 2 3 4 5 6 7 8 9 10 11 12 13 14	1 2	1 2	1 2

REAR DIFFERENTIAL LOCK SYSTEM

90101430054

R.H. drive vehicles

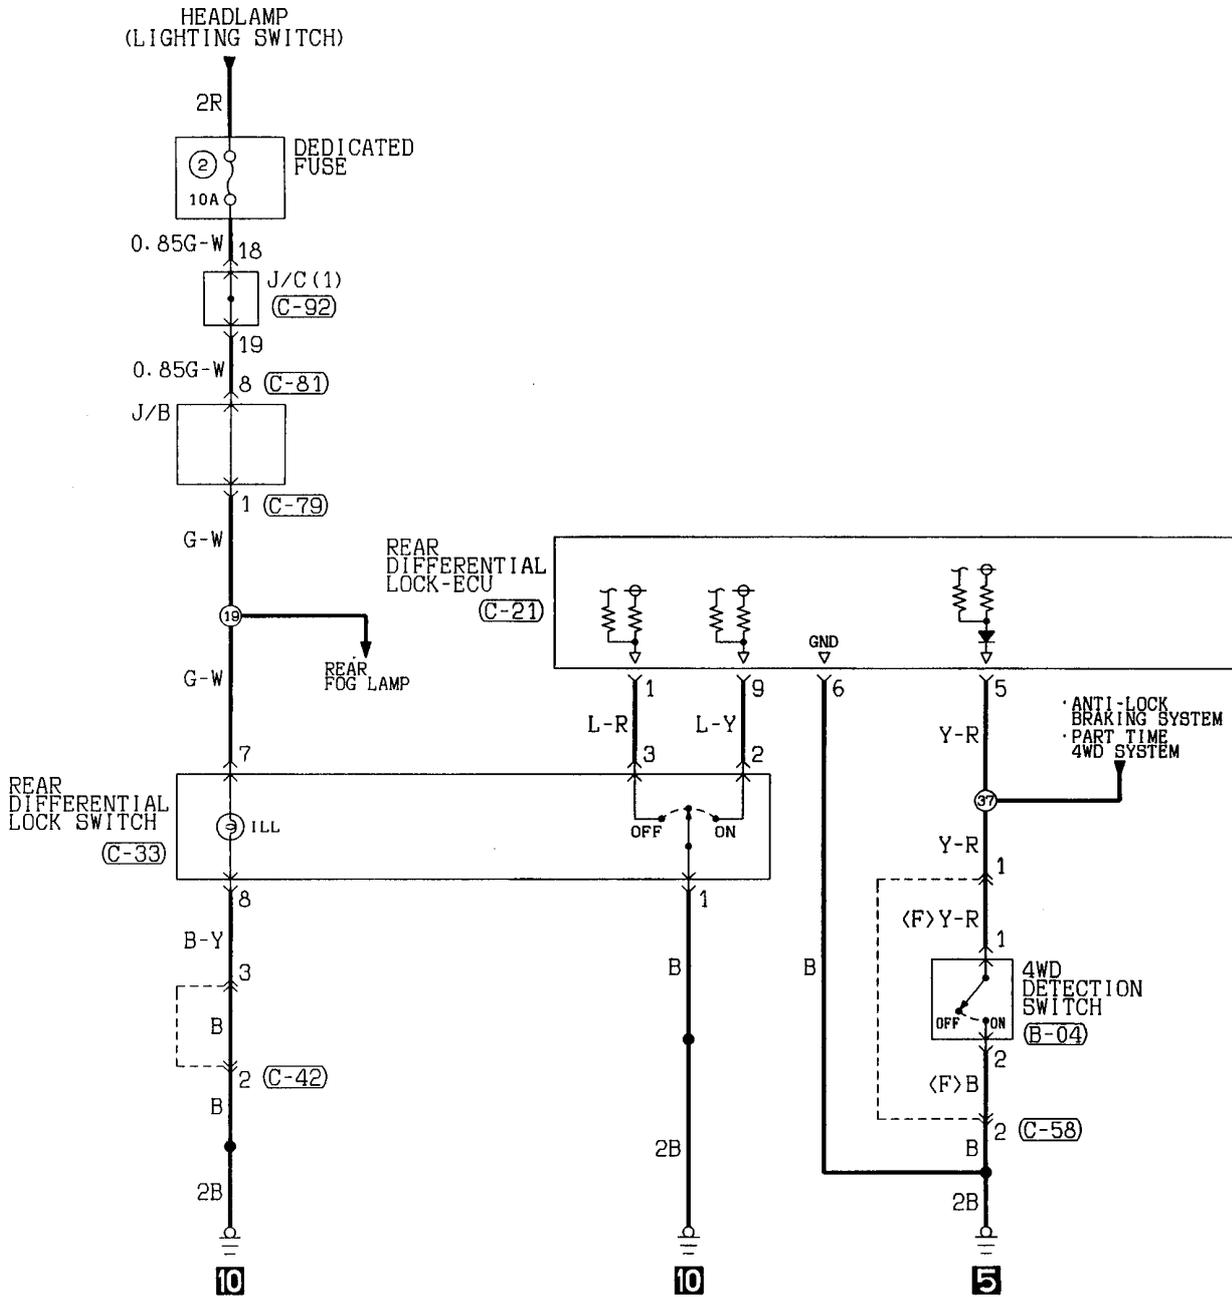

- (B-04)

0	2
---	---
- (C-06)

1	2	3	4	5	6	7	8	9	10	11	12	13	14
---	---	---	---	---	---	---	---	---	----	----	----	----	----
- (C-07)

5	1
---	---
- (C-15)

1

- (C-21)


1	2	3	4		
5	6	7	8	9	10
- (C-33)

1	2	3		
4	5	6	7	8
- (C-42)

1	2	3	4
---	---	---	---
- (C-58)

1	2	3
---	---	---
- (C-79)



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

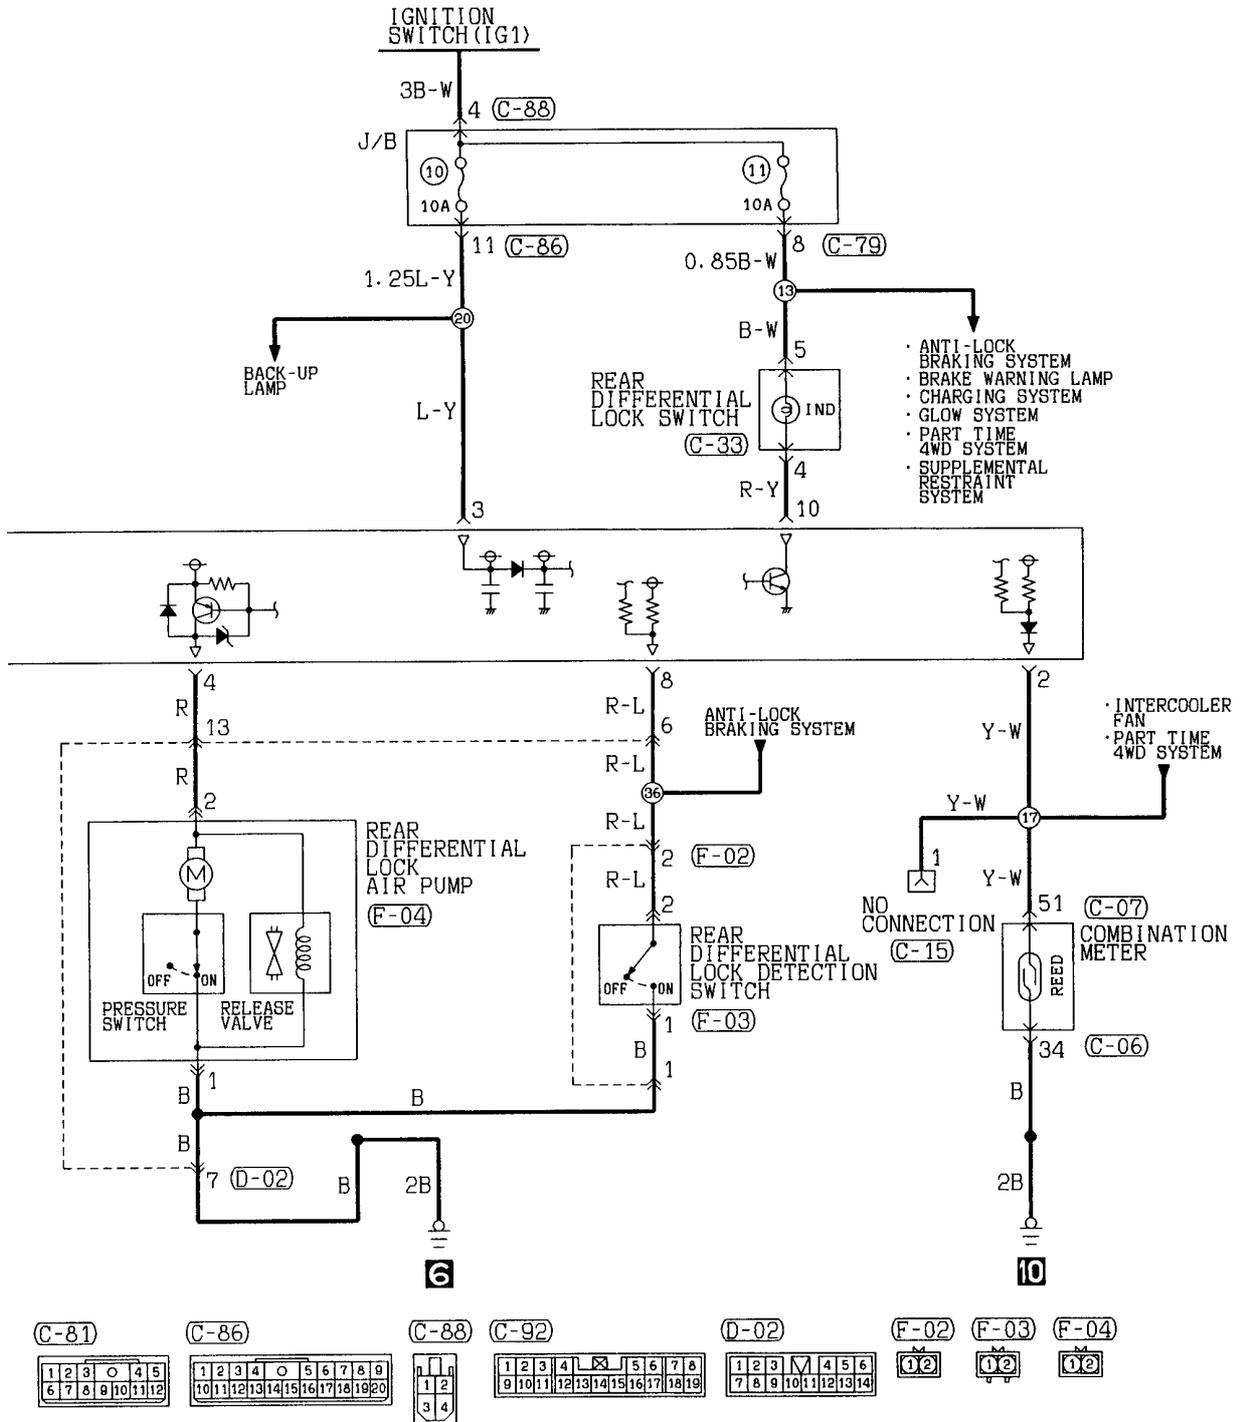


PART TIME 4WD SYSTEM

90100910018

1997 Models

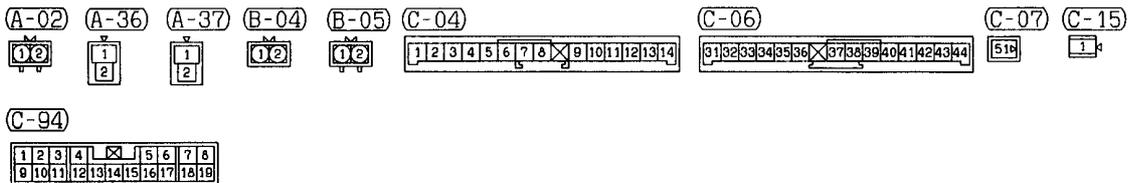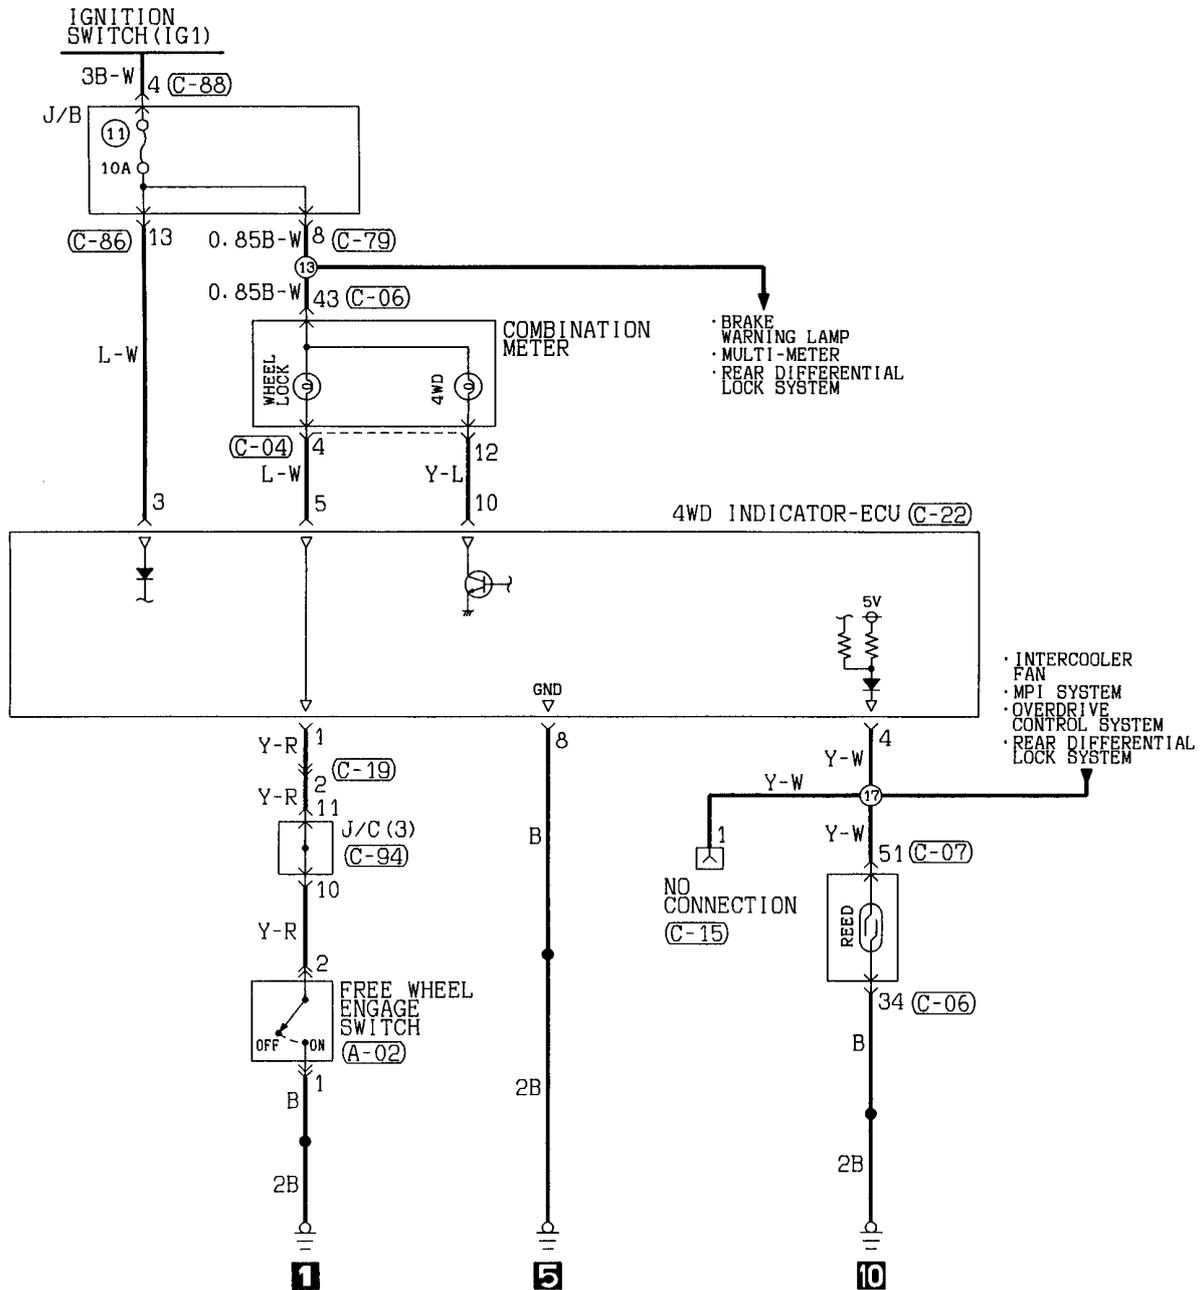

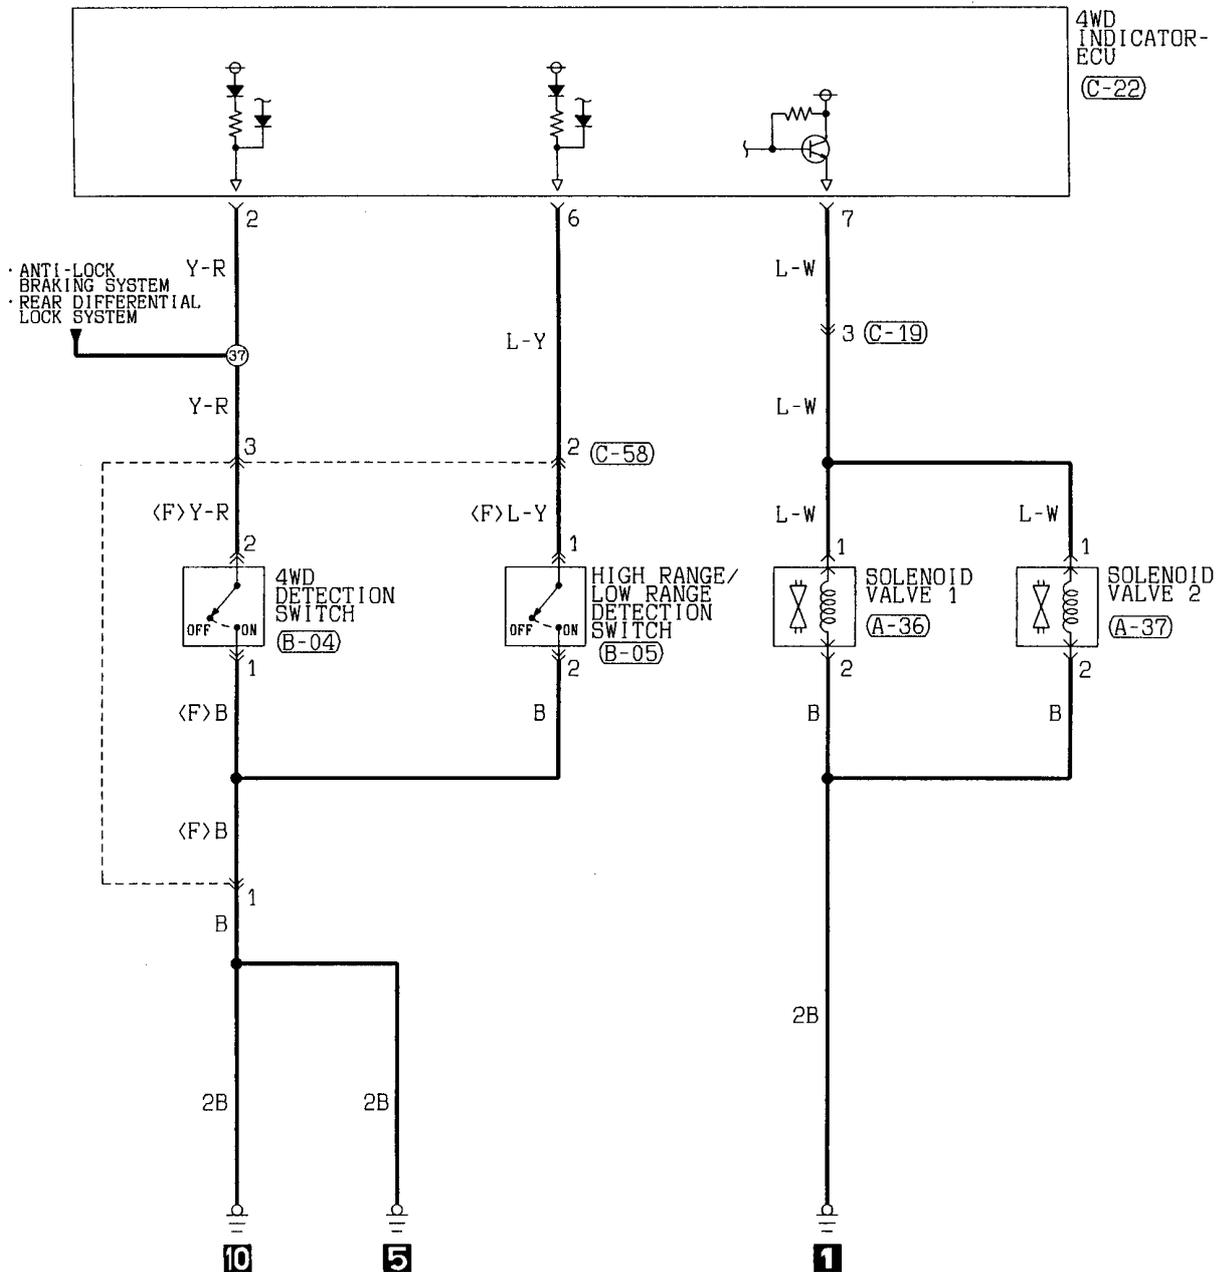

(C-19)

<DIESEL>

1	2	3	4	5	6
7	8	9	10	11	12
13	14				

<RETOROL>

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

(C-22)

1	2	3	4
5	6	7	8
9	10		

(C-58)

1	2	3
---	---	---

(C-79)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

(C-86)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							



(C-88)


1	2
3	4

PART TIME 4WD SYSTEM

90100910054

1998 Models

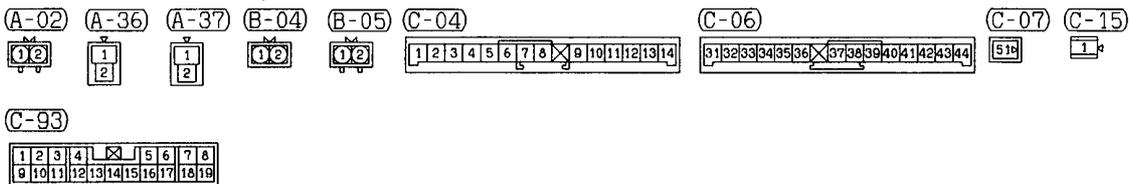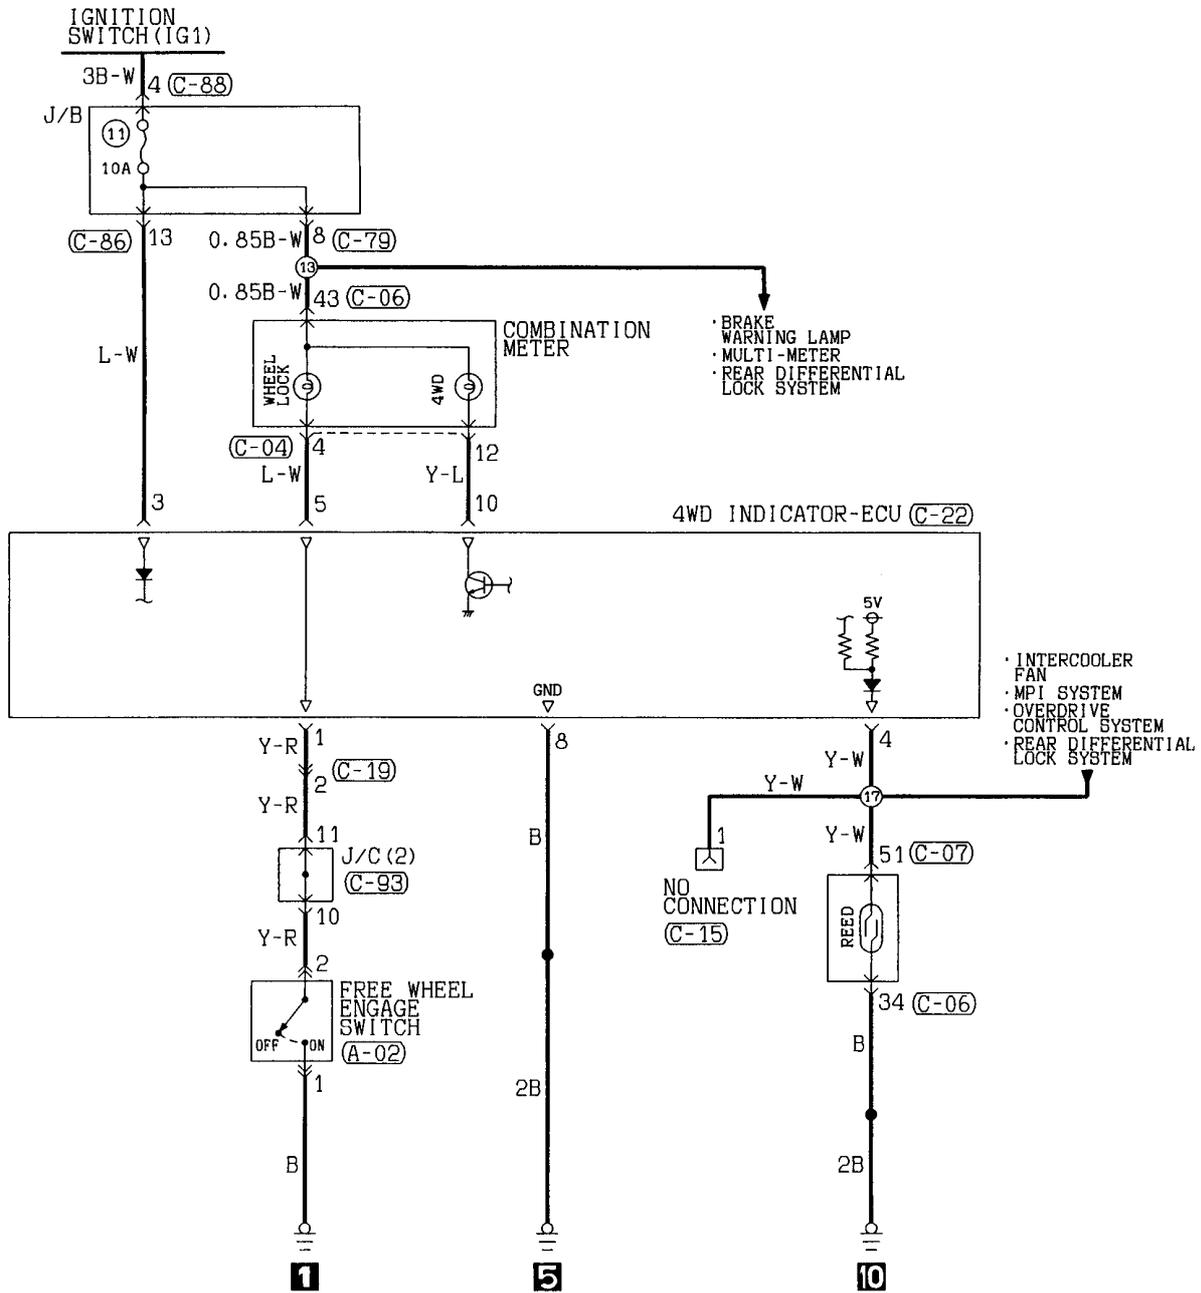

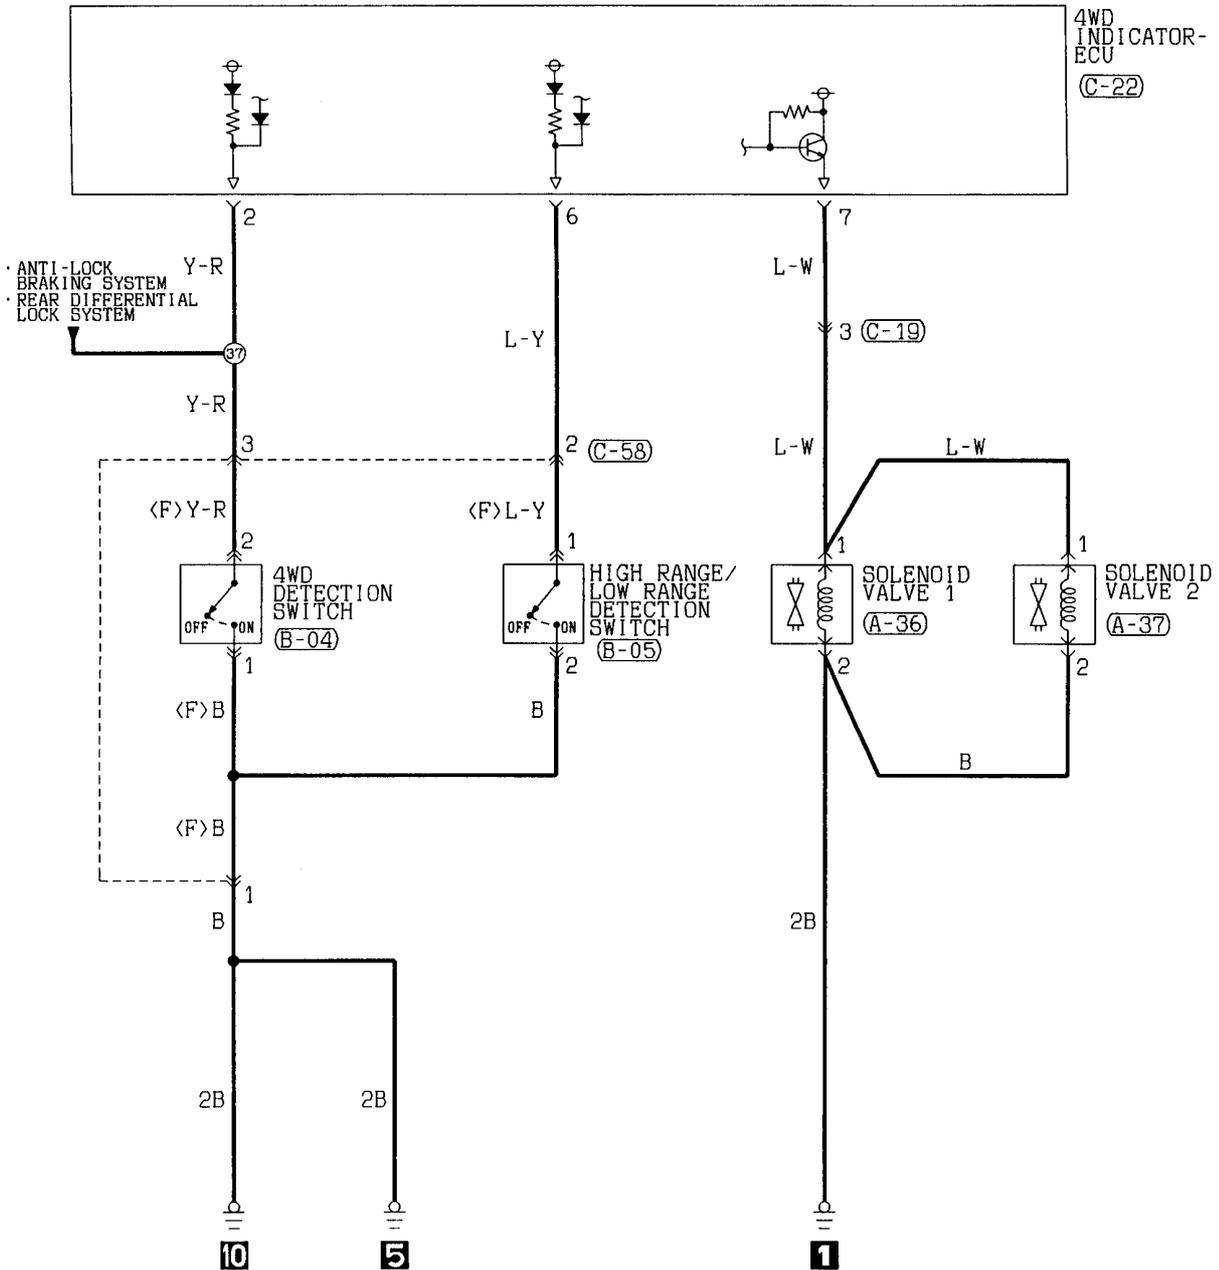

(C-19)

<DIESEL>

1	2	3	4	5	6		
7	8	9	10	11	12	13	14

<RETOROL>

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

(C-22)

1	2	3	4		
5	6	7	8	9	10

(C-58)

1	2	3
---	---	---

(C-79)

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

(C-86)

1	2	3	4	5	6	7	8	9		
10	11	12	13	14	15	16	17	18	19	20


(C-88)

1	2
3	4

RHEOSTAT

90101110057


1997 Models

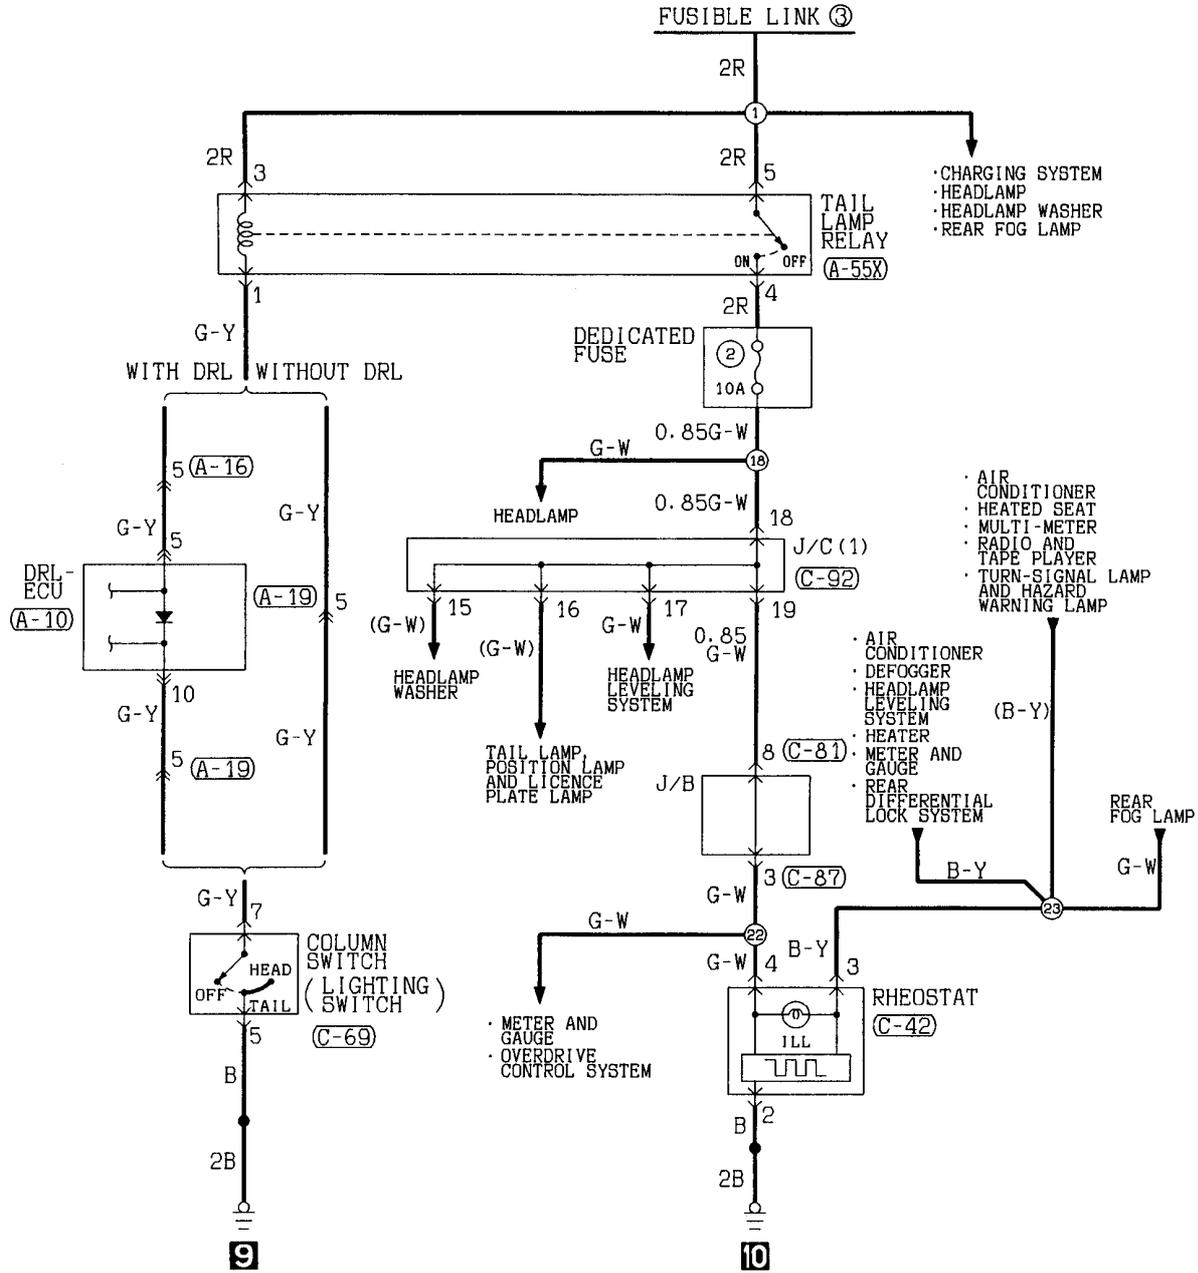


(A-10)



(A-16)

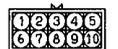

(A-19)

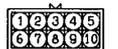


(A-55X)




(C-42)




(C-69)

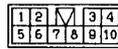


(C-81)

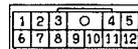

(C-87)

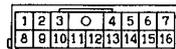


(C-92)

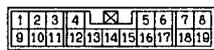


RHEOSTAT

90101110217


1998 Models

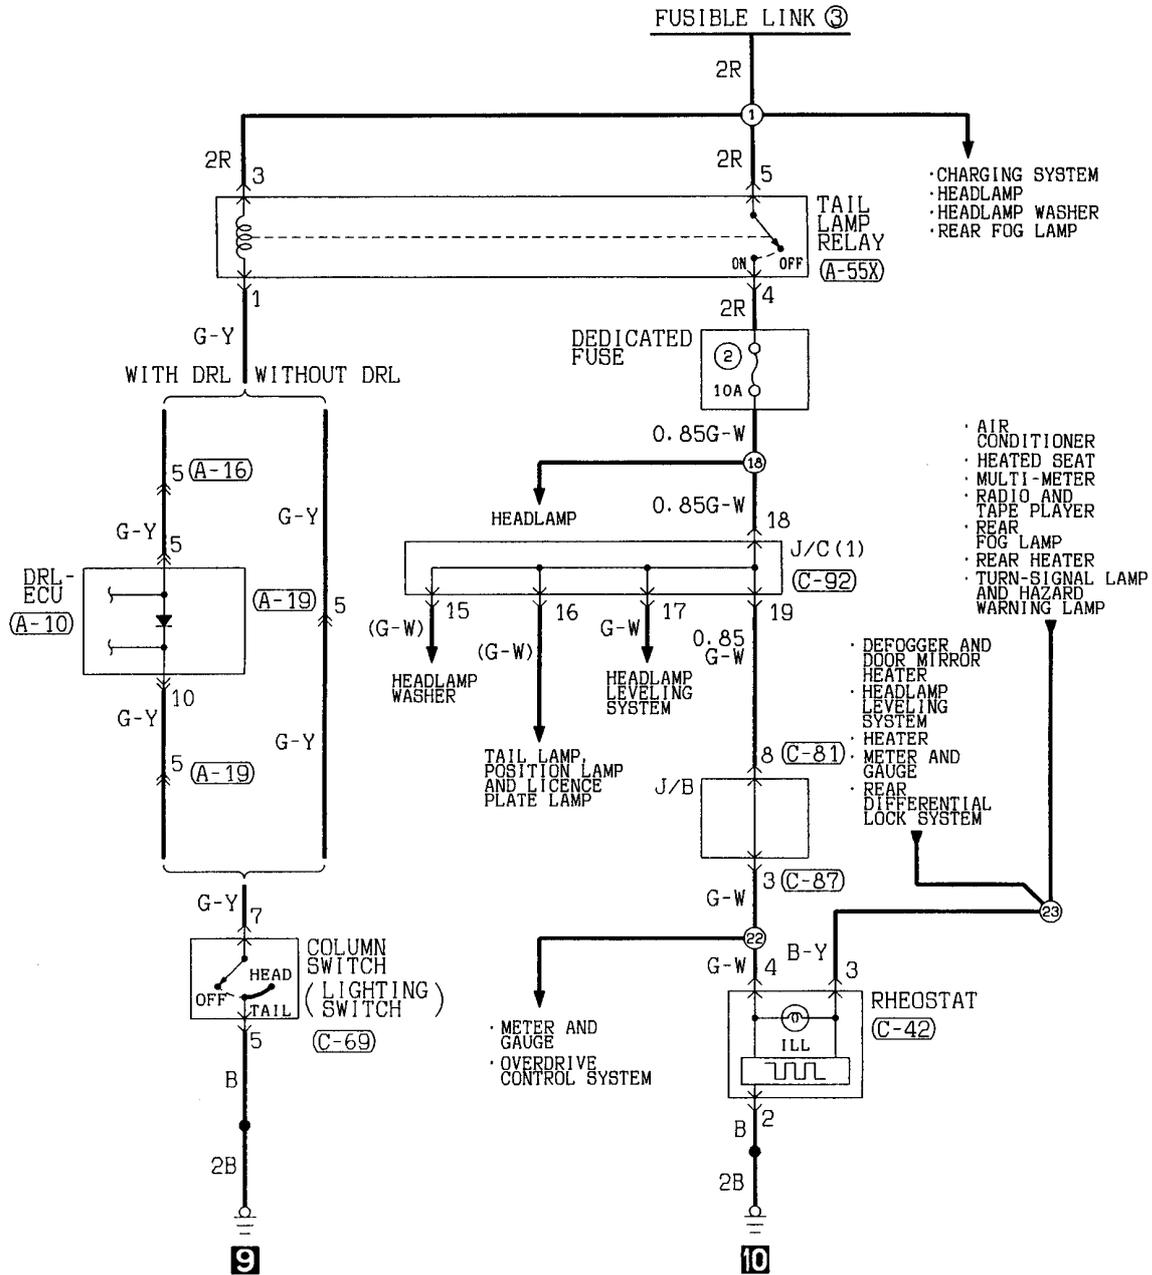


A-10

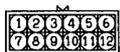

A-16

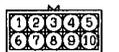

A-19

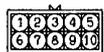


A-55X




C-42




C-69

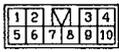


C-81

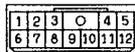

C-87

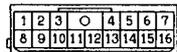



C-92

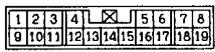


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

90100970229

Petrol-powered vehicles

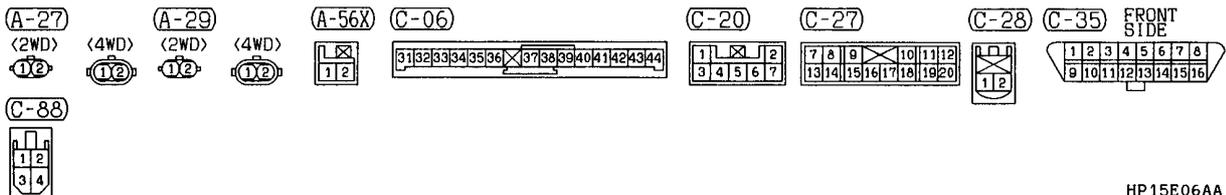
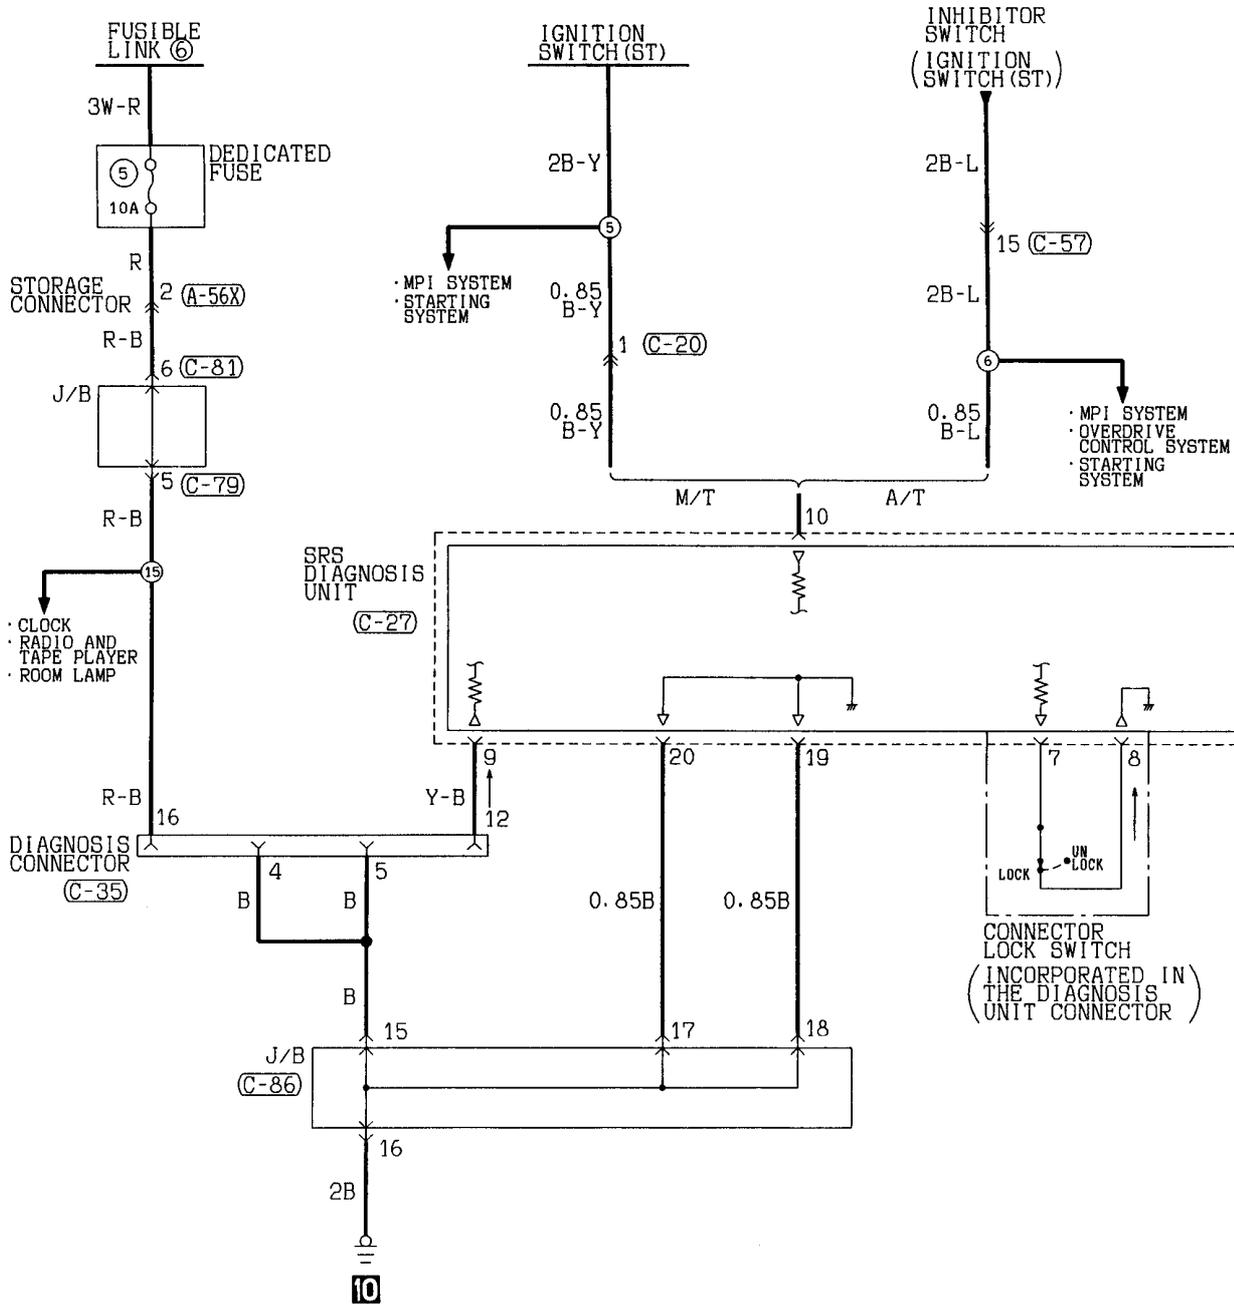


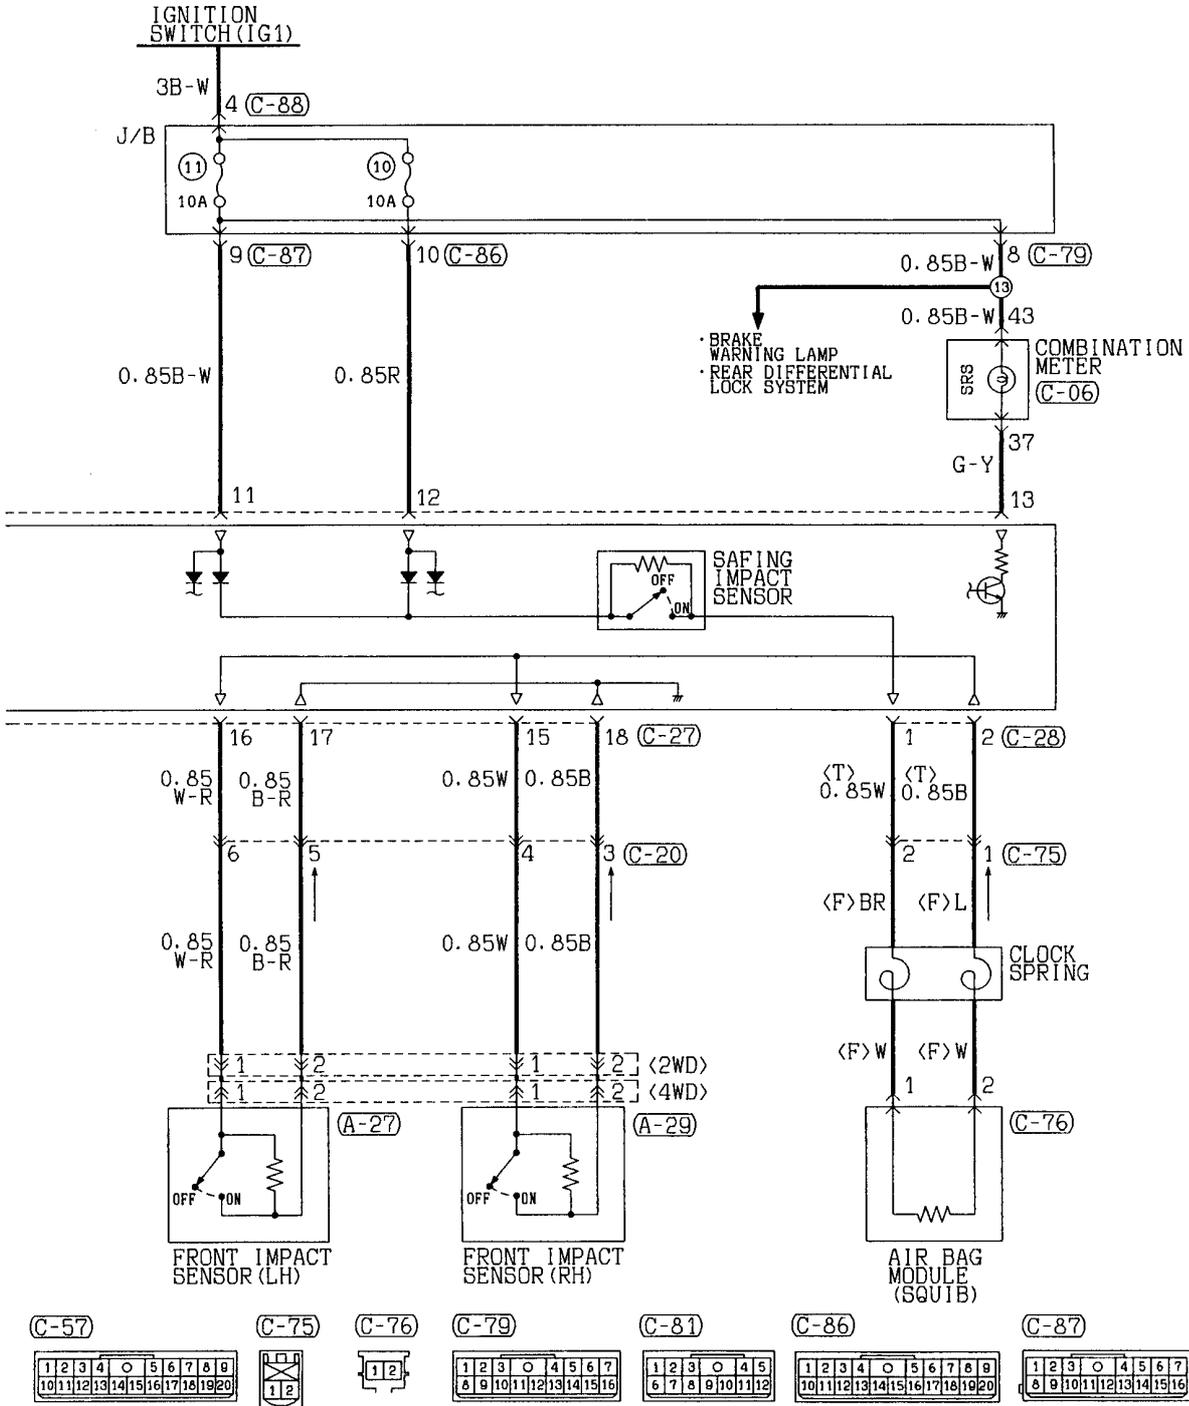


SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

90100970236

Diesel-powered vehicles

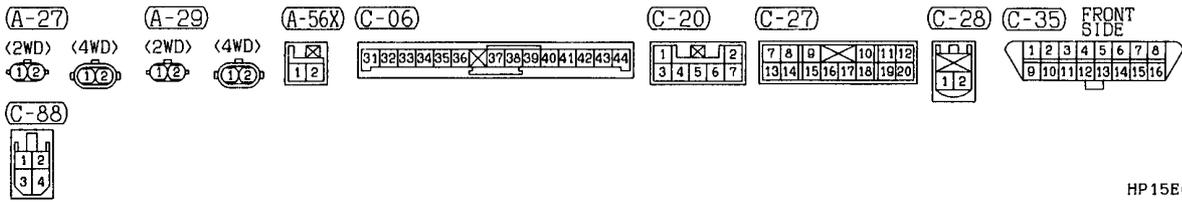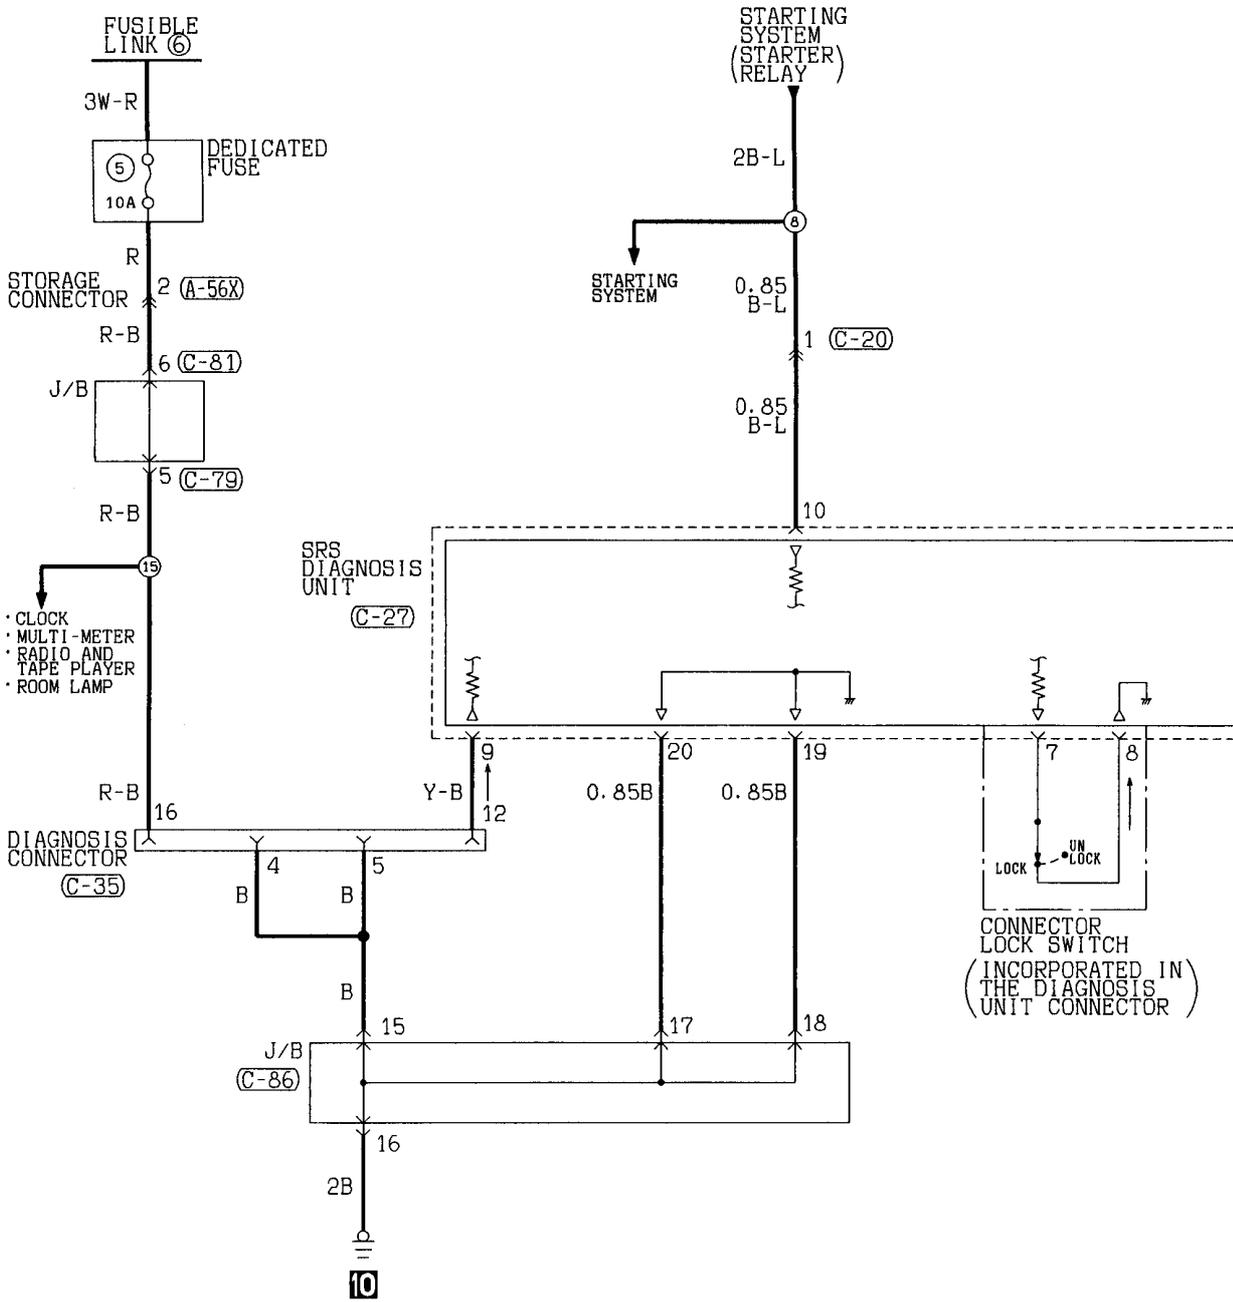


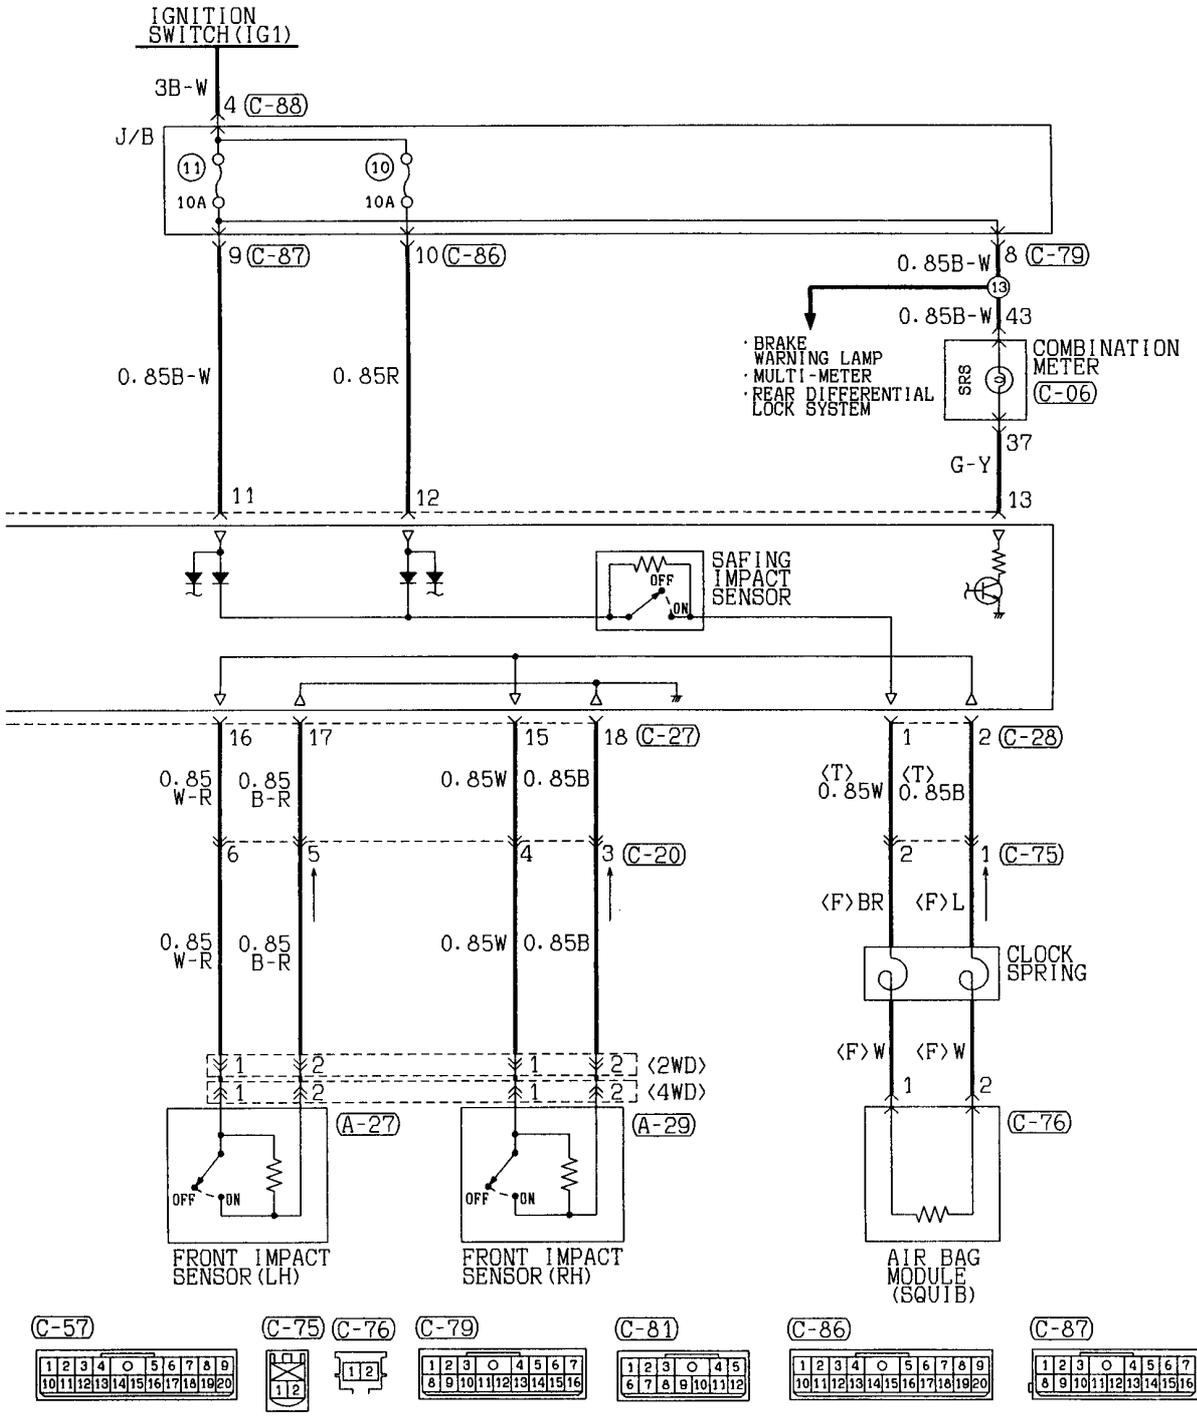


IMMOBILIZER SYSTEM

90101360049


Petrol-powered vehicles <1997 Models>

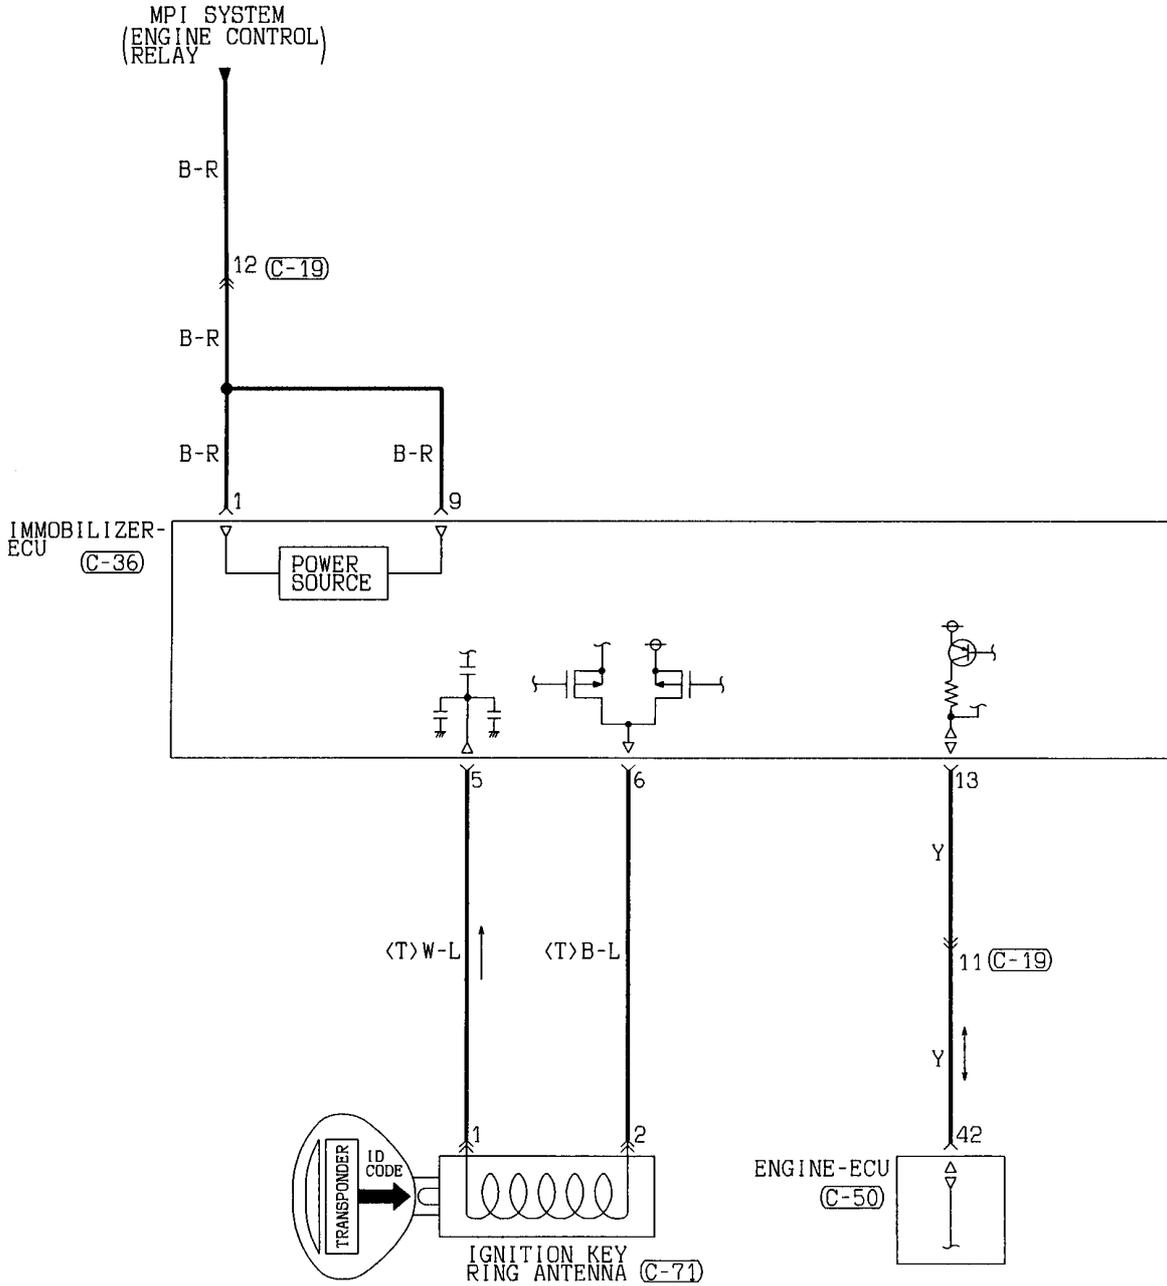


(A-56X) (C-19)

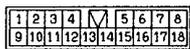


(C-35) FRONT SIDE

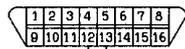


(C-36)

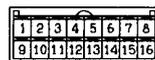


(C-50)

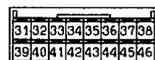


(C-71) (C-79)

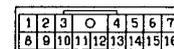

(C-81)

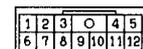


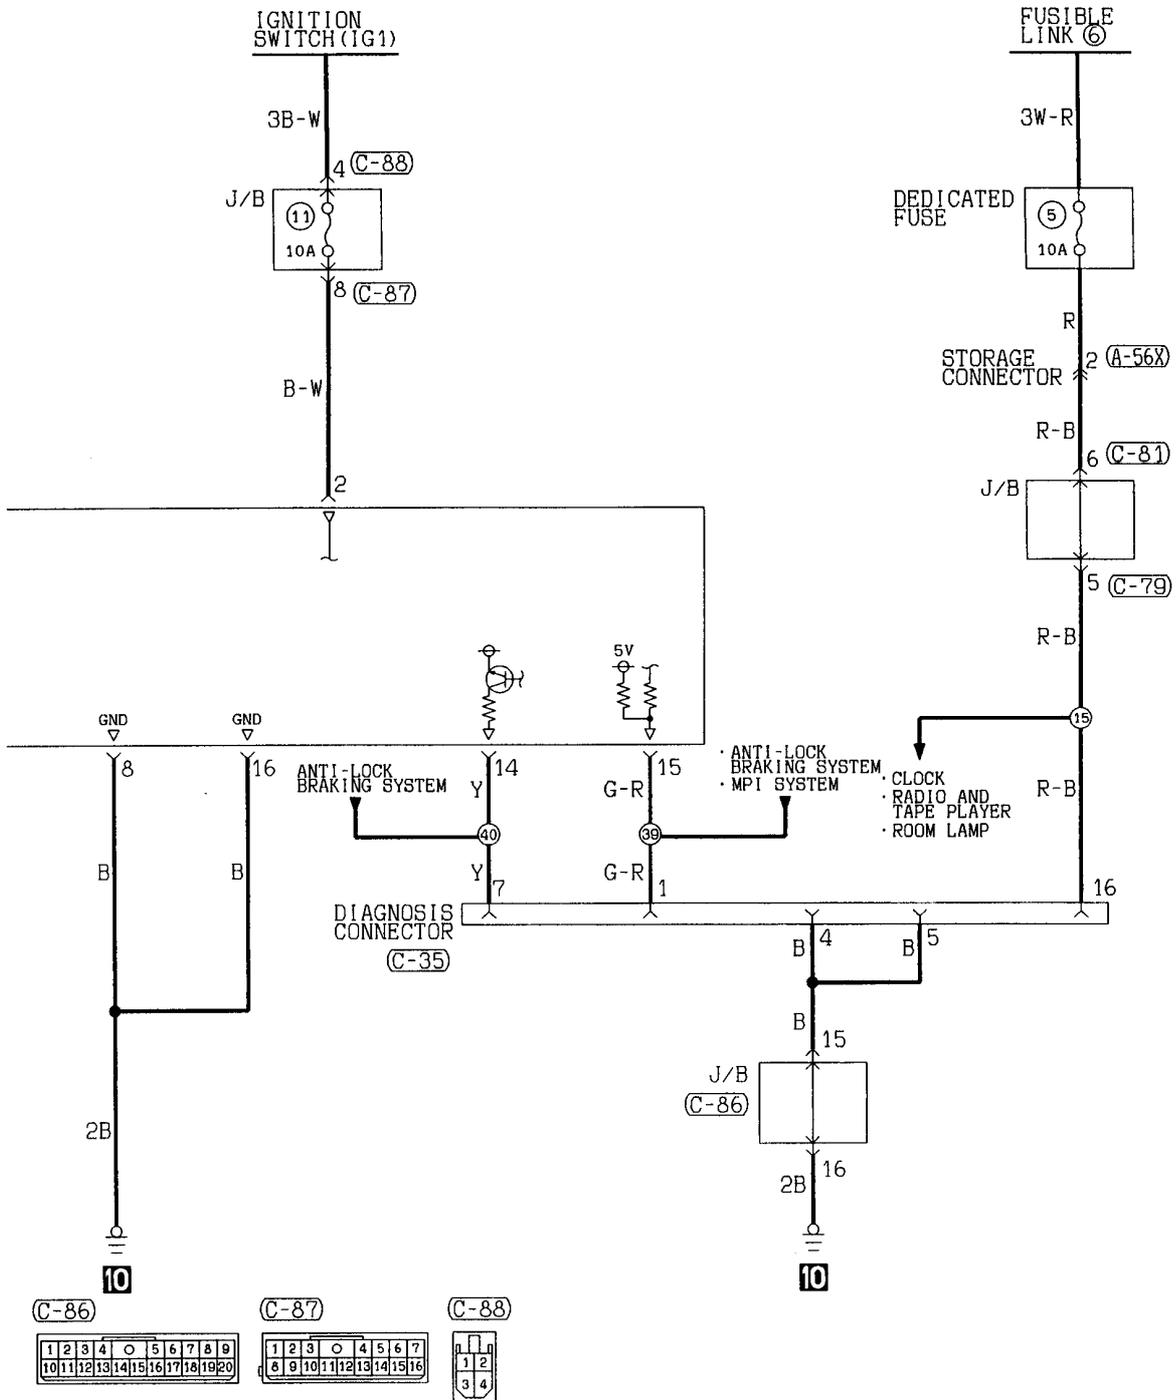


IMMOBILIZER SYSTEM

90101380216


Petrol-powered vehicles <1998 Models>

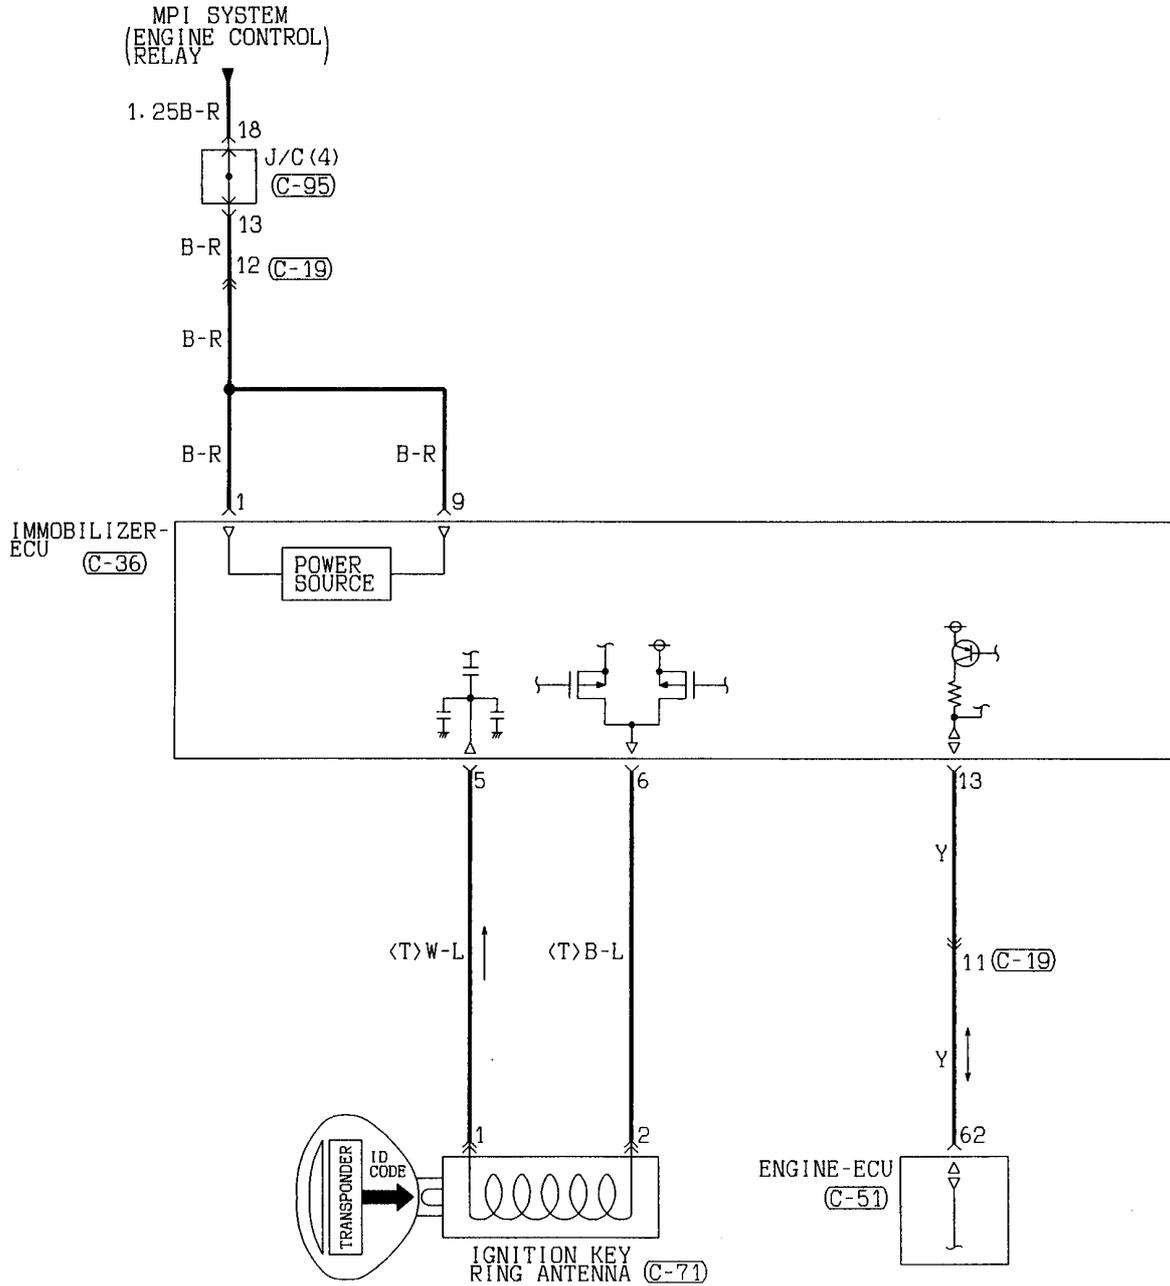


(A-56X) (C-19)

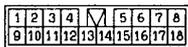


(C-35) FRONT SIDE

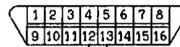

(C-36)

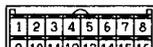


(C-51)

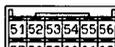


(C-71)




(C-79)

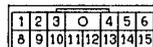

(C-81)





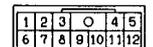


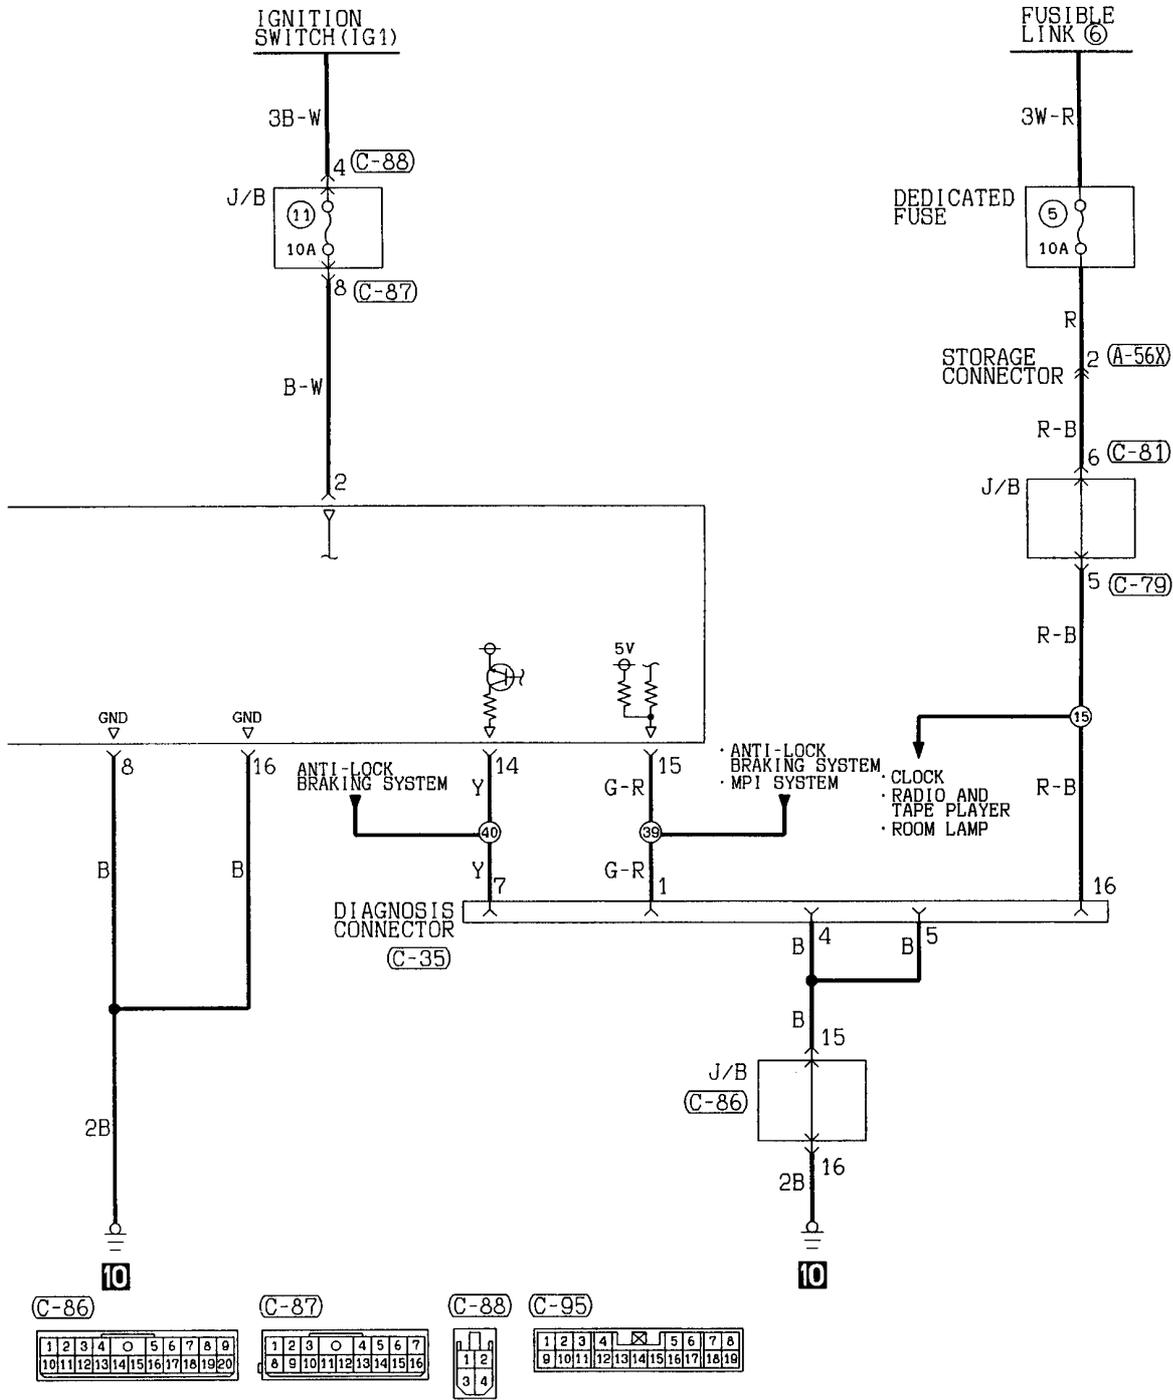


IMMOBILIZER SYSTEM

90101360056

Diesel-powered vehicles <1997 Models>

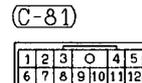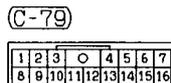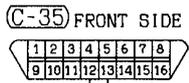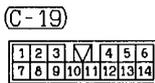
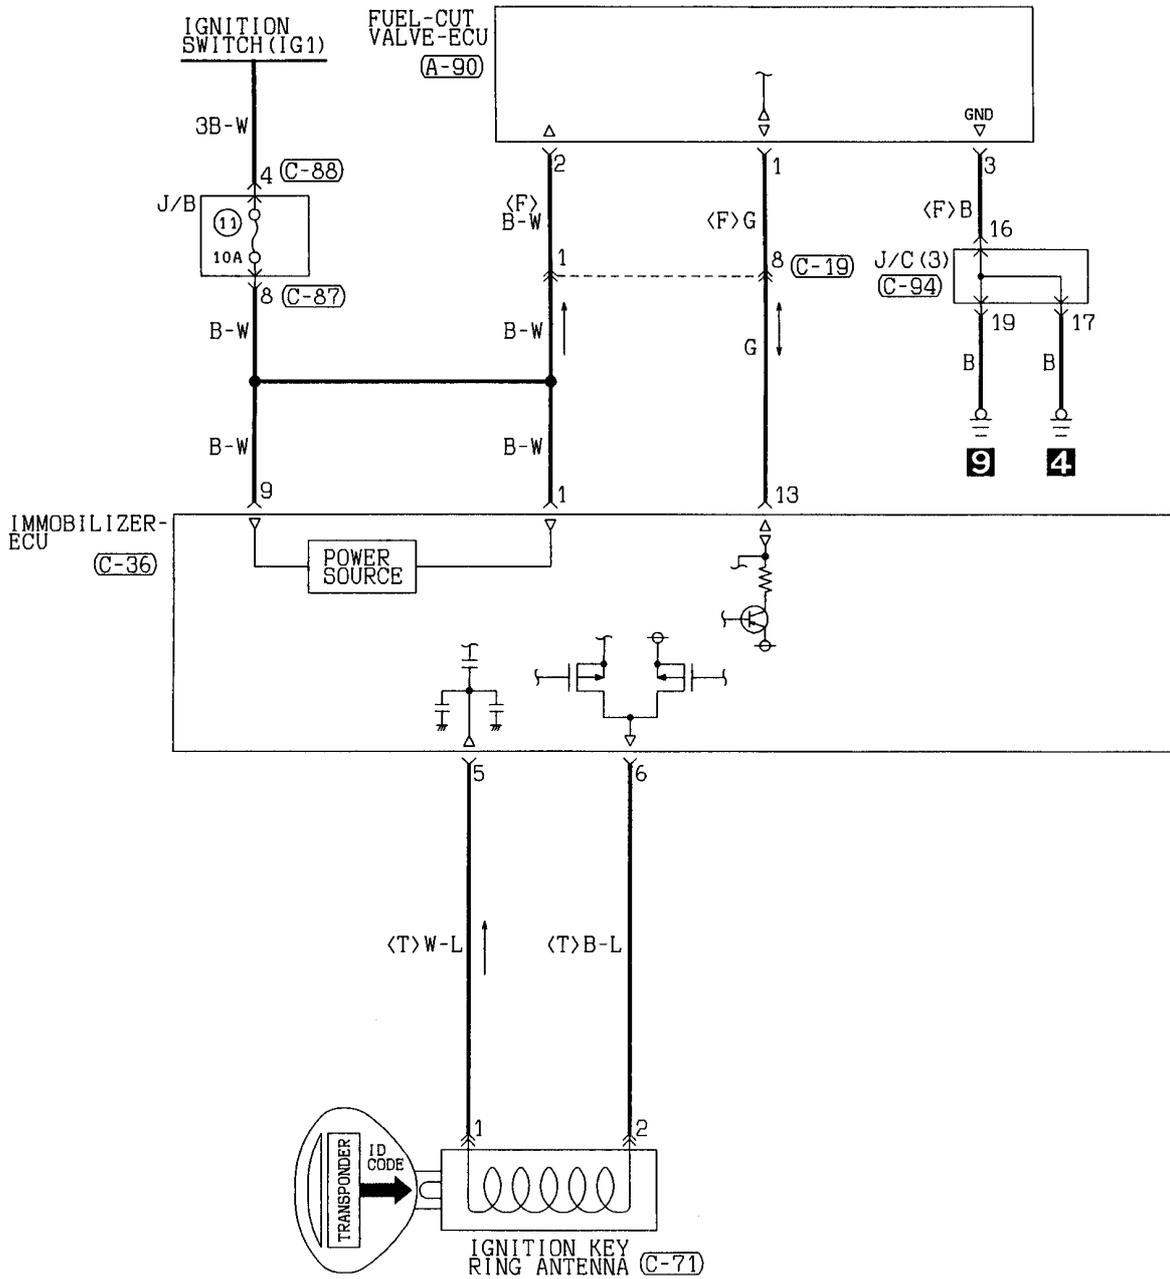


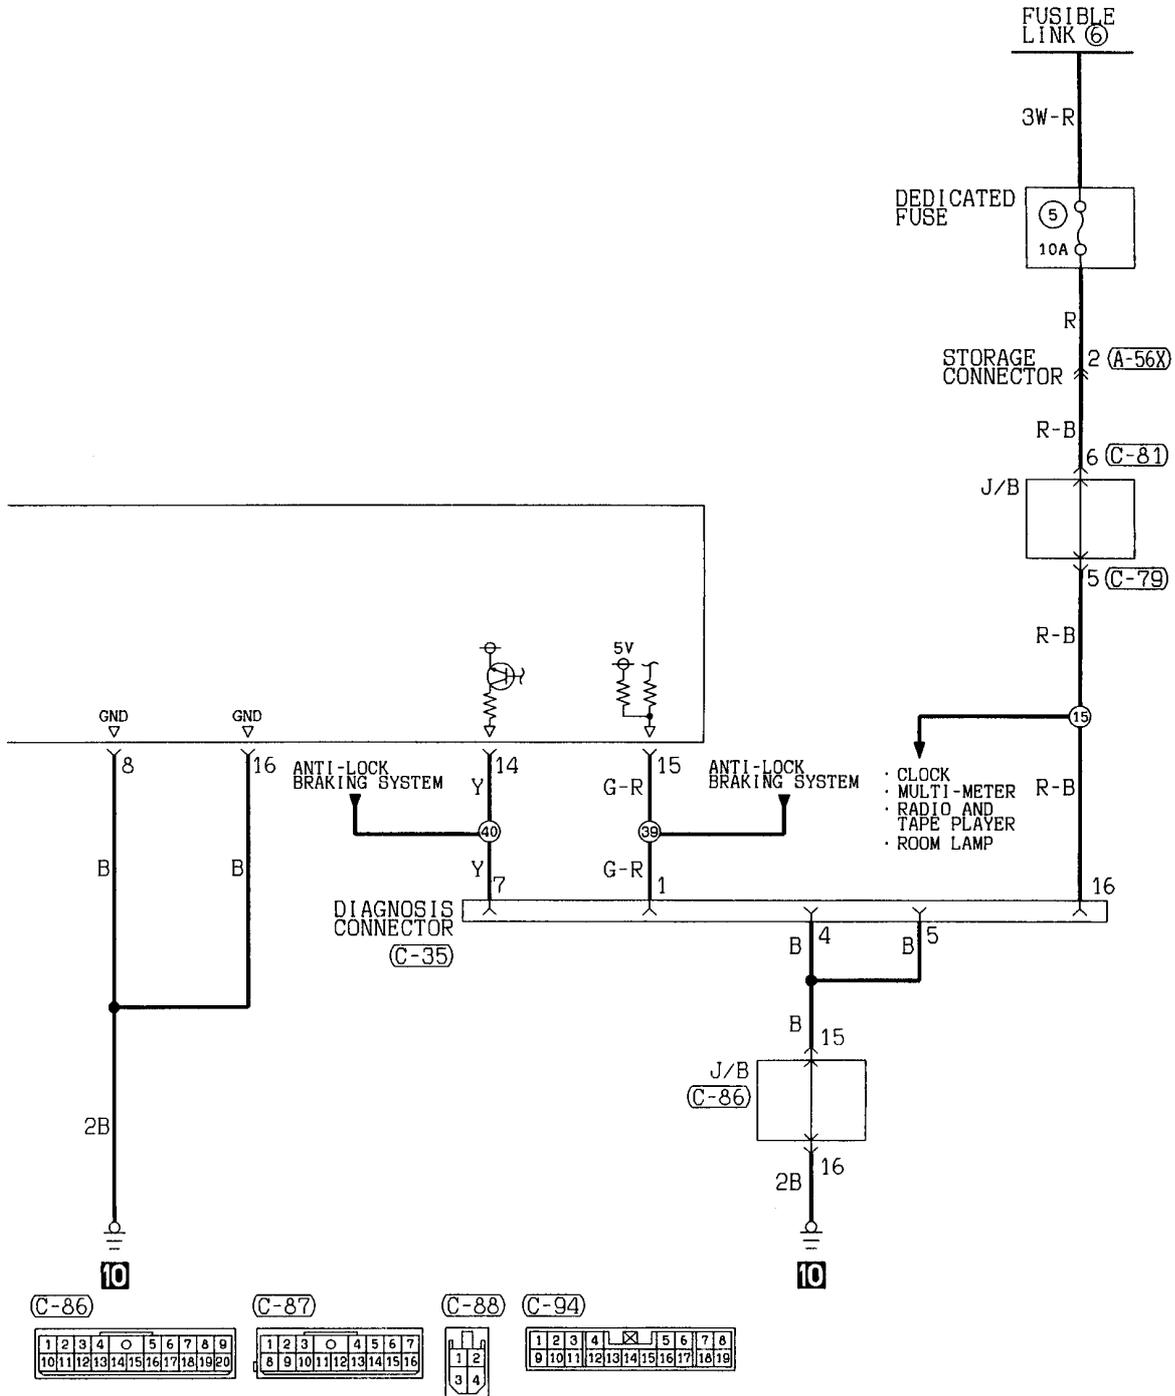


IMMOBILIZER SYSTEM

90101360223

Diesel-powered vehicles <1998 Models>

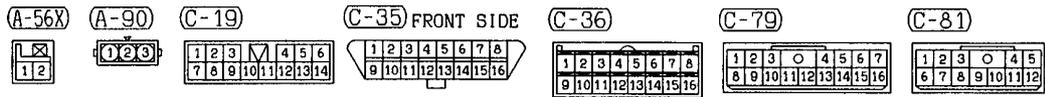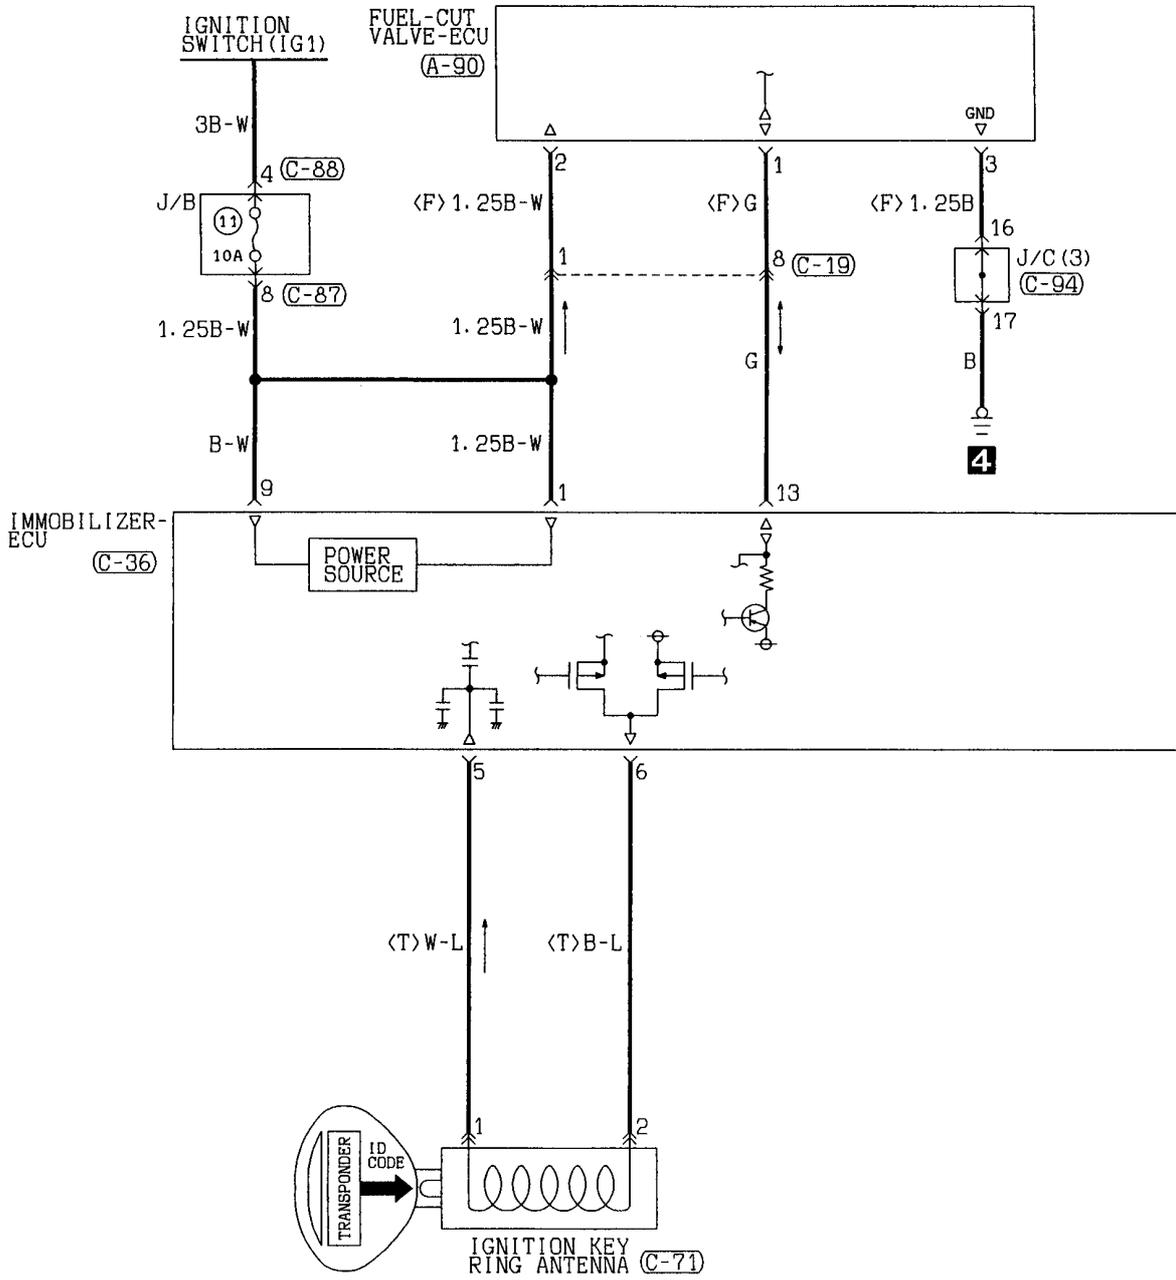


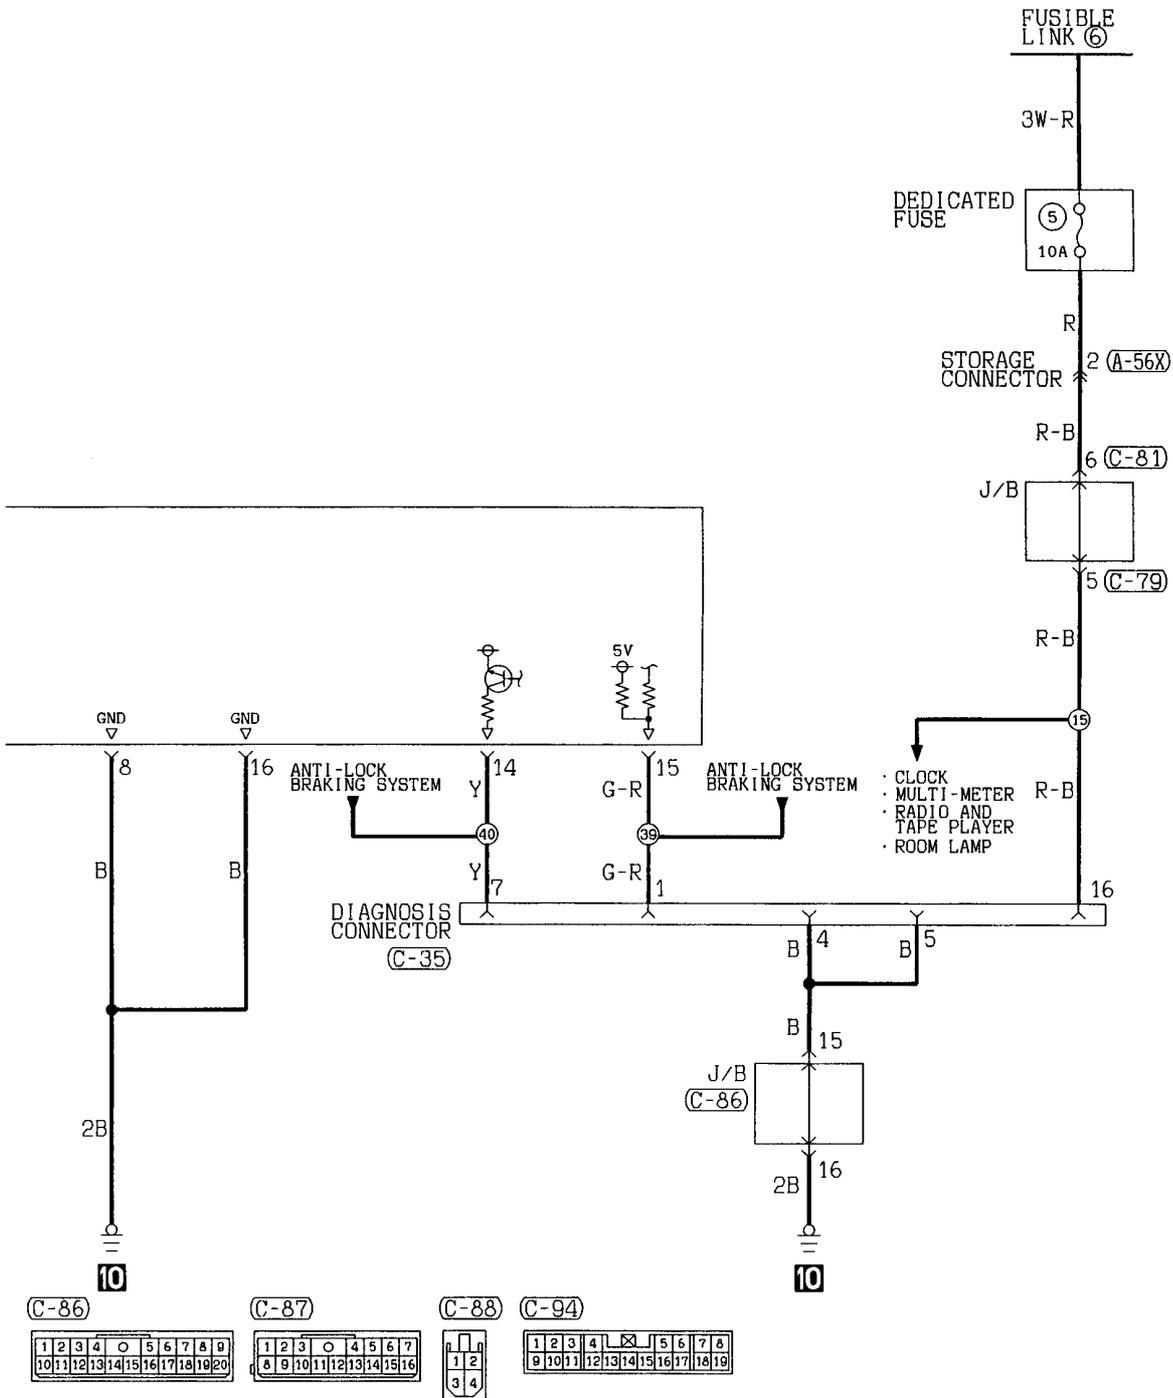


LIGHTING MONITOR BUZZER


90101140148

L.H. drive vehicles <1997 Models>

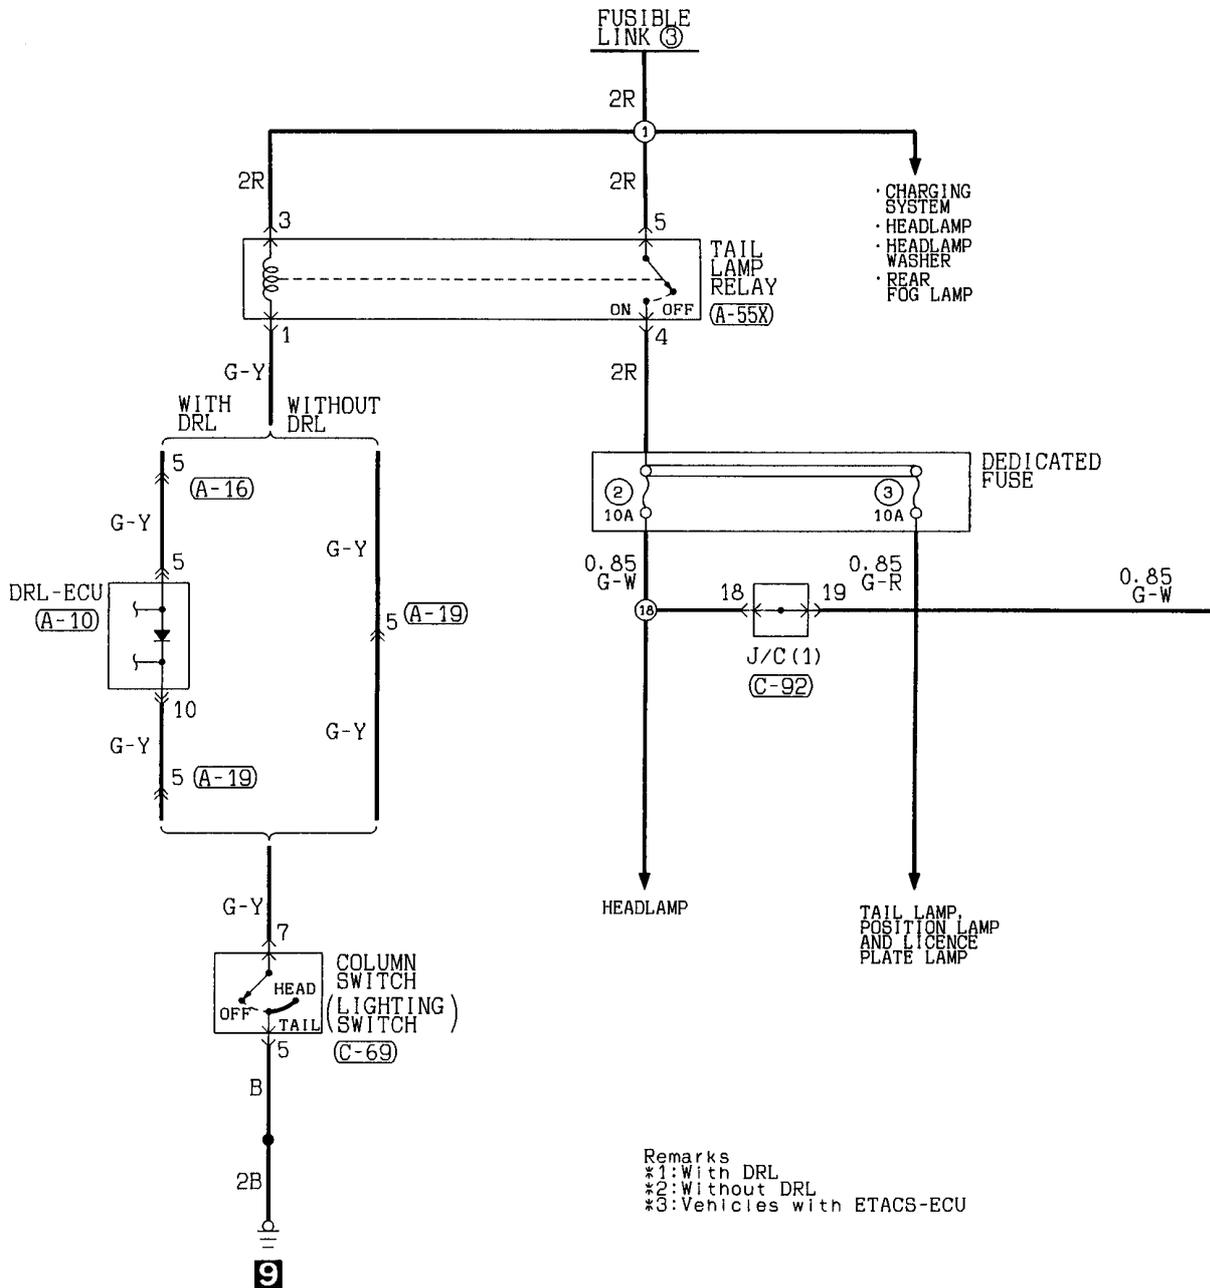

Remarks
 *1: With DRL
 *2: Without DRL
 *3: Vehicles with ETACS-ECU

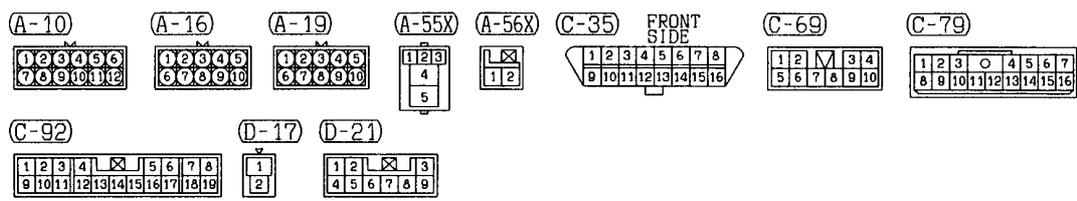

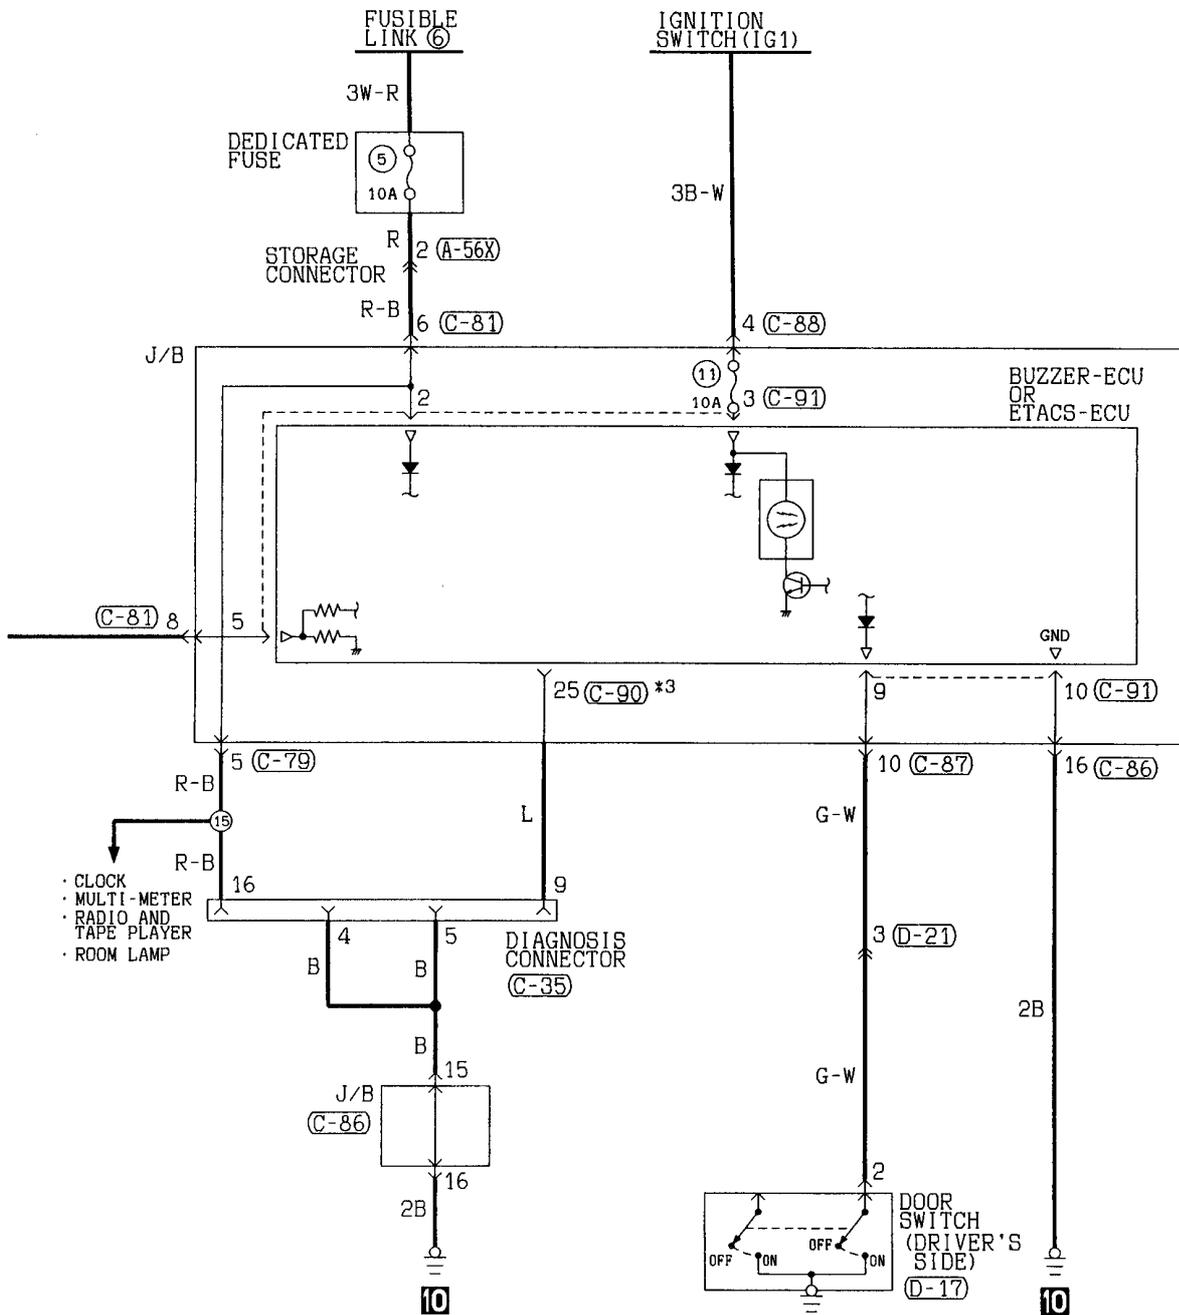

C-81

1	2	3	4	5
6	7	8	9	10
11	12			

C-86

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

C-87

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

C-88

1	2
3	4

C-90

21	22	23
24	25	26
27	28	



C-91


1	2	3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	---	---	----	----	----

LIGHTING MONITOR BUZZER

90101140377

L.H. drive vehicles <1998 Models>

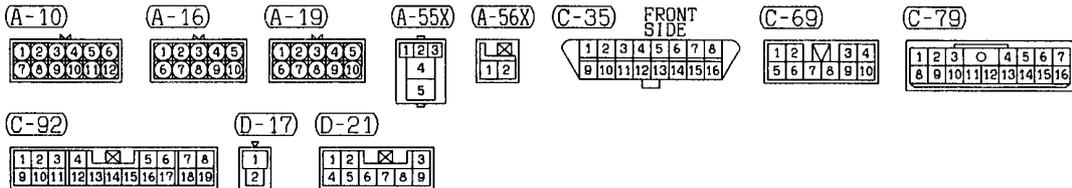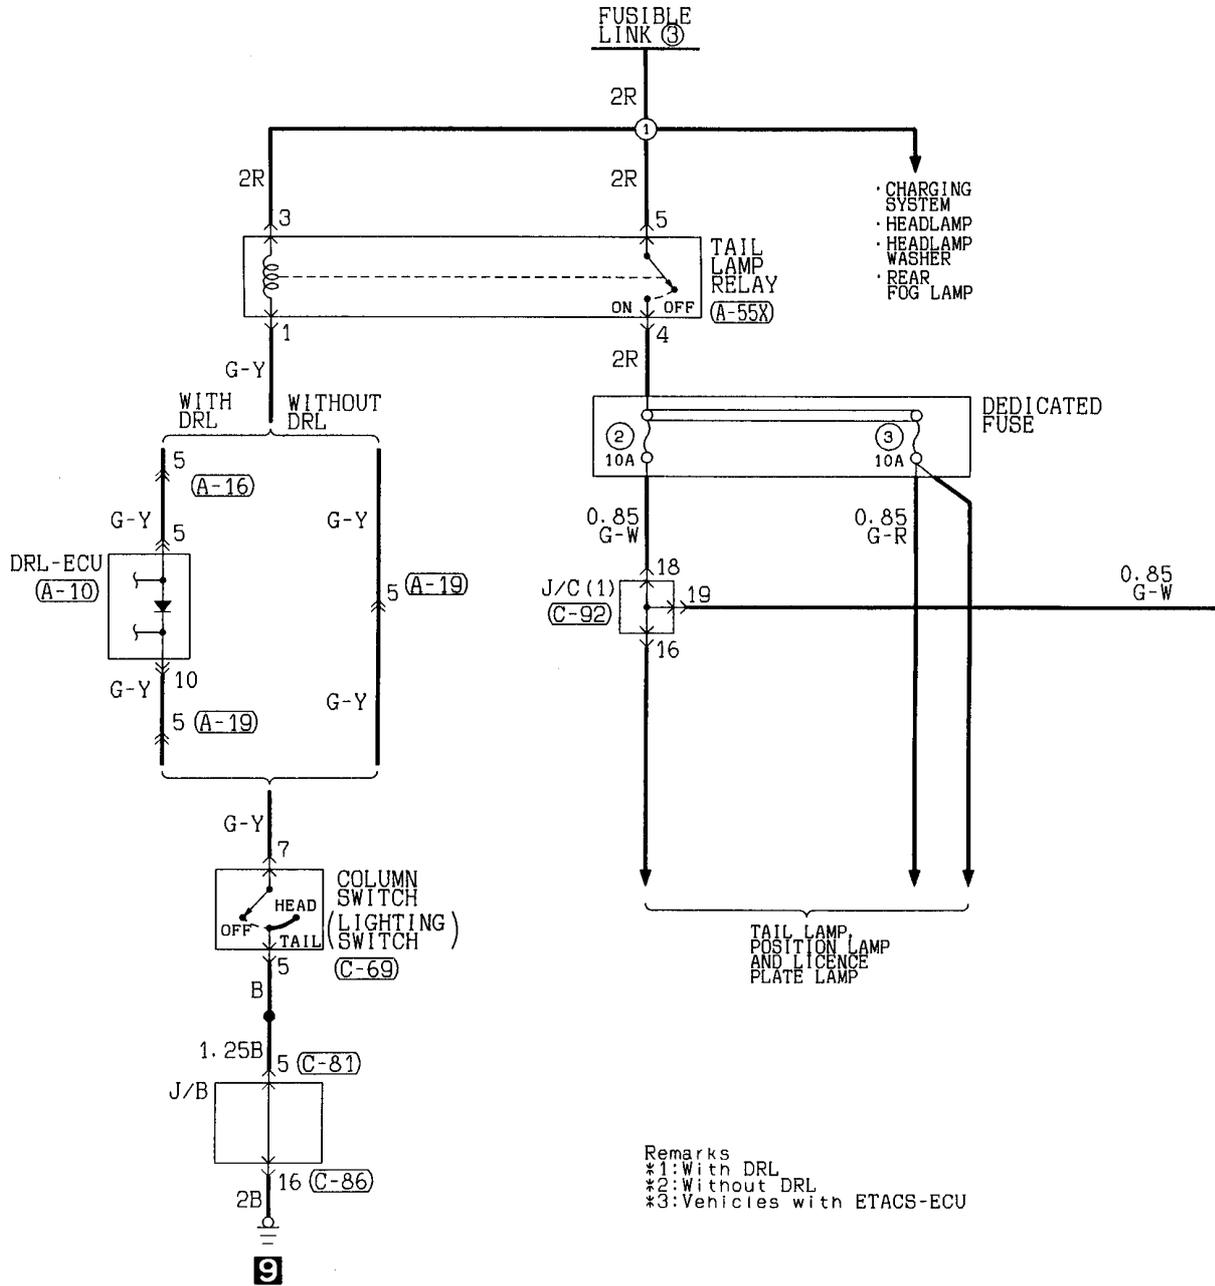

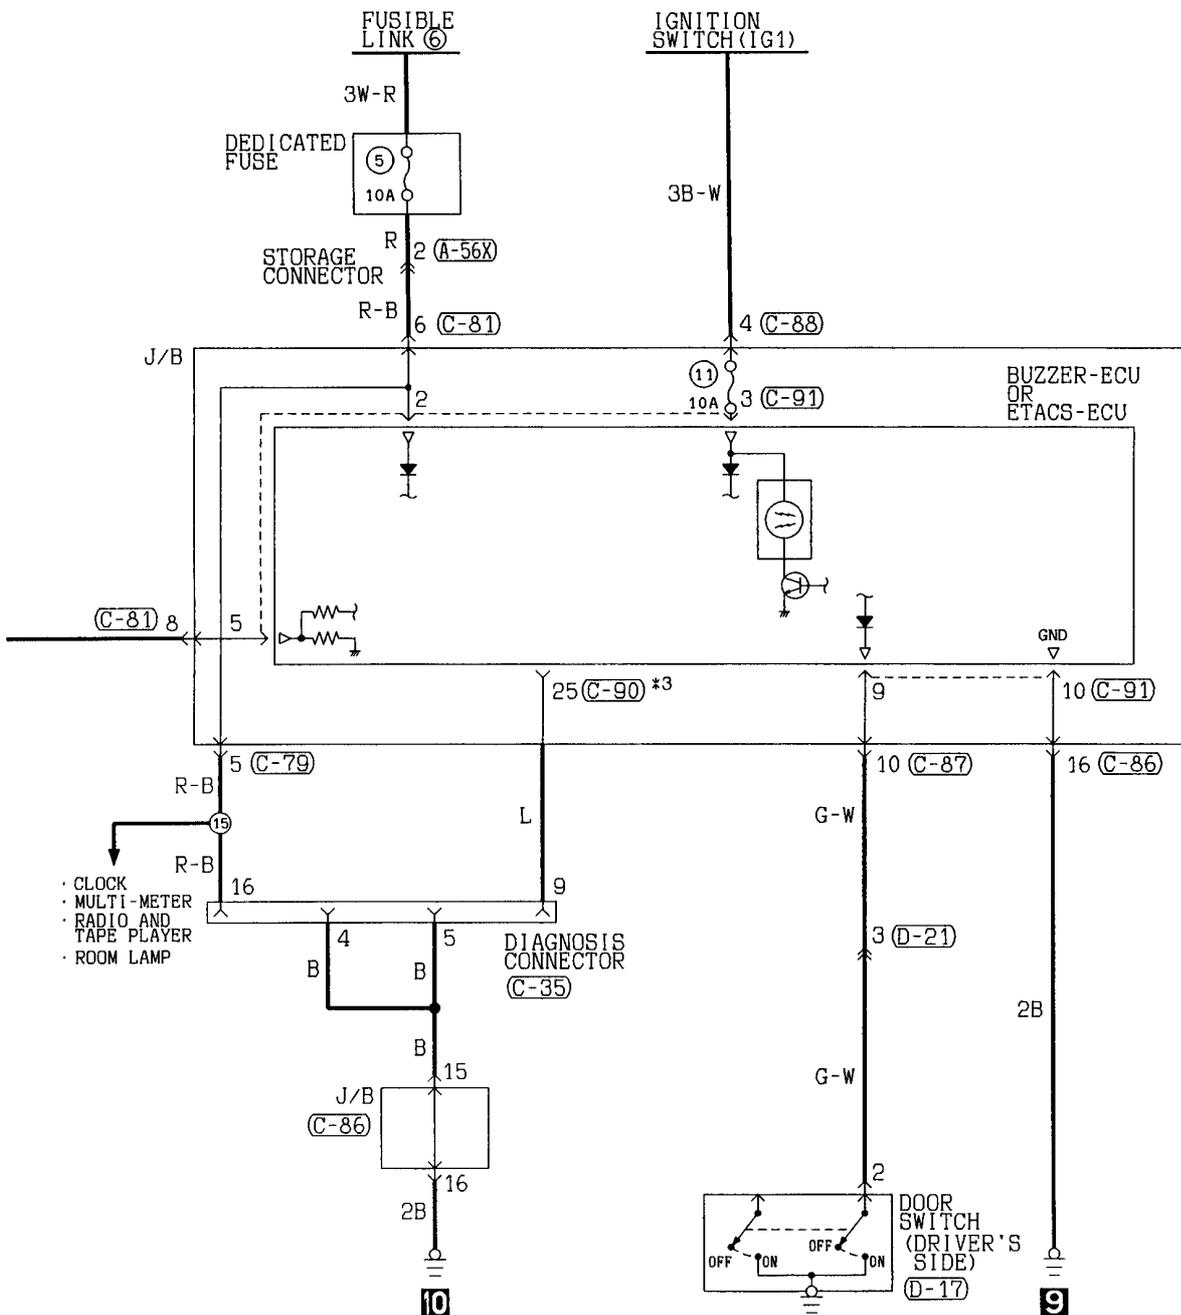

(C-81)

1	2	3	4	5
6	7	8	9	10
11	12			

(C-86)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

(C-87)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

(C-88)

1	2
3	4

(C-90)

21	22	23
24	25	26
27	28	


(C-91)

1	2	3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	---	---	----	----	----

LIGHTING MONITOR BUZZER

90101140155


R.H. drive vehicles <1997 Models>

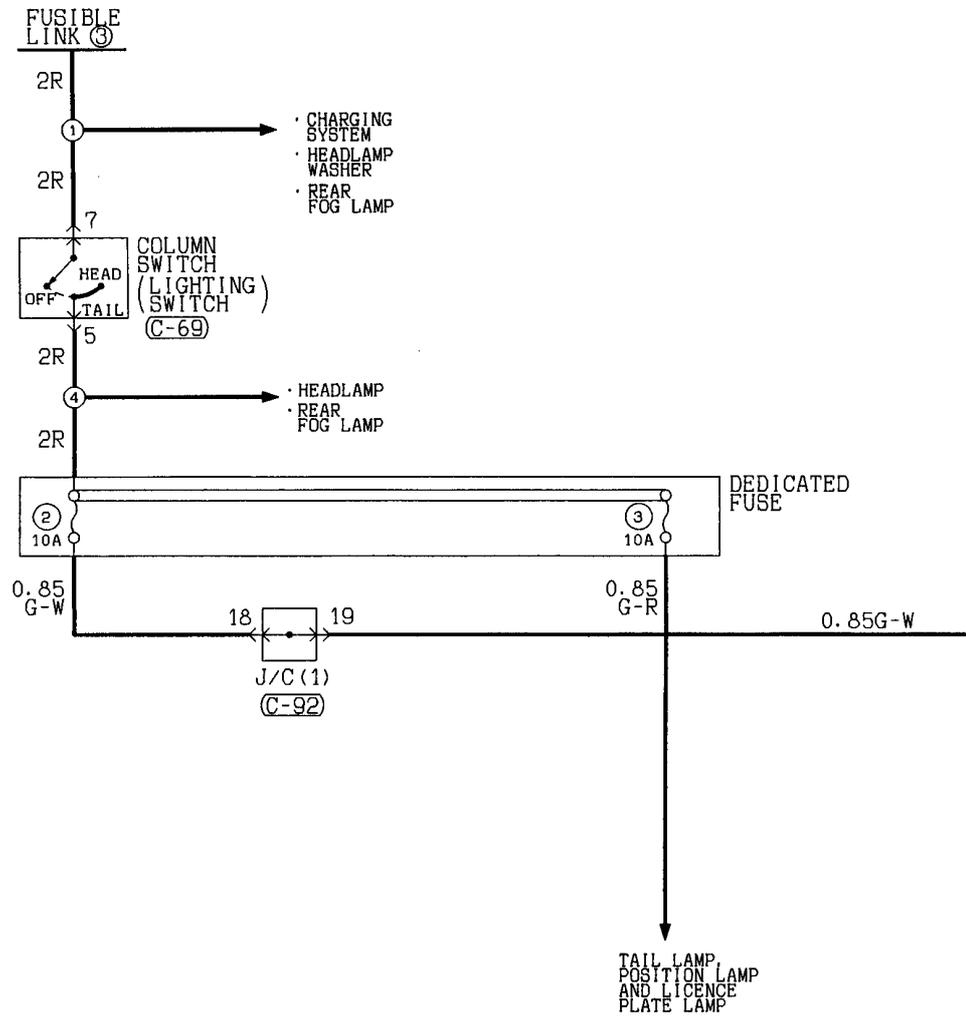


(A-56X)




(C-35) FRONT SIDE

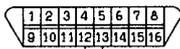


(C-69)

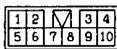


(C-79)

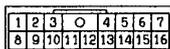


(C-81)

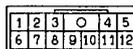


(C-86)

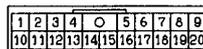


(C-87)

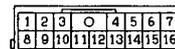

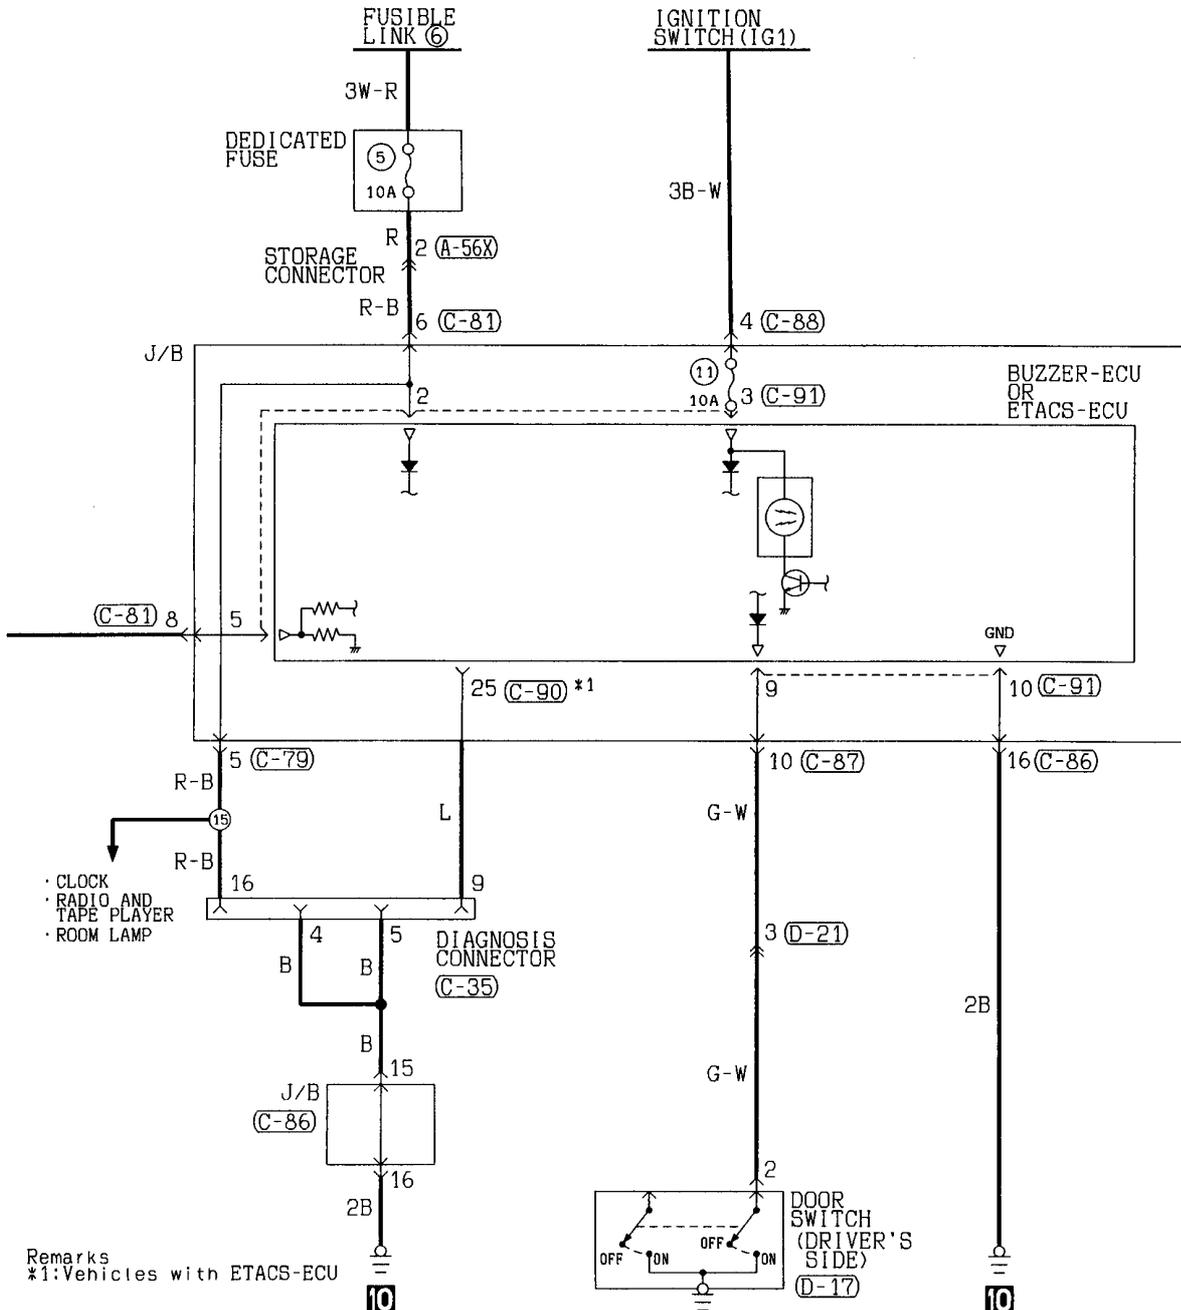


Remarks
*1: Vehicles with ETACS-ECU

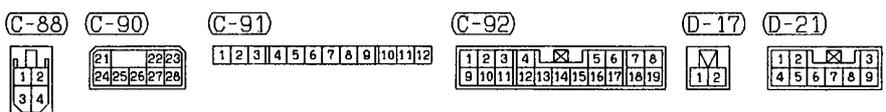

LIGHTING MONITOR BUZZER

90101140384


R.H. drive vehicles <1998 Models>

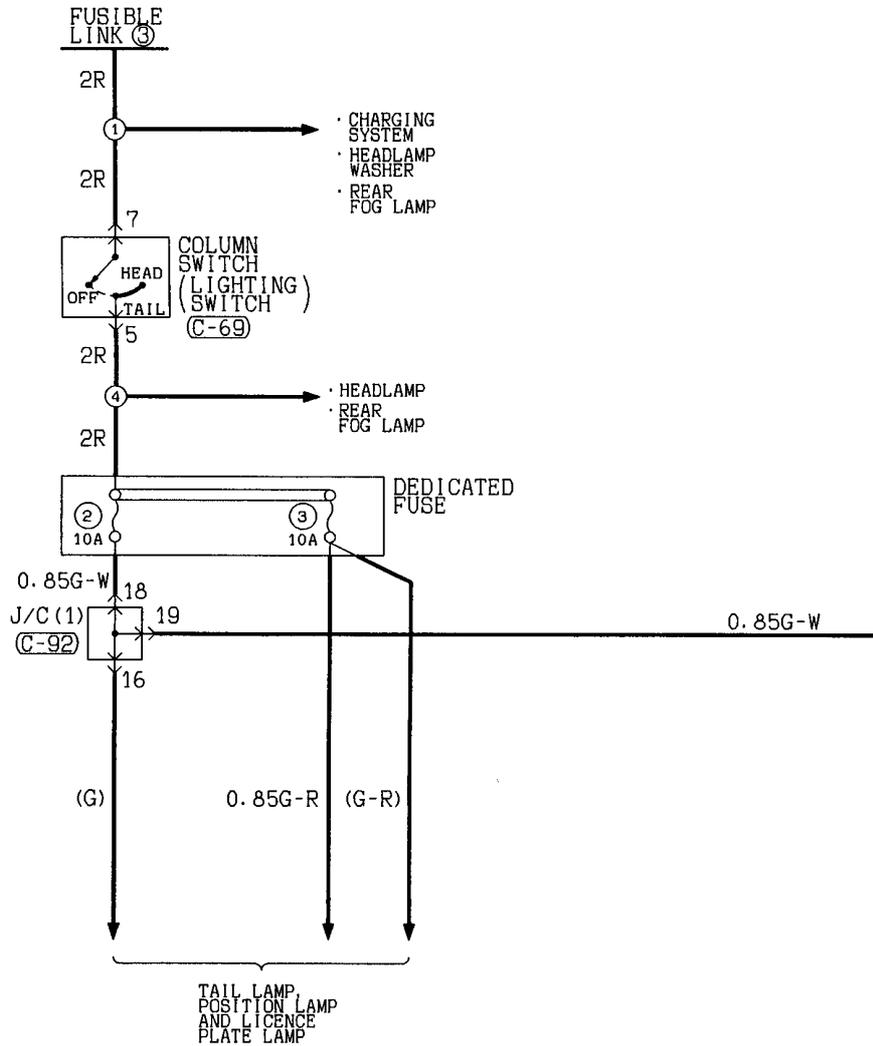


(A-56X)




(C-35) FRONT SIDE

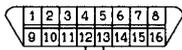


(C-69)

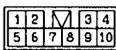


(C-79)

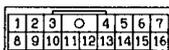


(C-81)

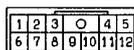


(C-86)

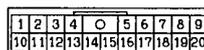

(C-87)

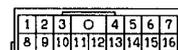

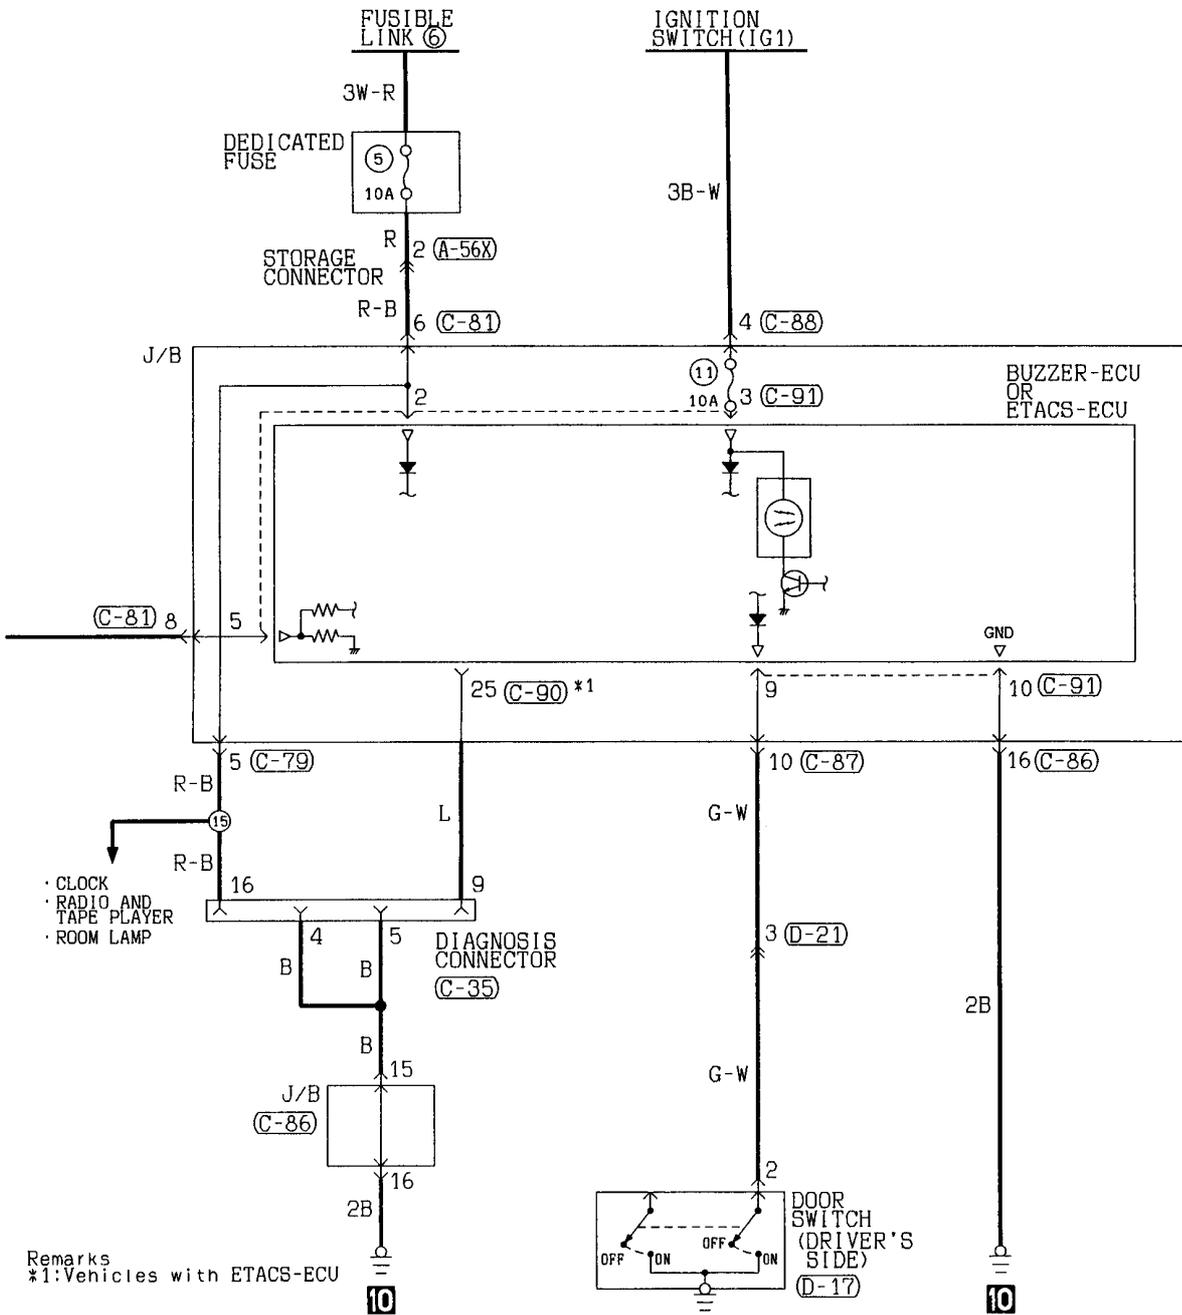


Remarks
*1: Vehicles with ETACS-ECU



(C-88)	(C-90)	(C-91)	(C-92)	(D-17)	(D-21)																																																									
<table border="1"><tr><td>1</td><td>2</td></tr><tr><td>3</td><td>4</td></tr></table>	1	2	3	4	<table border="1"><tr><td>21</td><td>22</td><td>23</td></tr><tr><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td></tr></table>	21	22	23	24	25	26	27	28	<table border="1"><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td></tr></table>	1	2	3	4	5	6	7	8	9	10	11	12	<table border="1"><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>L</td><td>5</td><td>6</td><td>7</td><td>8</td></tr><tr><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td></tr></table>	1	2	3	4	L	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	<table border="1"><tr><td>M</td><td>1</td><td>2</td></tr></table>	M	1	2	<table border="1"><tr><td>1</td><td>2</td><td>L</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr></table>	1	2	L	3	4	5	6	7	8	9
1	2																																																													
3	4																																																													
21	22	23																																																												
24	25	26	27	28																																																										
1	2	3	4	5	6	7	8	9	10	11	12																																																			
1	2	3	4	L	5	6	7	8																																																						
9	10	11	12	13	14	15	16	17	18	19																																																				
M	1	2																																																												
1	2	L	3																																																											
4	5	6	7	8	9																																																									

HEATED SEAT

90101070041

1997 Models

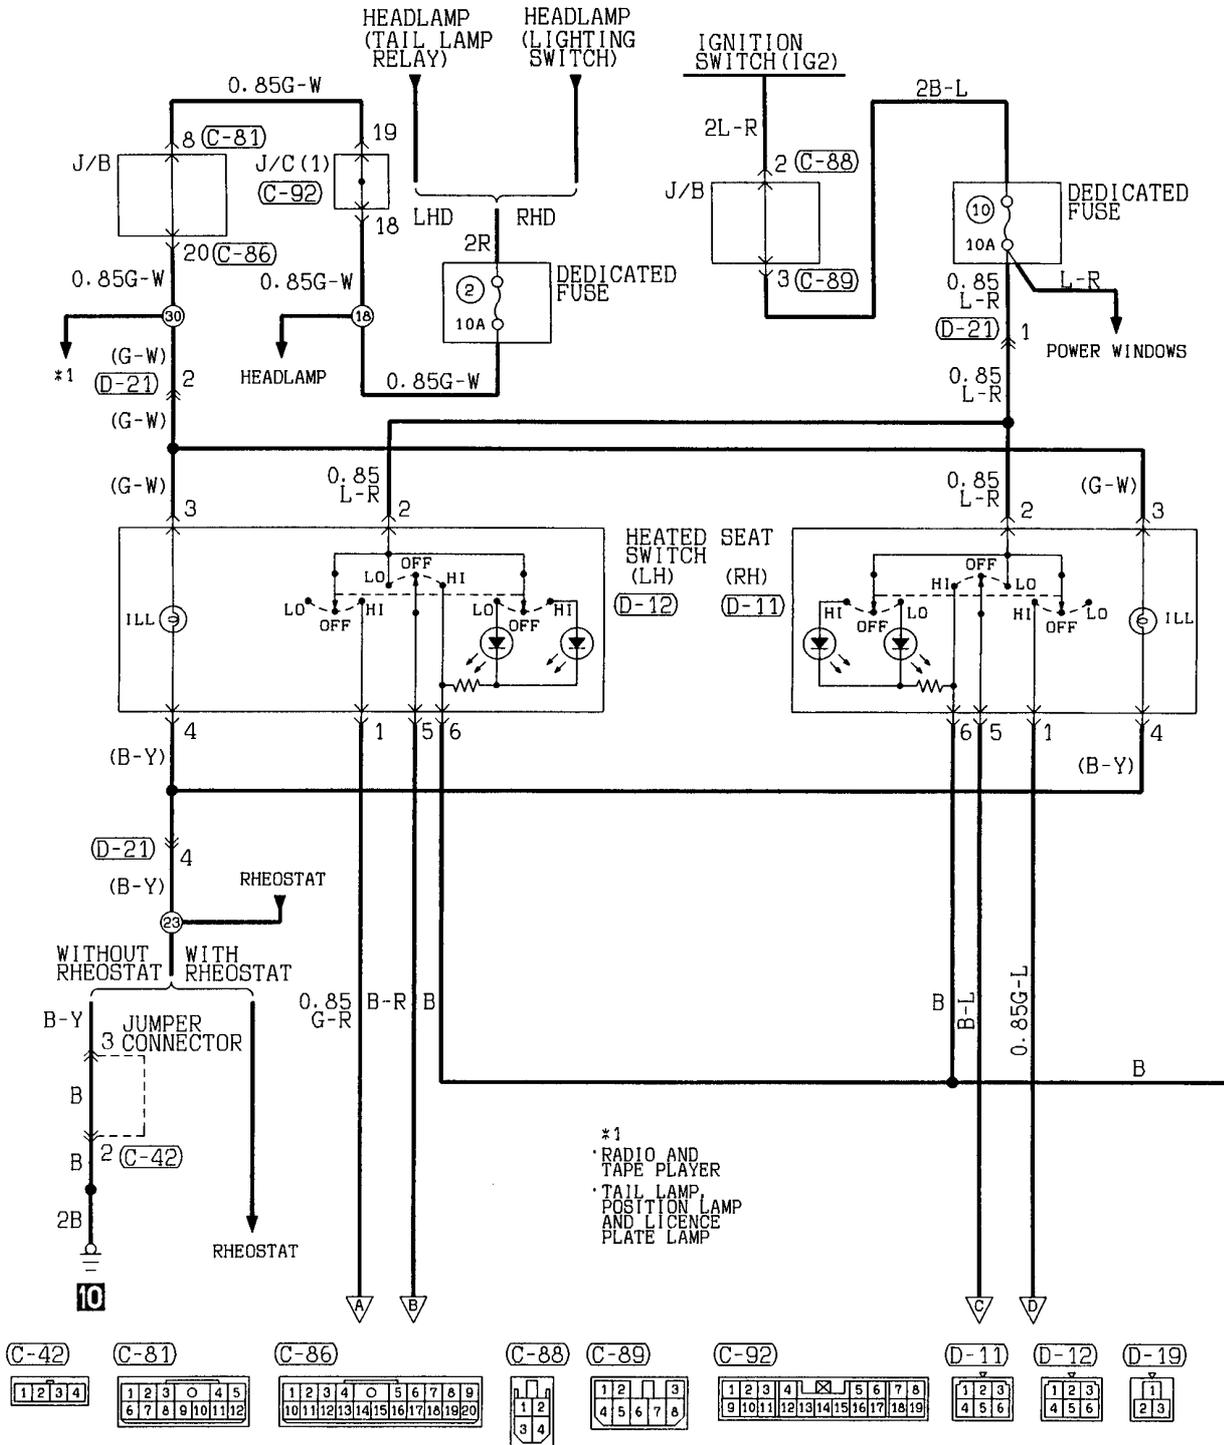


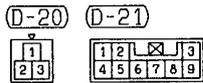
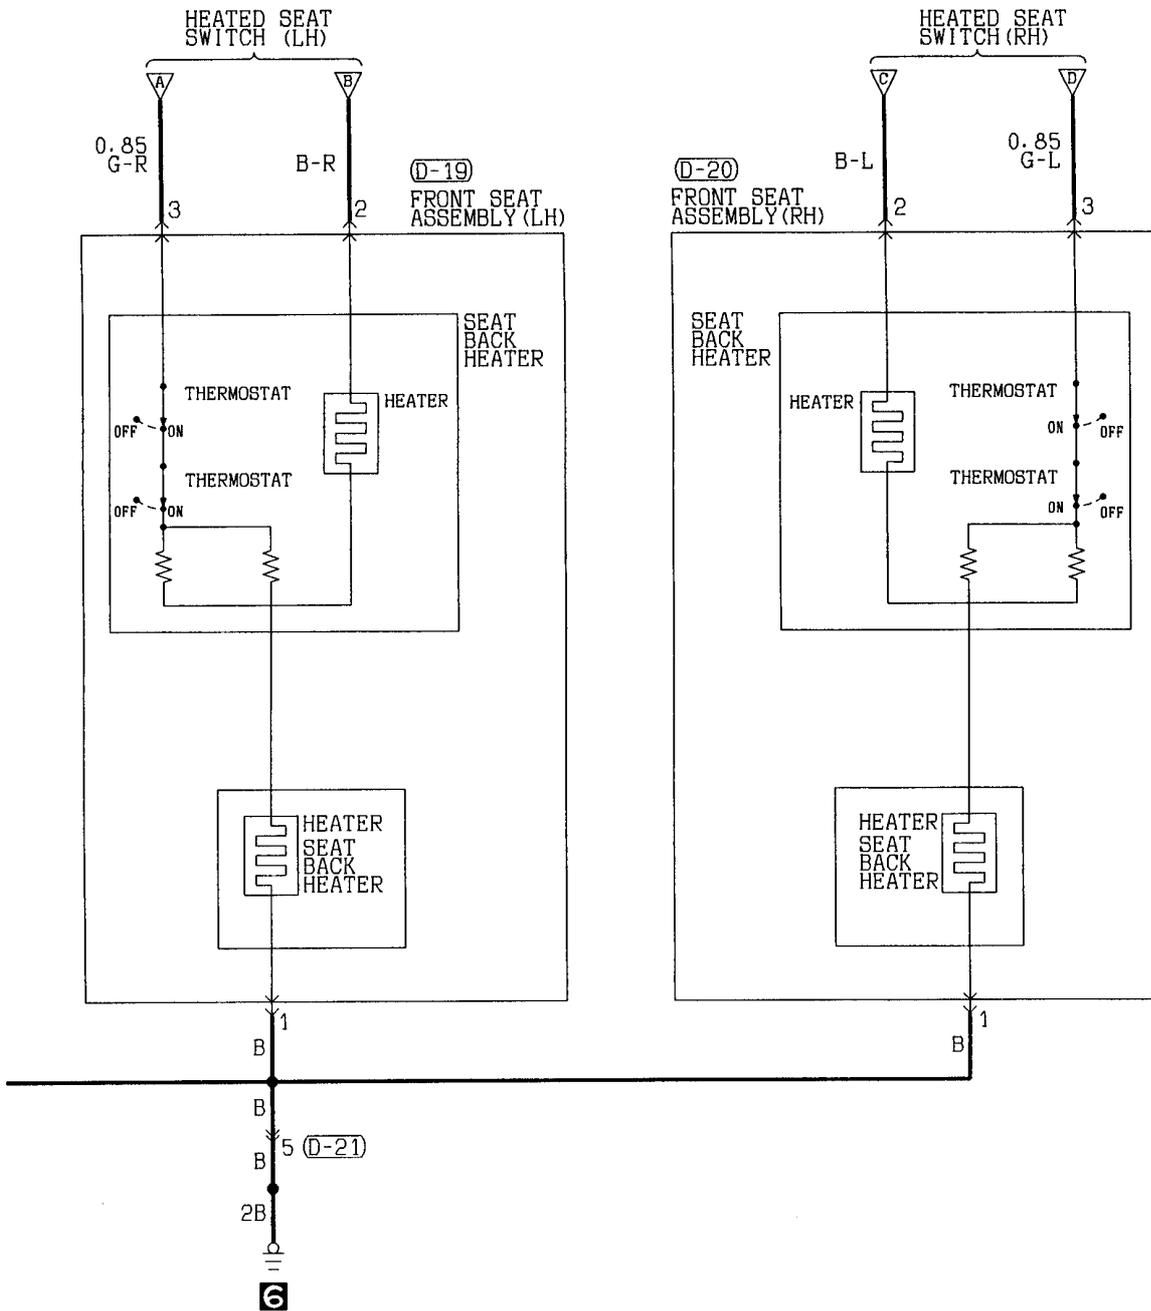


HEATED SEAT

90101070140



1998 Models

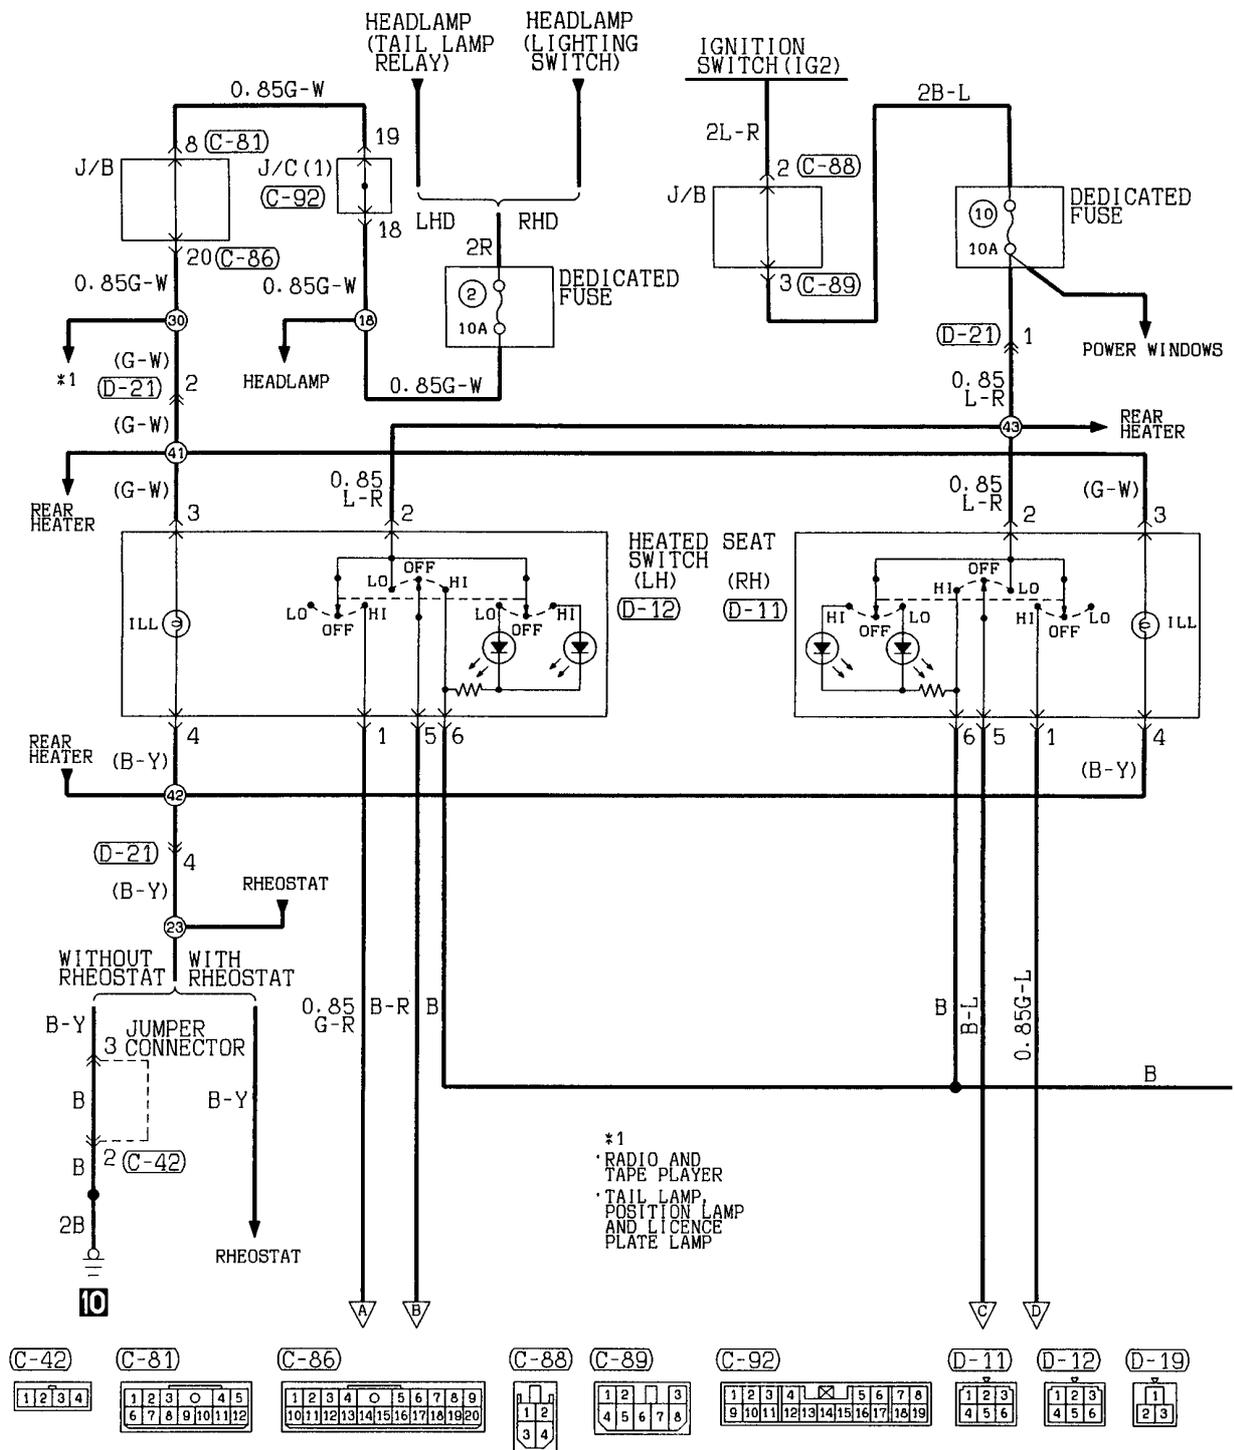

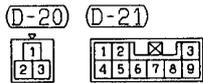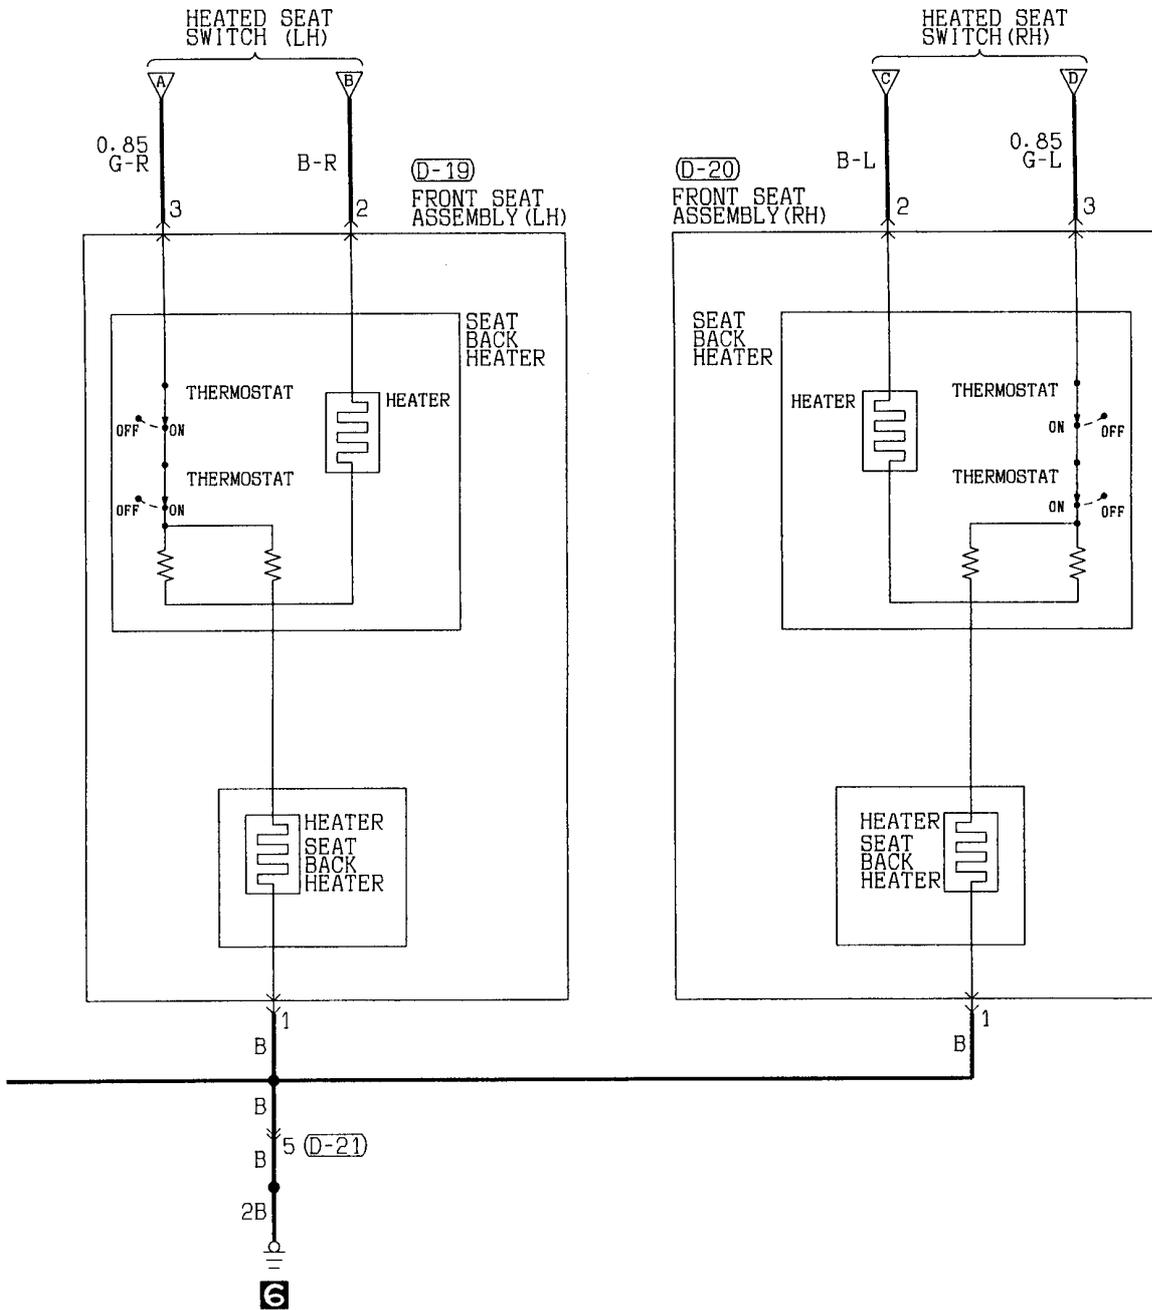


INTERCOOLER FAN

90100890013

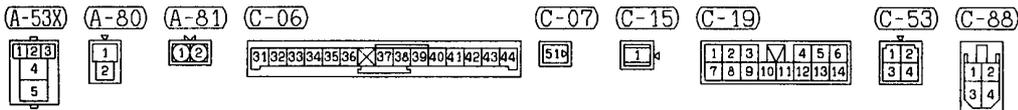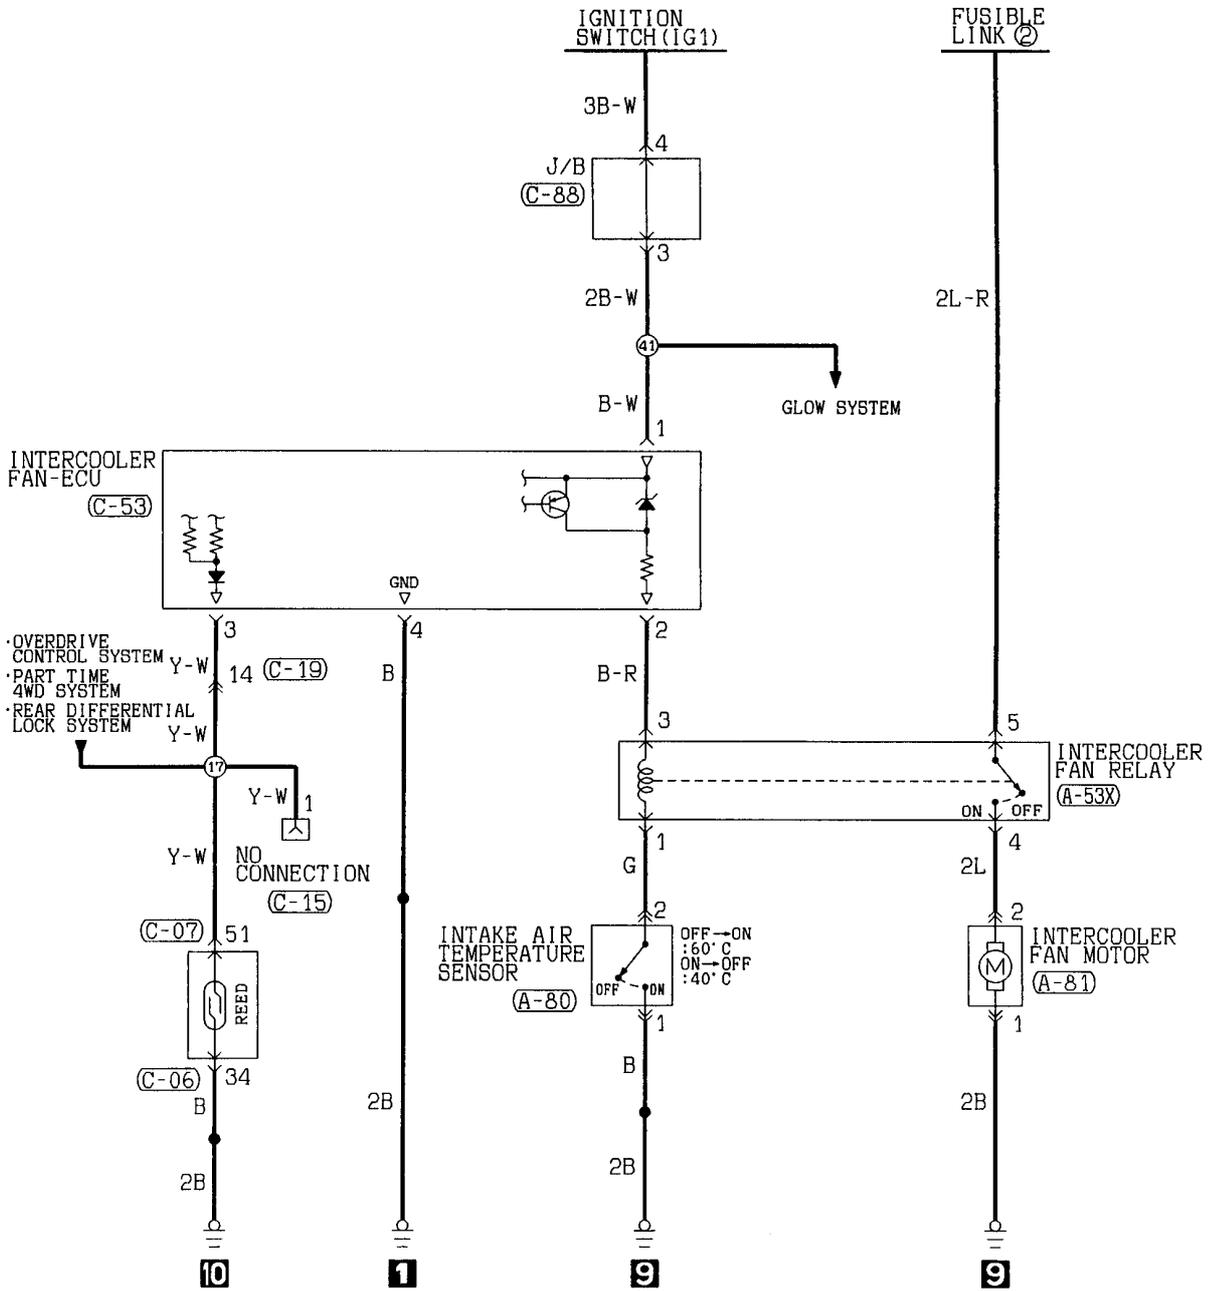

FUEL LINE HEATER

90101480011

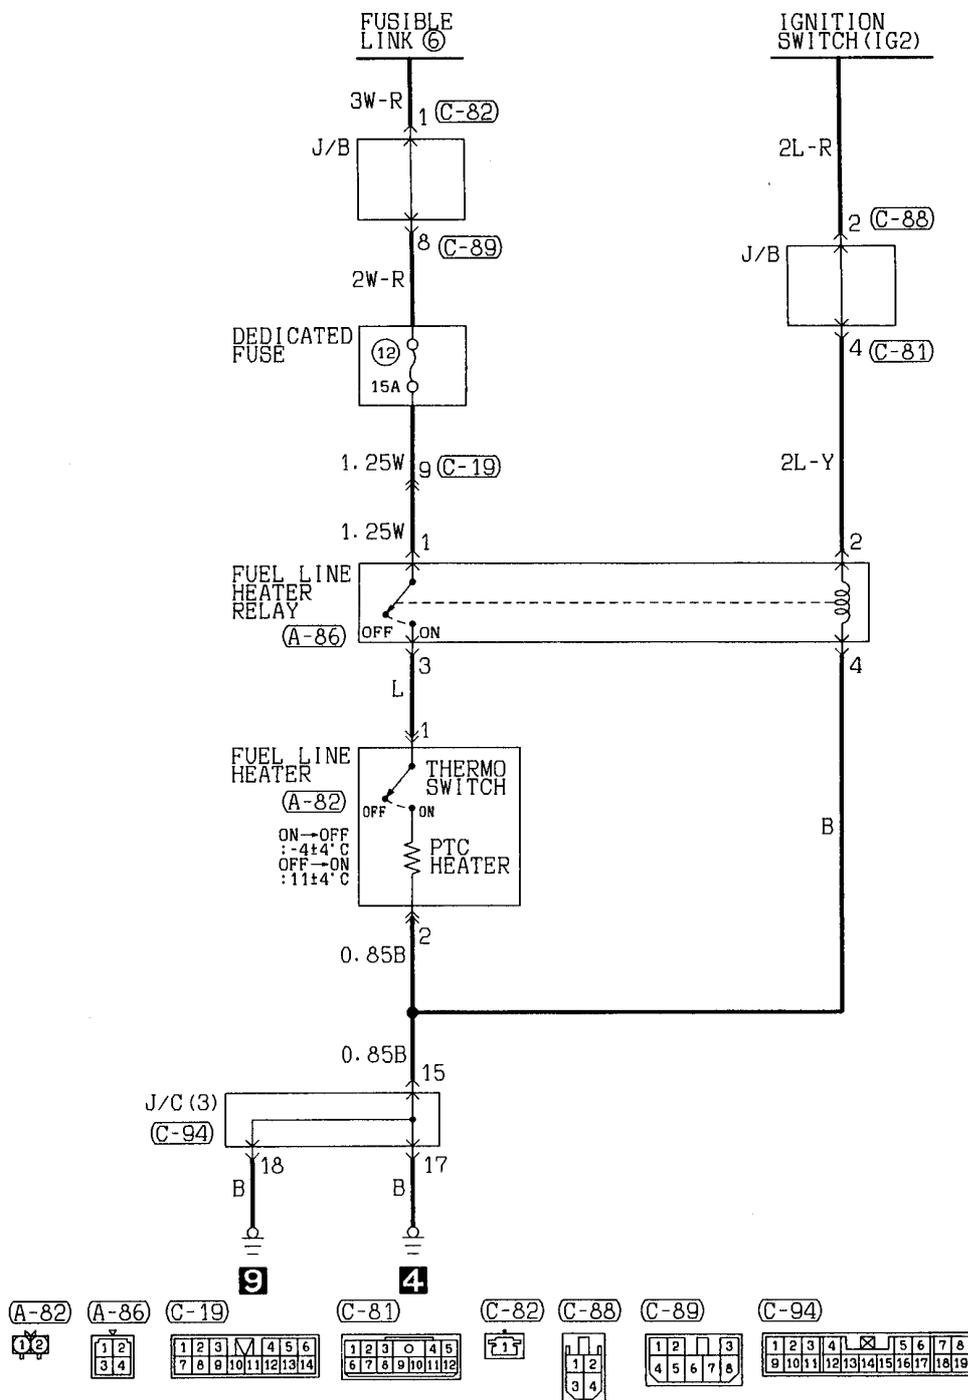

NOTES

INDEX (In order of connector No.)

90109010090

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-01	Wheel speed sensor (front: RH) <2WD-ABS>	4-214	2-4, 8, 12
A-02	Free-wheeling hub engage switch <4WD>	4-219, 224, 226	2-4, 8, 12
A-03	Starter	4-40, 41	2-4, 8, 12
A-04	Starter	4-40, 41	2-4, 8, 12
A-05	Windshield wiper motor	4-186, 187	2-4, 8, 12
A-06	Brake fluid level sensor	4-148	2-4, 8, 12
A-07	Wheel speed sensor (front: LH) <2WD-ABS>	4-214	2-4, 8, 12
A-08	ABS hydraulic unit	4-213, 217	2-4, 8, 12
A-09	ABS hydraulic unit	4-213, 217	2-4, 8, 12
A-10	DRL-ECU	4-83, 87, 100, 102, 110, 111, 114, 115, 209, 228, 229, 242, 244	2-4, 8
A-11	DRL relay 2	4-82, 86	2-4, 8
A-12	DRL relay 1	4-83, 87	2-4, 8
A-13	Rear fog lamp relay	4-110, 114, 118, 122	2-4, 8, 12
A-14	A/C wiring harness and front wiring harness combination <A/C>	4-170, 172, 176, 177, 179, 180, 181	2-4, 8, 12
A-15	Headlamp washer relay	4-189	2-4, 8, 12
A-16	DRL wiring harness or front wiring harness and front wiring harness combination	4-82, 83, 86, 87, 100, 102, 110, 111, 114, 115, 209, 228, 229, 242, 244	2-4, 8
A-17	Battery cable wiring harness and front wiring harness combination <Petrol>	4-40	2-4
A-17	Battery cable wiring harness and front wiring harness combination <Diesel>	4-41, 47, 149	2-8, 12
A-18	Headlamp leveling unit (LH)	4-126, 128	2-4, 8, 12
A-19	DRL wiring harness or front wiring harness and front wiring harness combination	4-83, 84, 87, 88, 90, 91, 92, 93, 100, 102, 110, 111, 114, 115, 209, 228, 229, 242, 244	2-5, 8
A-20	Headlamp (LH)	4-82, 86, 90, 92, 96, 98	2-5, 8, 12
A-21	Headlamp washer motor	4-189	2-5, 9, 13
A-22	Horn (LO)	4-142, 143	2-5, 9, 13
A-23	Horn (LO)	4-142, 143	2-5, 9, 13
A-24	Front combination lamp (LH)	4-100, 102, 104, 106, 135, 137	2-5, 9, 13
A-25	Outside thermo sensor <with multi-meter> or no connection <without multi-meter>	4-151	2-9

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-26	Windshield washer motor	4-186, 187	2-5, 9, 13
A-27	Front impact sensor (LH) <SRS>	4-231, 233	2-5, 9, 13
A-28	Wheel speed sensor (front: LH) <4WD-ABS>	4-218	2-5, 9, 13
A-29	Front impact sensor (RH) <SRS>	4-231, 233	2-5, 9, 13
A-30	Wheel speed sensor (front: RH) <4WD-ABS>	4-218	2-5, 9, 13
A-31	Front combination lamp (RH)	4-100, 102, 104, 106, 135, 137	2-5, 9, 13
A-32	Horn (HI)	4-142, 143	2-5, 9, 13
A-33	Horn (HI)	4-142, 143	2-5, 9, 13
A-34	Headlamp (RH)	4-82, 86, 90, 92, 96, 98	2-5, 9, 13
A-35	Headlamp leveling unit (RH)	4-126, 128	2-5, 9, 13
A-36	Solenoid valve 1 <4WD>	4-225, 227	2-5, 9, 13
A-37	Solenoid valve 2 <4WD>	4-225, 227	2-5, 9, 13
A-38	ABS motor relay	4-213, 217	2-5, 9, 13
A-39	ABS valve relay	4-213, 217	2-5, 9, 13
A-40	Horn relay <SRS>	4-142	2-5, 9, 13
A-41	Fuel pump check connector	4-51, 59	2-6
A-42	Ignition timing adjustment connector	4-43, 44, 55, 63	2-6
A-43	Engine coolant temperature switch <A/T>	4-67, 71	2-6
A-44	Engine coolant temperature gauge unit	4-144	2-6
A-45	Injector 4	4-54, 62	2-6
A-46	Injector 3	4-54, 62	2-6
A-47	Throttle position sensor	4-54, 62	2-6
A-48	Purge control solenoid valve	4-54, 62	2-6
A-49	EGR solenoid valve	4-54, 62	2-6
A-50	Idle speed control servo	4-55, 63	2-6
A-51X	Alternator relay	4-13, 46, 47	2-6, 10, 14
A-52X	Starter relay <Petrol (A/T) and Diesel>	4-13, 40, 41	2-6, 10, 14
A-53X	Intercooler fan relay	4-13, 254	2-6, 10
A-54X	Headlamp relay	4-13, 18, 24, 30, 36, 82, 86, 90, 92, 96, 98, 110, 114, 118, 122	2-6, 10, 14
A-55X	Tail lamp relay	4-13, 18, 24, 83, 87, 91, 93, 97, 99, 100, 102, 111, 115, 119, 123, 228, 229, 242, 244	2-6, 10, 14

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-56X	Storage connector	4-13, 17, 23, 29, 35, 50, 58, 130, 131, 133, 151, 153, 154, 156, 158, 202, 203, 204, 206, 208, 209, 210, 212, 216, 230, 232, 235, 237, 239, 241, 243, 245, 247, 249	2-6, 10, 14
A-57	Injector 2	4-54, 62	2-6
A-58X	A/C compressor relay	4-13, 172, 177, 181	2-6, 10, 14
A-59X	Condenser fan relay	4-13, 172, 176, 180	2-6, 10, 14
A-60X	Condenser fan control relay	4-13, 176, 180	2-10, 14
A-61	Injector 1	4-54, 62	2-7
A-62	Noise filter	4-43, 44, 52, 60	2-7
A-63	Noise filter	4-43, 44, 52, 60	2-7
A-64	Engine coolant temperature sensor	4-55, 63	2-7
A-65	Ignition coil	4-43, 44, 52, 60	2-7
A-66	Capacitor <A/C>	4-172, 176, 180	2-7, 10, 14
A-67	Dual pressure switch <A/C>	4-172, 177, 181	2-7, 10, 14
A-68	Magnetic clutch <A/C>	4-172, 177, 181	2-7, 10, 14
A-69	Condenser fan motor <A/C>	4-172, 176, 180	2-7, 10, 14
A-70	Power transistor	4-43, 44, 52, 60	2-7
A-71	Capacitor	4-43, 44, 51, 59	2-7
A-72	Distributor assembly	4-43, 44, 52, 60	2-7
A-73	Oil pressure switch	4-149	2-7, 10, 14
A-74	Power steering oil pressure switch	4-55, 63	2-7
A-75	Alternator	4-46, 47	2-7, 10, 14
A-76	Alternator	4-46, 47	2-7, 10, 14
A-77	Air flow sensor	4-55, 63	2-7
A-78	Glow plug	4-48	2-10, 14
A-79	Idle-up solenoid valve <ABS-M/T>	4-214, 218	2-10, 14
A-80	Intake air temperature switch	4-254	2-11, 14
A-81	Intercooler fan motor	4-254	2-11, 14
A-82	Fuel line heater	4-255	2-11
A-83	Water level switch	4-149	2-11, 14
A-84	Idle-up solenoid valve <A/C>	4-177, 181	2-11, 15

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
A-85	Vacuum switch	4-148	2-11, 15
A-86	Fuel line heater relay	4-255	2-11
A-87	Glow plug relay	4-48	2-11, 15
A-88	Glow plug relay	4-48	2-11, 15
A-89	Glow plug relay	4-48	2-11, 15
A-90	Fuel cut valve ECU	4-238, 240	2-11, 15
A-91	Fuel injection pump wiring harness and front wiring harness combination	4-48, 49, 144, 145	2-11, 15
A-92	Fuel cut solenoid valve	4-49	2-11, 15
A-93	Revolution pick-up sensor	4-145	2-11, 15
A-94	Lever (throttle) position switch <A/C-A/T>	4-179	2-11
A-95	Engine coolant temperature switch (for A/C compressor control)	4-177, 181	2-11, 15
A-96	Engine coolant temperature switch (for condenser fan control)	4-176, 180	2-11, 15
A-97	Engine coolant temperature sensor and gauge unit	4-49, 144	2-11, 15
A-98	Dim-dip lamp relay 3	4-96, 98	2-15
A-99	Dim-dip lamp relay 2	4-96, 98	2-15
A-100	Dim-dip lamp relay 1	4-96, 98	2-15
A-101	Dim-dip lamp resistor	4-96, 98	2-15

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
B-01	Inhibitor switch <A/T>	4-68, 72, 76, 80, 140	2-16
B-02	Back-up lamp switch <Diesel 4WD>	4-140	2-16
B-03	Oxygen sensor <MPI>	4-54, 62	2-16
B-04	4WD detection switch	4-219, 220, 222, 225, 227	2-16
B-05	High range/Low range detection switch	4-225, 227	2-16
B-06	Overdrive solenoid valve <A/T>	4-67, 71, 75, 79	2-16
B-07	Back-up lamp switch <Except diesel 4WD>	4-140	2-16

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C-01	Body wiring harness and front wiring harness combination	4-19, 25, 31, 37, 46, 47, 49, 53, 61, 67, 68, 71, 72, 76, 80, 82, 86, 90, 92, 96, 98, 101, 103, 105, 107, 112, 116, 120, 124, 127, 129, 134, 135, 136, 137, 142, 143, 148, 151, 160, 162, 166, 172, 177, 179, 181, 186, 187, 193, 202, 203, 204, 206, 208, 209, 210	2-18, 24
C-02	Body wiring harness and front wiring harness combination	4-212, 214, 215, 216, 218, 219	2-18, 24
C-03	Body wiring harness and roof wiring harness combination <with defogger> or no connection <without defogger>	4-190, 192, 194	2-18, 24
C-04	Combination meter	4-46, 47, 49, 50, 58, 75, 79, 112, 116, 120, 124, 144, 145, 148, 149, 193, 212, 216, 224, 226	2-18, 24
C-05	Combination meter	4-69, 73, 77, 81, 135, 137, 145, 212, 216	2-18, 24
C-06	Combination meter	4-46, 47, 49, 50, 56, 58, 64, 67, 69, 71, 73, 75, 77, 79, 81, 82, 86, 90, 92, 96, 98, 112, 116, 120, 124, 130, 131, 135, 137, 144, 145, 146, 148, 149, 193, 212, 216, 221, 223, 224, 226, 231, 233, 254	2-18, 24
C-07	Combination meter	4-56, 64, 67, 71, 75, 79, 145, 221, 223, 224, 226, 254	2-18, 24
C-08	Defogger switch or no connection	4-190, 192, 193, 194	2-18
C-09	Hazard switch	4-134, 136	2-18, 24
C-10	A/C switch	4-171, 175, 179	2-18, 24
C-11	Clock	4-209, 210	2-18, 24
C-12	Blower switch	4-169, 170, 174, 178	2-18, 24
C-13	Radio and tape player	4-202, 203, 204, 206, 208	2-18, 24
C-14	Cigarette lighter	4-211	2-18, 24
C-15	No connection (reed switch)	4-56, 64, 67, 71, 75, 79, 145, 221, 223, 224, 226, 254	2-18, 24
C-16	Body wiring harness and front door wiring harness (passenger's side) combination	4-193, 195, 196, 197, 198, 199	2-18, 24
C-17	Body wiring harness and front door wiring harness (passenger's side) combination	4-160, 162, 166	2-18, 24
C-18	Body wiring harness and front door wiring harness (passenger's side) combination	4-152, 156, 157	2-18, 24

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C-19	Body wiring harness and front wiring harness combination <Petrol>	4-40, 43, 44, 50, 51, 52, 53, 56, 58, 59, 60, 61, 64, 68, 72, 144, 145, 148, 149, 224, 225, 226, 227, 234, 236	2-18
C-19	Body wiring harness and front wiring harness combination <Diesel>	4-41, 48, 49, 76, 80, 144, 145, 148, 149, 208, 210, 224, 225, 226, 227, 238, 240, 254, 255	2-18, 24
C-20	Body wiring harness and front wiring harness combination	4-230, 231, 232, 233	2-19, 25
C-21	Rear differential lock-ECU	4-220, 222	2-19, 25
C-22	4WD indicator-ECU	4-224, 225, 226, 227	2-19, 25
C-23	Blower motor	4-169, 170, 174, 178	2-19, 25
C-24	Blower resistor	4-169, 170, 174, 178	2-19, 25
C-25	Ashtray illumination lamp	4-211	2-19, 25
C-26	G sensor <ABS>	4-219	2-19, 25
C-27	SRS diagnosis unit	4-230, 231, 232, 233	2-19, 25
C-28	SRS diagnosis unit	4-231, 233	2-19, 25
C-29	Overdrive switch	4-66, 70, 74, 78	2-19
C-30	Cigarette lighter	4-211	2-19, 25
C-31	Parking brake switch	4-148	2-19, 25
C-32	Headlamp leveling switch	4-127, 129	2-19, 25
C-33	Rear differential lock switch	4-220, 221, 222, 223	2-19, 25
C-34	Stop lamp switch	4-139, 212, 216	2-19, 25
C-35	Diagnosis connector	4-56, 64, 133, 153, 154, 158, 214, 218, 230, 232, 235, 237, 239, 241, 243, 245, 247, 249	2-19, 25
C-36	Immobilizer-ECU	4-56, 64, 234, 236, 238, 240	2-19, 25
C-37	Overdrive control relay	4-67, 71, 75, 79	2-19
C-38	Body wiring harness and front door wiring harness (driver's side) combination	4-152, 156	2-19, 25
C-39	Body wiring harness and front door wiring harness (driver's side) combination	4-160, 161, 162, 163, 166, 167	2-19, 25
C-40	Body wiring harness and front door wiring harness (driver's side) combination	4-193, 195, 196, 197, 198, 199	2-19, 25
C-41	Rear fog lamp switch	4-112, 116, 120, 124	2-20, 26

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C-42	Rheostat or joint connector	4-69, 73, 77, 81, 112, 116, 120, 124, 127, 129, 134, 136, 146, 169, 171, 175, 176, 183, 184, 202, 203, 204, 206, 208, 220, 222, 228, 229, 250, 252	2-20, 26
C-43	Body wiring harness and instrument panel wiring harness combination	4-202, 203, 205, 207, 208	2-20, 26
C-44	Body wiring harness and instrument panel wiring harness combination	4-151	2-20
C-45	Multi-meter	4-151	2-20
C-46	Thermostat	4-171, 175, 179	2-20, 26
C-47	Compressor-ECU	4-179	2-20
C-48	Diode (for ABS circuit)	4-212, 216	2-20, 26
C-49	Engine-ECU <Petrol>	4-43, 44, 50, 51, 52, 55, 56, 58, 59, 60, 62, 64, 172	2-20
C-49	Glow-ECU <Diesel>	4-48, 50	2-20, 26
C-50	Engine-ECU <Petrol>	4-43, 50, 54, 56, 58, 62, 64, 172, 234	2-20
C-51	Engine-ECU <Petrol> (1997 Model year)	4-43, 50, 51, 52, 53, 55, 56	2-20
C-51	Engine-ECU <Petrol> (1998 Model year)	4-44, 62, 63, 64, 236	2-20
C-52	Side turn signal lamp (RH)	4-135, 137	2-20, 26
C-53	Engine control relay <Petrol>	4-50, 58	2-20
C-53	Inter cooler fan-ECU <Diesel>	4-254	2-20, 26
C-54	Fuel pump relay <Petrol>	4-51, 59	2-20
C-55	Front speaker (RH)	4-202, 203, 205, 207, 208	2-21, 26
C-56	Thermostat wiring harness and body wiring harness combination	4-171, 175, 179	2-21, 26
C-57	Body wiring harness and transmission wiring harness combination	4-40, 41, 48, 53, 61, 67, 68, 71, 72, 75, 76, 79, 80, 140, 230	2-21
C-58	Body wiring harness and transmission wiring harness combination	4-219, 220, 222, 225, 227	2-21, 27
C-59	Body wiring harness and transmission wiring harness combination	4-140	2-21, 27
C-60	Front wiring harness and transmission wiring harness combination	4-54, 62	2-21
C-61	Side turn signal lamp (LH)	4-135, 137	2-21, 27
C-62	ABS-ECU	4-212, 213, 214, 215, 217, 218, 219	2-21, 27
C-63	Front speaker (LH)	4-202, 203, 205, 207, 208	2-21, 27

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C-64	ABS-ECU	4-55, 212, 213, 214, 215, 216, 217, 218, 219	2-21, 27
C-65	Diode (for dim-dip lamp circuit)	4-97, 99, 118, 122	2-27
C-66	Diode (for dim-dip lamp circuit)	4-96, 98	2-27
C-67	Column switch	4-84, 88, 91, 93, 97, 99, 110, 114, 118, 122, 189	2-22, 28
C-68	Column switch	4-143, 186, 187	2-22, 28
C-69	Column switch	4-30, 36, 84, 88, 91, 93, 97, 99, 100, 102, 104, 106, 111, 115, 119, 123, 135, 137, 189, 228, 229, 242, 244, 246, 248	2-22, 28
C-70	Ignition switch	4-19, 25, 31, 37	2-22, 28
C-71	Ignition key ring antenna	4-234, 236, 238, 240	2-22, 28
C-72	Key reminder switch	4-133	2-22, 28
C-73	Diode (for headlamp and rear fog lamp circuit)	4-84, 88, 91, 93, 97, 99, 110, 114, 119, 123	2-22, 28
C-74	Clock spring <SRS>	4-142	2-22, 28
C-75	Clock spring <SRS>	4-231, 233	2-22, 28
C-76	Air bag module (squib)	4-231, 233	2-22, 28
C-77	Horn switch	4-142	2-22, 28
C-78X	Power window relay	4-14, 160, 162, 166	2-22, 28
C-79	Body wiring harness and J/B combination	4-4, 5, 46, 47, 49, 50, 58, 66, 70, 74, 75, 78, 79, 112, 116, 120, 124, 130, 131, 133, 134, 135, 136, 137, 144, 148, 151, 153, 154, 158, 190, 193, 194, 196, 197, 198, 199, 202, 203, 204, 206, 208, 209, 210, 211, 212, 216, 220, 221, 222, 223, 224, 226, 230, 231, 232, 233, 235, 237, 239, 241, 243, 245, 247, 249	2-23, 29
C-80	Roof wiring harness and J/B combination	4-4, 5, 130, 131	2-23, 29

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C-81	Front wiring harness and J/B combination	4-4, 5, 21, 27, 33, 39, 46, 47, 50, 58, 66, 70, 74, 78, 83, 84, 87, 88, 91, 93, 97, 98, 99, 101, 103, 105, 107, 110, 112, 114, 116, 118, 120, 122, 124, 127, 129, 130, 131, 133, 134, 135, 136, 137, 146, 148, 151, 153, 154, 156, 158, 169, 170, 174, 178, 182, 186, 187, 189, 190, 193, 194, 202, 203, 204, 206, 208, 209, 210, 211, 212, 216, 220, 222, 228, 229, 230, 232, 235, 237, 239, 241, 243, 244, 245, 247, 249, 250, 252, 255	2-23, 29
C-82	Front wiring harness and J/B combination	4-4, 5, 20, 26, 32, 38, 139, 152, 156, 169, 170, 174, 178, 182, 190, 192, 194, 212, 216, 255	2-23, 29
C-83	Blower relay	4-4, 5, 169, 170, 174, 178	2-23, 29
C-84	Defogger relay	4-4, 5, 26, 38, 190, 194	2-23, 29
C-85	Turn signal and hazard warning flasher unit	4-4, 5, 134, 136	2-23, 29
C-86	Body wiring harness and J/B combination	4-4, 5, 56, 64, 66, 68, 70, 72, 74, 76, 78, 80, 84, 88, 91, 93, 97, 99, 101, 103, 105, 107, 110, 114, 118, 122, 127, 129, 133, 134, 135, 136, 137, 140, 148, 151, 153, 154, 158, 169, 170, 174, 178, 182, 186, 187, 189, 192, 202, 203, 204, 206, 208, 209, 210, 211, 212, 214, 215, 218, 221, 223, 224, 226, 230, 231, 232, 233, 235, 237, 239, 241, 243, 244, 245, 247, 249, 250, 252	2-23, 29
C-87	Body wiring harness and J/B combination	4-4, 5, 26, 38, 50, 58, 66, 70, 74, 78, 96, 130, 131, 133, 134, 135, 136, 137, 146, 149, 169, 170, 174, 178, 186, 187, 190, 194, 195, 210, 212, 216, 228, 229, 231, 233, 235, 237, 238, 240, 243, 245, 247, 249	2-23, 29
C-88	Front wiring harness and J/B combination	4-4, 5, 20, 21, 26, 27, 32, 33, 38, 39, 43, 44, 46, 47, 49, 50, 51, 58, 59, 66, 68, 70, 72, 74, 75, 76, 78, 79, 80, 82, 83, 86, 87, 96, 98, 133, 134, 136, 140, 142, 143, 144, 148, 151, 152, 157, 160, 162, 166, 169, 170, 174, 178, 182, 186, 187, 189, 190, 192, 193, 194, 196, 197, 198, 199, 202, 203, 204, 206, 208, 209, 210, 211, 212, 215, 216, 221, 223, 224, 226, 231, 233, 235, 237, 238, 240, 243, 245, 247, 249, 250, 252, 254, 255	2-23, 29

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
C-89	Body wiring harness and J/B combination	4-4, 5, 20, 21, 26, 27, 32, 33, 38, 39, 66, 70, 74, 78, 82, 86, 139, 142, 143, 160, 162, 166, 169, 170, 174, 178, 182, 190, 192, 194, 212, 216, 250, 252, 255	2-23, 29
C-90	ETACS-ECU	4-133, 152, 153, 154, 157, 158, 243, 245, 247, 249	2-23, 29
C-91	ETACS-ECU or buzzer-ECU	4-4, 5, 133, 152, 153, 154, 156, 158, 243, 245, 247, 249	2-23, 29
C-92	J/C (1)	4-6, 46, 47, 49, 55, 63, 66, 70, 74, 78, 84, 88, 91, 93, 96, 97, 98, 99, 100, 102, 103, 106, 110, 111, 114, 115, 119, 123, 127, 129, 134, 136, 146, 151, 169, 170, 174, 178, 182, 189, 190, 193, 194, 202, 203, 204, 206, 208, 210, 211, 213, 217, 220, 222, 228, 229, 242, 244, 246, 248, 250, 252	2-21, 27
C-93	J/C (2)	4-6, 84, 88, 91, 93, 97, 99, 110, 114, 118, 122, 127, 129, 134, 135, 137, 186, 187, 189, 219, 226	2-21, 27
C-94	J/C (3)	4-7, 43, 44, 50, 52, 54, 58, 60, 62, 83, 87, 96, 98, 145, 149, 170, 174, 178, 189, 224, 238, 240, 255	2-21, 27
C-95	J/C (4)	4-8, 43, 44, 54, 55, 62, 63, 236	2-21
C-96	Defogger relay <Vehicles with defogger timer>	4-44, 192	2-21, 27
C-97	Engine-ECU <Petrol>	4-58, 59, 60, 61, 63, 64	2-21
C-98X	Rear heater relay	4-18, 182	2-23
C-99X	Defogger timer	4-18, 192	2-23, 29

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-01	Body wiring harness and frame wiring harness combination	4-212, 214, 215, 218	2-30, 31, 32, 33
D-02	Body wiring harness and frame wiring harness combination	4-51, 59, 101, 103, 105, 107, 112, 116, 120, 124, 135, 137, 139, 140, 144, 148, 215, 221, 223	2-30, 31, 32, 33
D-03	Front door switch (passenger's side)	4-130, 131	2-30, 31, 32, 33
D-04	Floor wiring harness and rear door wiring harness (RH) combination	4-164, 168	2-33
D-05	Front wiring harness and rear door wiring harness (RH) combination	4-157, 205	2-33
D-06	Map lamp	4-131	2-33
D-07	Rear door switch (RH)	4-131	2-33

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
D-08	Defogger (-)	4-190, 192, 194	2-30, 31, 32, 33
D-09	Room lamp	4-130, 131	2-30, 31, 32, 33
D-10	Defogger (+)	4-190, 192, 194	2-30, 31, 32, 33
D-11	Heated seat switch (RH)	4-250, 252	2-30, 31, 32, 33
D-12	Heated seat switch (LH)	4-259, 252	2-30, 31, 32, 33
D-13	Parking brake switch	4-148	2-30, 31, 32, 33
D-14	Rear door switch (LH)	4-131	2-33
D-15	Floor wiring harness and rear door wiring harness (LH) combination	4-156, 205, 207	2-33
D-16	Floor wiring harness and rear door wiring harness (LH) combination	4-164, 168	2-33
D-17	Front door switch (driver's side)	4-130, 131, 133, 243, 245, 247	2-30, 31, 32, 33
D-18	No connection	-	2-30, 31, 32, 33
D-19	Front seat assembly (LH)	4-251, 253	2-30, 31, 32, 33
D-20	Front seat assembly (RH)	4-251, 253	2-30, 31, 32, 33
D-21	Body wiring harness and floor wiring harness combination	4-130, 131, 133, 148, 182, 183, 184, 243, 245, 247, 249, 250, 251, 252, 253	2-30, 31, 32, 33
D-22	Body wiring harness and floor wiring harness combination	4-156, 163, 164, 167, 168, 182, 183, 184, 205, 207	2-30, 31, 32, 33
D-23	Rear heater illumination lamp	4-183, 184	2-33
D-24	Rear heater switch	4-183, 184	2-33
D-25	Rear blower motor	4-183, 184	2-33

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
E-01	Remote controlled mirror (LH)	4-196, 197, 198, 199	2-34, 35
E-02	Remote controlled mirror switch	4-196, 215	2-34, 35
E-03	Power window main switch	4-160, 166, 215	2-34, 35
E-04	Power window sub switch (rear: LH)	4-164, 168	2-35
E-05	Door lock actuator (rear: LH)	4-156	2-35
E-06	Rear door speaker (LH)	4-205, 207	2-35
E-07	Power window motor (rear: LH)	4-164, 168	2-35
E-08	Power window limit switch (rear: LH)	4-164, 168	2-35
E-09	Door lock actuator (driver's side)	4-152, 156	2-34, 35

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
E-10	Power window limit switch (driver's side)	4-160, 161, 163, 167	2-34, 35
E-11	Power window motor (driver's side)	4-160, 161, 163, 167	2-34, 35
E-12	Remote controlled mirror (RH)	4-196, 197, 198, 199	2-34, 35
E-13	Power window sub switch (front passenger's side)	4-160, 162, 166	2-34, 35
E-14	Door lock key cylinder switch	4-152	2-34, 35
E-15	Power window sub switch (rear: RH)	4-164, 168	2-35
E-16	Door lock actuator (rear: RH)	4-157	2-35
E-17	Rear door speaker (RH)	4-205, 207	2-35
E-18	Power window motor (rear: RH)	4-164, 168	2-35
E-19	Power window limit switch (rear: RH)	4-164, 168	2-35
E-20	Door lock actuator (front passenger's side)	4-152, 156	2-34, 35
E-21	Power window limit switch (front passenger's side)	4-160, 161, 162, 166	2-34, 35
E-22	Power window motor (front passenger's side)	4-160, 161, 162, 166	2-34, 35
E-23	Remote controlled mirror (LH) <with door mirror heater>	4-195, 197, 199	2-34, 35
E-24	Remote controlled mirror (RH) <with door mirror heater>	4-195, 197, 199	2-34, 35

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
F-01	Wheel speed sensor (rear: RH) <ABS>	4-214	2-36
F-02	Frame wiring harness and position wiring harness combination	4-221, 223	2-36
F-03	Rear differential lock detection switch	4-221, 223	2-36
F-04	Rear differential lock air pump	4-221, 223	2-36
F-05	Frame wiring harness and rear body wiring harness combination	4-101, 103, 105, 107, 112, 116, 120, 124, 135, 137, 139, 140	2-36
F-06	Rear combination lamp (RH) <with cargo bed>	4-101, 103, 105, 107, 135, 137, 139, 140	2-36
F-07	Rear combination lamp (RH) <without cargo bed>	4-101, 103, 105, 107, 135, 137, 139, 140	2-36
F-08	Rear fog lamp <RHD>	4-120, 125	2-36
F-09	Licence plate lamp (RH)	4-101, 103, 105, 107	2-36
F-10	Licence plate lamp (LH)	4-101, 103, 105, 107	2-36
F-11	Rear fog lamp <LHD> <with cargo bed>	4-112, 116	2-36

Connector No.	Parts name	Circuit diagram page	Wiring diagram page
F-12	Rear fog lamp <without cargo bed>	4-112, 116	2-36
F-13	Rear combination lamp (LH) <with cargo bed>	4-101, 103, 105, 107, 135, 137, 139, 140	2-36
F-14	Rear combination lamp (LH) <without cargo bed>	4-101, 103, 105, 107, 135, 137, 139, 140, 157	2-36
F-15	Fuel gauge unit	4-144, 148	2-36
F-16	Wheel speed sensor (rear: LH) <ABS>	4-157, 214	2-36
F-17	Fuel pump	4-51, 59	2-36

INDEX (In order of parts name)

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
4WD detection switch	B-04	4-219, 220, 222, 225, 227	2-16
4WD indicator-ECU	C-22	4-224, 225, 226, 227	2-19, 25

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
A/C compressor relay	A-58X	4-13, 172, 177, 181	2-6, 10, 14
A/C switch	C-10	4-171, 175, 179	2-18, 24
A/C wiring harness and front wiring harness combination <A/C>	A-14	4-170, 172, 176, 177, 179, 180, 181	2-4, 8, 12
ABS hydraulic unit	A-08	4-213, 217	2-4, 8, 12
ABS hydraulic unit	A-09	4-213, 217	2-4, 8, 12
ABS motor relay	A-38	4-213, 217	2-5, 9, 13
ABS valve relay	A-39	4-213, 217	2-5, 9, 13
ABS-ECU	C-62	4-212, 213, 214, 215, 217, 218, 219	2-21, 27
ABS-ECU	C-64	4-55, 212, 213, 214, 215, 216, 217, 218, 219	2-21, 27
Air bag module (squib)	C-76	4-231, 233	2-22, 28
Air flow sensor	A-77	4-55, 63	2-7
Alternator	A-75	4-46, 47	2-7, 10, 14
Alternator	A-76	4-46, 47	2-7, 10, 14
Alternator relay	A-51X	4-13, 46, 47	2-6, 10, 14
Ashtray illumination lamp	C-25	4-211	2-19, 25

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Back-up lamp switch <Diesel 4WD>	B-02	4-140	2-16
Back-up lamp switch <Except diesel 4WD>	B-07	4-140	2-16
Battery cable wiring harness and front wiring harness combination <Diesel>	A-17	4-41, 47, 149	2-8, 12
Battery cable wiring harness and front wiring harness combination <Petrol>	A-17	4-40	2-4
Blower motor	C-23	4-169, 170, 174, 178	2-19, 25
Blower relay	C-83	4-4, 5, 169, 170, 174, 178	2-23, 29
Blower resistor	C-24	4-169, 170, 174, 178	2-19, 25

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Blower switch	C-12	4-169, 170, 174, 178	2-18, 24
Body wiring harness and floor wiring harness combination	D-21	4-130, 131, 133, 148, 182, 183, 184, 243, 245, 247, 249, 250, 251, 252, 253	2-30, 31, 32, 33
Body wiring harness and floor wiring harness combination	D-22	4-156, 163, 164, 167, 168, 182, 183, 184, 205, 207	2-30, 31, 32, 33
Body wiring harness and frame wiring harness combination	D-01	4-212, 214, 215, 218	2-30, 31, 32, 33
Body wiring harness and frame wiring harness combination	D-02	4-51, 59, 101, 103, 105, 107, 112, 116, 120, 124, 135, 137, 139, 140, 144, 148, 215, 221, 223	2-30, 31, 32, 33
Body wiring harness and front door wiring harness (driver's side) combination	C-38	4-152, 156	2-19, 25
Body wiring harness and front door wiring harness (driver's side) combination	C-39	4-160, 161, 162, 163, 166, 167	2-19, 25
Body wiring harness and front door wiring harness (driver's side) combination	C-40	4-193, 195, 196, 197, 198, 199	2-19, 25
Body wiring harness and front door wiring harness (passenger's side) combination	C-16	4-193, 195, 196, 197, 198, 199	2-18, 24
Body wiring harness and front door wiring harness (passenger's side) combination	C-17	4-160, 162, 166	2-18, 24
Body wiring harness and front door wiring harness (passenger's side) combination	C-18	4-152, 156, 157	2-18, 24
Body wiring harness and front wiring harness combination	C-01	4-19, 25, 31, 37, 46, 47, 49, 53, 61, 67, 68, 71, 72, 76, 80, 82, 86, 90, 92, 96, 98, 101, 103, 105, 107, 112, 116, 120, 124, 127, 129, 134, 135, 136, 137, 142, 143, 148, 151, 160, 162, 166, 172, 177, 179, 181, 186, 187, 193, 202, 203, 204, 206, 208, 209, 210	2-18, 24
Body wiring harness and front wiring harness combination	C-02	4-212, 214, 215, 216, 218, 219	2-18, 24
Body wiring harness and front wiring harness combination	C-20	4-230, 231, 232, 233	2-19, 25
Body wiring harness and front wiring harness combination <Diesel>	C-19	4-41, 48, 49, 76, 80, 144, 145, 148, 149, 208, 210, 224, 225, 226, 227, 238, 240, 254, 255	2-18, 24
Body wiring harness and front wiring harness combination <Petrol>	C-19	4-40, 43, 44, 50, 51, 52, 53, 56, 58, 59, 60, 61, 64, 68, 72, 144, 145, 148, 149, 224, 225, 226, 227, 234, 236	2-18
Body wiring harness and instrument panel wiring harness combination	C-43	4-202, 203, 205, 207, 208	2-20, 26

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Body wiring harness and instrument panel wiring harness combination	C-44	4-151	2-20
Body wiring harness and J/B combination	C-79	4-4, 5, 46, 47, 49, 50, 58, 66, 70, 74, 75, 78, 79, 112, 116, 120, 124, 130, 131, 133, 134, 135, 136, 137, 144, 148, 151, 153, 154, 158, 190, 193, 194, 196, 197, 198, 199, 202, 203, 204, 206, 208, 209, 210, 211, 212, 216, 220, 221, 222, 223, 224, 226, 230, 231, 232, 233, 235, 237, 239, 241, 243, 245, 247, 249	2-23, 29
Body wiring harness and J/B combination	C-86	4-4, 5, 56, 64, 66, 68, 70, 72, 74, 76, 78, 80, 84, 88, 91, 93, 97, 99, 101, 103, 105, 107, 110, 114, 118, 122, 127, 129, 133, 134, 135, 136, 137, 140, 148, 151, 153, 154, 158, 169, 170, 174, 178, 182, 186, 187, 189, 192, 202, 203, 204, 206, 208, 209, 210, 211, 212, 214, 215, 218, 221, 223, 224, 226, 230, 231, 232, 233, 235, 237, 239, 241, 243, 244, 245, 247, 249, 250, 252	2-23, 29
Body wiring harness and J/B combination	C-87	4-4, 5, 26, 38, 50, 58, 66, 70, 74, 78, 96, 130, 131, 133, 134, 135, 136, 137, 146, 149, 169, 170, 174, 178, 186, 187, 190, 194, 195, 210, 212, 216, 228, 229, 231, 233, 235, 237, 238, 240, 243, 245, 247, 249	2-23, 29
Body wiring harness and J/B combination	C-89	4-4, 5, 20, 21, 26, 27, 32, 33, 38, 39, 66, 70, 74, 78, 82, 86, 139, 142, 143, 160, 162, 166, 169, 170, 174, 178, 182, 190, 192, 194, 212, 216, 250, 252, 255	2-23, 29
Body wiring harness and roof wiring harness combination <with defogger> or no connection <without defogger>	C-03	4-190, 192, 194	2-18, 24
Body wiring harness and transmission wiring harness combination	C-57	4-40, 41, 48, 53, 61, 67, 68, 71, 72, 75, 76, 79, 80, 140, 230	2-21
Body wiring harness and transmission wiring harness combination	C-58	4-219, 220, 222, 225, 227	2-21, 27
Body wiring harness and transmission wiring harness combination	C-59	4-140	2-21, 27
Brake fluid level sensor	A-06	4-148	2-4, 8, 12

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Capacitor	A-71	4-43, 44, 51, 59	2-7
Capacitor <A/C>	A-66	4-172, 176, 180	2-7, 10, 14
Cigarette lighter	C-14	4-211	2-18, 24
Cigarette lighter	C-30	4-211	2-19, 25
Clock	C-11	4-209, 210	2-18, 24
Clock spring <SRS>	C-74	4-142	2-22, 28
Clock spring <SRS>	C-75	4-231, 233	2-22, 28
Column switch	C-67	4-84, 88, 91, 93, 97, 99, 110, 114, 118, 122, 189	2-22, 28
Column switch	C-68	4-143, 186, 187	2-22, 28
Column switch	C-69	4-30, 36, 84, 88, 91, 93, 97, 99, 100, 102, 104, 106, 111, 115, 119, 123, 135, 137, 189, 228, 229, 242, 244, 246, 248	2-22, 28
Combination meter	C-04	4-46, 47, 49, 50, 58, 75, 79, 112, 116, 120, 124, 144, 145, 148, 149, 193, 212, 216, 224, 226	2-18, 24
Combination meter	C-05	4-69, 73, 77, 81, 135, 137, 145, 212, 216	2-18, 24
Combination meter	C-06	4-46, 47, 49, 50, 56, 58, 64, 67, 69, 71, 73, 75, 77, 79, 81, 82, 86, 90, 92, 96, 98, 112, 116, 120, 124, 130, 131, 135, 137, 144, 145, 146, 148, 149, 193, 212, 216, 221, 223, 224, 226, 231, 233, 254	2-18, 24
Combination meter	C-07	4-56, 64, 67, 71, 75, 79, 145, 221, 223, 224, 226, 254	2-18, 24
Compressor-ECU	C-47	4-179	2-20
Condenser fan control relay	A-60X	4-13, 176, 180	2-10, 14
Condenser fan motor <A/C>	A-69	4-172, 176, 180	2-7, 10, 14
Condenser fan relay	A-59X	4-13, 172, 176, 180	2-6, 10, 14

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Defogger (+)	D-10	4-190, 192, 194	2-30, 31, 32, 33
Defogger (-)	D-08	4-190, 192, 194	2-30, 31, 32, 33
Defogger relay	C-84	4-4, 5, 26, 38, 190, 194	2-23, 29
Defogger relay <Vehicles with defogger timer>	C-96	4-44, 192	2-21, 27
Defogger switch or no connection	C-08	4-190, 192, 193, 194	2-18

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Defogger timer	C-99X	4-18, 192	2-23, 29
Diagnosis connector	C-35	4-56, 64, 133, 153, 154, 158, 214, 218, 230, 232, 235, 237, 239, 241, 243, 245, 247, 249	2-19, 25
Dim-dip lamp relay 1	A-100	4-96, 98	2-15
Dim-dip lamp relay 2	A-99	4-96, 98	2-15
Dim-dip lamp relay 3	A-98	4-96, 98	2-15
Dim-dip lamp resistor	A-101	4-96, 98	2-15
Diode (for ABS circuit)	C-48	4-212, 216	2-20, 26
Diode (for dim-dip lamp circuit)	C-65	4-97, 99, 118, 122	2-27
Diode (for dim-dip lamp circuit)	C-66	4-96, 98	2-27
Diode (for headlamp and rear fog lamp circuit)	C-73	4-84, 88, 91, 93, 97, 99, 110, 114, 119, 123	2-22, 28
Distributor assembly	A-72	4-43, 44, 52, 60	2-7
Door lock actuator (driver's side)	E-09	4-152, 156	2-34, 35
Door lock actuator (front passenger's side)	E-20	4-152, 156	2-34, 35
Door lock actuator (rear: LH)	E-05	4-156	2-35
Door lock actuator (rear: RH)	E-16	4-157	2-35
Door lock key cylinder switch	E-14	4-152	2-34, 35
DRL relay 1	A-12	4-83, 87	2-4, 8
DRL relay 2	A-11	4-82, 86	2-4, 8
DRL wiring harness or front wiring harness and front wiring harness combination	A-16	4-82, 83, 86, 87, 100, 102, 110, 111, 114, 115, 209, 228, 229, 242, 244	2-4, 8
DRL wiring harness or front wiring harness and front wiring harness combination	A-19	4-83, 84, 87, 88, 90, 91, 92, 93, 100, 102, 110, 111, 114, 115, 209, 228, 229, 242, 244	2-5, 8
DRL-ECU	A-10	4-83, 87, 100, 102, 110, 111, 114, 115, 209, 228, 229, 242, 244	2-4, 8
Dual pressure switch <A/C>	A-67	4-172, 177, 181	2-7, 10, 14

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
EGR solenoid valve	A-49	4-54, 62	2-6
Engine control relay <Petrol>	C-53	4-50, 58	2-20
Engine coolant temperature gauge unit	A-44	4-144	2-6
Engine coolant temperature sensor	A-64	4-55, 63	2-7

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Engine coolant temperature sensor and gauge unit	A-97	4-49, 144	2-11, 15
Engine coolant temperature switch (for A/C compressor control)	A-95	4-177, 181	2-11, 15
Engine coolant temperature switch (for condenser fan control)	A-96	4-176, 180	2-11, 15
Engine coolant temperature switch <A/T>	A-43	4-67, 71	2-6
Engine-ECU <Petrol>	C-49	4-43, 44, 50, 51, 52, 55, 56, 58, 59, 60, 62, 64, 172	2-20
Engine-ECU <Petrol>	C-50	4-43, 50, 54, 56, 58, 62, 64, 172, 234	2-20
Engine-ECU <Petrol>	C-97	4-58, 59, 60, 61, 63, 64	2-21
Engine-ECU <Petrol> (1997 Model year)	C-51	4-43, 50, 51, 52, 53, 55, 56	2-20
Engine-ECU <Petrol> (1998 Model year)	C-51	4-44, 62, 63, 64, 236	2-20
ETACS-ECU	C-90	4-133, 152, 153, 154, 157, 158, 243, 245, 247, 249	2-23, 29
ETACS-ECU or buzzer-ECU	C-91	4-4, 5, 133, 152, 153, 154, 156, 158, 243, 245, 247, 249	2-23, 29

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Floor wiring harness and rear door wiring harness (LH) combination	D-15	4-156, 205, 207	2-33
Floor wiring harness and rear door wiring harness (LH) combination	D-16	4-164, 168	2-33
Floor wiring harness and rear door wiring harness (RH) combination	D-04	4-164, 168	2-33
Frame wiring harness and position wiring harness combination	F-02	4-221, 223	2-36
Frame wiring harness and rear body wiring harness combination	F-05	4-101, 103, 105, 107, 112, 116, 120, 124, 135, 137, 139, 140	2-36
Free-wheeling hub engage switch <4WD>	A-02	4-219, 224, 226	2-4, 8, 12
Front combination lamp (LH)	A-24	4-100, 102, 104, 106, 135, 137	2-5, 9, 13
Front combination lamp (RH)	A-31	4-100, 102, 104, 106, 135, 137	2-5, 9, 13
Front door switch (driver's side)	D-17	4-130, 131, 133, 243, 245, 247	2-30, 31, 32, 33
Front door switch (passenger's side)	D-03	4-130, 131	2-30, 31, 32, 33
Front impact sensor (LH) <SRS>	A-27	4-231, 233	2-5, 9, 13
Front impact sensor (RH) <SRS>	A-29	4-231, 233	2-5, 9, 13
Front seat assembly (LH)	D-19	4-251, 253	2-30, 31, 32, 33

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Front seat assembly (RH)	D-20	4-251, 253	2-30, 31, 32, 33
Front speaker (LH)	C-63	4-202, 203, 205, 207, 208	2-21, 27
Front speaker (RH)	C-55	4-202, 203, 205, 207, 208	2-21, 26
Front wiring harness and J/B combination	C-81	4-4, 5, 21, 27, 33, 39, 46, 47, 50, 58, 66, 70, 74, 78, 83, 84, 87, 88, 91, 93, 97, 98, 99, 101, 103, 105, 107, 110, 112, 114, 116, 118, 120, 122, 124, 127, 129, 130, 131, 133, 134, 135, 136, 137, 146, 148, 151, 153, 154, 156, 158, 169, 170, 174, 178, 182, 186, 187, 189, 190, 193, 194, 202, 203, 204, 206, 208, 209, 210, 211, 212, 216, 220, 222, 228, 229, 230, 232, 235, 237, 239, 241, 243, 244, 245, 247, 249, 250, 252, 255	2-23, 29
Front wiring harness and J/B combination	C-82	4-4, 5, 20, 26, 32, 38, 139, 152, 156, 169, 170, 174, 178, 182, 190, 192, 194, 212, 216, 255	2-23, 29
Front wiring harness and J/B combination	C-88	4-4, 5, 20, 21, 26, 27, 32, 33, 38, 39, 43, 44, 46, 47, 49, 50, 51, 58, 59, 66, 68, 70, 72, 74, 75, 76, 78, 79, 80, 82, 83, 86, 87, 96, 98, 133, 134, 136, 140, 142, 143, 144, 148, 151, 152, 157, 160, 162, 166, 169, 170, 174, 178, 182, 186, 187, 189, 190, 192, 193, 194, 196, 197, 198, 199, 202, 203, 204, 206, 208, 209, 210, 211, 212, 215, 216, 221, 223, 224, 226, 231, 233, 235, 237, 238, 240, 243, 245, 247, 249, 250, 252, 254, 255	2-23, 29
Front wiring harness and rear door wiring harness (RH) combination	D-05	4-157, 205	2-33
Front wiring harness and transmission wiring harness combination	C-60	4-54, 62	2-21
Fuel cut solenoid valve	A-92	4-49	2-11, 15
Fuel cut valve ECU	A-90	4-238, 240	2-11, 15
Fuel gauge unit	F-15	4-144, 148	2-36
Fuel injection pump wiring harness and front wiring harness combination	A-91	4-48, 49, 144, 145	2-11, 15
Fuel line heater	A-82	4-255	2-11
Fuel line heater relay	A-86	4-255	2-11
Fuel pump	F-17	4-51, 59	2-36

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Fuel pump check connector	A-41	4-51, 59	2-6
Fuel pump relay <Petrol>	C-54	4-51, 59	2-20

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
G sensor <ABS>	C-26	4-219	2-19, 25
Glow plug	A-78	4-48	2-10, 14
Glow plug relay	A-87	4-48	2-11, 15
Glow plug relay	A-88	4-48	2-11, 15
Glow plug relay	A-89	4-48	2-11, 15
Glow-ECU <Diesel>	C-49	4-48, 50	2-20, 26

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Hazard switch	C-09	4-134, 136	2-18, 24
Headlamp (LH)	A-20	4-82, 86, 90, 92, 96, 98	2-5, 8, 12
Headlamp (RH)	A-34	4-82, 86, 90, 92, 96, 98	2-5, 9, 13
Headlamp leveling switch	C-32	4-127, 129	2-19, 25
Headlamp leveling unit (LH)	A-18	4-126, 128	2-4, 8, 12
Headlamp leveling unit (RH)	A-35	4-126, 128	2-5, 9, 13
Headlamp relay	A-54X	4-13, 18, 24, 30, 36, 82, 86, 90, 92, 96, 98, 110, 114, 118, 122	2-6, 10, 14
Headlamp washer motor	A-21	4-189	2-5, 9, 13
Headlamp washer relay	A-15	4-189	2-4, 8, 12
Heated seat switch (LH)	D-12	4-259, 252	2-30, 31, 32, 33
Heated seat switch (RH)	D-11	4-250, 252	2-30, 31, 32, 33
High range/Low range detection switch	B-05	4-225, 227	2-16
Horn (HI)	A-32	4-142, 143	2-5, 9, 13
Horn (HI)	A-33	4-142, 143	2-5, 9, 13
Horn (LO)	A-22	4-142, 143	2-5, 9, 13
Horn (LO)	A-23	4-142, 143	2-5, 9, 13
Horn relay <SRS>	A-40	4-142	2-5, 9, 13
Horn switch	C-77	4-142	2-22, 28

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Idle speed control servo	A-50	4-55, 63	2-6
Idle-up solenoid valve <A/C>	A-84	4-177, 181	2-11, 15
Idle-up solenoid valve <ABS-M/T>	A-79	4-214, 218	2-10, 14
Ignition coil	A-65	4-43, 44, 52, 60	2-7
Ignition key ring antenna	C-71	4-234, 236, 238, 240	2-22, 28
Ignition switch	C-70	4-19, 25, 31, 37	2-22, 28
Ignition timing adjustment connector	A-42	4-43, 44, 55, 63	2-6
Immobilizer-ECU	C-36	4-56, 64, 234, 236, 238, 240	2-19, 25
Inhibitor switch <A/T>	B-01	4-68, 72, 76, 80, 140	2-16
Injector 1	A-61	4-54, 62	2-7
Injector 2	A-57	4-54, 62	2-6
Injector 3	A-46	4-54, 62	2-6
Injector 4	A-45	4-54, 62	2-6
Intake air temperature switch	A-80	4-254	2-11, 14
Inter cooler fan-ECU <Diesel>	C-53	4-254	2-20, 26
Intercooler fan motor	A-81	4-254	2-11, 14
Intercooler fan relay	A-53X	4-13, 254	2-6, 10

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
J/C (1)	C-92	4-6, 46, 47, 49, 55, 63, 66, 70, 74, 78, 84, 88, 91, 93, 96, 97, 98, 99, 100, 102, 103, 106, 110, 111, 114, 115, 119, 123, 127, 129, 134, 136, 146, 151, 169, 170, 174, 178, 182, 189, 190, 193, 194, 202, 203, 204, 206, 208, 210, 211, 213, 217, 220, 222, 228, 229, 242, 244, 246, 248, 250, 252	2-21, 27
J/C (2)	C-93	4-6, 84, 88, 91, 93, 97, 99, 110, 114, 118, 122, 127, 129, 134, 135, 137, 186, 187, 189, 219, 226	2-21, 27
J/C (3)	C-94	4-7, 43, 44, 50, 52, 54, 58, 60, 62, 83, 87, 96, 98, 145, 149, 170, 174, 178, 189, 224, 238, 240, 255	2-21, 27
J/C (4)	C-95	4-8, 43, 44, 54, 55, 62, 63, 236	2-21

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Key reminder switch	C-72	4-133	2-22, 28

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Lever (throttle) position switch <A/C-A/T>	A-94	4-179	2-11
Licence plate lamp (LH)	F-10	4-101, 103, 105, 107	2-36
Licence plate lamp (RH)	F-09	4-101, 103, 105, 107	2-36

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Magnetic clutch <A/C>	A-68	4-172, 177, 181	2-7, 10, 14
Map lamp	D-06	4-131	2-33
Multi-meter	C-45	4-151	2-20

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
No connection	D-18	-	2-30, 31, 32, 33
No connection (reed switch)	C-15	4-56, 64, 67, 71, 75, 79, 145, 221, 223, 224, 226, 254	2-18, 24
Noise filter	A-62	4-43, 44, 52, 60	2-7
Noise filter	A-63	4-43, 44, 52, 60	2-7

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Oil pressure switch	A-73	4-149	2-7, 10, 14
Outside thermo sensor <with multi-meter> or no connection <without multi-meter>	A-25	4-151	2-9
Overdrive control relay	C-37	4-67, 71, 75, 79	2-19
Overdrive solenoid valve <A/T>	B-06	4-67, 71, 75, 79	2-16
Overdrive switch	C-29	4-66, 70, 74, 78	2-19
Oxygen sensor <MPI>	B-03	4-54, 62	2-16

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Parking brake switch	C-31	4-148	2-19, 25
Parking brake switch	D-13	4-148	2-30, 31, 32, 33
Power steering oil pressure switch	A-74	4-55, 63	2-7
Power transistor	A-70	4-43, 44, 52, 60	2-7
Power window limit switch (driver's side)	E-10	4-160, 161, 163, 167	2-34, 35
Power window limit switch (front passenger's side)	E-21	4-160, 161, 162, 166	2-34, 35

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Power window limit switch (rear: LH)	E-08	4-164, 168	2-35
Power window limit switch (rear: RH)	E-19	4-164, 168	2-35
Power window main switch	E-03	4-160, 166, 215	2-34, 35
Power window motor (driver's side)	E-11	4-160, 161, 163, 167	2-34, 35
Power window motor (front passenger's side)	E-22	4-160, 161, 162, 166	2-34, 35
Power window motor (rear: LH)	E-07	4-164, 168	2-35
Power window motor (rear: RH)	E-18	4-164, 168	2-35
Power window relay	C-78X	4-14, 160, 162, 166	2-22, 28
Power window sub switch (front passenger's side)	E-13	4-160, 162, 166	2-34, 35
Power window sub switch (rear: LH)	E-04	4-164, 168	2-35
Power window sub switch (rear: RH)	E-15	4-164, 168	2-35
Purge control solenoid valve	A-48	4-54, 62	2-6

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Radio and tape player	C-13	4-202, 203, 204, 206, 208	2-18, 24
Rear blower motor	D-25	4-183, 184	2-33
Rear combination lamp (LH) <with cargo bed>	F-13	4-101, 103, 105, 107, 135, 137, 139, 140	2-36
Rear combination lamp (LH) <without cargo bed>	F-14	4-101, 103, 105, 107, 135, 137, 139, 140, 157	2-36
Rear combination lamp (RH) <with cargo bed>	F-06	4-101, 103, 105, 107, 135, 137, 139, 140	2-36
Rear combination lamp (RH) <without cargo bed>	F-07	4-101, 103, 105, 107, 135, 137, 139, 140	2-36
Rear differential lock air pump	F-04	4-221, 223	2-36
Rear differential lock detection switch	F-03	4-221, 223	2-36
Rear differential lock switch	C-33	4-220, 221, 222, 223	2-19, 25
Rear differential lock-ECU	C-21	4-220, 222	2-19, 25
Rear door speaker (LH)	E-06	4-205, 207	2-35
Rear door speaker (RH)	E-17	4-205, 207	2-35
Rear door switch (LH)	D-14	4-131	2-33
Rear door switch (RH)	D-07	4-131	2-33
Rear fog lamp <LHD> <with cargo bed>	F-11	4-112, 116	2-36

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Rear fog lamp <RHD>	F-08	4-120, 125	2-36
Rear fog lamp <without cargo bed>	F-12	4-112, 116	2-36
Rear fog lamp relay	A-13	4-110, 114, 118, 122	2-4, 8, 12
Rear fog lamp switch	C-41	4-112, 116, 120, 124	2-20, 26
Rear heater illumination lamp	D-23	4-183, 184	2-33
Rear heater relay	C-98X	4-18, 182	2-23
Rear heater switch	D-24	4-183, 184	2-33
Remote controlled mirror (LH)	E-01	4-196, 197, 198, 199	2-34, 35
Remote controlled mirror (LH) <with door mirror heater>	E-23	4-195, 197, 199	2-34, 35
Remote controlled mirror (RH)	E-12	4-196, 197, 198, 199	2-34, 35
Remote controlled mirror (RH) <with door mirror heater>	E-24	4-195, 197, 199	2-34, 35
Remote controlled mirror switch	E-02	4-196, 215	2-34, 35
Revolution pick-up sensor	A-93	4-145	2-11, 15
Rheostat or joint connector	C-42	4-69, 73, 77, 81, 112, 116, 120, 124, 127, 129, 134, 136, 146, 169, 171, 175, 176, 183, 184, 202, 203, 204, 206, 208, 220, 222, 228, 229, 250, 252	2-20, 26
Roof wiring harness and J/B combination	C-80	4-4, 5, 130, 131	2-23, 29
Room lamp	D-09	4-130, 131	2-30, 31, 32, 33

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Side turn signal lamp (LH)	C-61	4-135, 137	2-21, 27
Side turn signal lamp (RH)	C-52	4-135, 137	2-20, 26
Solenoid valve 1 <4WD>	A-36	4-225, 227	2-5, 9, 13
Solenoid valve 2 <4WD>	A-37	4-225, 227	2-5, 9, 13
SRS diagnosis unit	C-27	4-230, 231, 232, 233	2-19, 25
SRS diagnosis unit	C-28	4-231, 233	2-19, 25
Starter	A-03	4-40, 41	2-4, 8, 12
Starter	A-04	4-40, 41	2-4, 8, 12
Starter relay <Petrol (A/T) and Diesel>	A-52X	4-13, 40, 41	2-6, 10, 14

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Stop lamp switch	C-34	4-139, 212, 216	2-19, 25
Storage connector	A-56X	4-13, 17, 23, 29, 35, 50, 58, 130, 131, 133, 151, 153, 154, 156, 158, 202, 203, 204, 206, 208, 209, 210, 212, 216, 230, 232, 235, 237, 239, 241, 243, 245, 247, 249	2-6, 10, 14

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Tail lamp relay	A-55X	4-13, 18, 24, 83, 87, 91, 93, 97, 99, 100, 102, 111, 115, 119, 123, 228, 229, 242, 244	2-6, 10, 14
Thermostat	C-46	4-171, 175, 179	2-20, 26
Thermostat wiring harness and body wiring harness combination	C-56	4-171, 175, 179	2-21, 26
Throttle position sensor	A-47	4-54, 62	2-6
Turn signal and hazard warning flasher unit	C-85	4-4, 5, 134, 136	2-23, 29

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Vacuum switch	A-85	4-148	2-11, 15

Parts name	Connector No.	Circuit diagram page	Wiring diagram page
Water level switch	A-83	4-149	2-11, 14
Wheel speed sensor (front: LH) <2WD-ABS>	A-07	4-214	2-4, 8, 12
Wheel speed sensor (front: LH) <4WD-ABS>	A-28	4-218	2-5, 9, 13
Wheel speed sensor (front: RH) <2WD-ABS>	A-01	4-214	2-4, 8, 12
Wheel speed sensor (front: RH) <4WD-ABS>	A-30	4-218	2-5, 9, 13
Wheel speed sensor (rear: LH) <ABS>	F-16	4-157, 214	2-36
Wheel speed sensor (rear: RH) <ABS>	F-01	4-214	2-36
Windshield washer motor	A-26	4-186, 187	2-5, 9, 13
Windshield wiper motor	A-05	4-186, 187	2-4, 8, 12